

#### **Assembly Instructions**

Thanks you for purchase.

Please follow the instructions below for correct assembly.

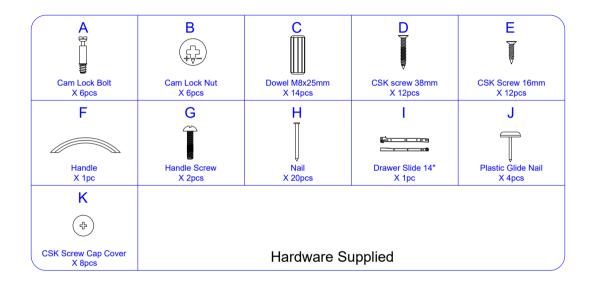


WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

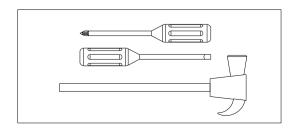



Screwdrivers and hammer required

For quicker assembly, we recommend the use of a power dill on a low-speed setting

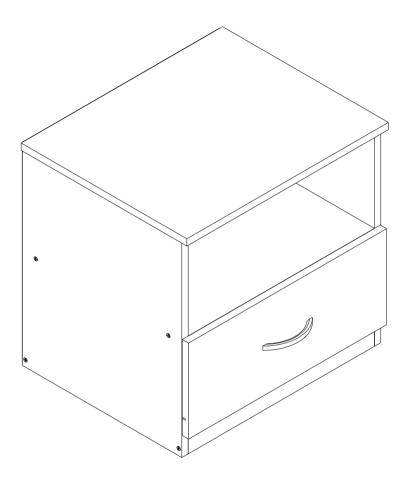


## **Assembly Instructions**

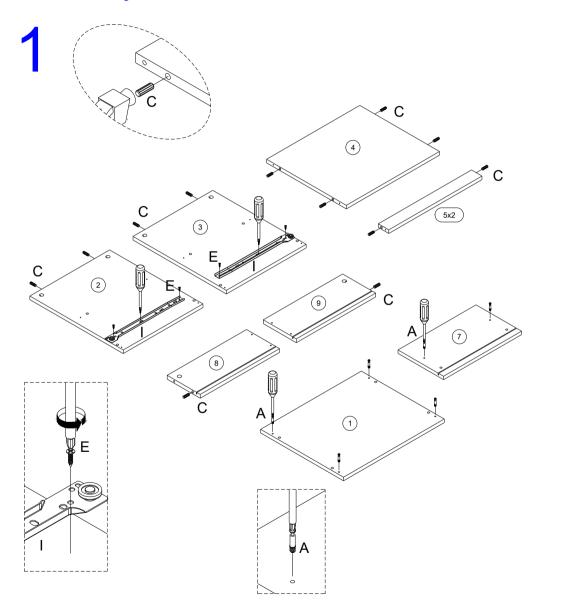

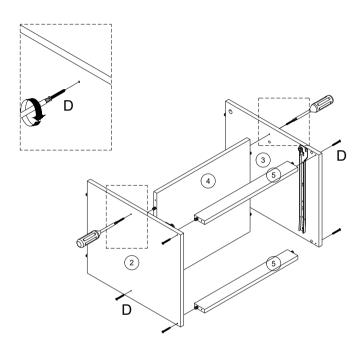


#### **Assembly Instructions**

3

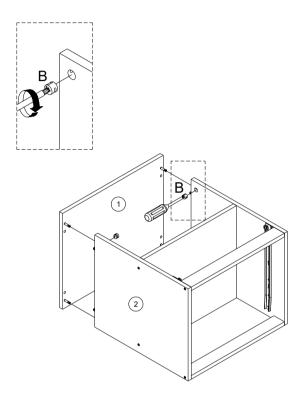

4

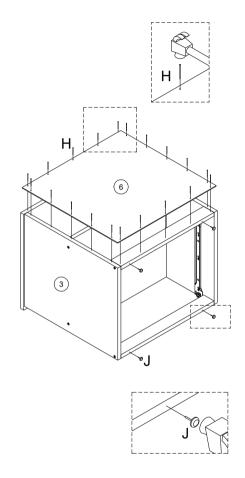

#### **Assembly Instructions**

5

