

 
 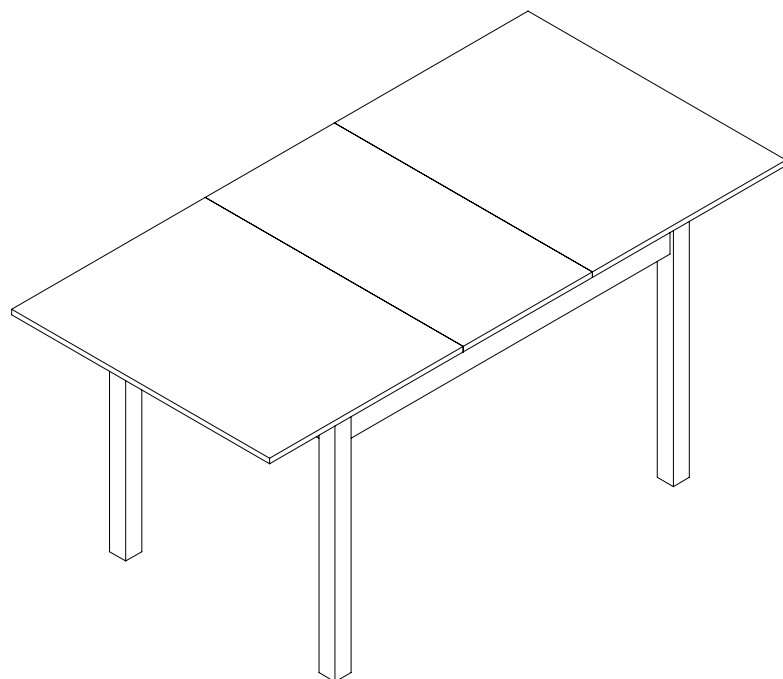
 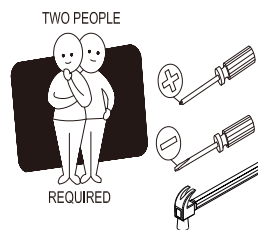
 







A	x4	B	x4	C	x4	D	x72	E	x2	F	x4	G	x12
		 15x9.3mm		 Ø6x30mm		 4x14mm						 6x25mm	
H	x1	I	x4	J	x6	K	x12	L	x12				
 4mm		 45x45mm		 Ø8x50mm									

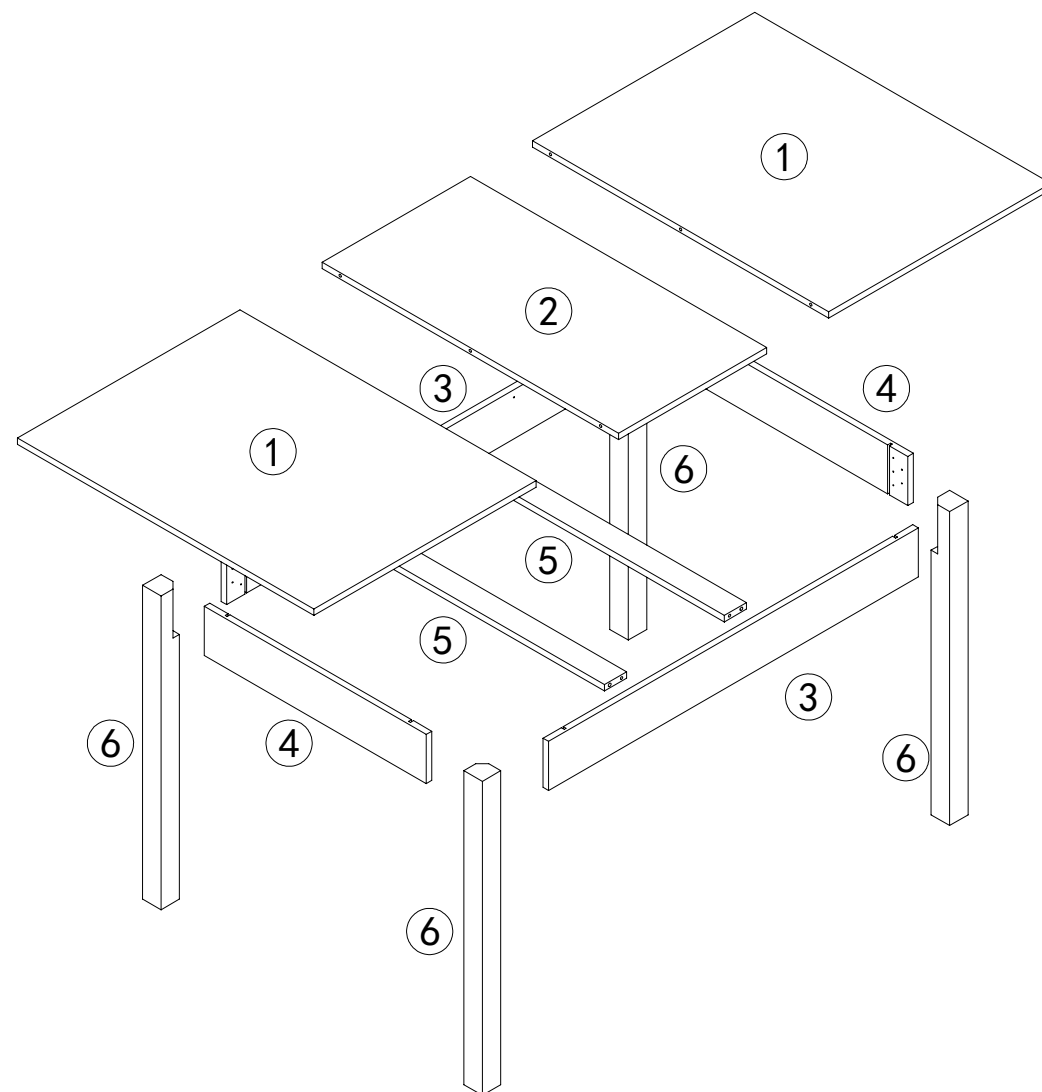


1

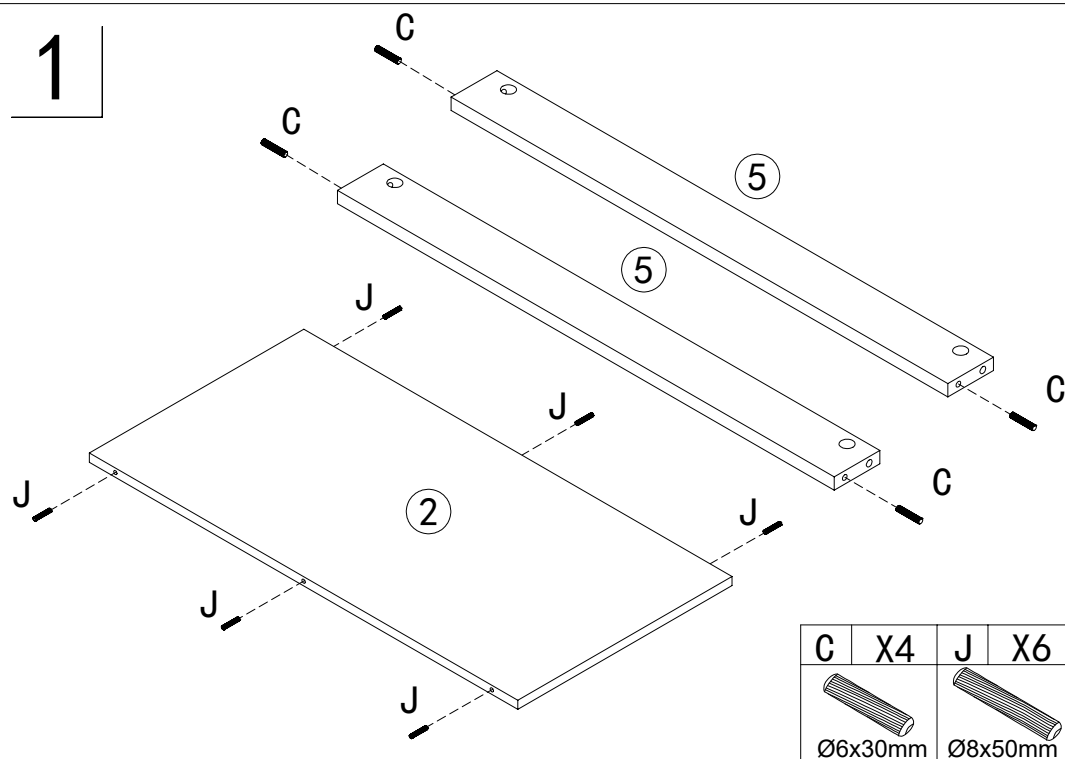

2

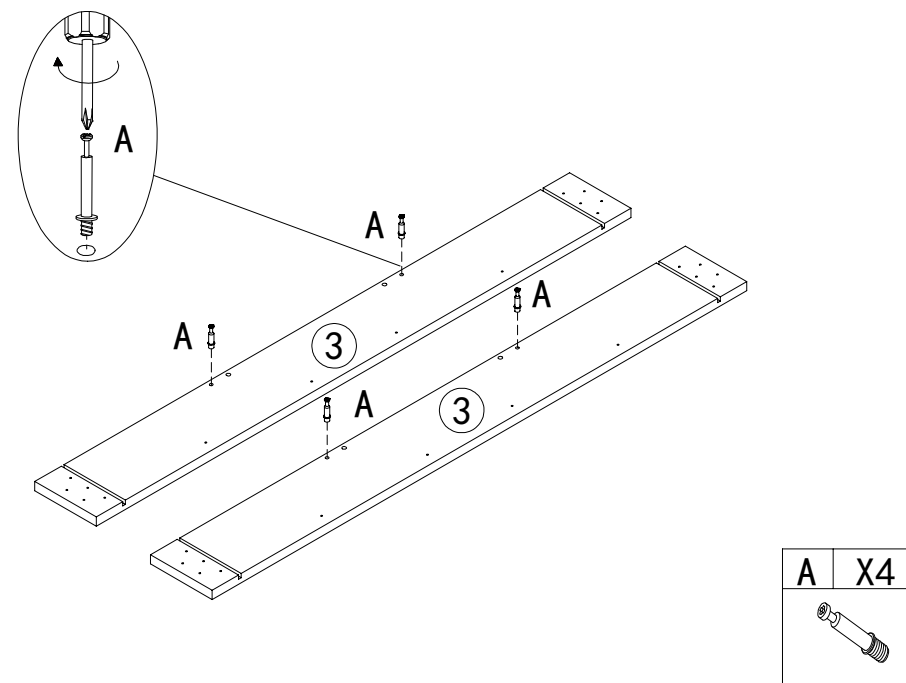


3

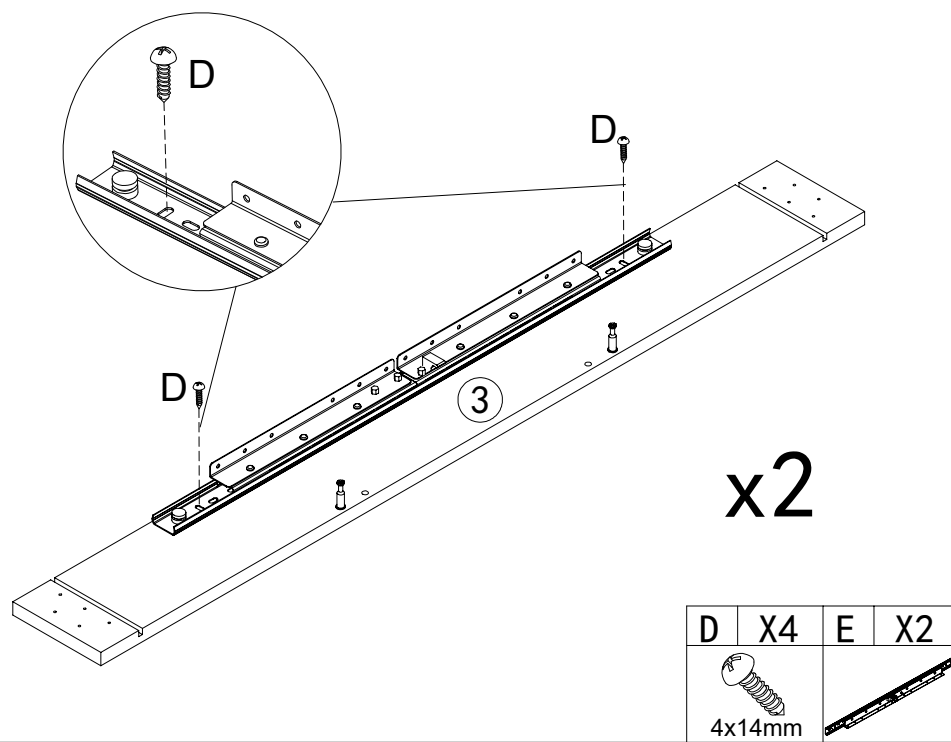


4


Raise up the black plastic buckle to open the rail and fix the screws (D) properly.

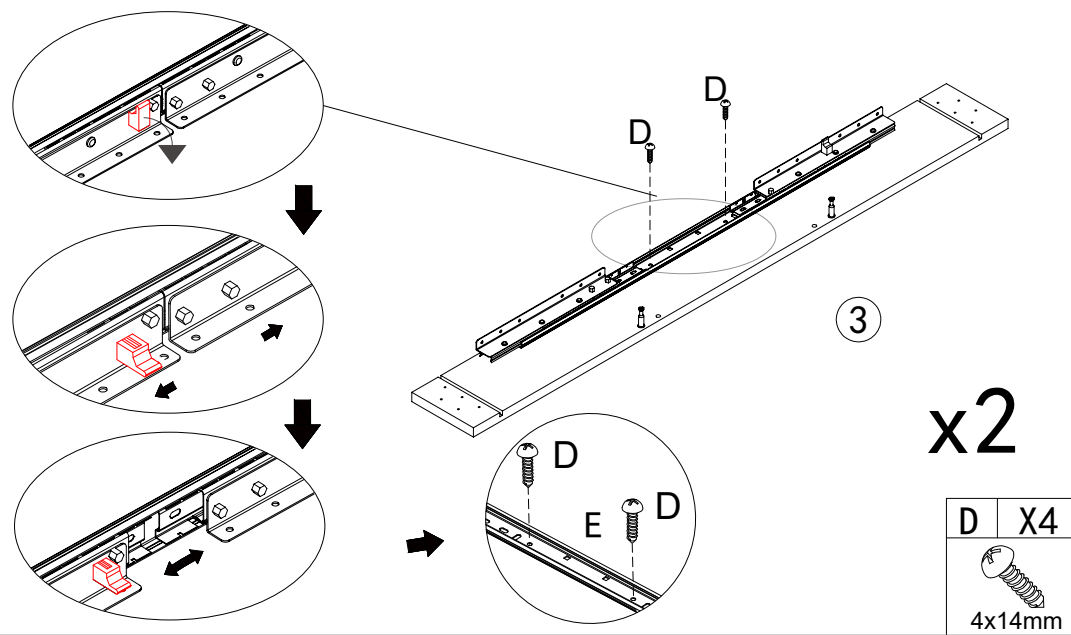


5

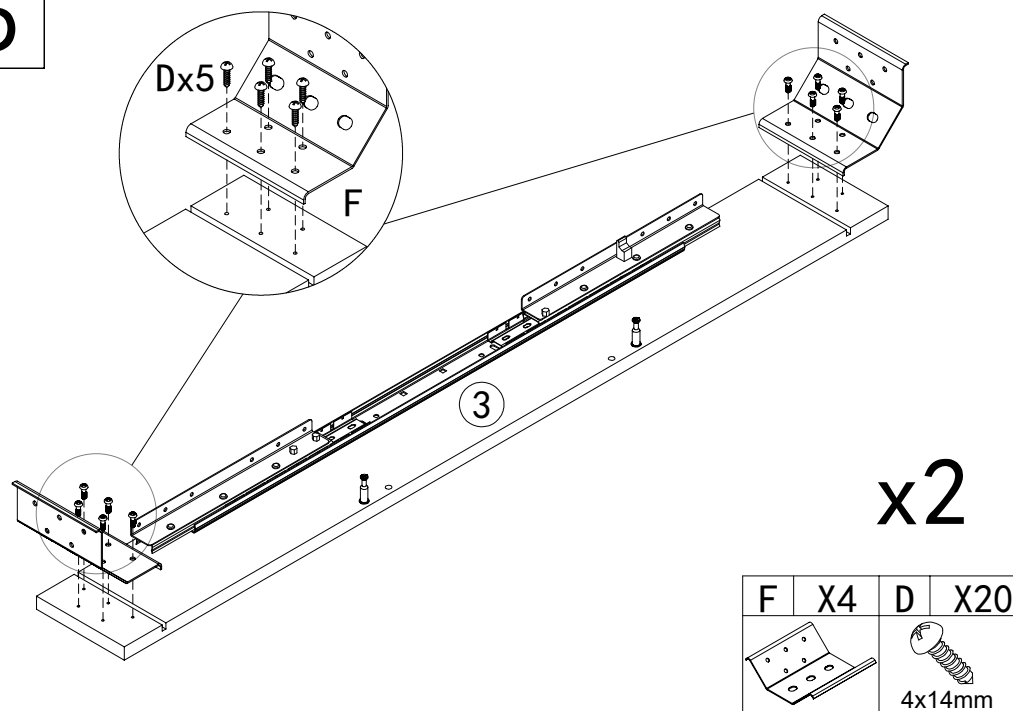


6

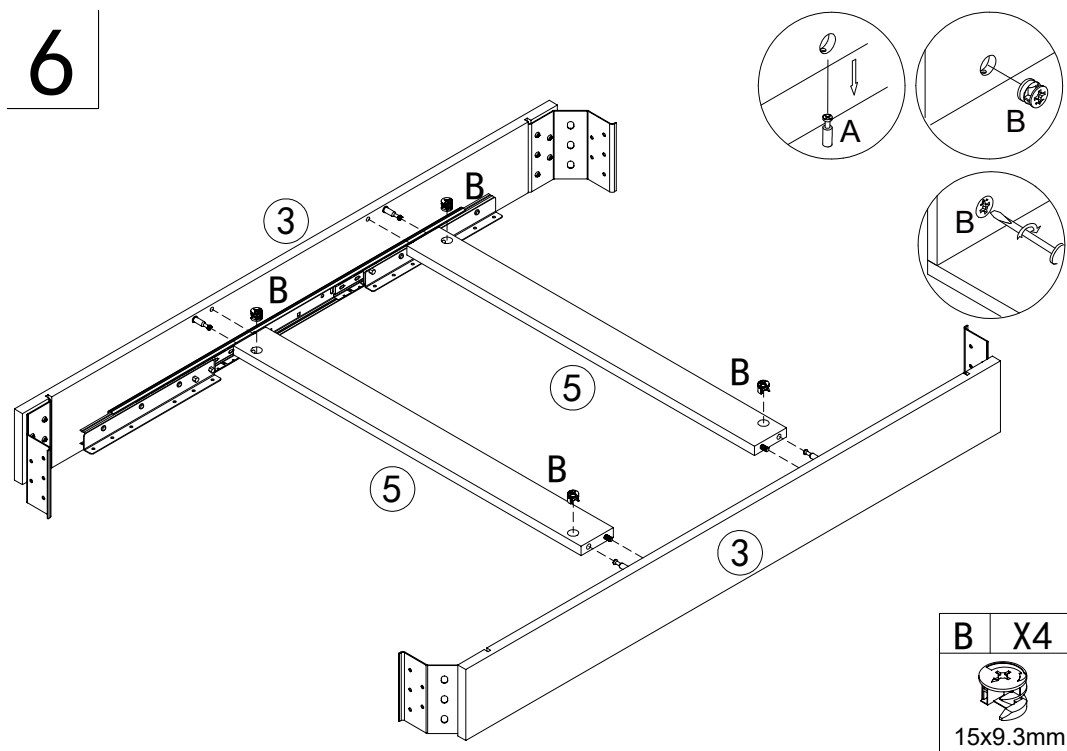


7

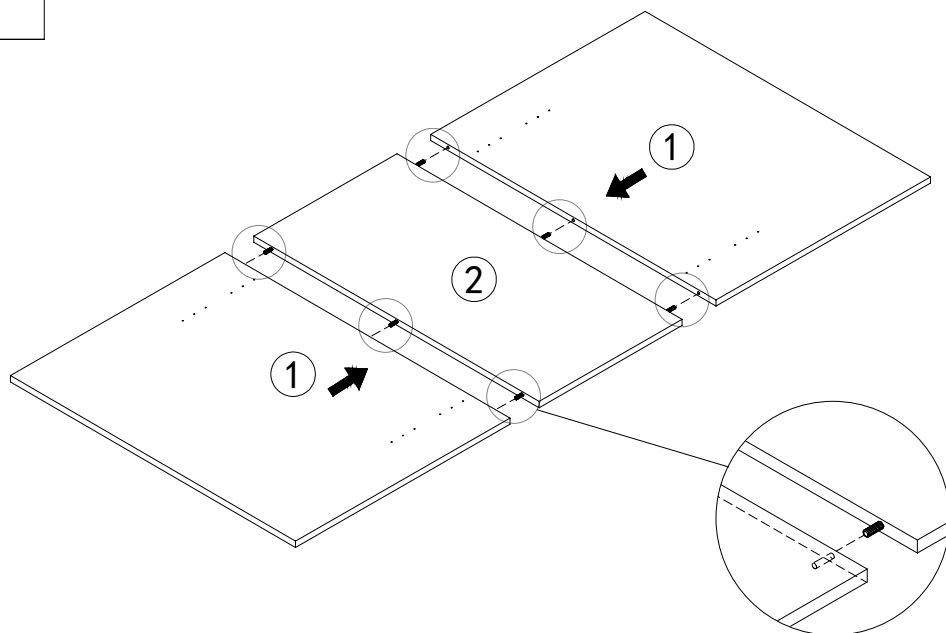


8

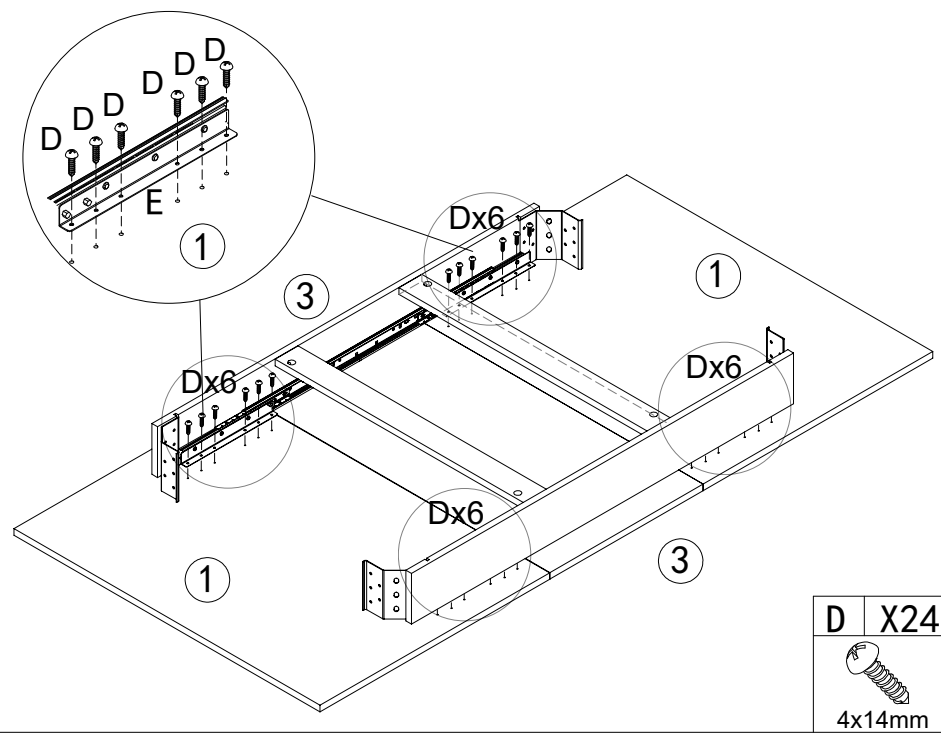

9

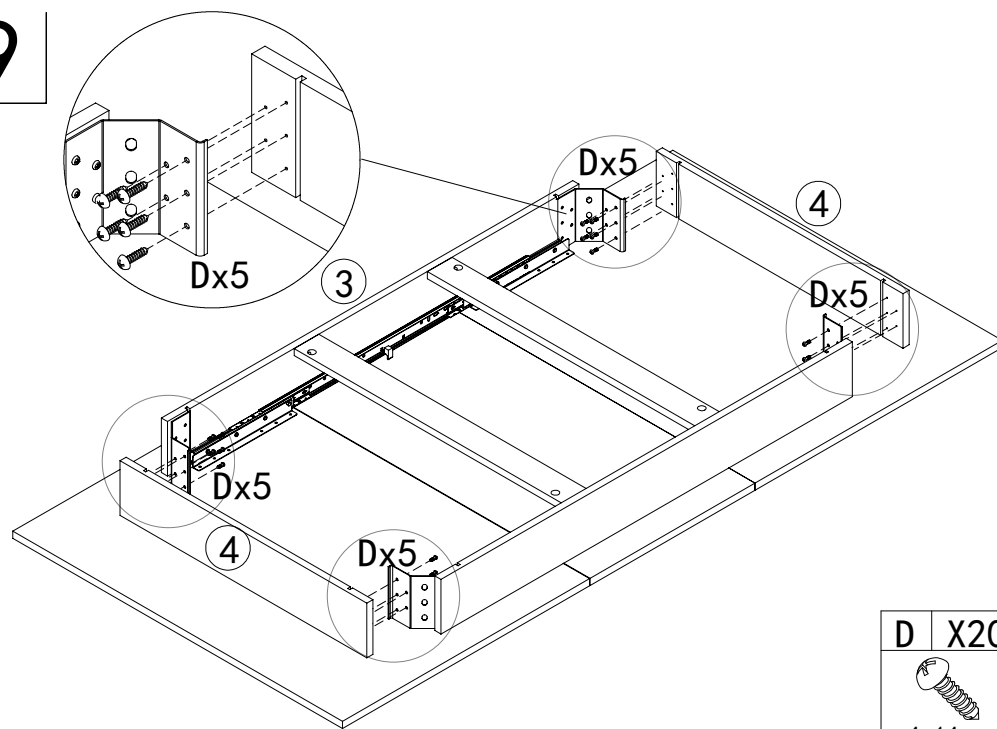


10

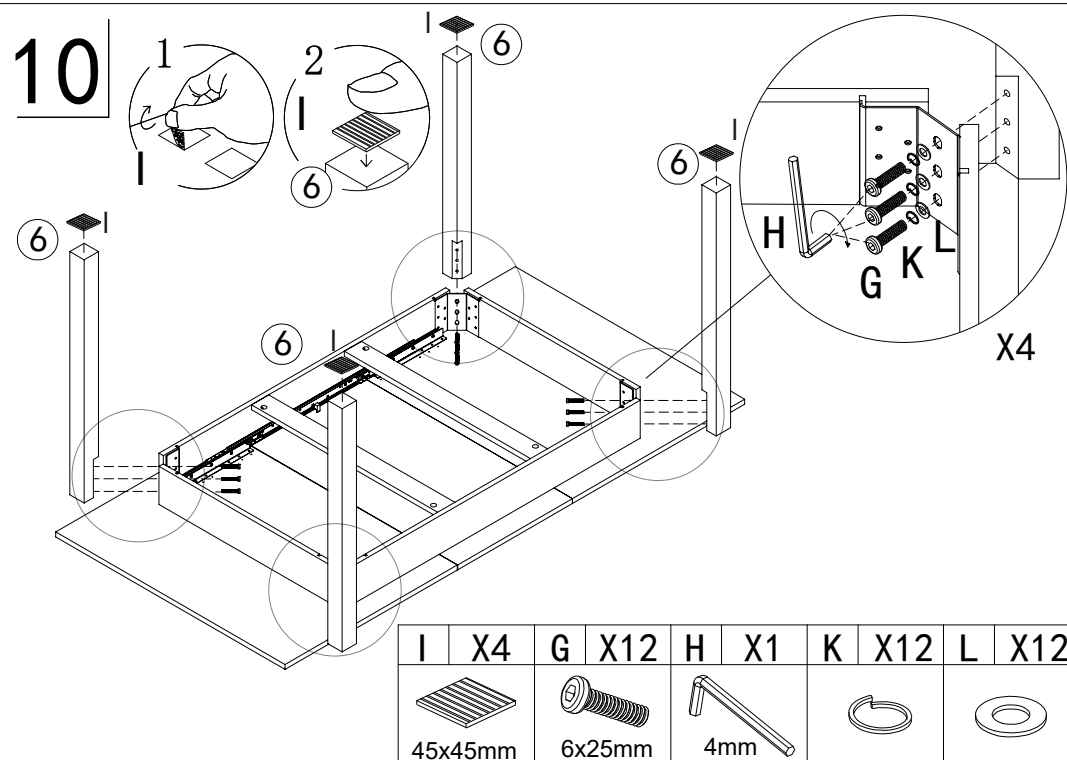

11

Lift up the black plastic buckle and extend two part 1.

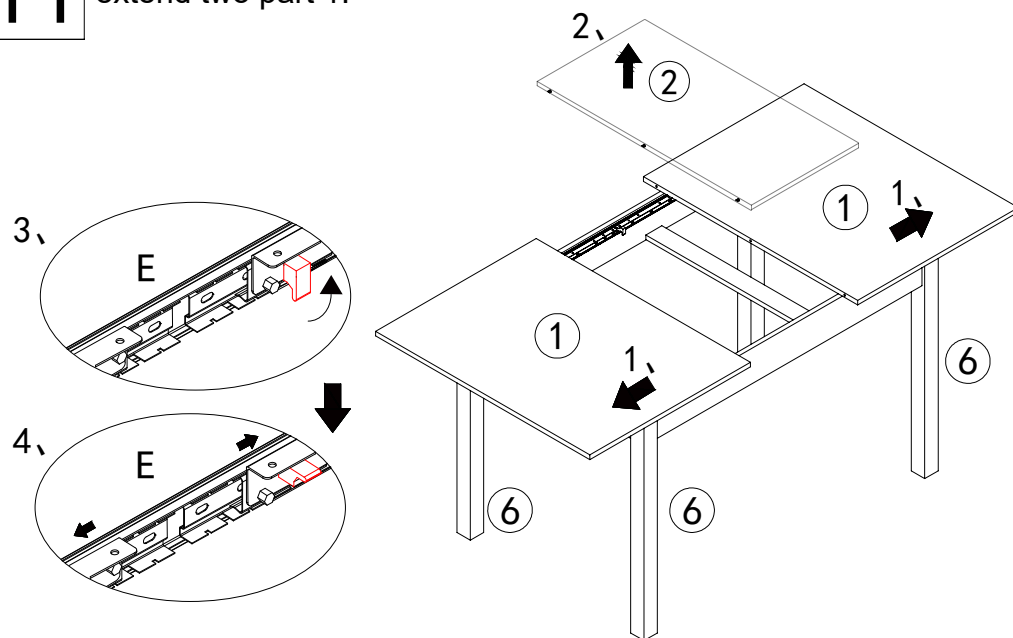

12

