 



 

 

 
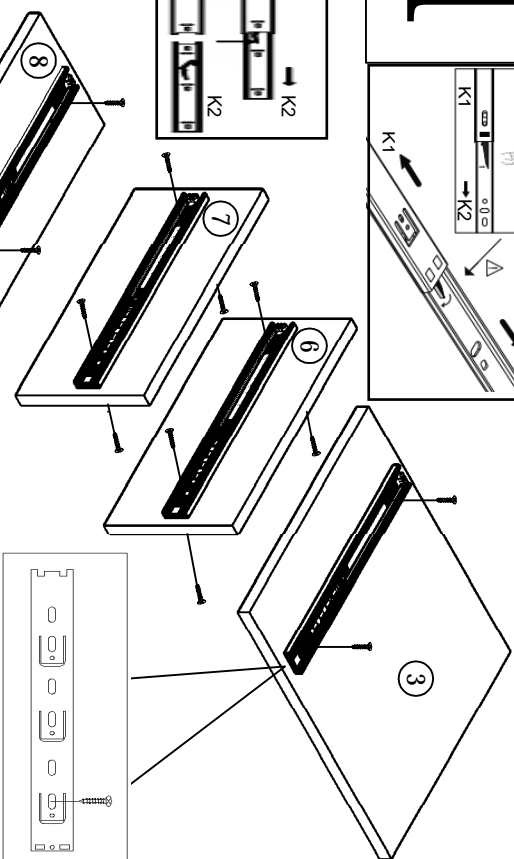 
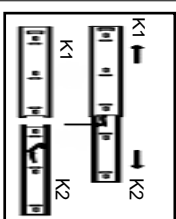 
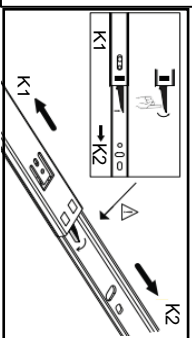 


A 48pcs  A1 A2 15*34mm	B 17pcs 	C 12pcs  35*3.5mm	D 32pcs  14*3.5mm	E 8pcs 	F 12pcs  25*3.5mm	G 6pcs 	H 46pcs 	K 3PCS  K1 K2
---	---	---	---	--	---	--	---	--

 
1



Remove K2 from K1 by sliding it out and pressing on the catch as indicated.


D*12 K1*6

2

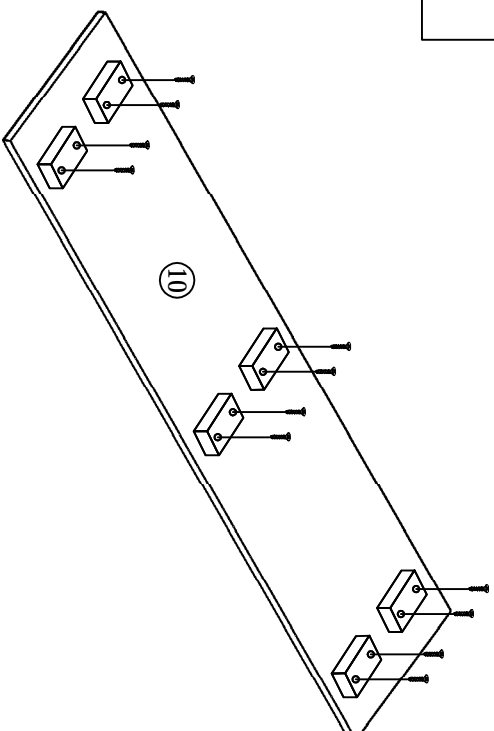


G*6 F*12

 3

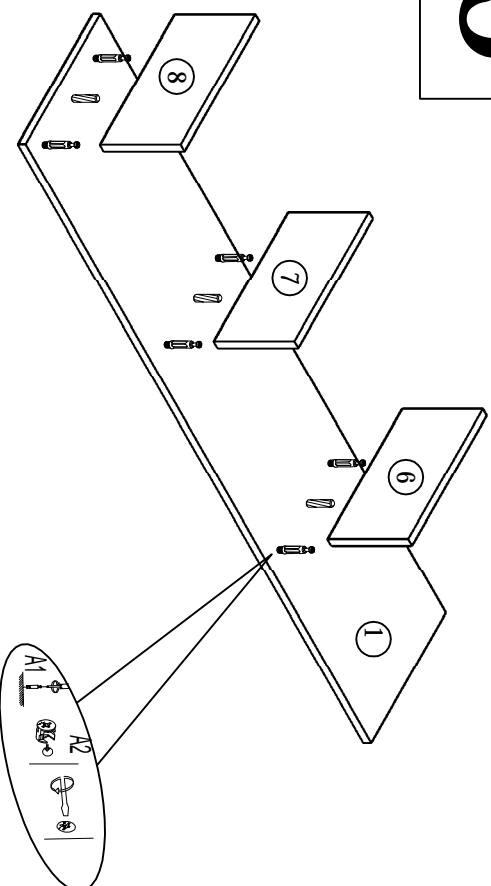


A1*6 A2*6 B*3

 4

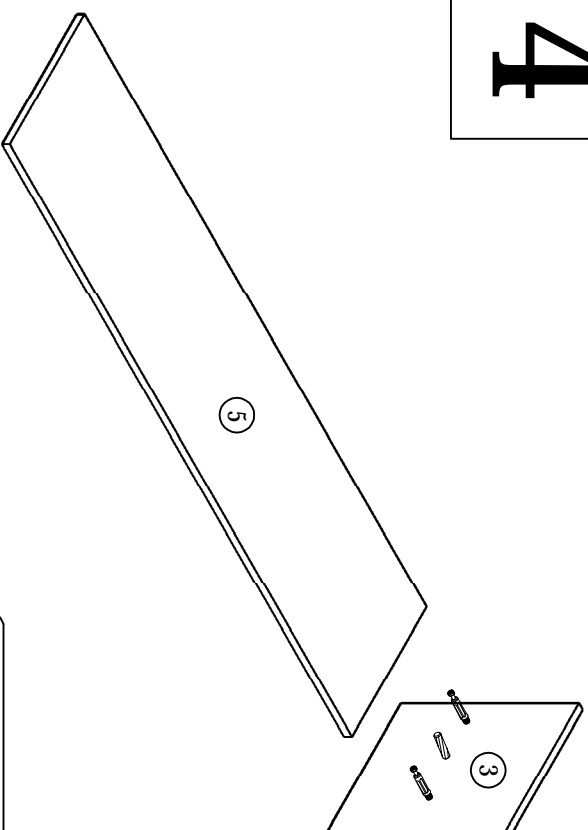


A1*2 A2*2 B*1

 5

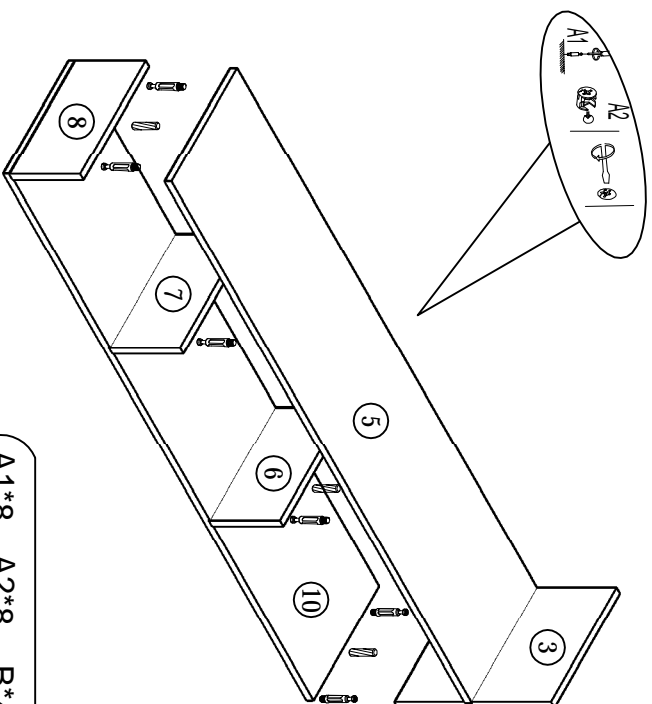


A1*8 A2*8 B*4

 6

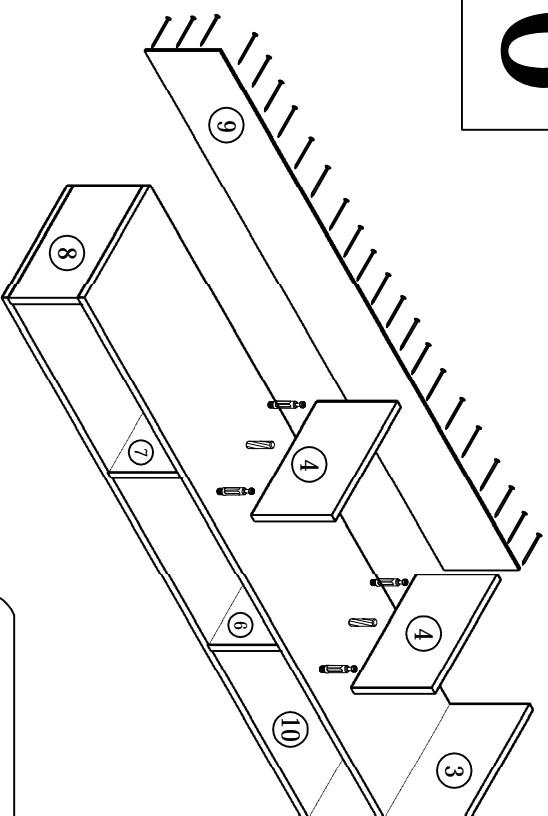


A1*4 A2*4 B*2 H*46

 7

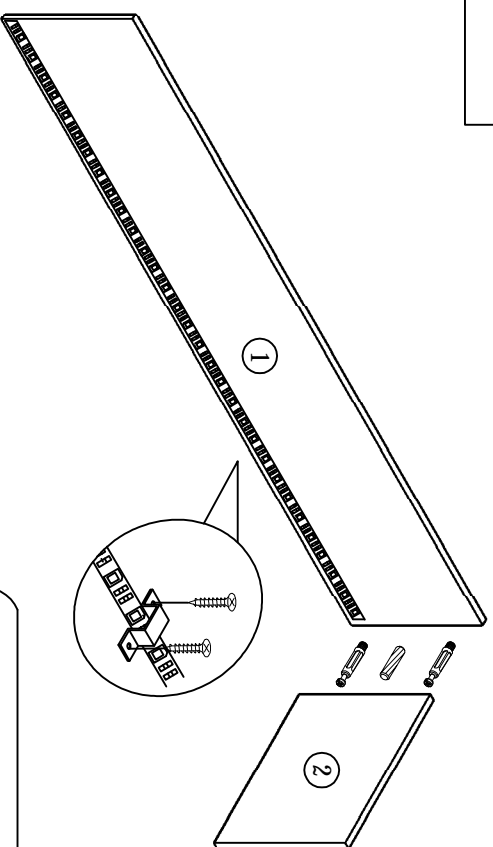


A1*2 A2*2 B*1 I*1

 8

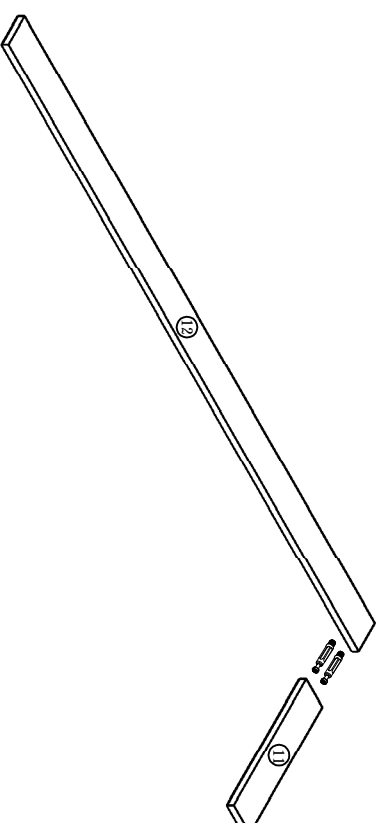


A1*2 A2*2

 9

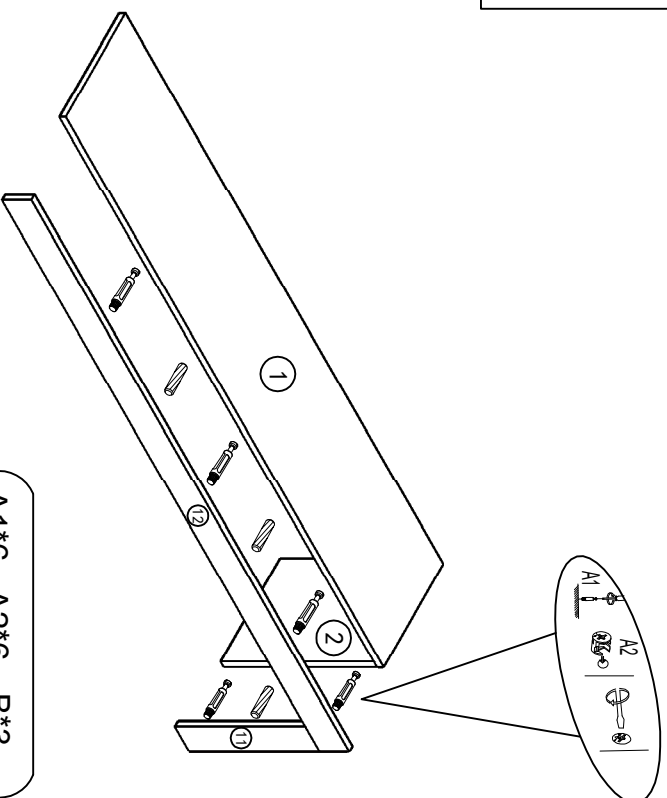


A1*6 A2*6 B*3

 10

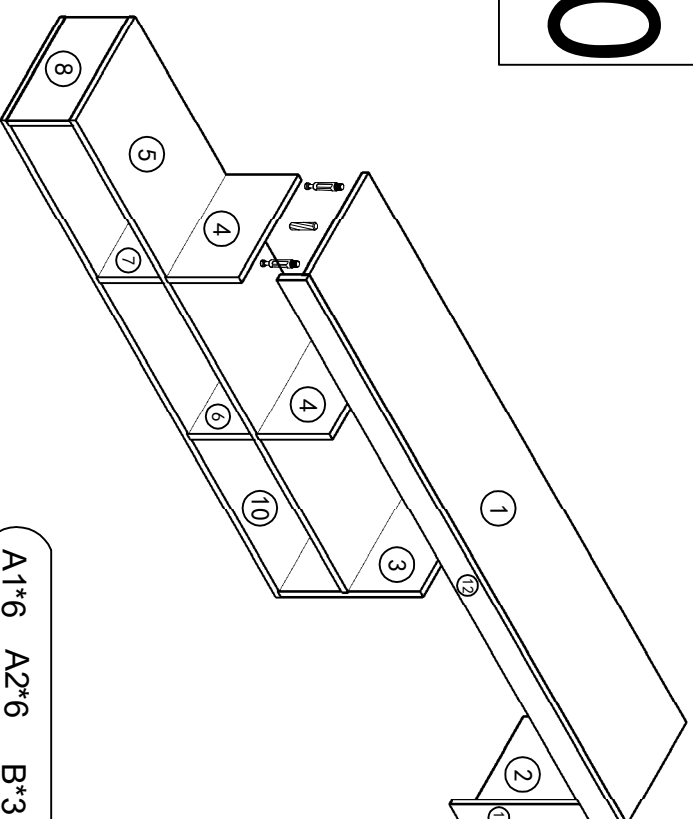


A1*6 A2*6 B*3

 11

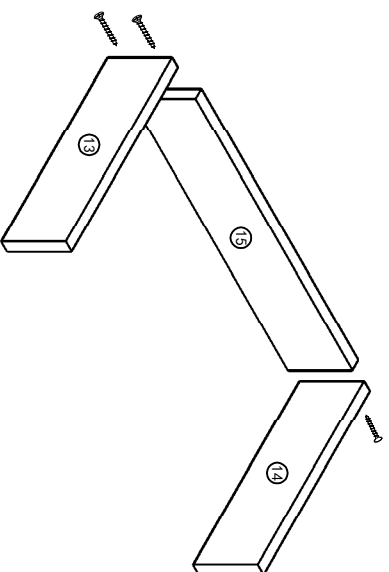



C*12

 12

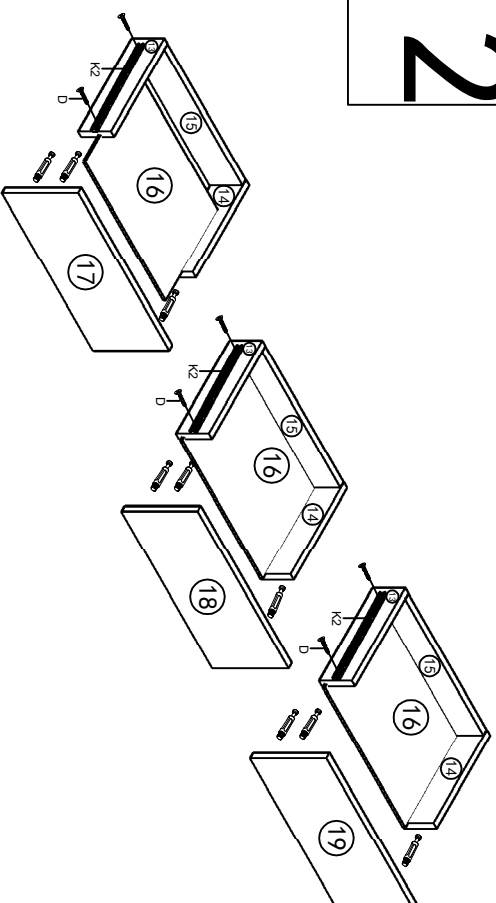


A1*12 A2*12 K2*6 D*12

  13

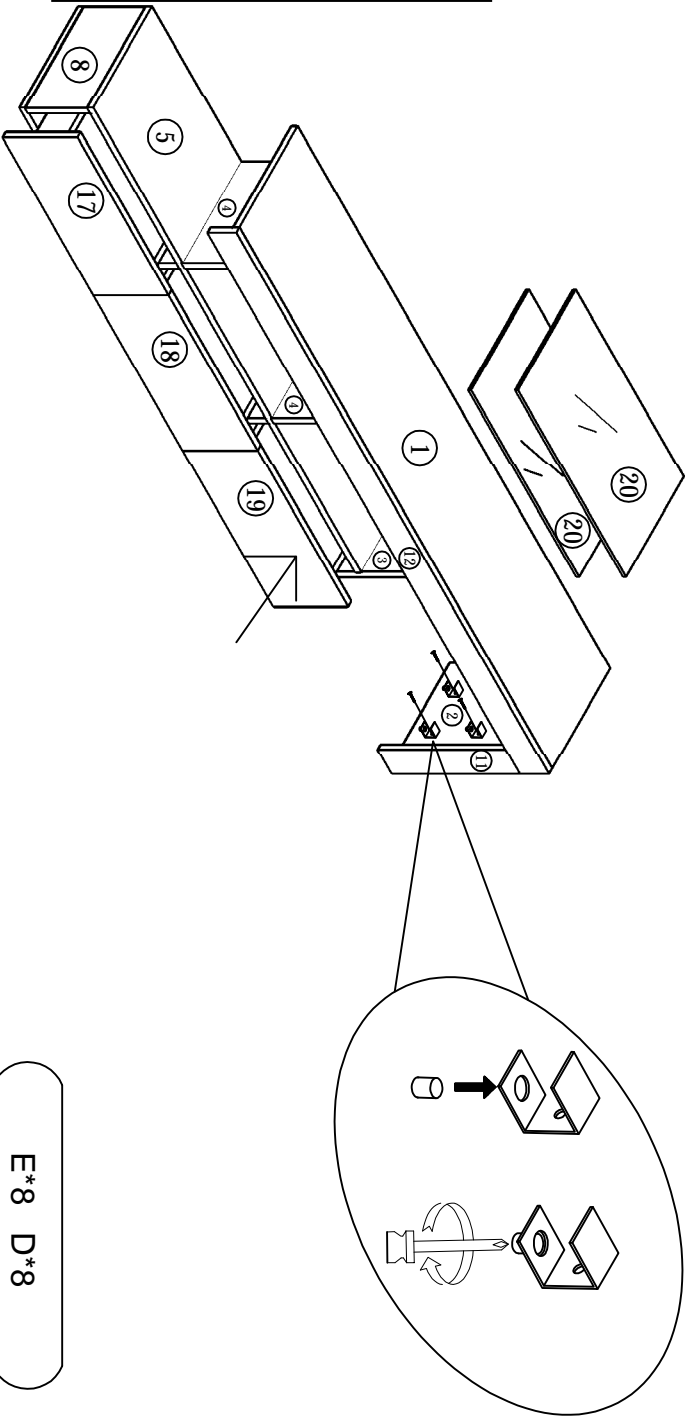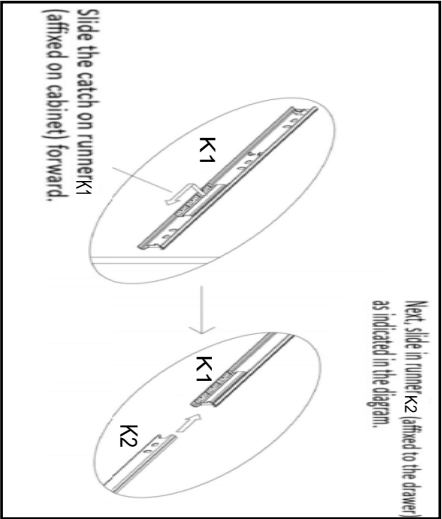

E*8 D*8

 14

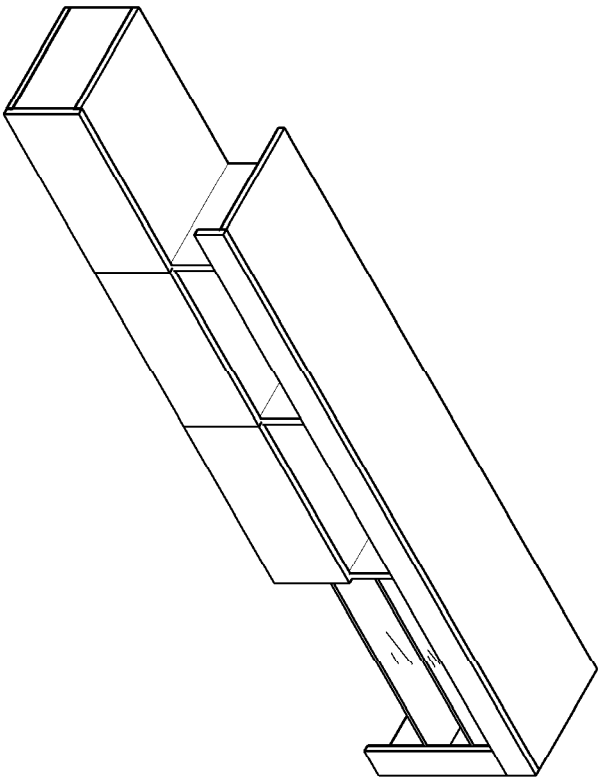

LED light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

