 
 
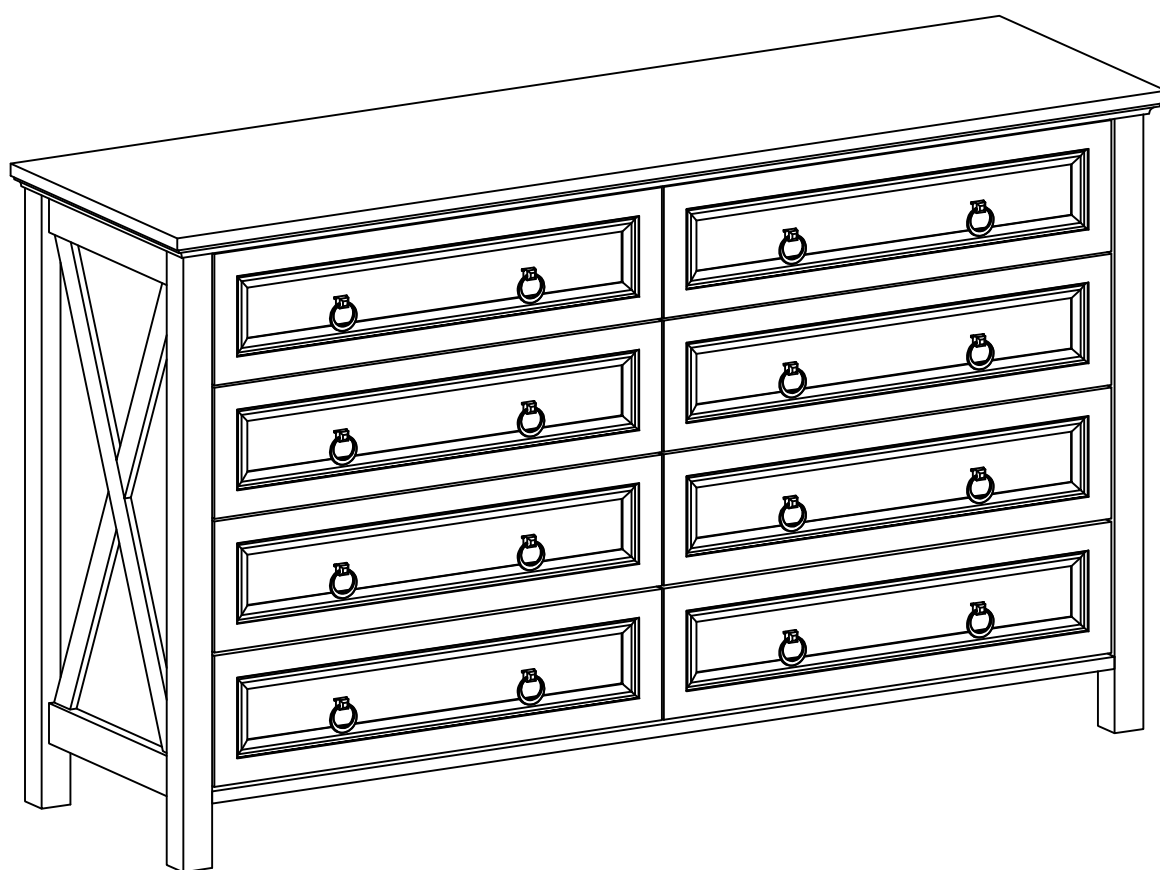 


Multifunctional storage

 
Assembly Instructions

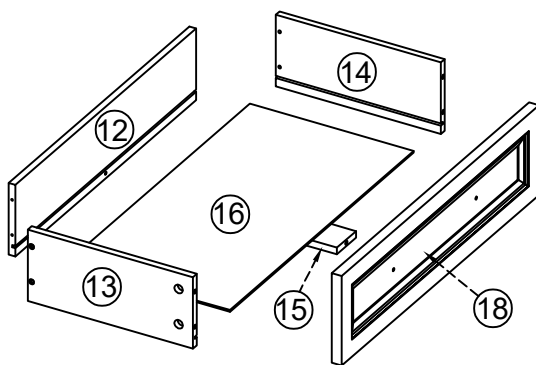

Parts List

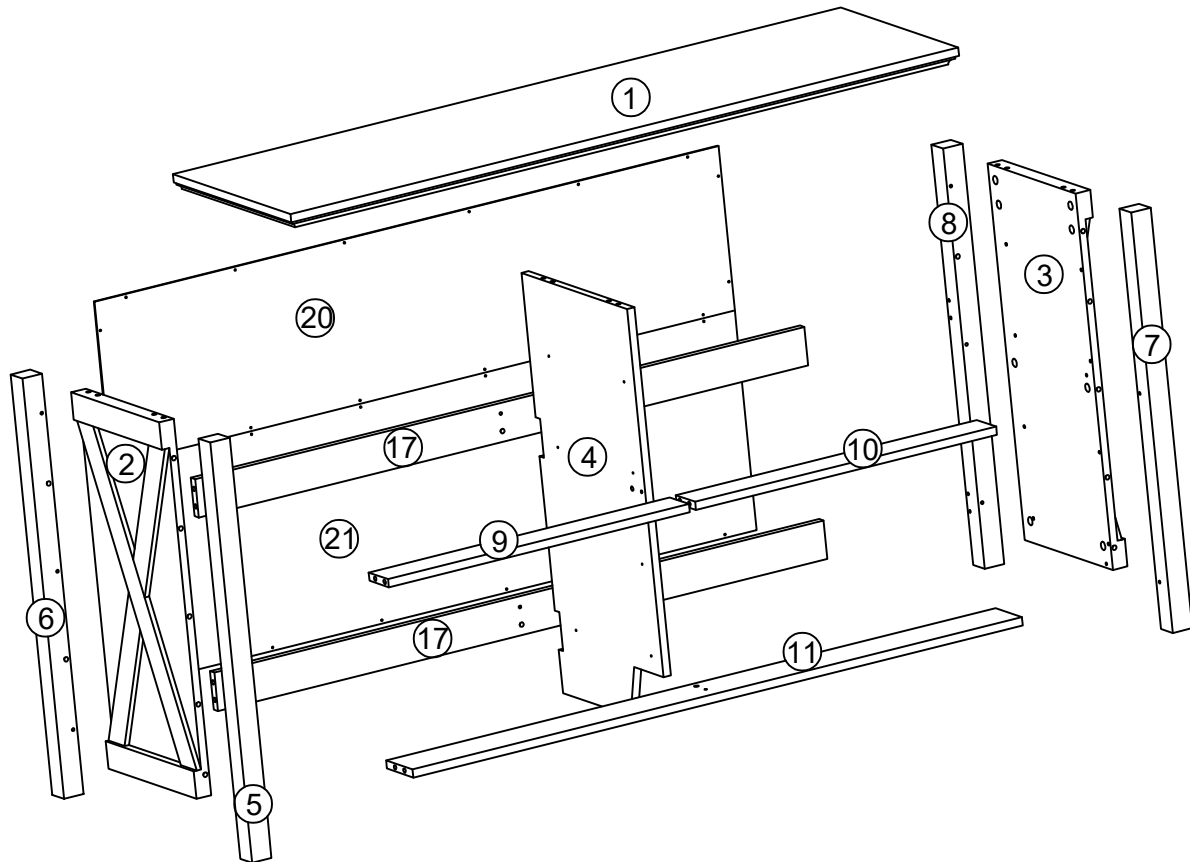

X4

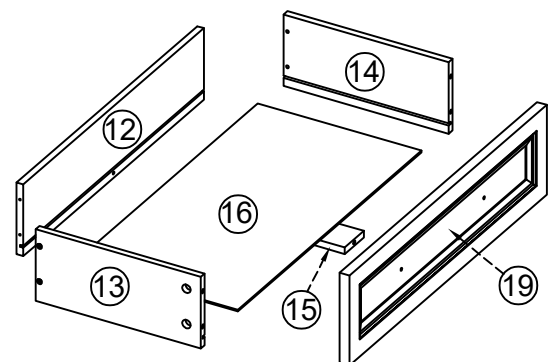

X4

Components


		①X1
		②X1
		③X1
		④X1
		⑤X1
		⑥X1
		⑦X1
		⑧X1
		⑨X1
		⑩X1
		⑪X1
		⑫X8
		⑬X8
		⑭X8
		⑮X8
		⑯X8
		⑰X2
		⑱X4
		⑲X4
		⑳X1
		㉑X1

Screws & Tools


Ⓐ		X74+2
Ⓑ	Ø15 x 9mm	X74+2
Ⓒ	Ø8 x 30mm	X21+1
Ⓓ	Ø6 x 30mm	X16+1
Ⓔ	Ø3.5 x 35mm	X43+2
Ⓕ	Ø3.5 x 12m	X64+2
Ⓖ	Ø3.5 x 12m	X32+1
Ⓕ	300MM	X8sets
Ⓖ		X1sets
Ⓖ		X16
Ⓖ		X2
Ⓖ	M4X12mm	X16

Check all the components & screws before assembly.
Do not install in case part is missing, contact us to get.
Send email with your question to support@idealhouse.vip
We will resend within 24 hours

 
How to use the cam lock system

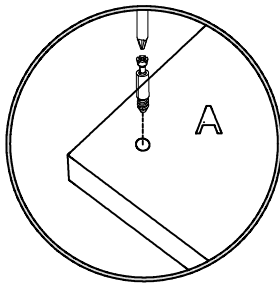

 
1.Screw cam bolt into panel

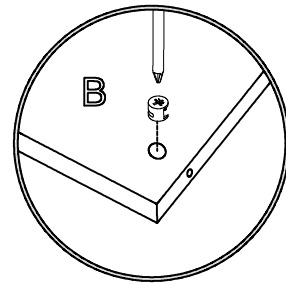

 
2.Push cam into panel - arrow feature on cam top points to panel edge

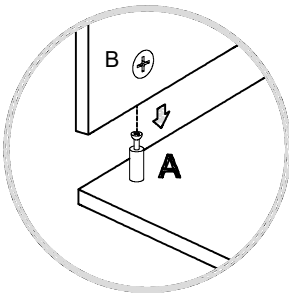

 3.Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

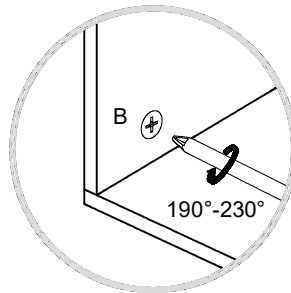


 3.Rotate cam(s) clockwise 190°-230° to lock panels together

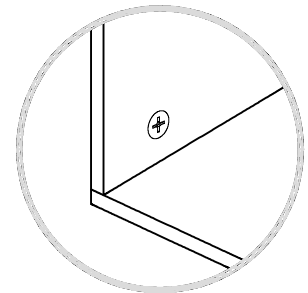

5.Panels should be tight against each other and connection should be rigid

 
Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet ,IF NECESSARY.

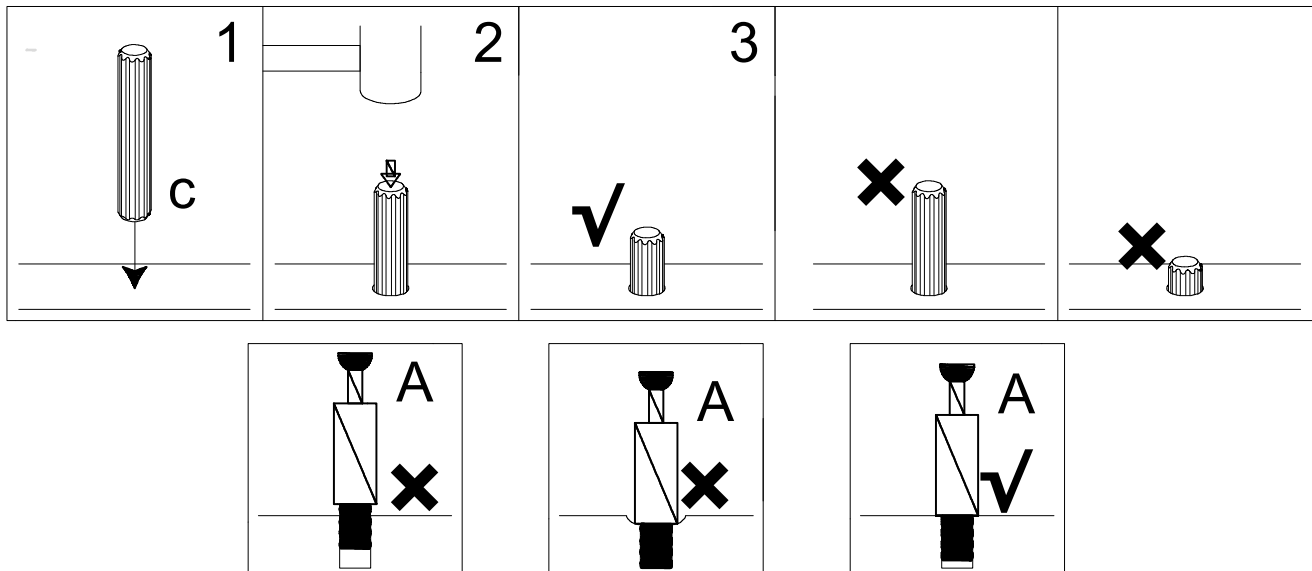


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb,sit or stand on the assembled product.
- For safety reasons,it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting,drilling or hammering into any wall or floor surface,verify the location of electrical, plumbing and gas lines.Cutting may cause serious injury.

Ready to assemble the dresser




 
Before installation, observe each structure of the drawer dresser. The drawer dresser consists of two main parts. You will assemble the chest first, and then install the five drawers. Finally, look at the finished look, and contrast list of part, imagine how to install it faster, hope this will help you.

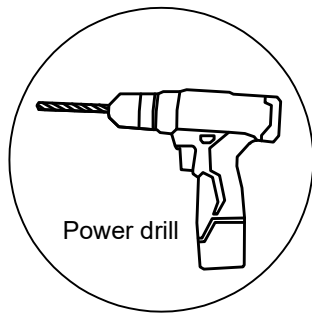





 
We recommend using a power drill to assemble。

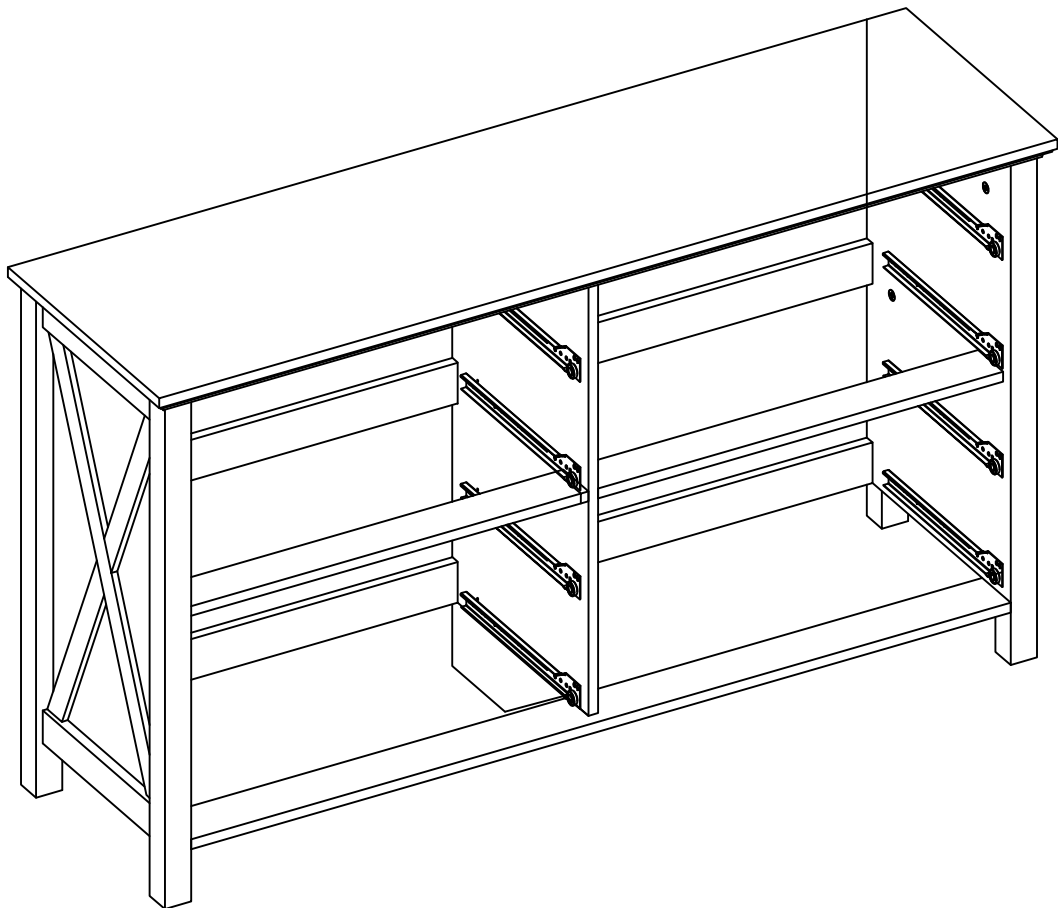

    Step 1

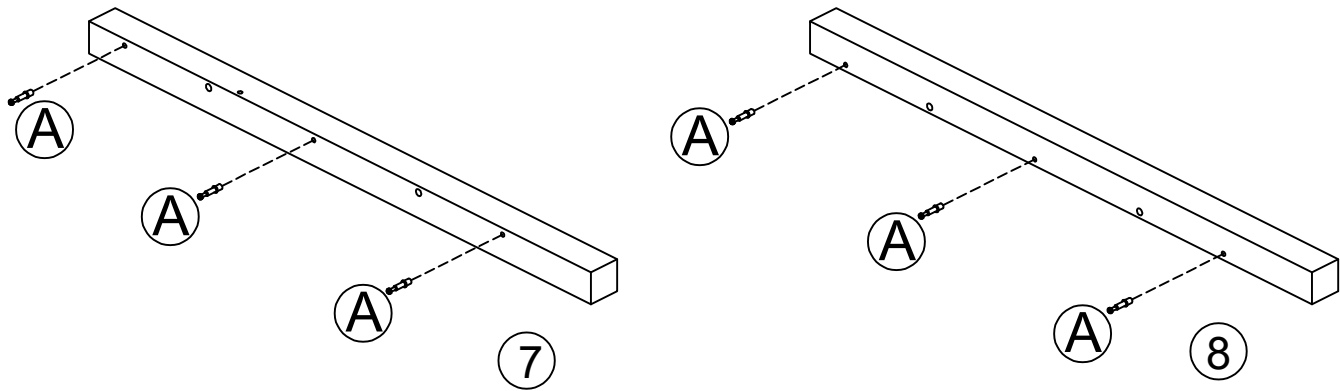
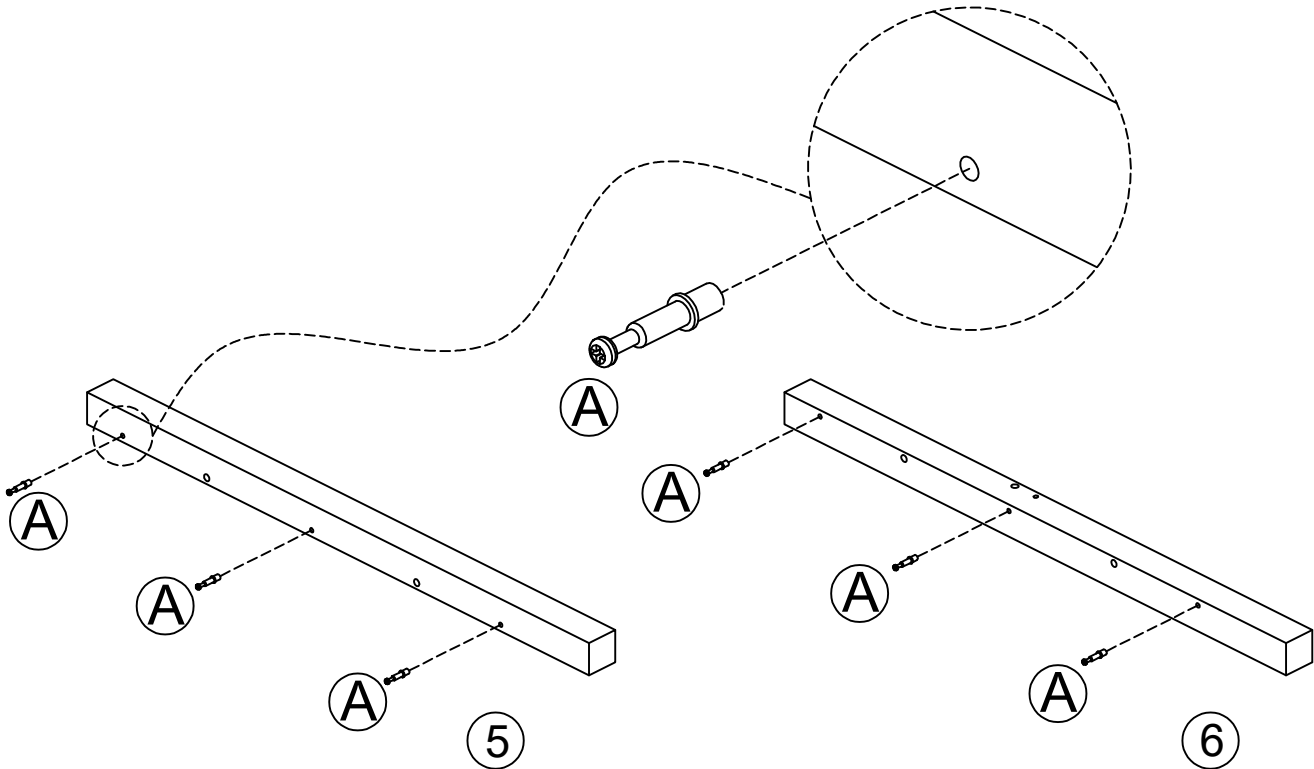
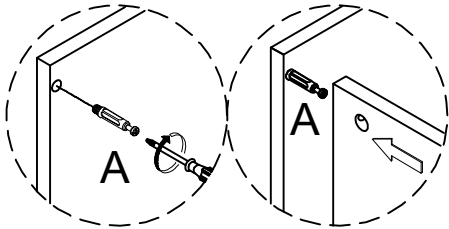
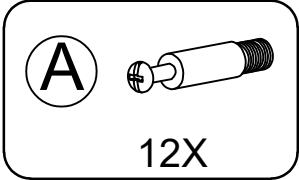


     Step 2

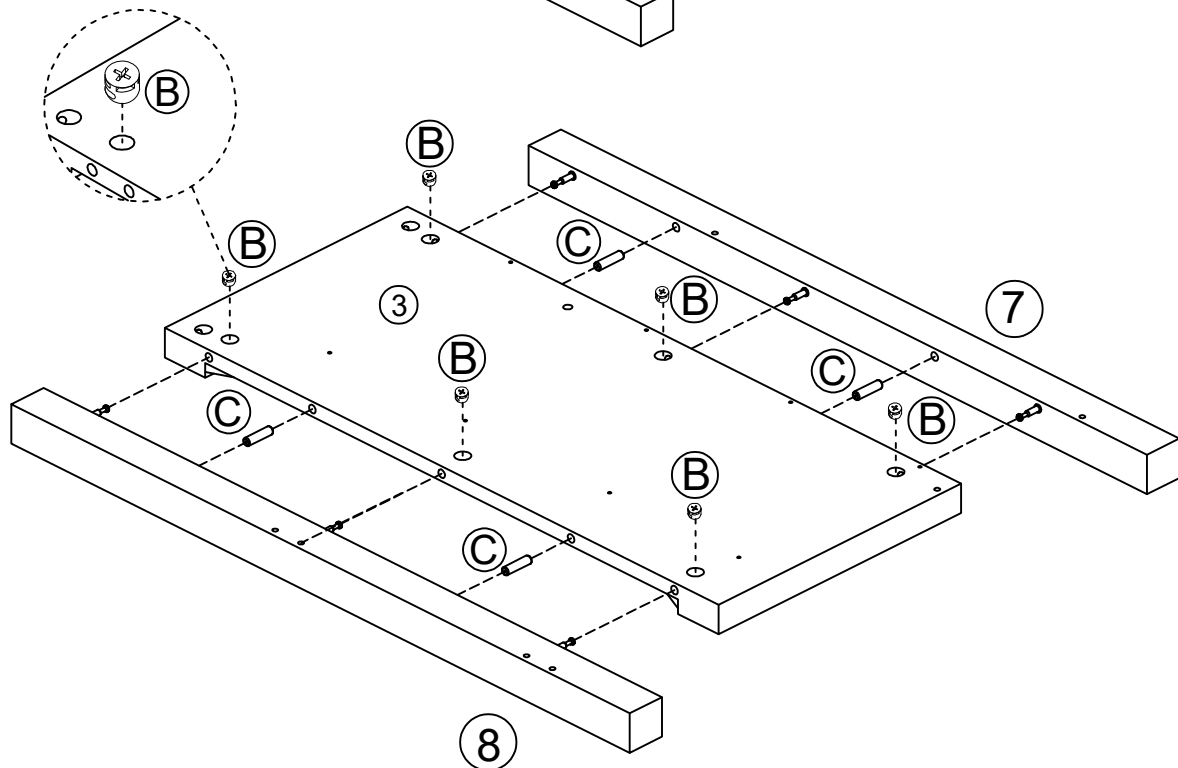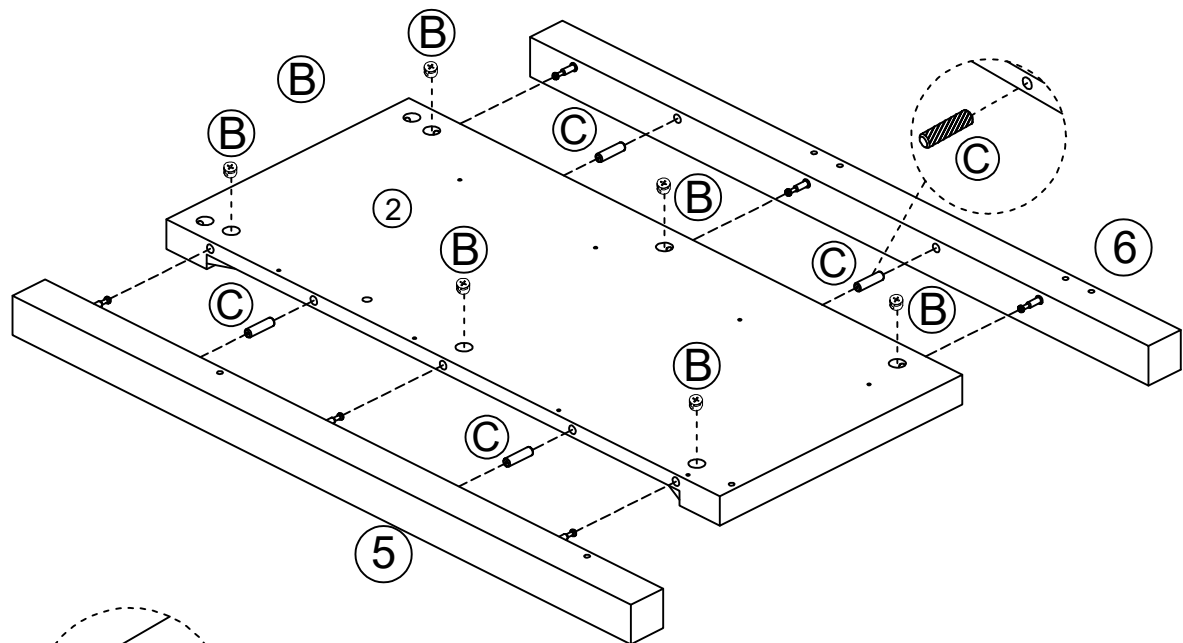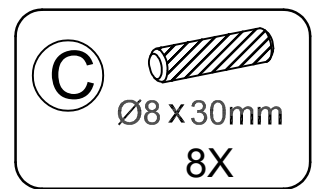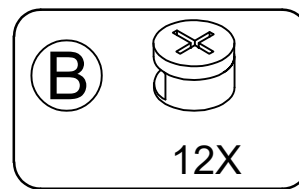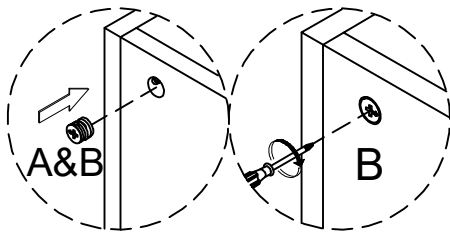


Warm Tips: Make sure the 4 large pre-drilled hole are on the upside
③&④holes should be in the same side.

    Step 3

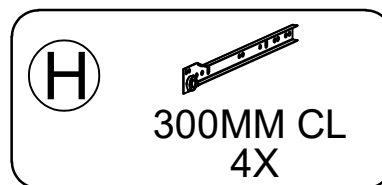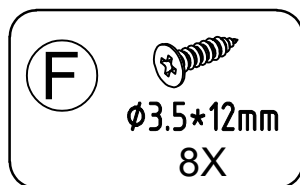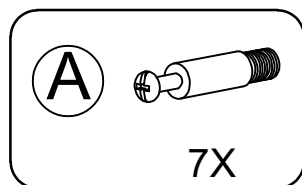
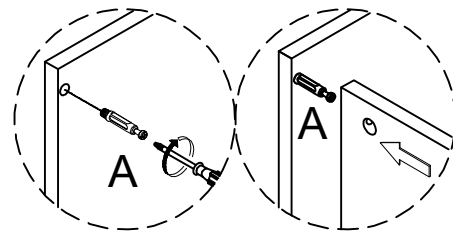


Make sure the 4 large pre-drilled hole are on the upside.




 
ⓕ should be locked in the First hole against the pulley.

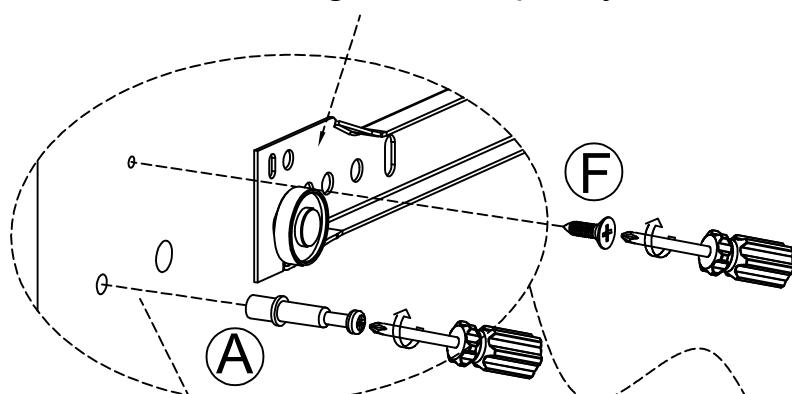

ⓕ should be screw to the small holes

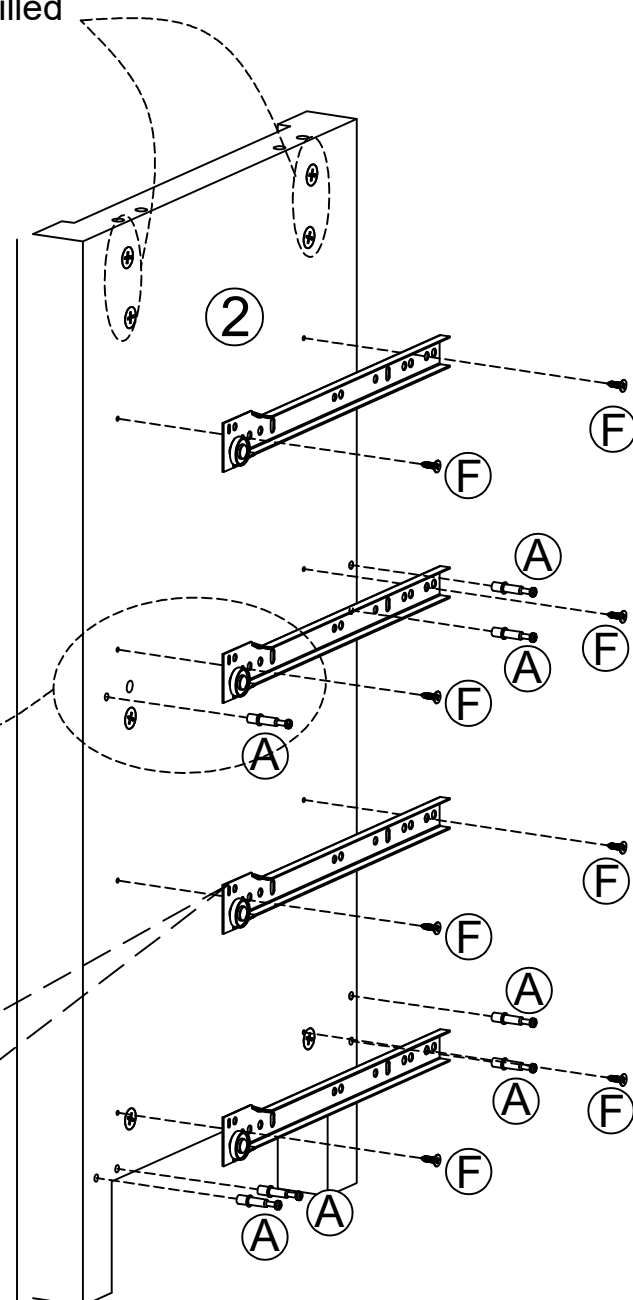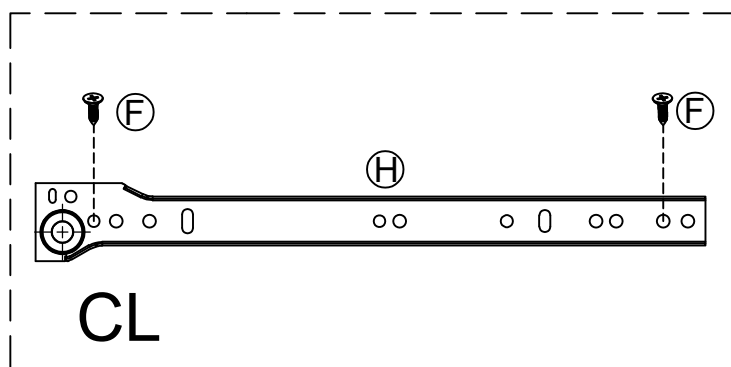  


    Step 4

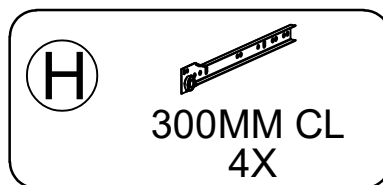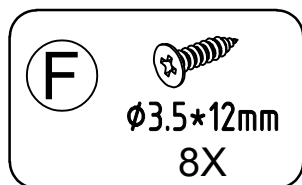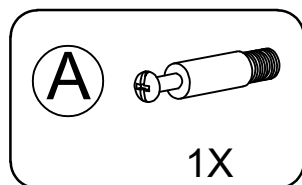
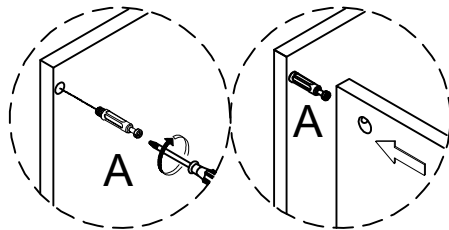


Make sure the 4 large pre-drilled hole are on the upside.

 ⓕ should be locked in the first hole against the pulley.




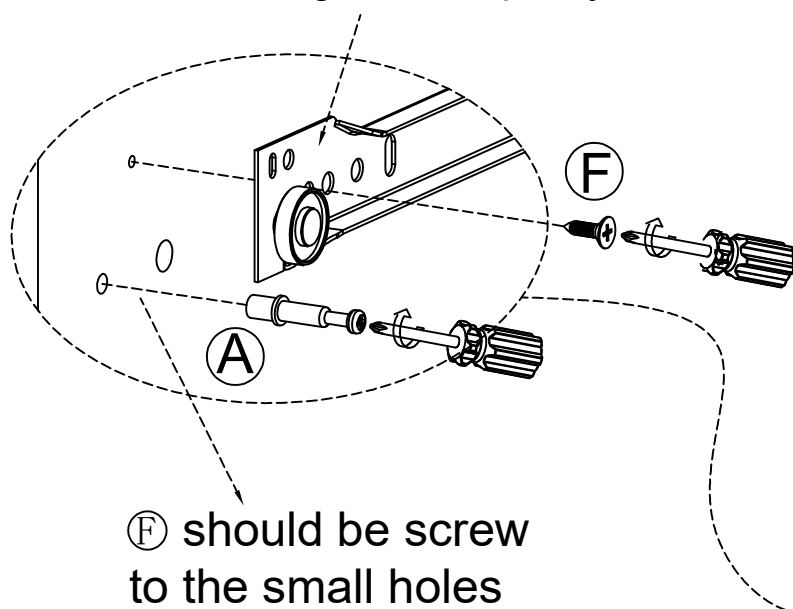


ⓕ should be screw to the small holes

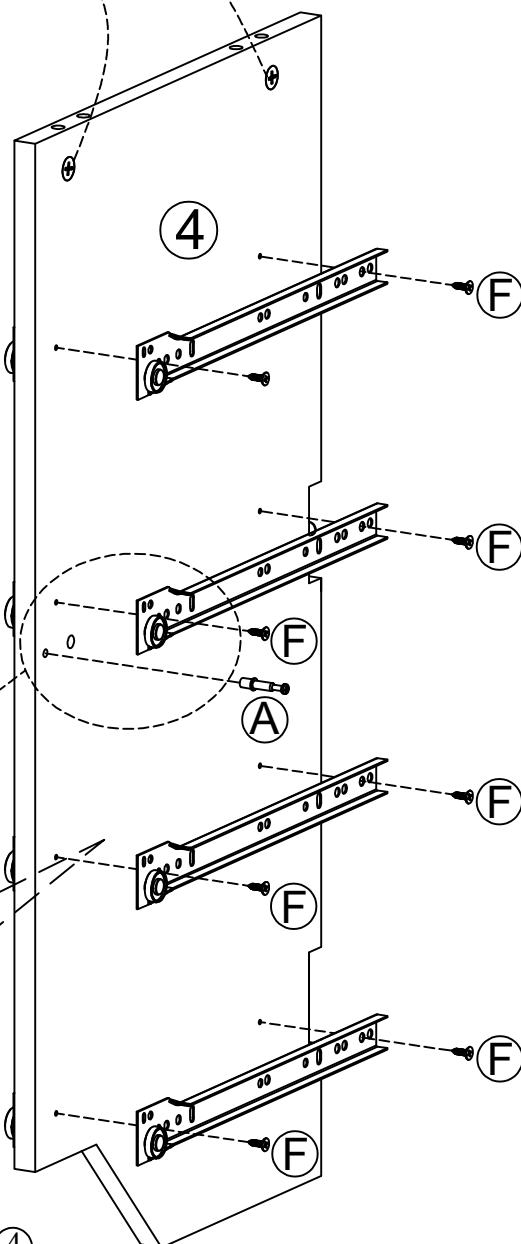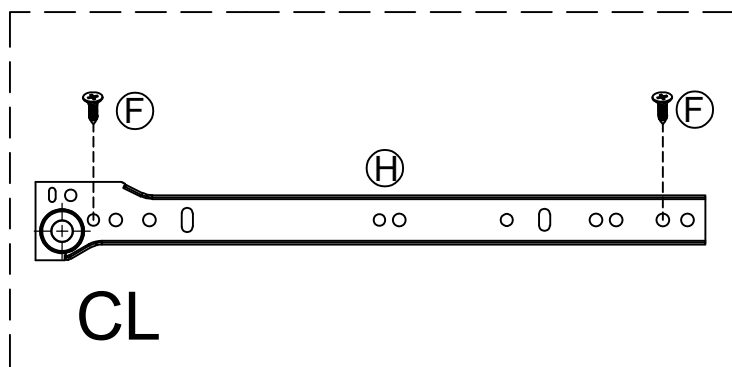  


Install first rail on the right side of board ④ .

    Step 5

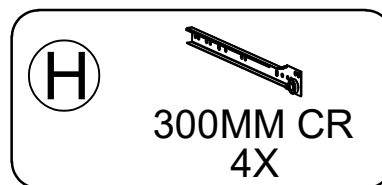
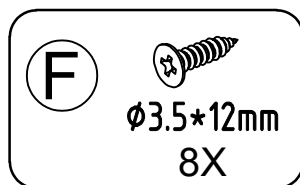
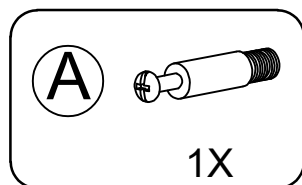
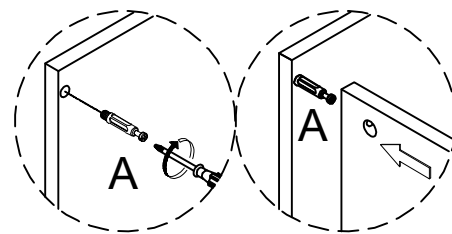


Make sure the 4 large pre-drilled hole are on the upside.

 ⓕ should be locked in the second hole against the pulley.

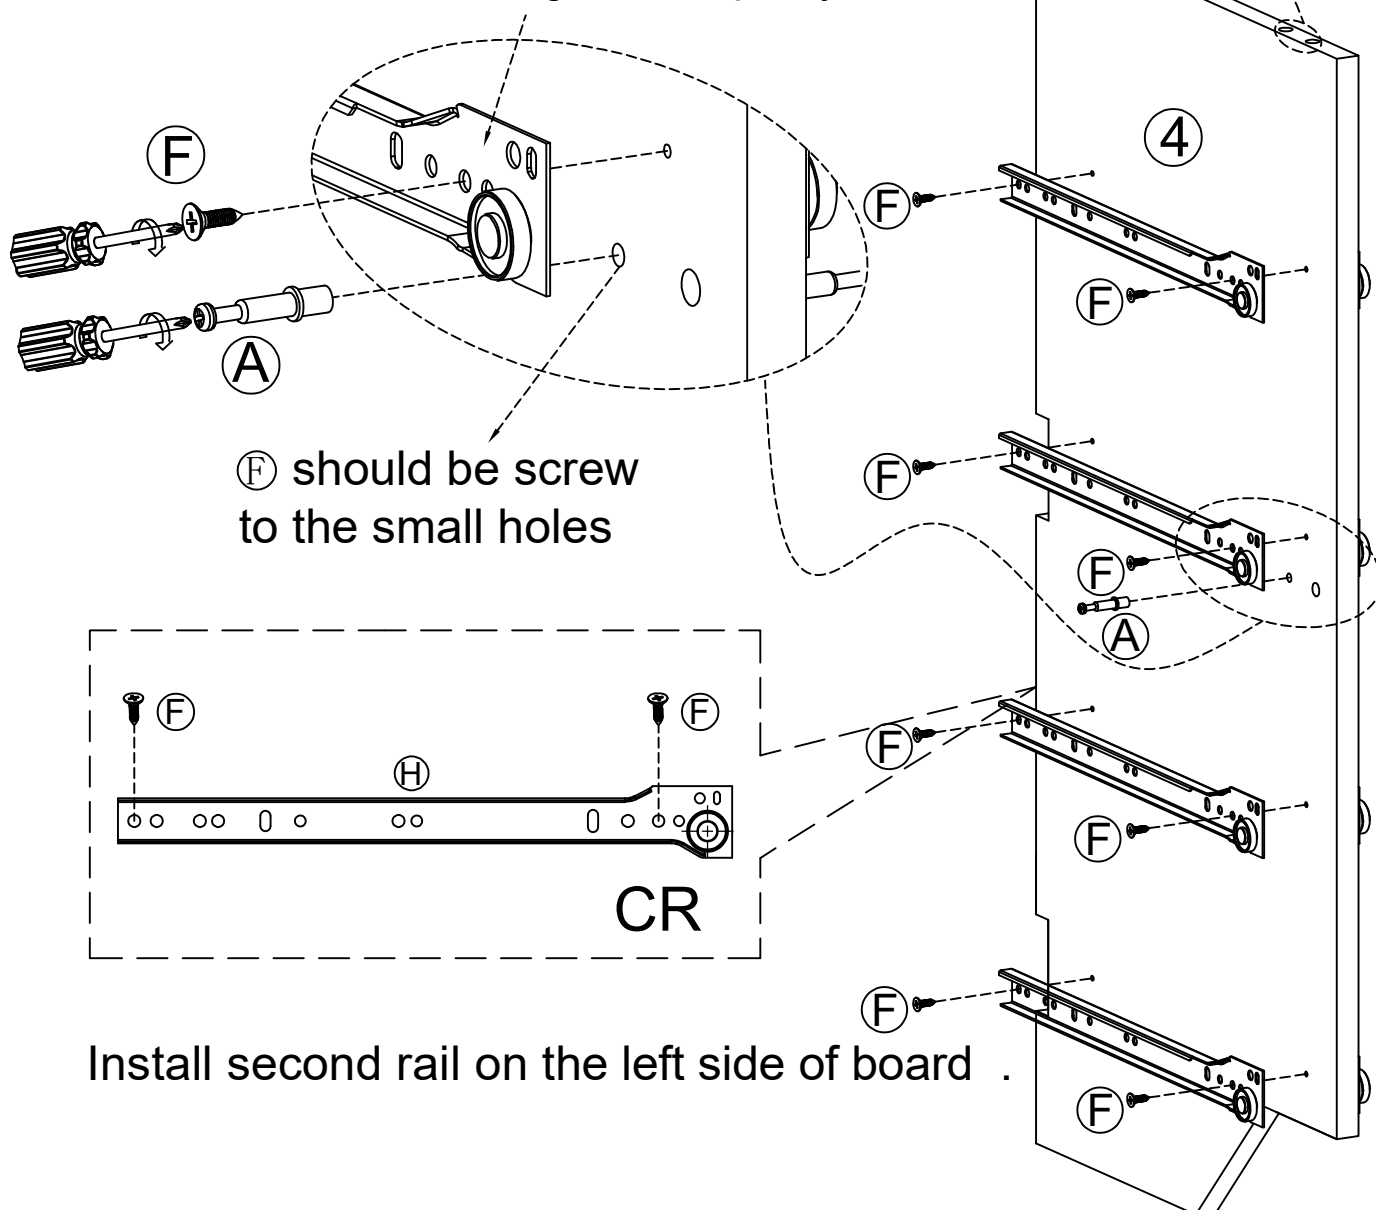


    Step 6

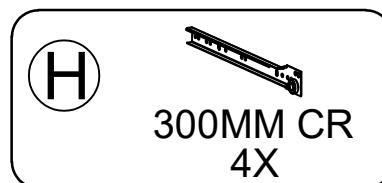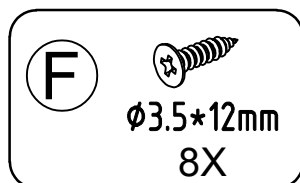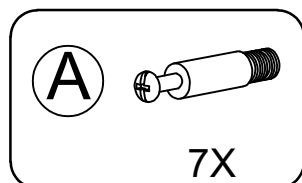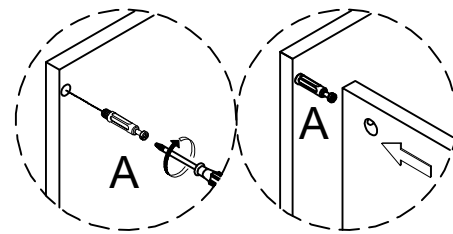




Make sure the 4 large pre-drilled hole are on the upside.

 ⓕ should be locked in the first hole against the pulley.




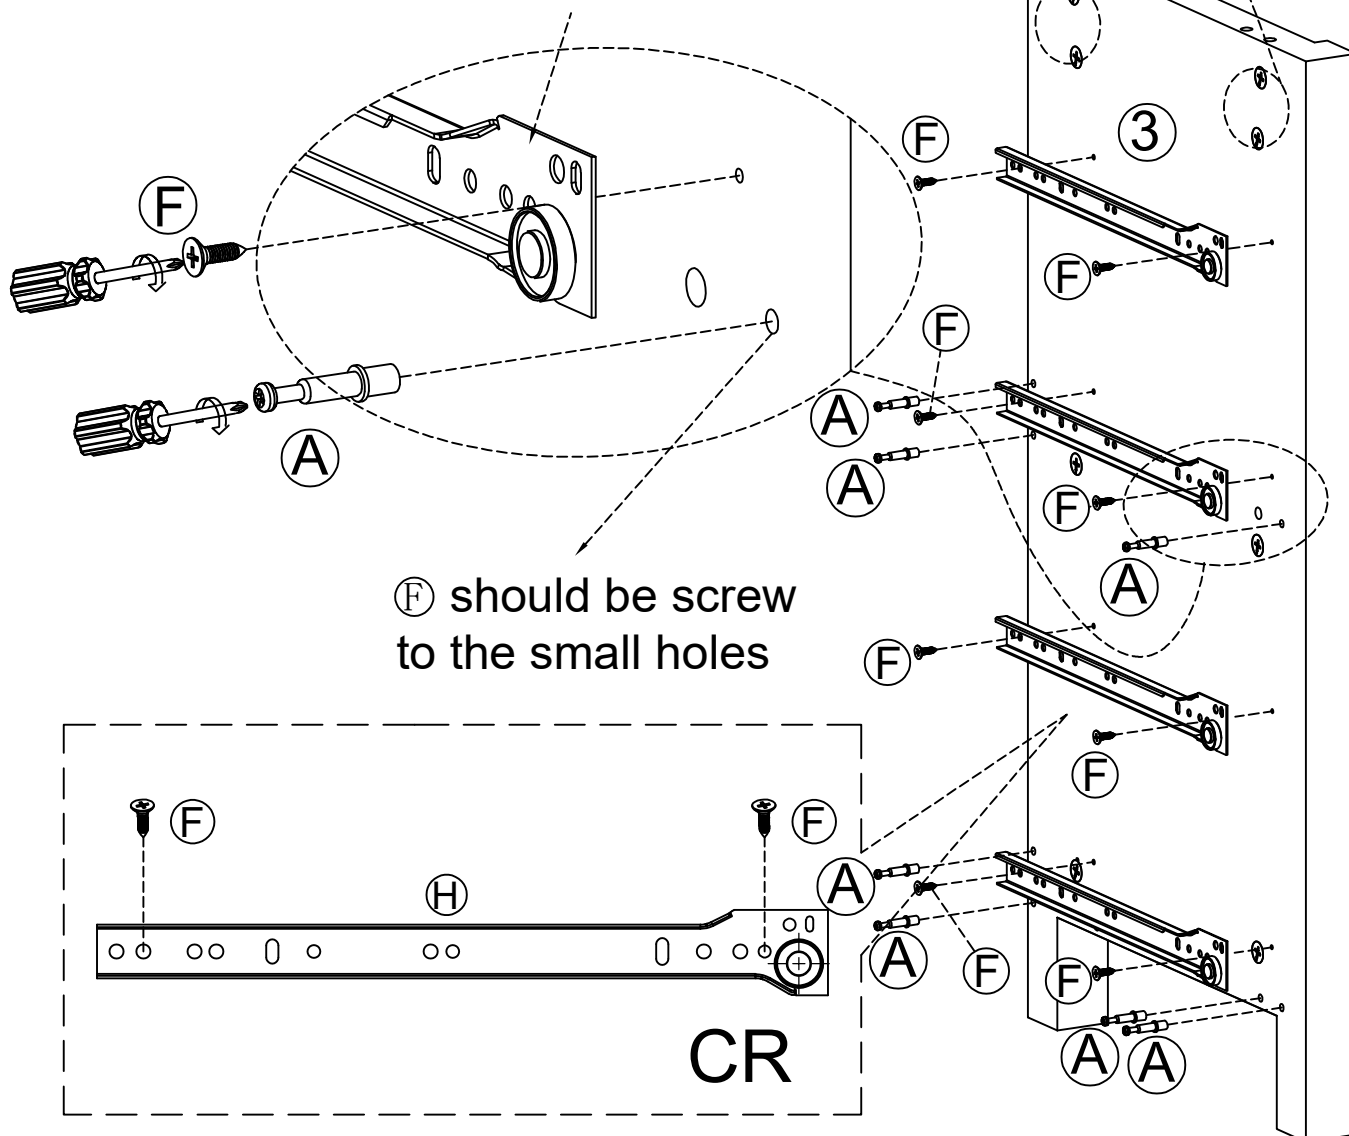


ⓕ should be screw to the small holes


 
 
 
Step 7

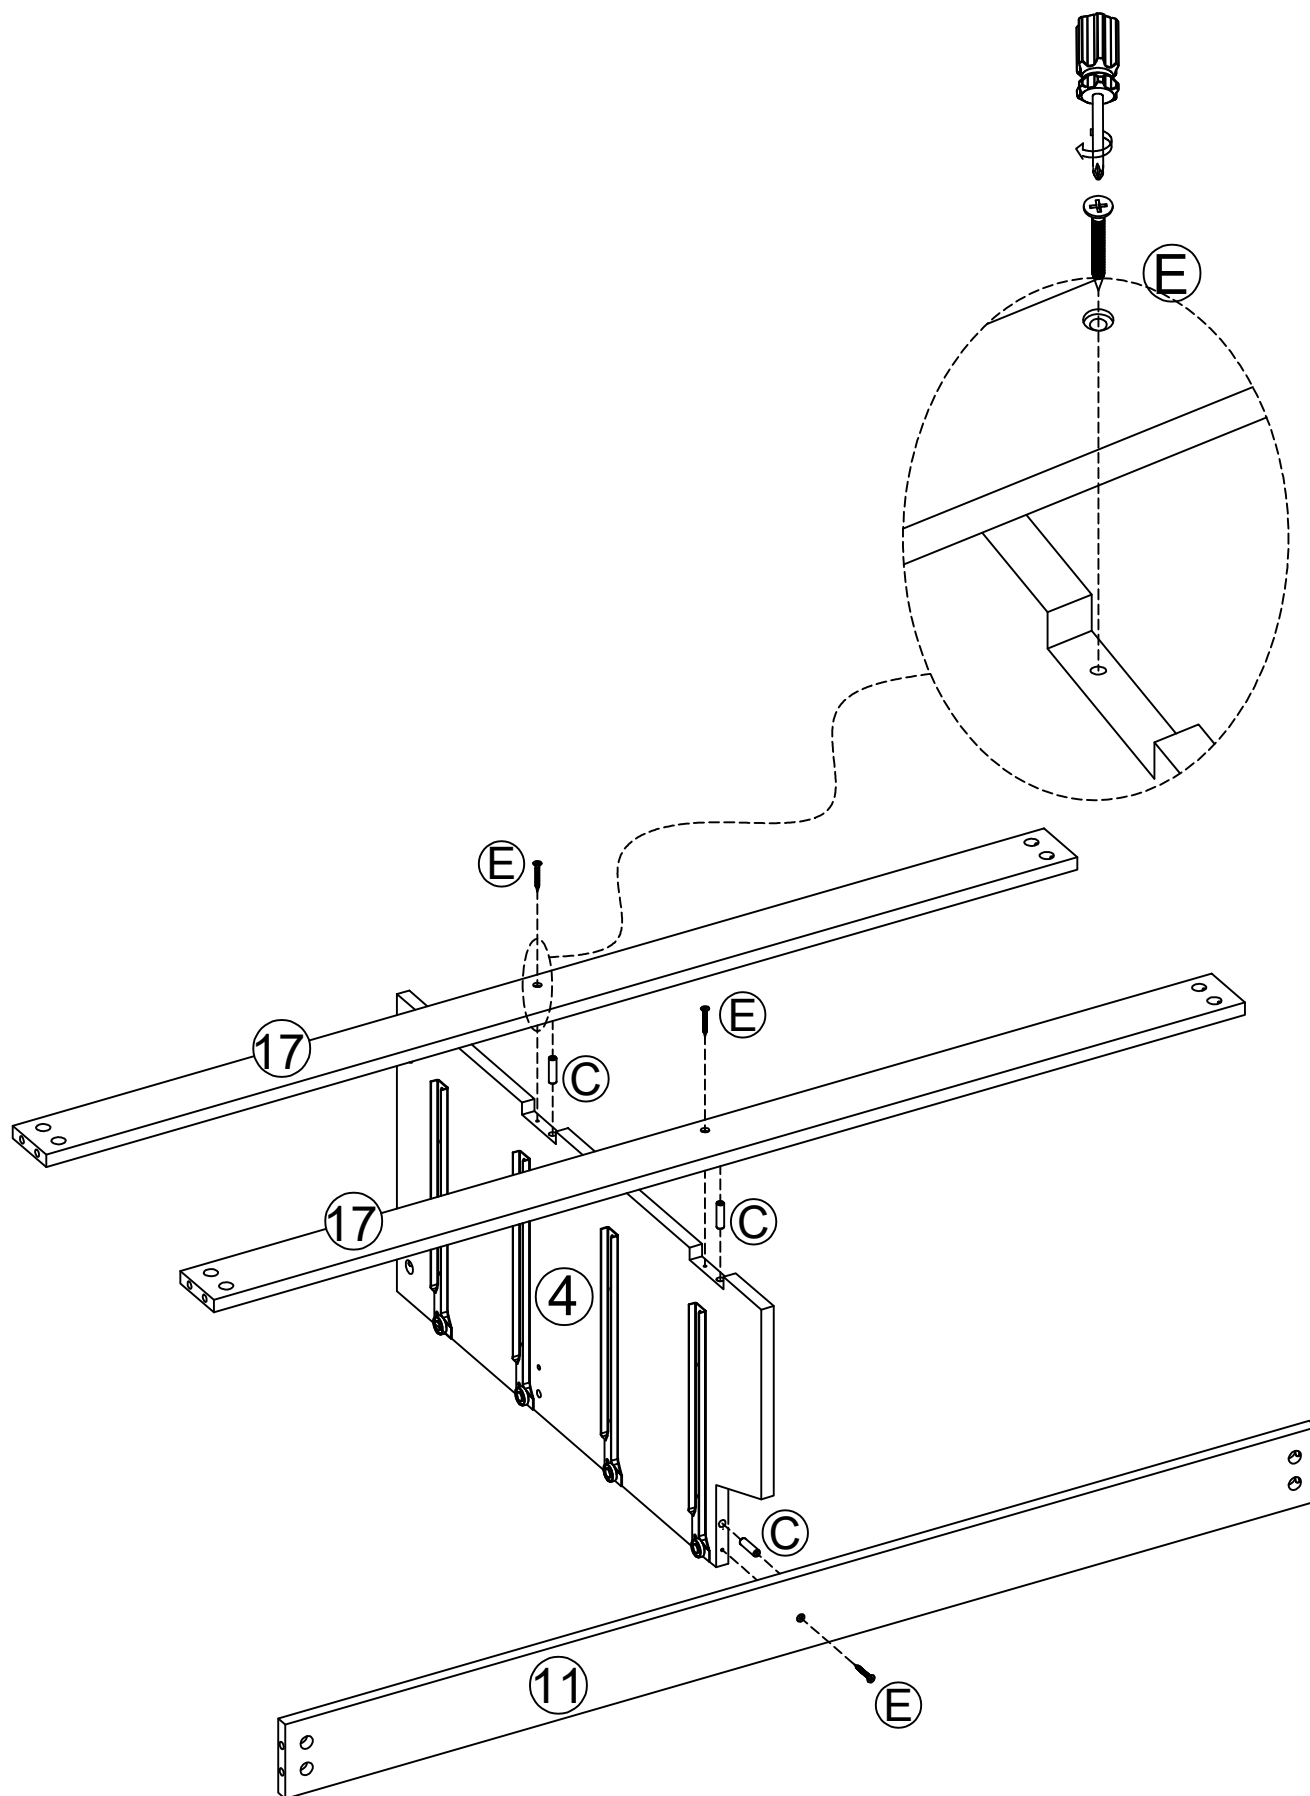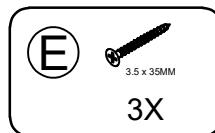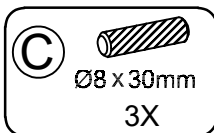

 
 
 
 
Step 8

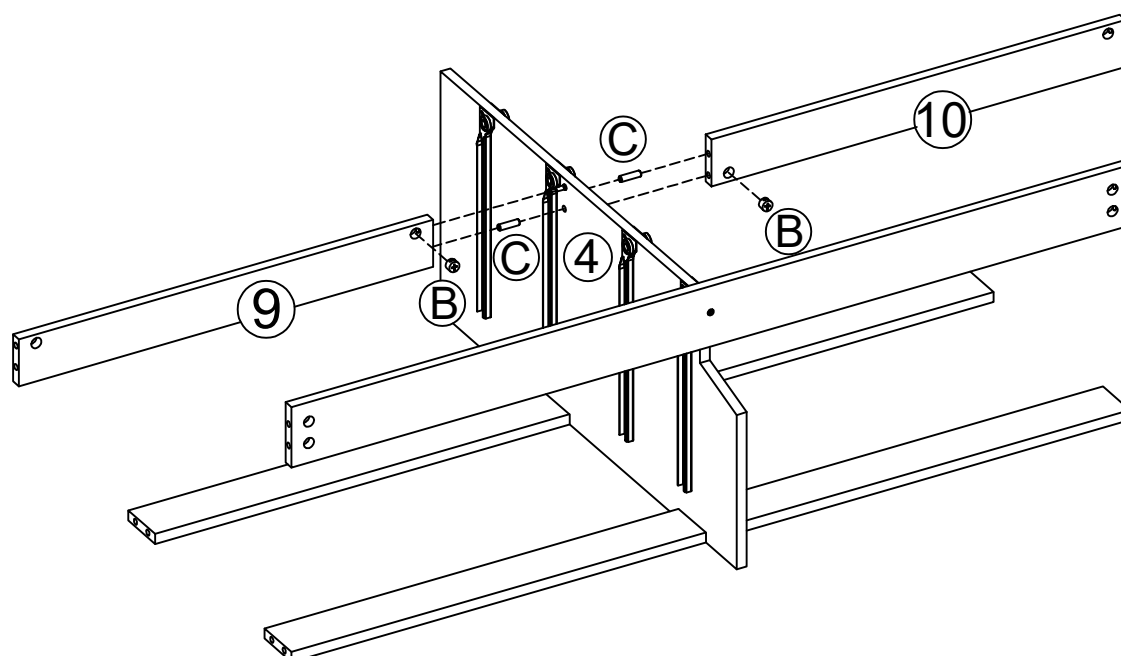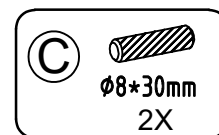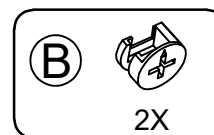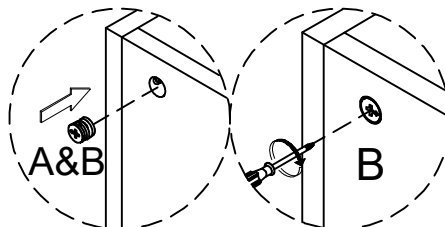



 
 
 
 
Step 9

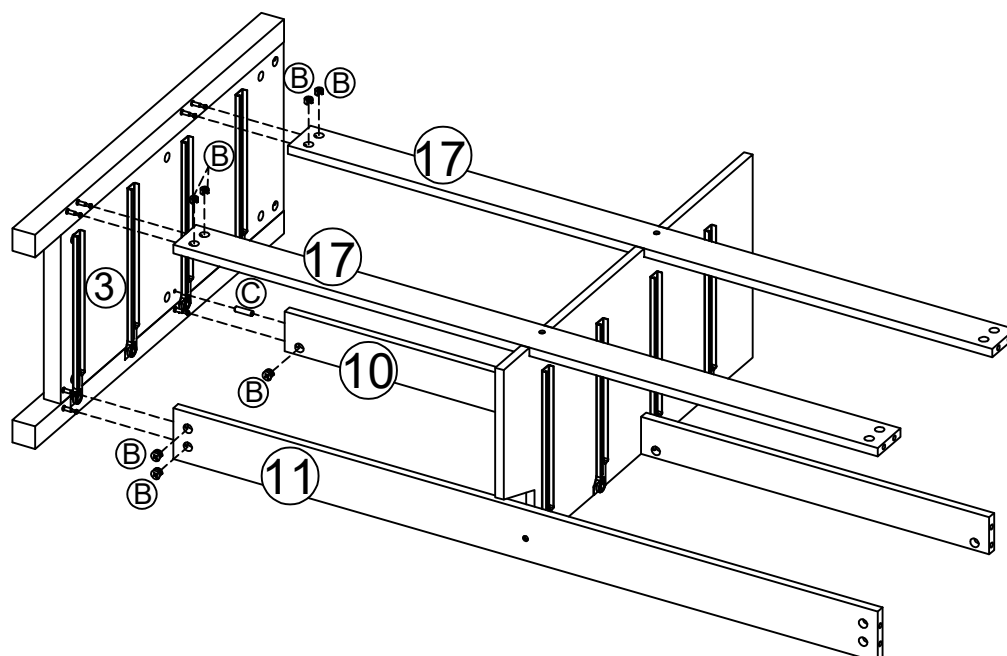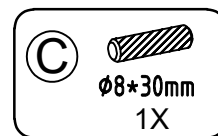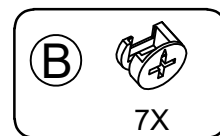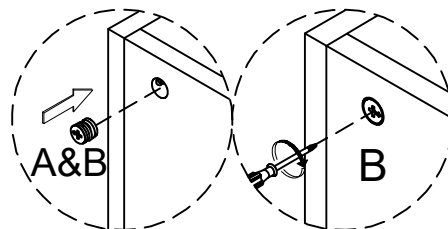

  
 
 
Step 10

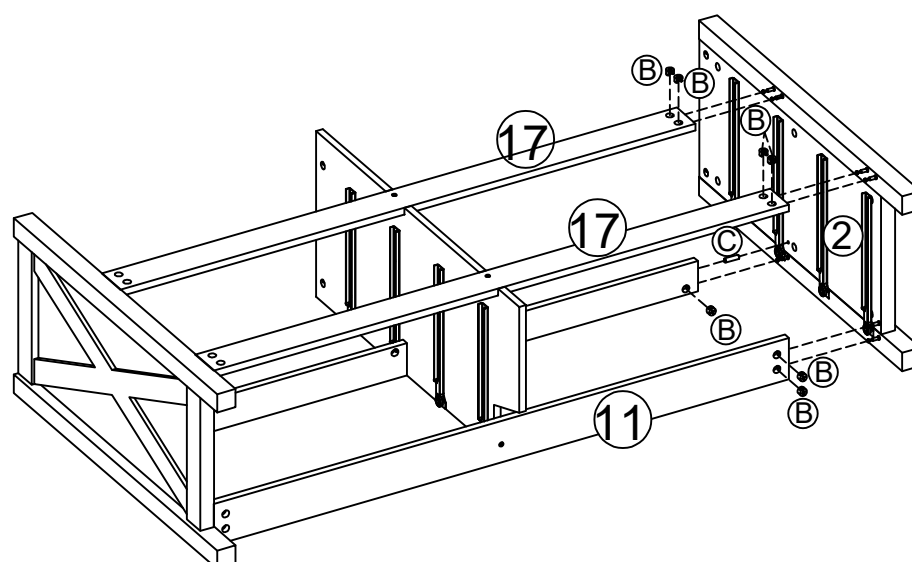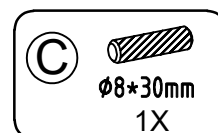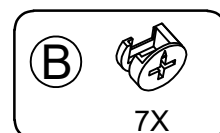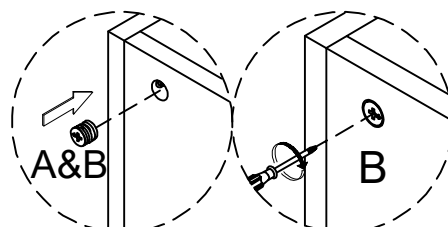

      Step 11

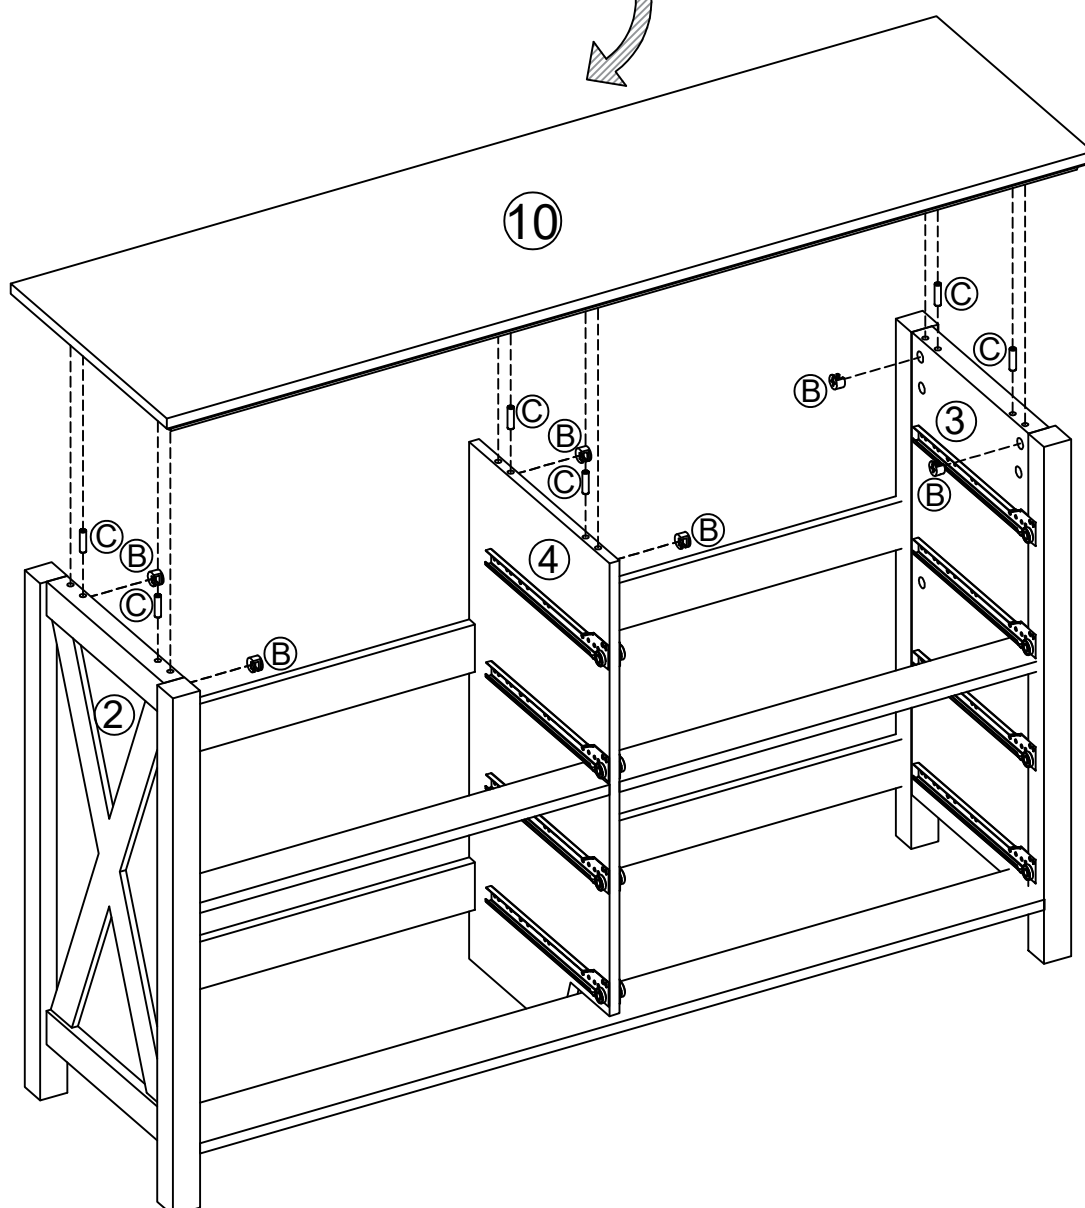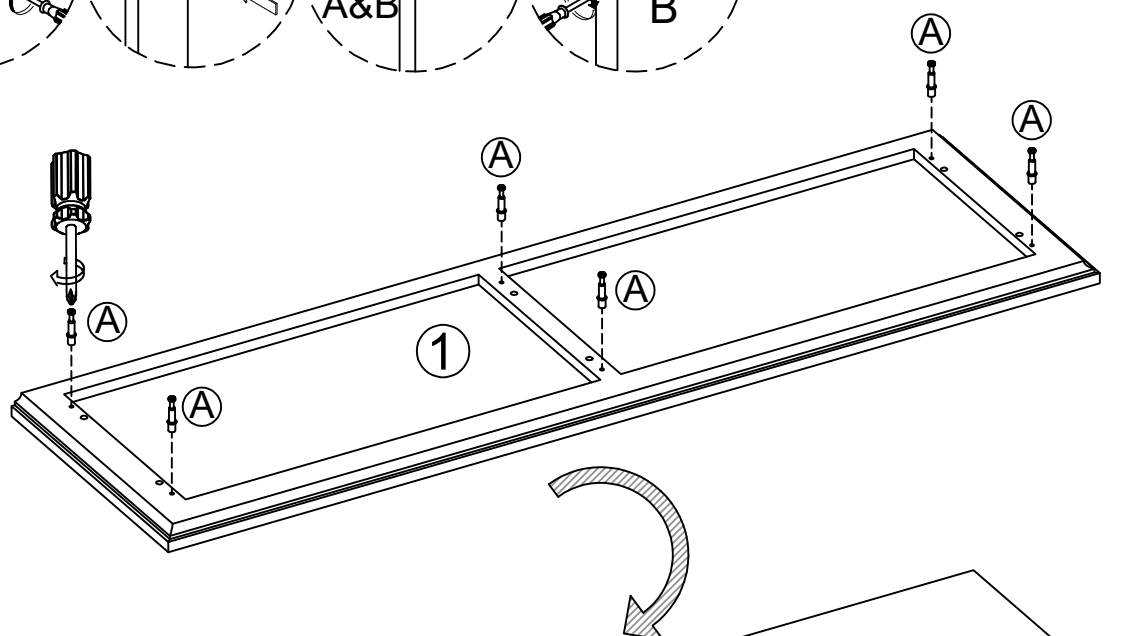
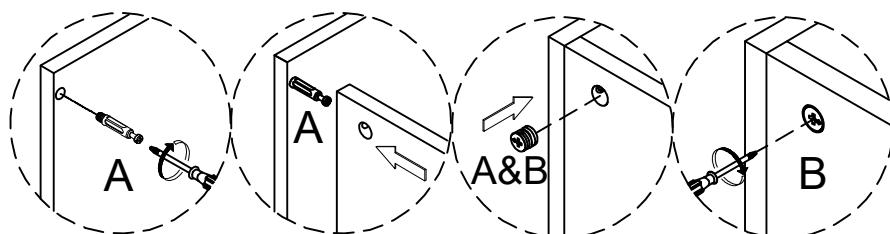





   Step 12

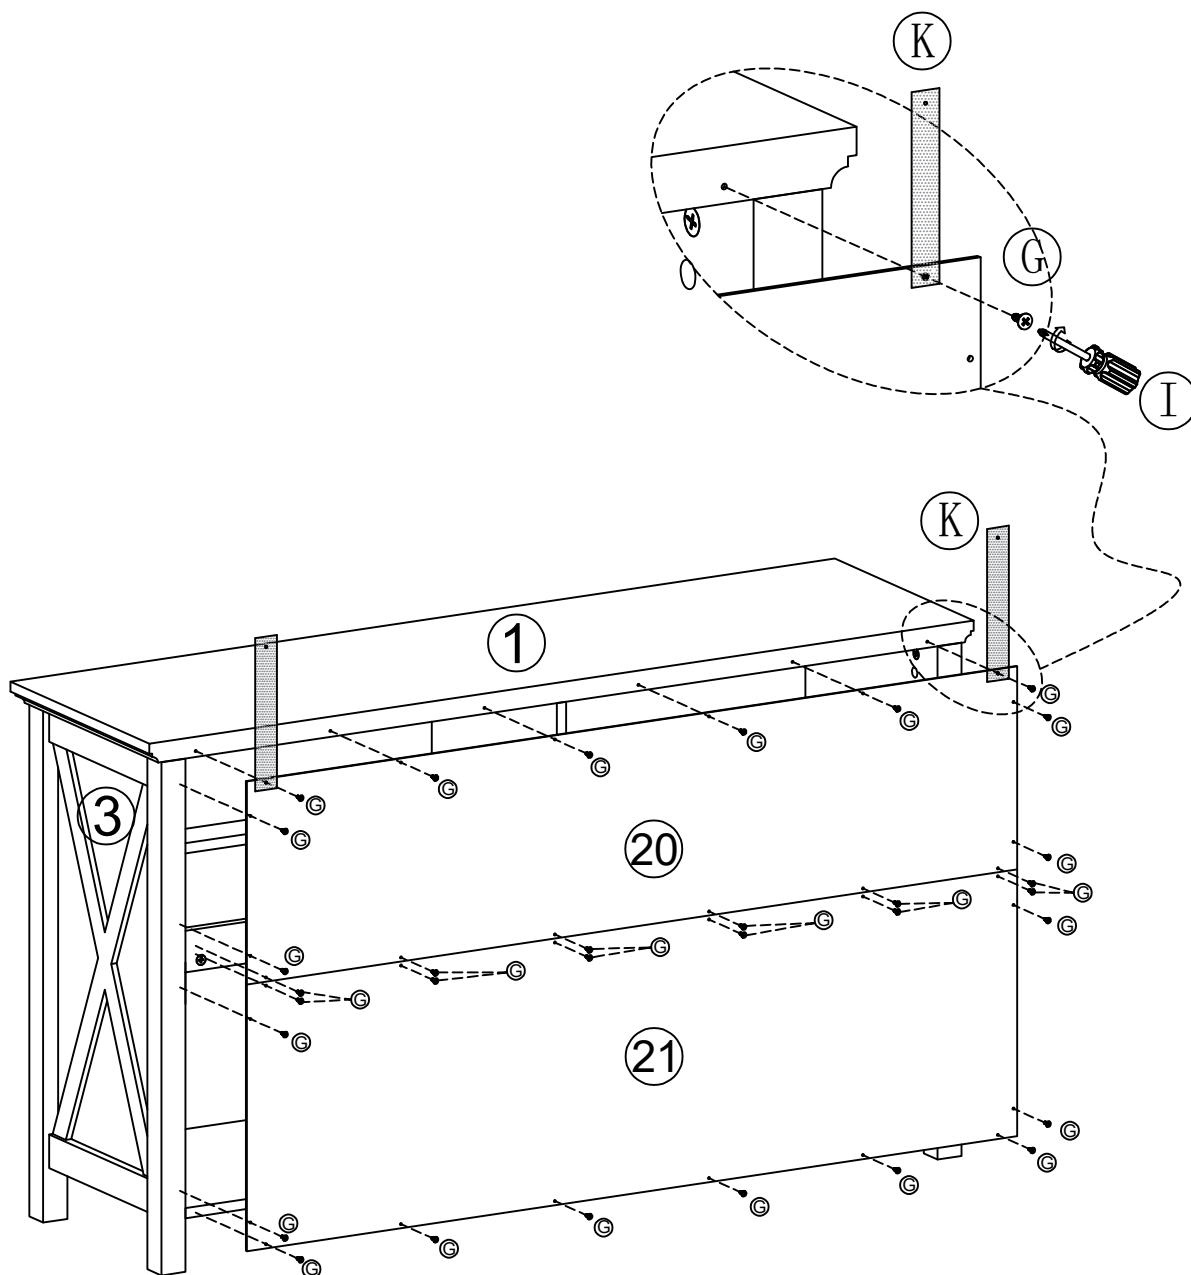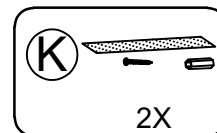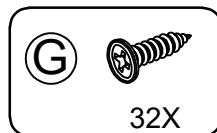


Warm Tips: It is recommended to attach the back panel ②① at the top panel ① first

     
Step 13

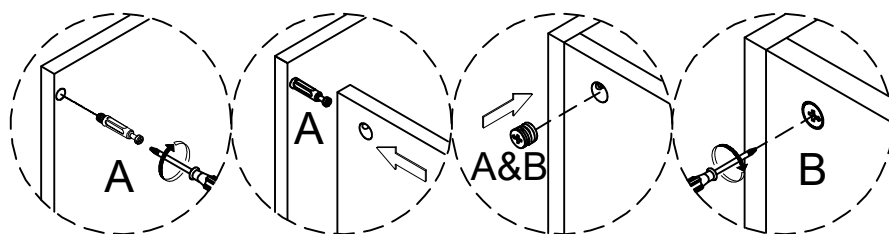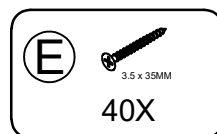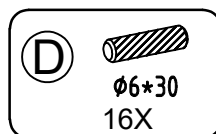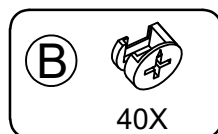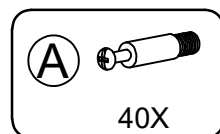






Step:1

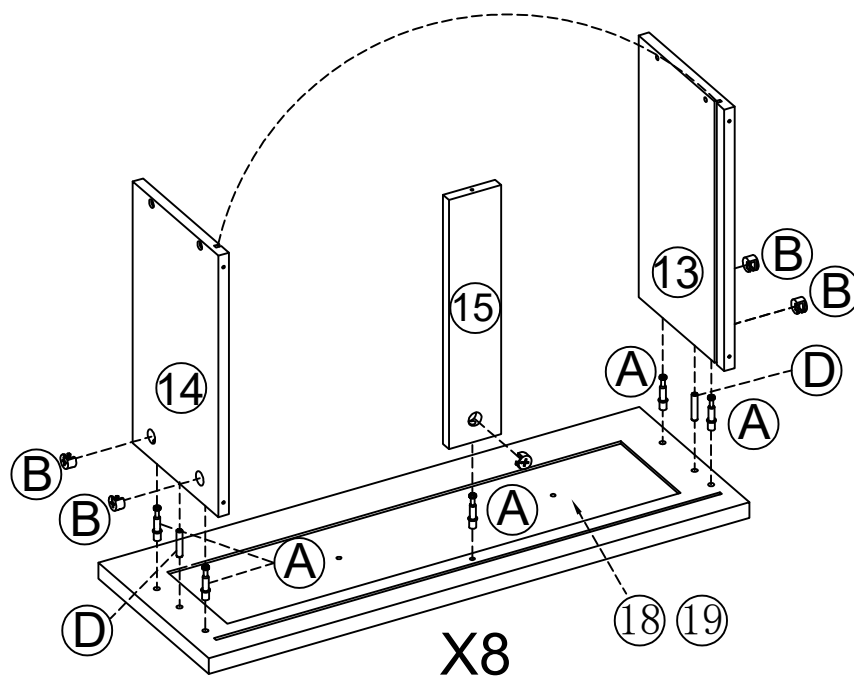 



Step:2

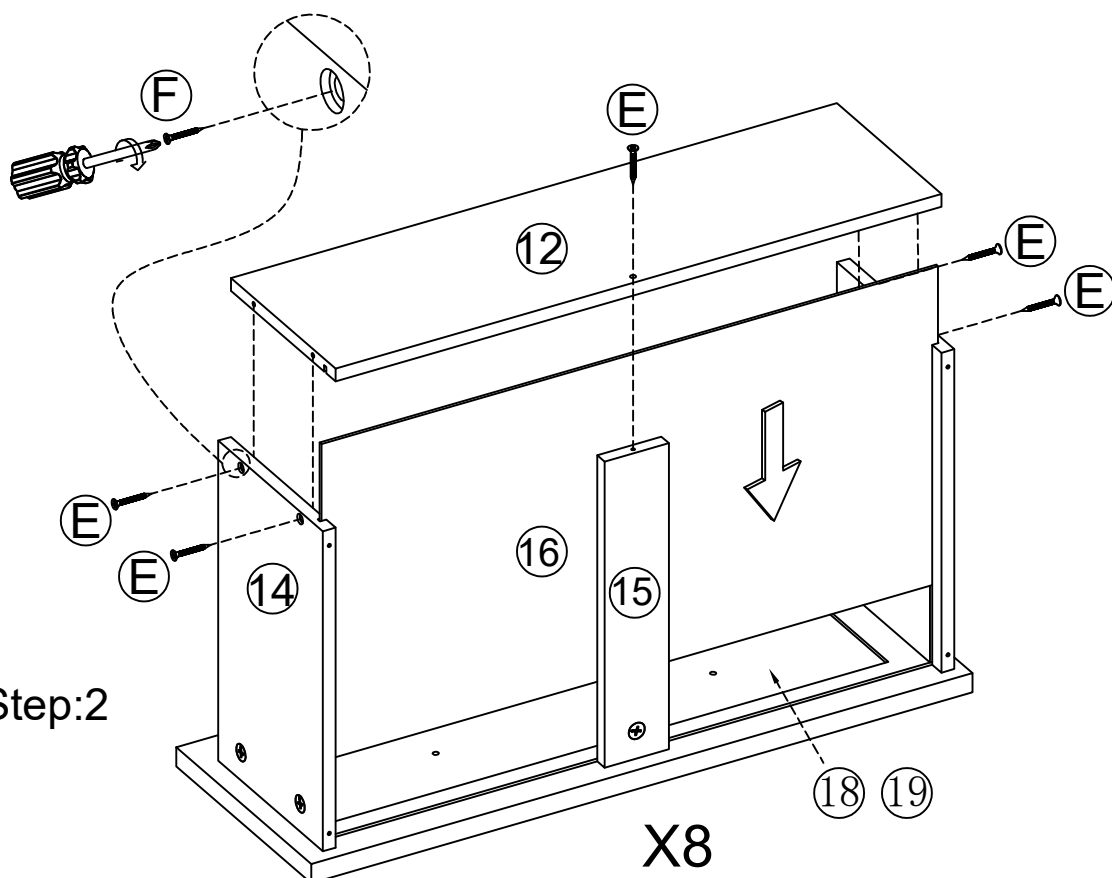 

   
 
 
Step 14

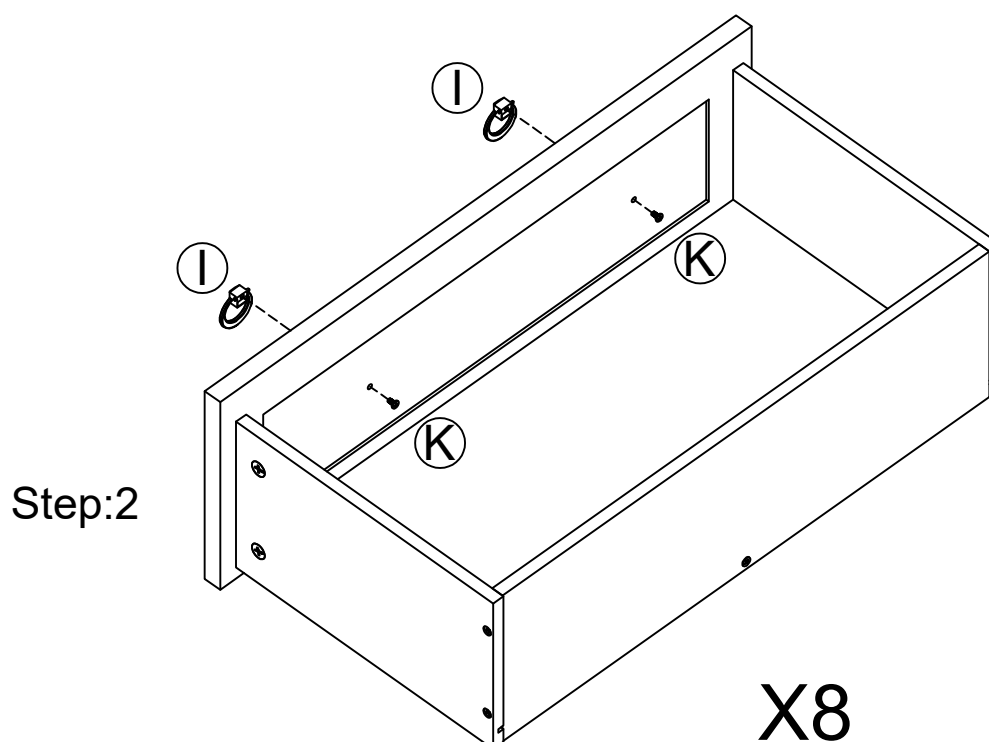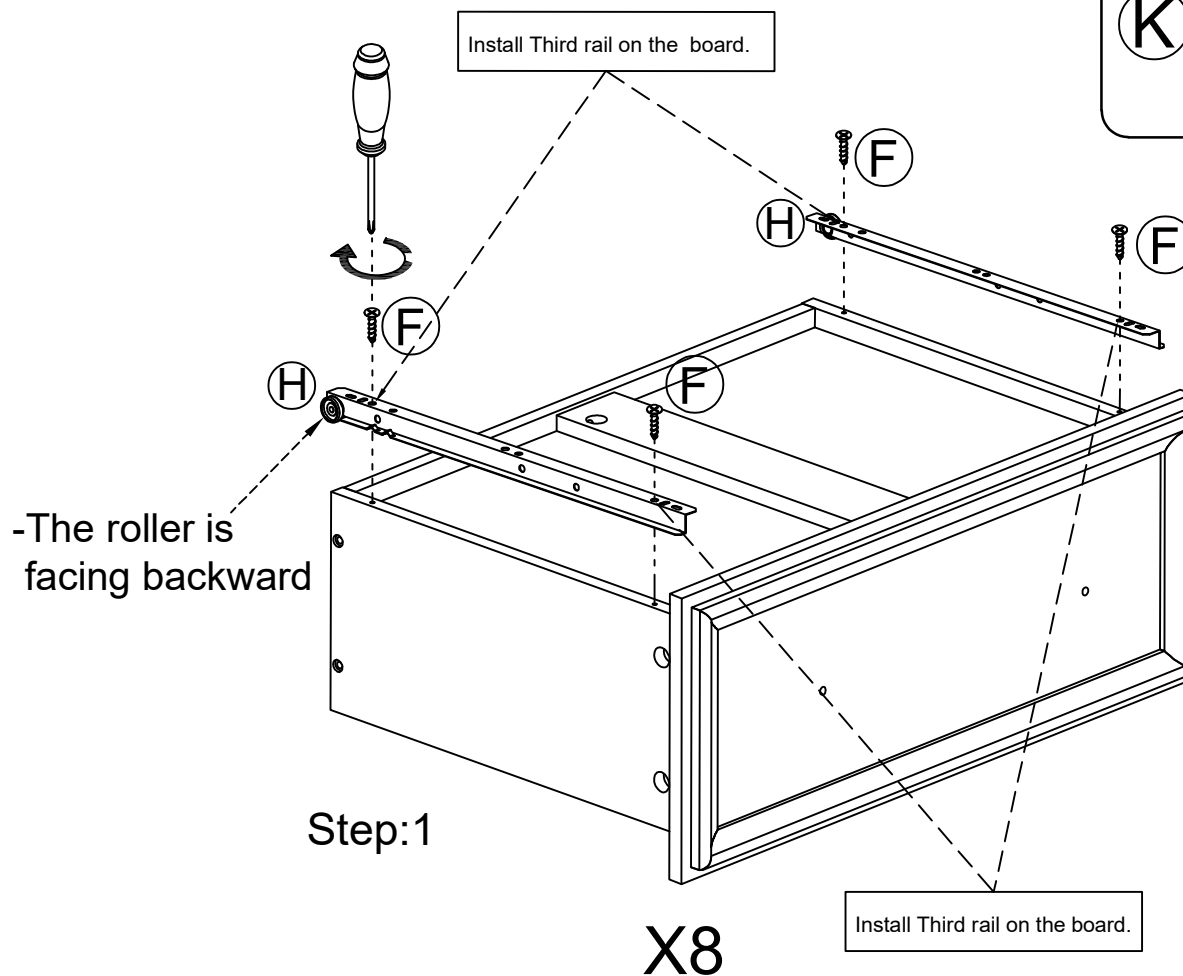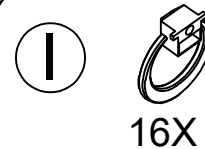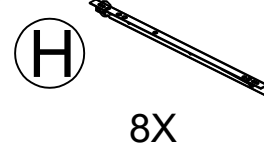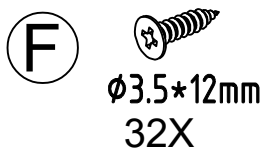

  Step 15

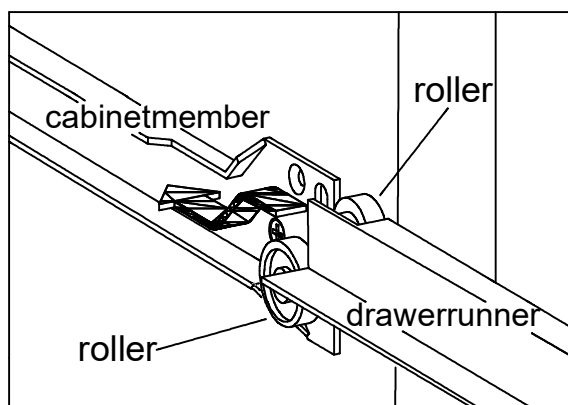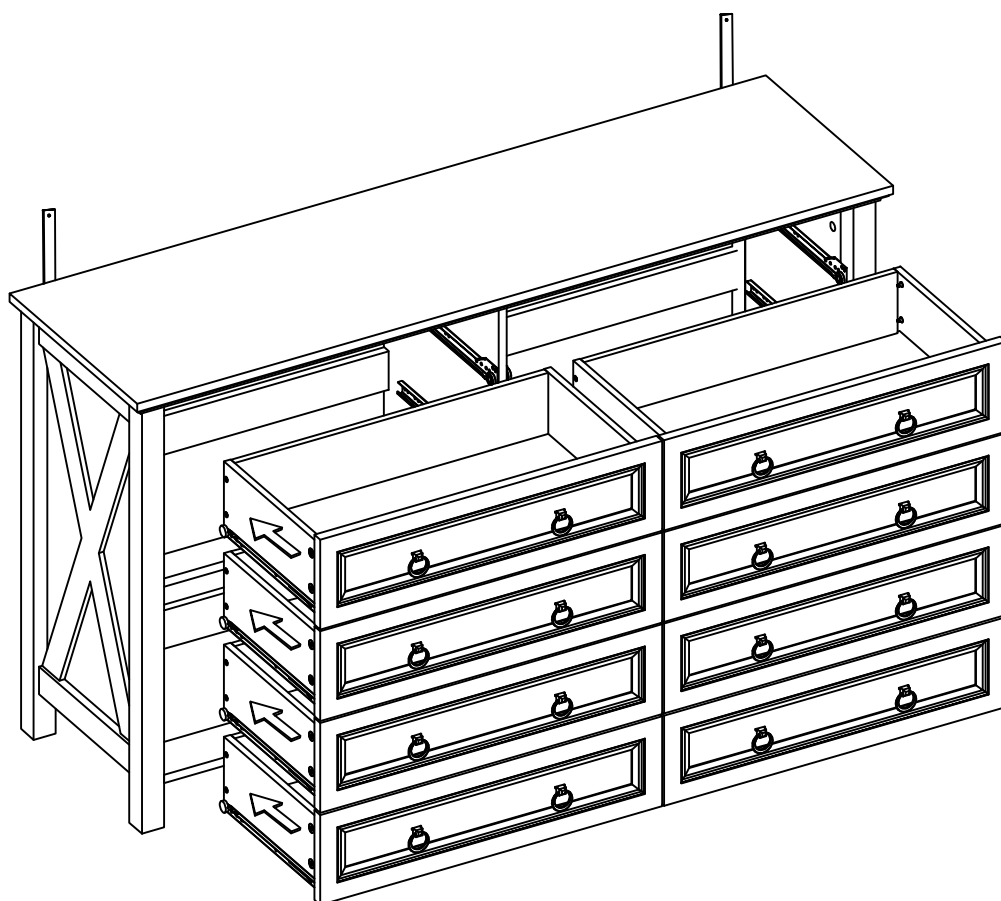

   Step 16

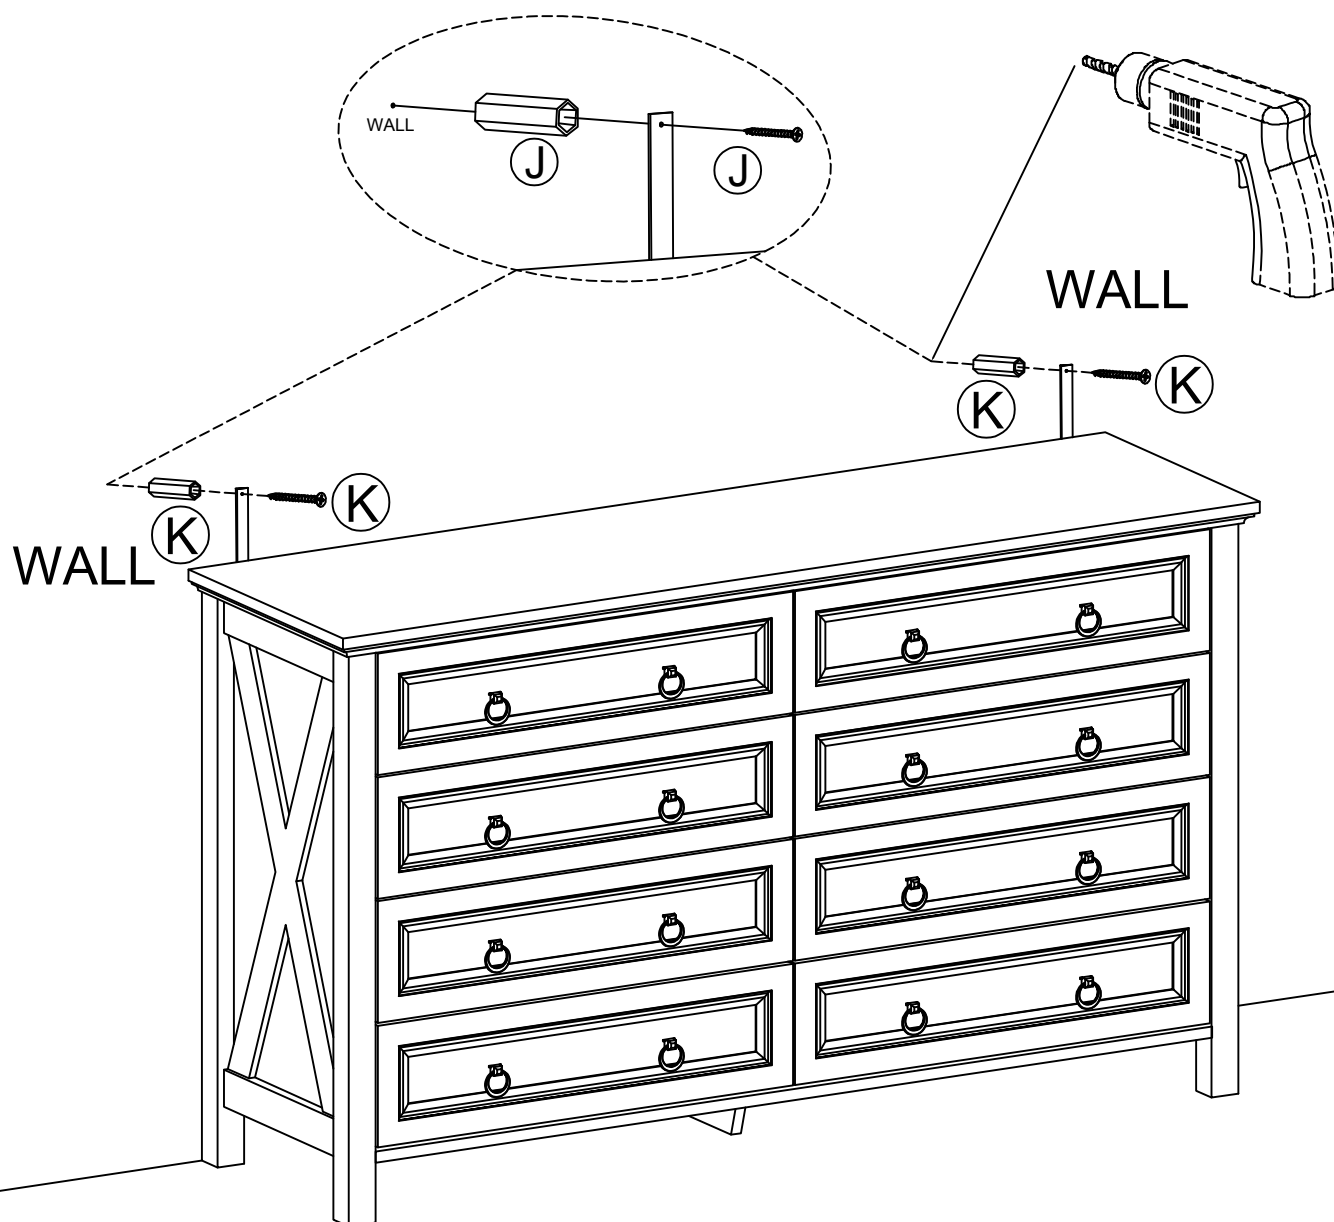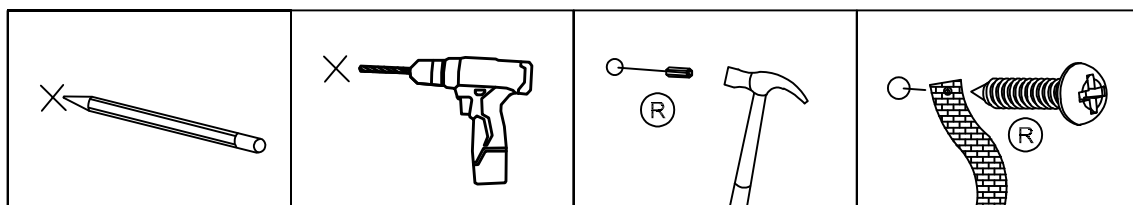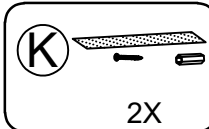

The furniture must permanently be fixed to the wall using the provided anti-tipping device to prevent it from tipping over.

- Mark the drill positions on the wall with a pencil.
- Drill a small hole on the marked positions.
- Insert a wall anchor into the drilled hole.
- Fix the anti-tipping strap to the wall using the provided screws.