




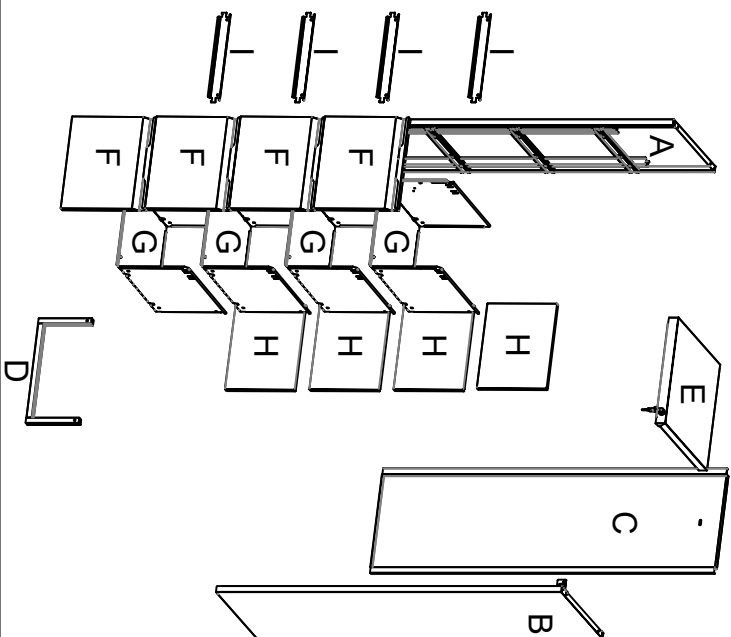

1

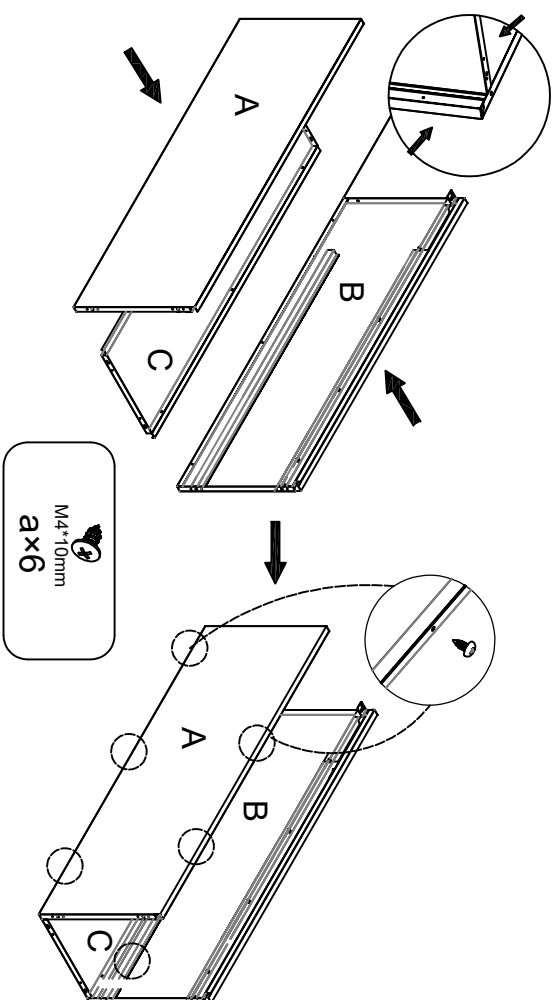

M4*10mm
a x 6

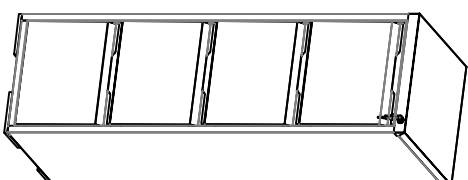


⚠ **unsure WARNING** Children have died from furniture tip-over. To reduce the risk of serious injury or death: 1. ALWAYS secure this furniture to the wall using the anti-tip restraint provided. 2. Follow the anchoring instructions carefully. 3. NEVER allow children to stand, climb or hang on drawers, doors or shelves. 4. NEVER open more than one drawer at a time. 5. Place heavy items in the lowest drawers or shelves. 6. NEVER place a television on this furniture. 7. Check the wall fixing regularly and tighten if necessary. This furniture may become unstable and tip over if not properly anchored.

ANTI-TIP WALL ANCHOR INSTALLATION Tools Required:

Drill, Screwdriver, Pencil, Stud finder (recommended) Installation: 1. Position furniture in its final location. 2. Locate a suitable wall stud or solid fixing point. 3. Attach the anti-tip bracket or strap to the furniture. 4. Secure the bracket or strap to the wall. 5. Ensure all screws are tightened firmly. 6. Verify the furniture cannot tilt forward. **IMPORTANT:** Wall fixing hardware supplied may not be suitable for all wall types. Consult a qualified installer if

2


 f x 4	 g1 x 4	 g2 x 4	 d x 4	 M4*20mm e x 16
 M4*10mm a x 48	 M4*35mm b x 1	 c x 16		

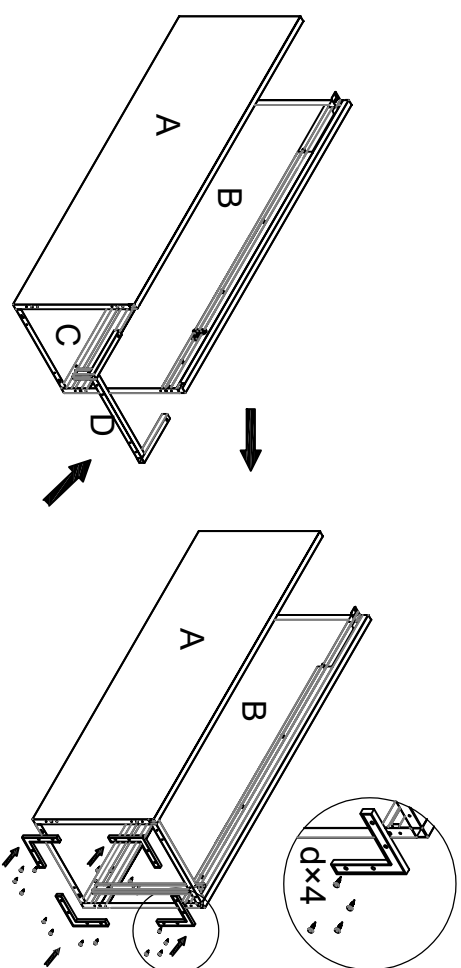


M4*20mm
e x 16

d x 4


3

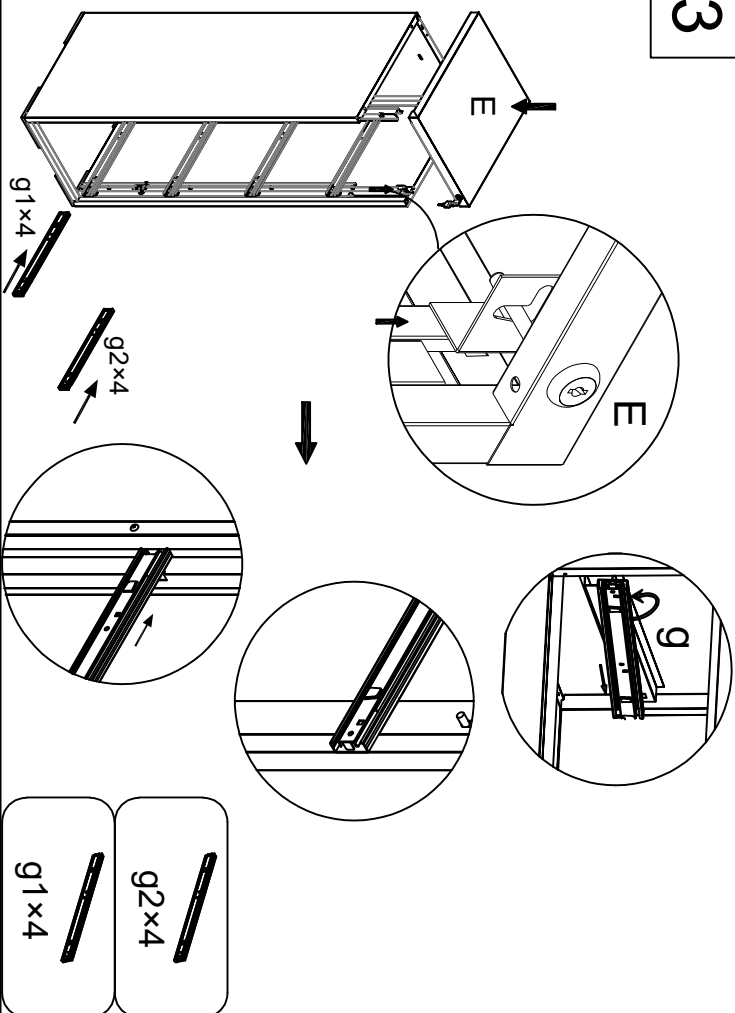



4

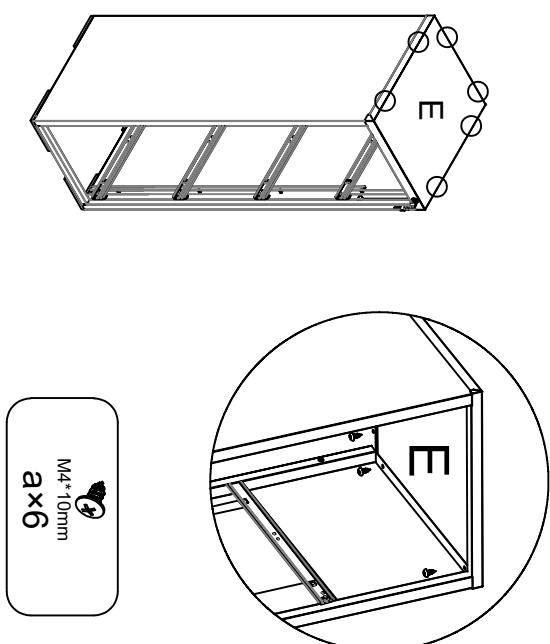


5

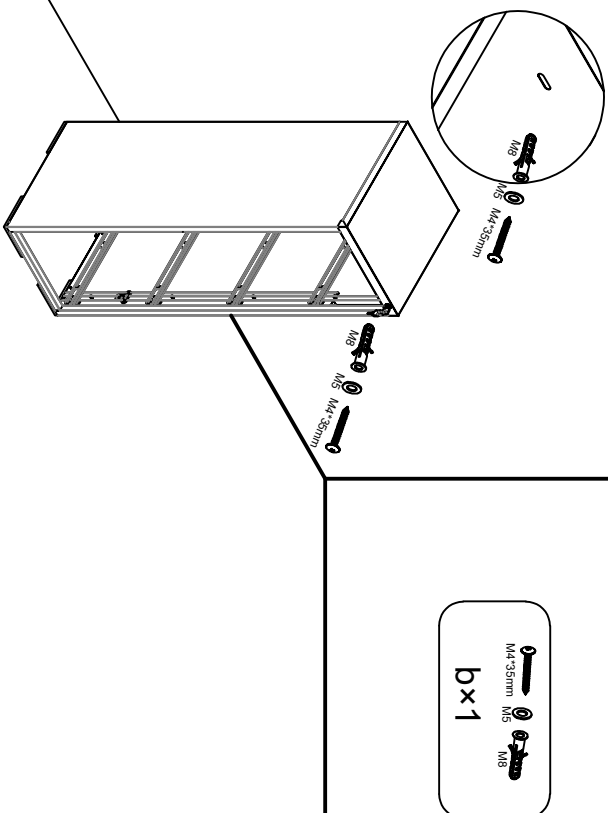


6

 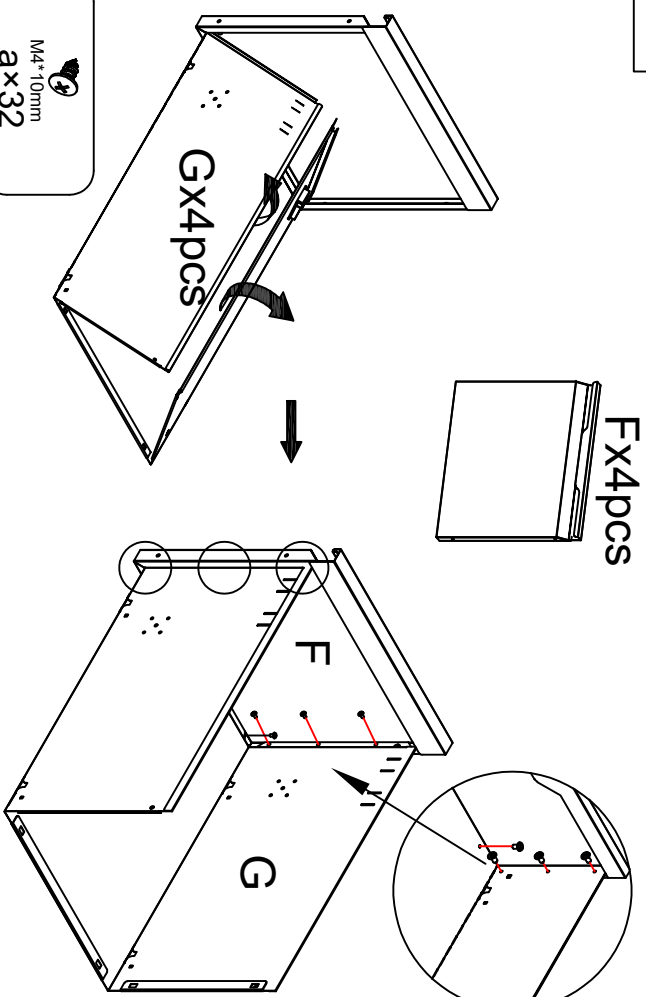


7

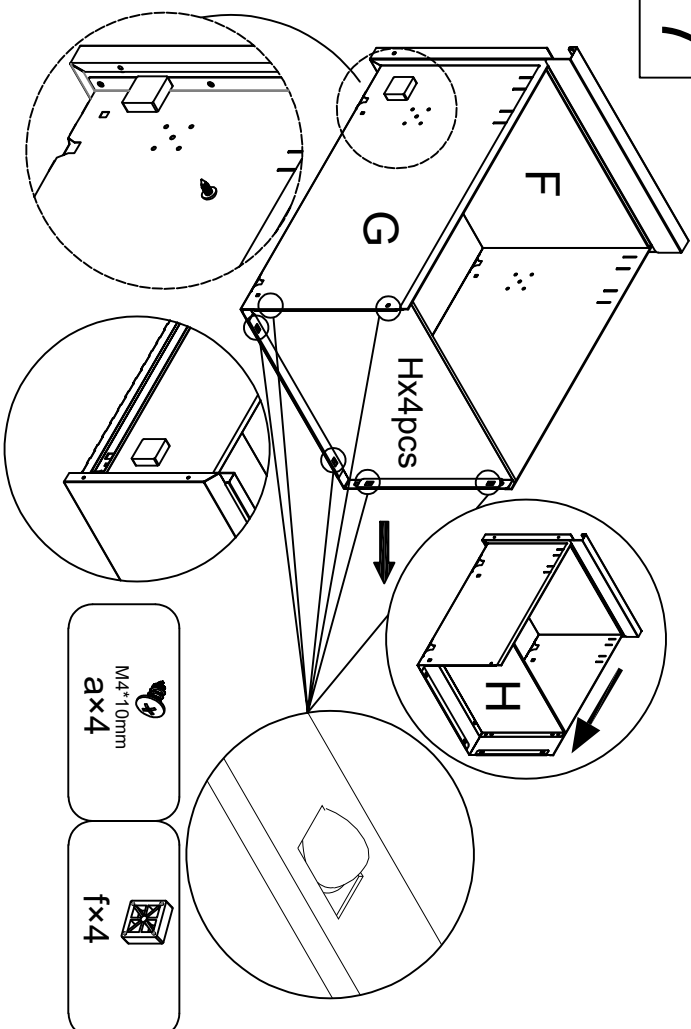

8

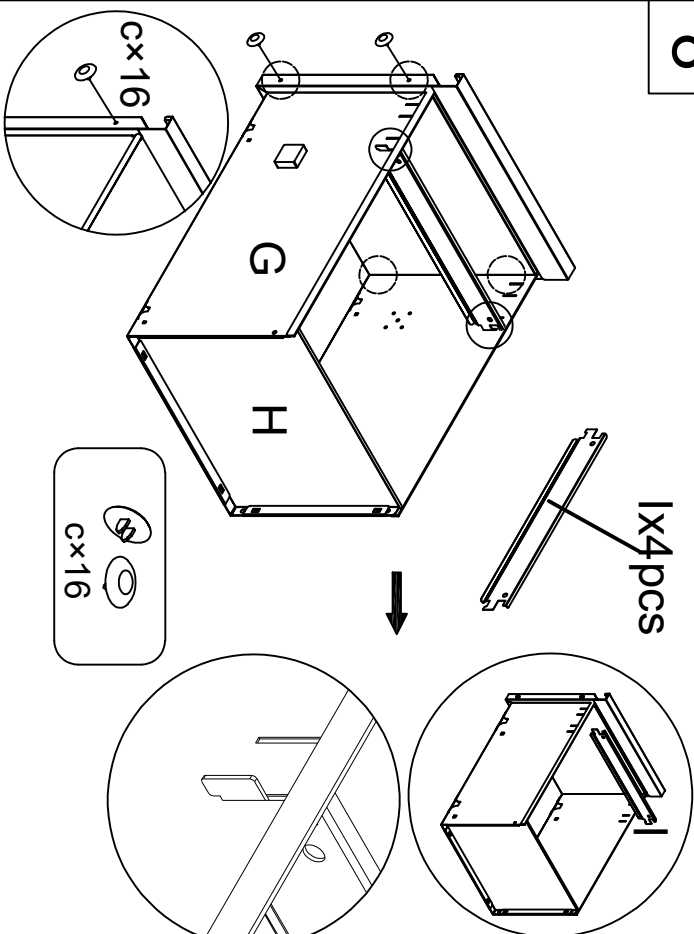

9

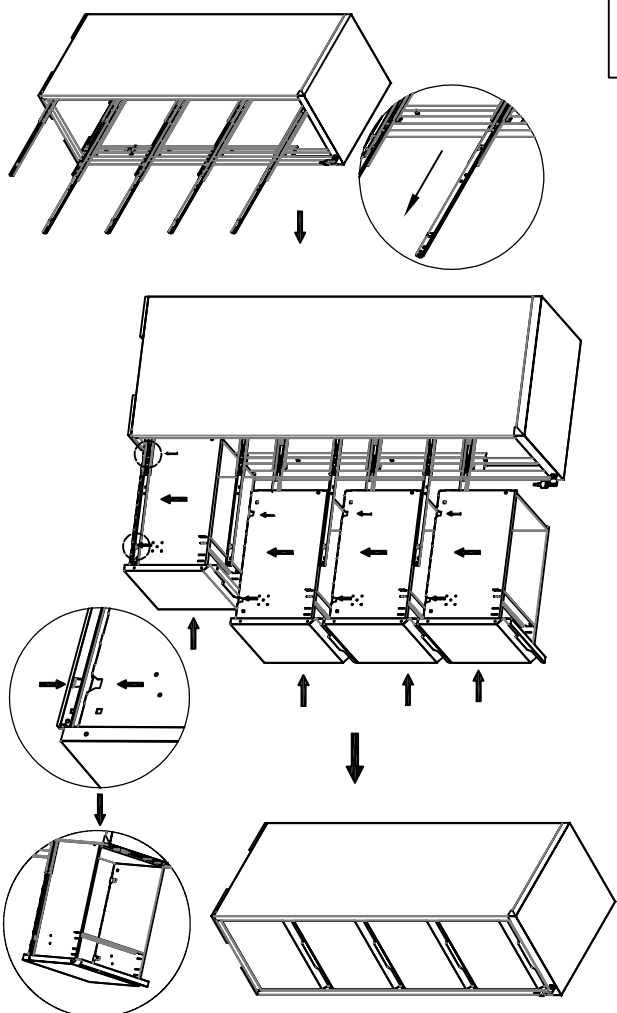

10

