 
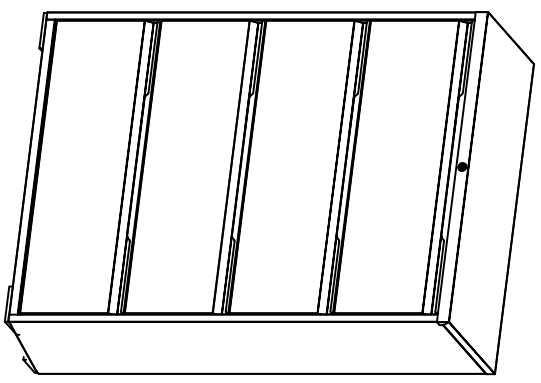 
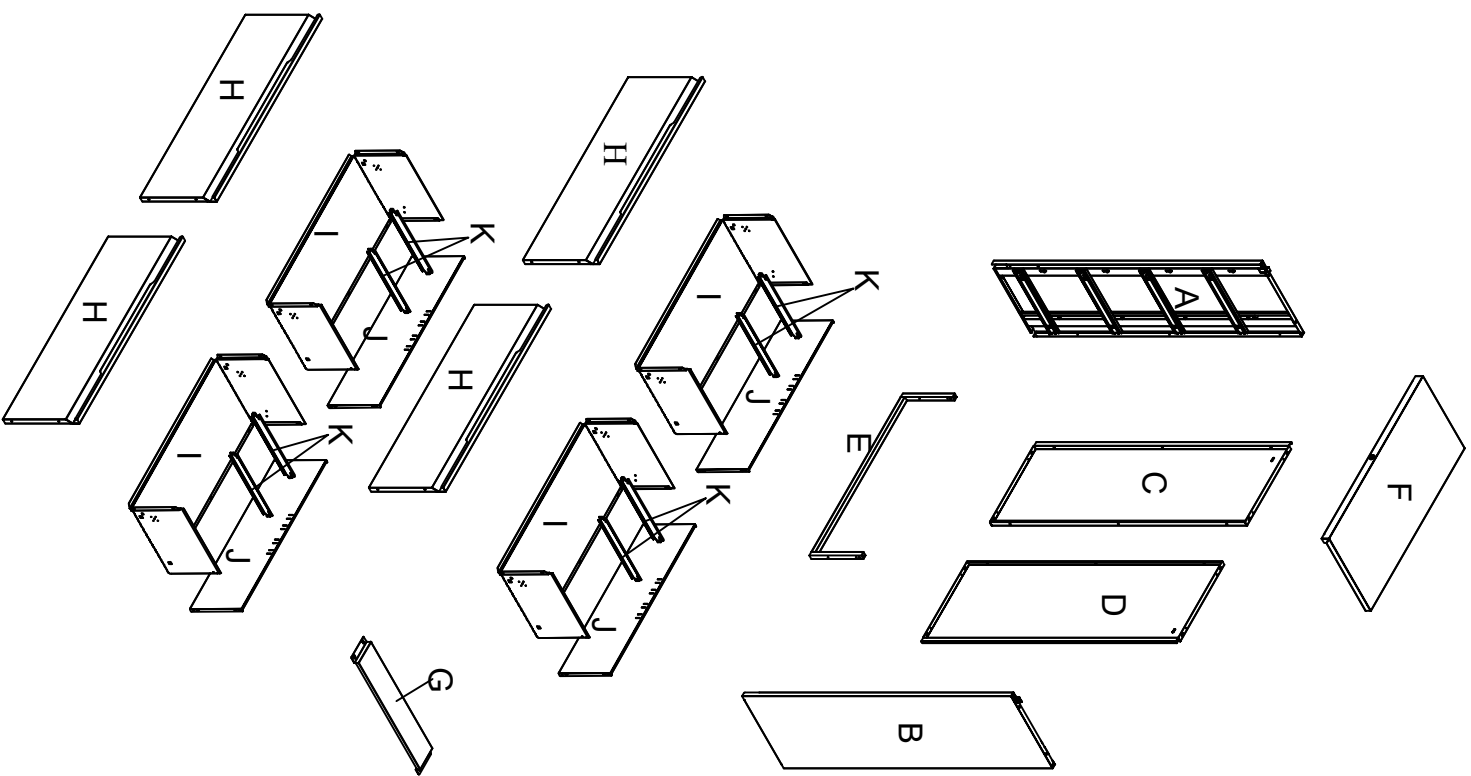 








⚠ **WARNING** Children have died from furniture tip-over. To reduce the risk of serious injury or death: 1. ALWAYS secure this furniture to the wall using the anti-tip restraint provided. 2. Follow the anchoring instructions carefully. 3. NEVER allow children to stand, climb or hang on drawers, doors or shelves. 4. NEVER open more than one drawer at a time. 5. Place heavy items in the lowest drawers or shelves. 6. NEVER place a television on this furniture. 7. Check the wall fixing regularly and tighten if necessary. This furniture may become unstable and tip over if not properly anchored.

ANTI-TIP WALL ANCHOR INSTALLATION Tools Required:




Drill Screwdriver Pencil Stud finder (recommended) Installation: 1. Position furniture in its final location. 2. Locate a suitable wall stud or solid fixing point. 3. Attach the anti-tip bracket or strap to the furniture. 4. Secure the bracket or strap to the wall. 5. Ensure all screws are tightened firmly. 6. Verify the furniture cannot tilt forward. **IMPORTANT:** Wall fixing hardware supplied may not be suitable for all wall types. Consult a qualified installer if unsure.

 f1x4 M4*10mm ax66	 f2x4 M4*35mm M5 M6 bx2	 M5*10mm gx3	 M5 hx8	 M4*20mm ex16
 M4*10mm ax66	 M4*35mm M5 M6 bx2	 M5*10mm gx3	 M5 hx8	 M4*20mm ex16



 
 
 
 
1

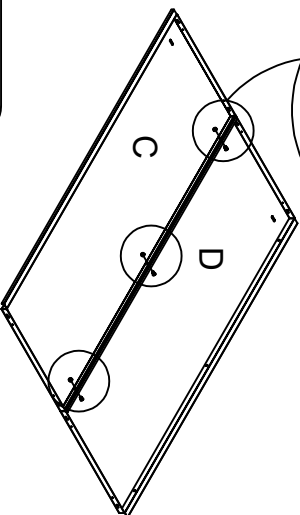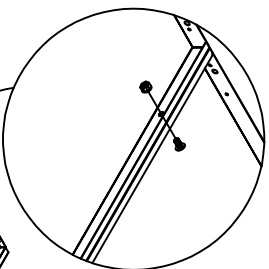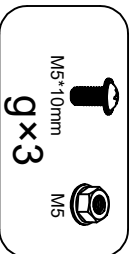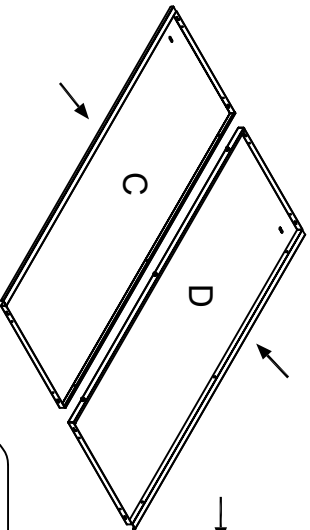





2

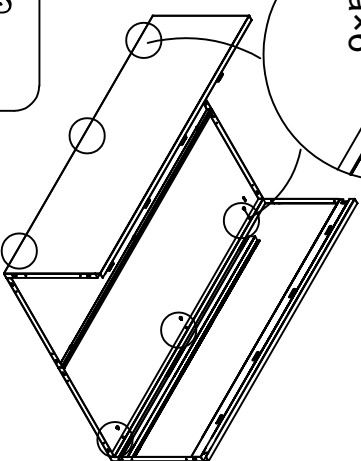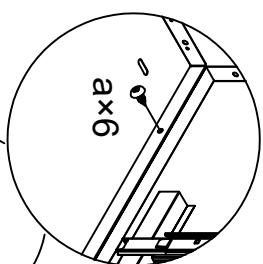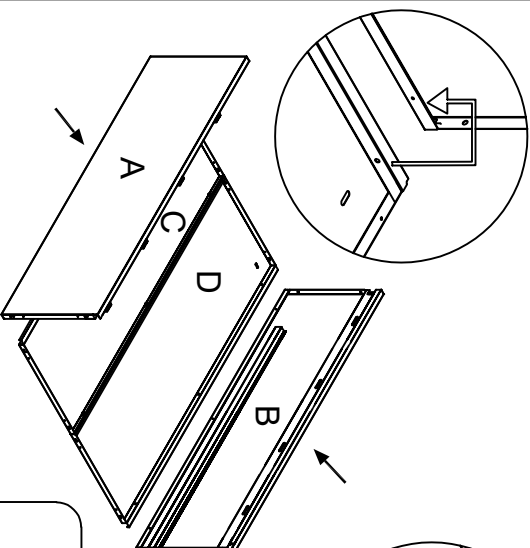   


3

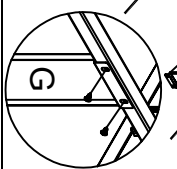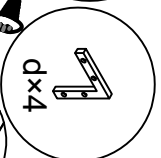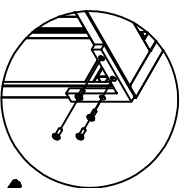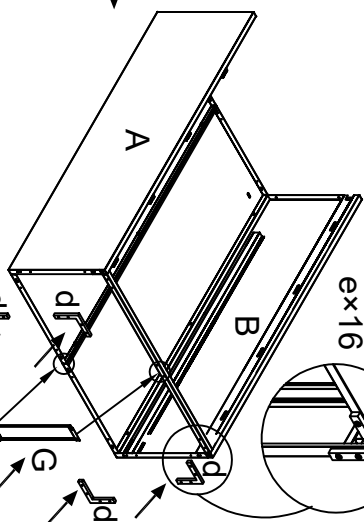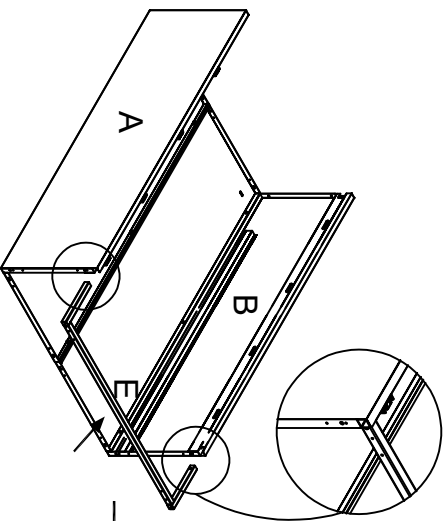      


4

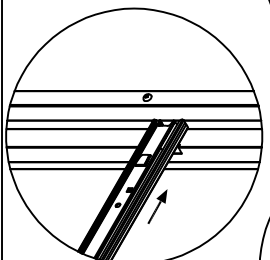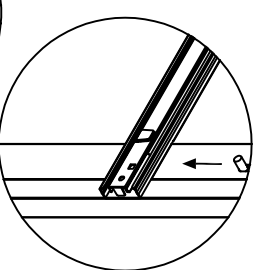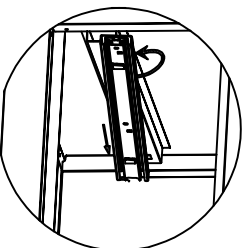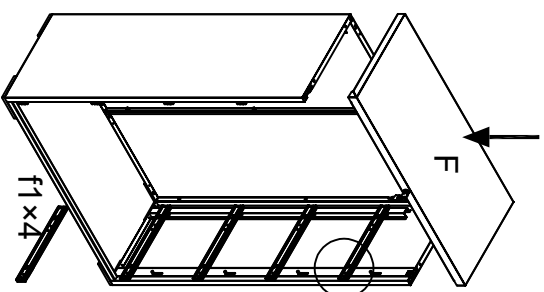    


9

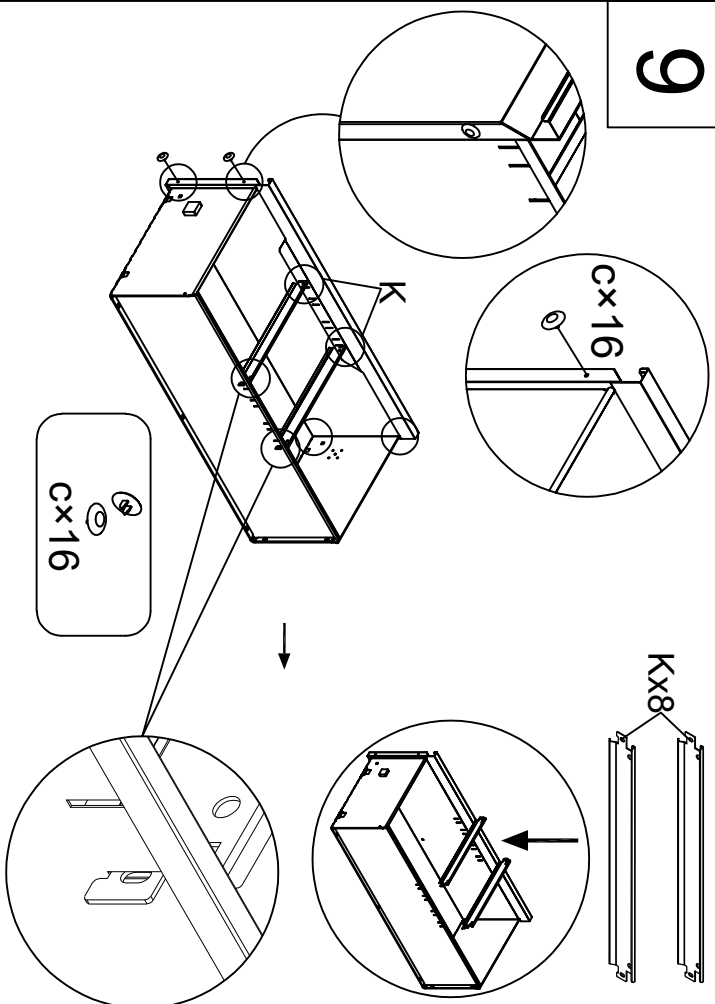 

10

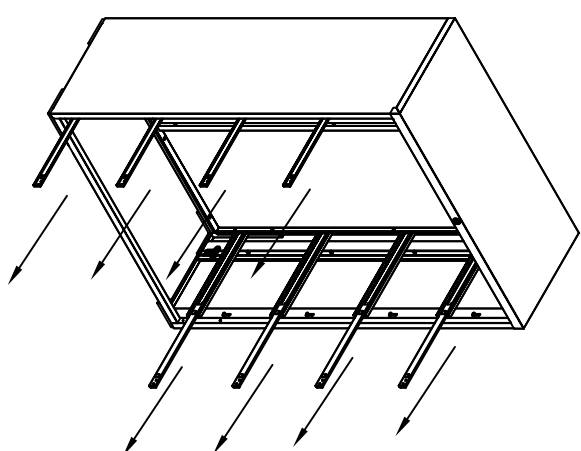 

11

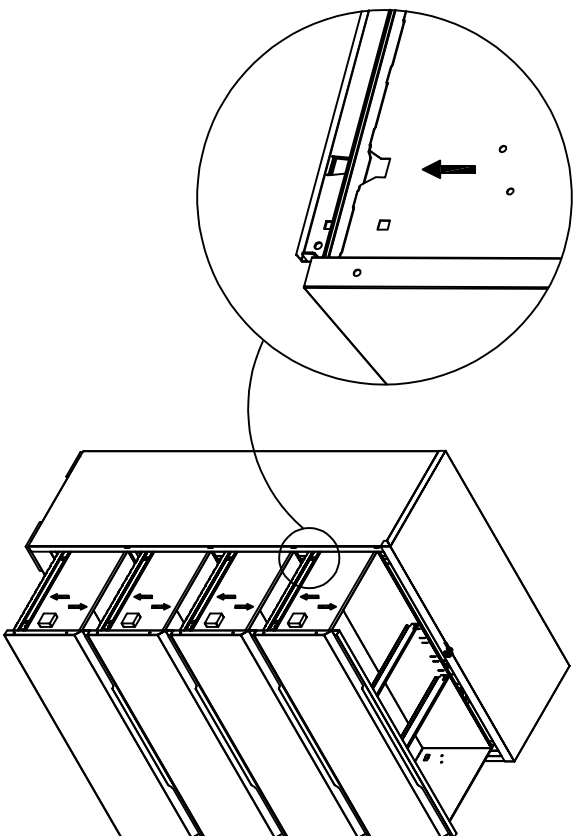 

12

