 
Assembly Instructions

 


B *4 C *8 D *8 E*8 F*8 G *1 H *2 I*2 J*2 K *2 L *4 M *1



M WARNING





•NEVER put a TV on this product.

•NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
•NEVER open more than one drawer at a time.

•Place heaviest items in the lowest drawers.

•Do not defeat or remove the drawer interlock system.


This is a permanent label.

Do not remove!







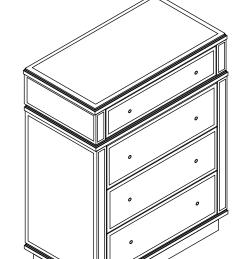

A *1

