




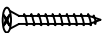
 



 





Assembly Instructions

Model: SC 8003-B


Part List		QTY
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Right Middle Panel	1
5	Middle Panel	1
6	Big Shelf Panel	2
7	Small Shelf Panel	2
8	Small Shelf Panel	2
9	Bottom Panel	1
10	Back Panel	1
11	Back Panel	1
12	Left Door Panel	1
13	Middle Door Panel	1
14	Right Door Panel	1

Hardware		QTY
A	Magnet Plate 	3
B	Dowel 	16
C	Mini Fix Bolt 	8
D	Mini Fix Housing 	8
E	Door Support 	6
F	CSK Screw M4x50mm 	8
G	CSK Screw M3.5x12mm 	15
H	Handle 	3
I	Door Magnet 	3
J	White Nail 	6
K	Nail 	52
L	Handle Screw 	6
M	Shelf Support 	24

 
*Please use screwdriver when assemble CSK screw.

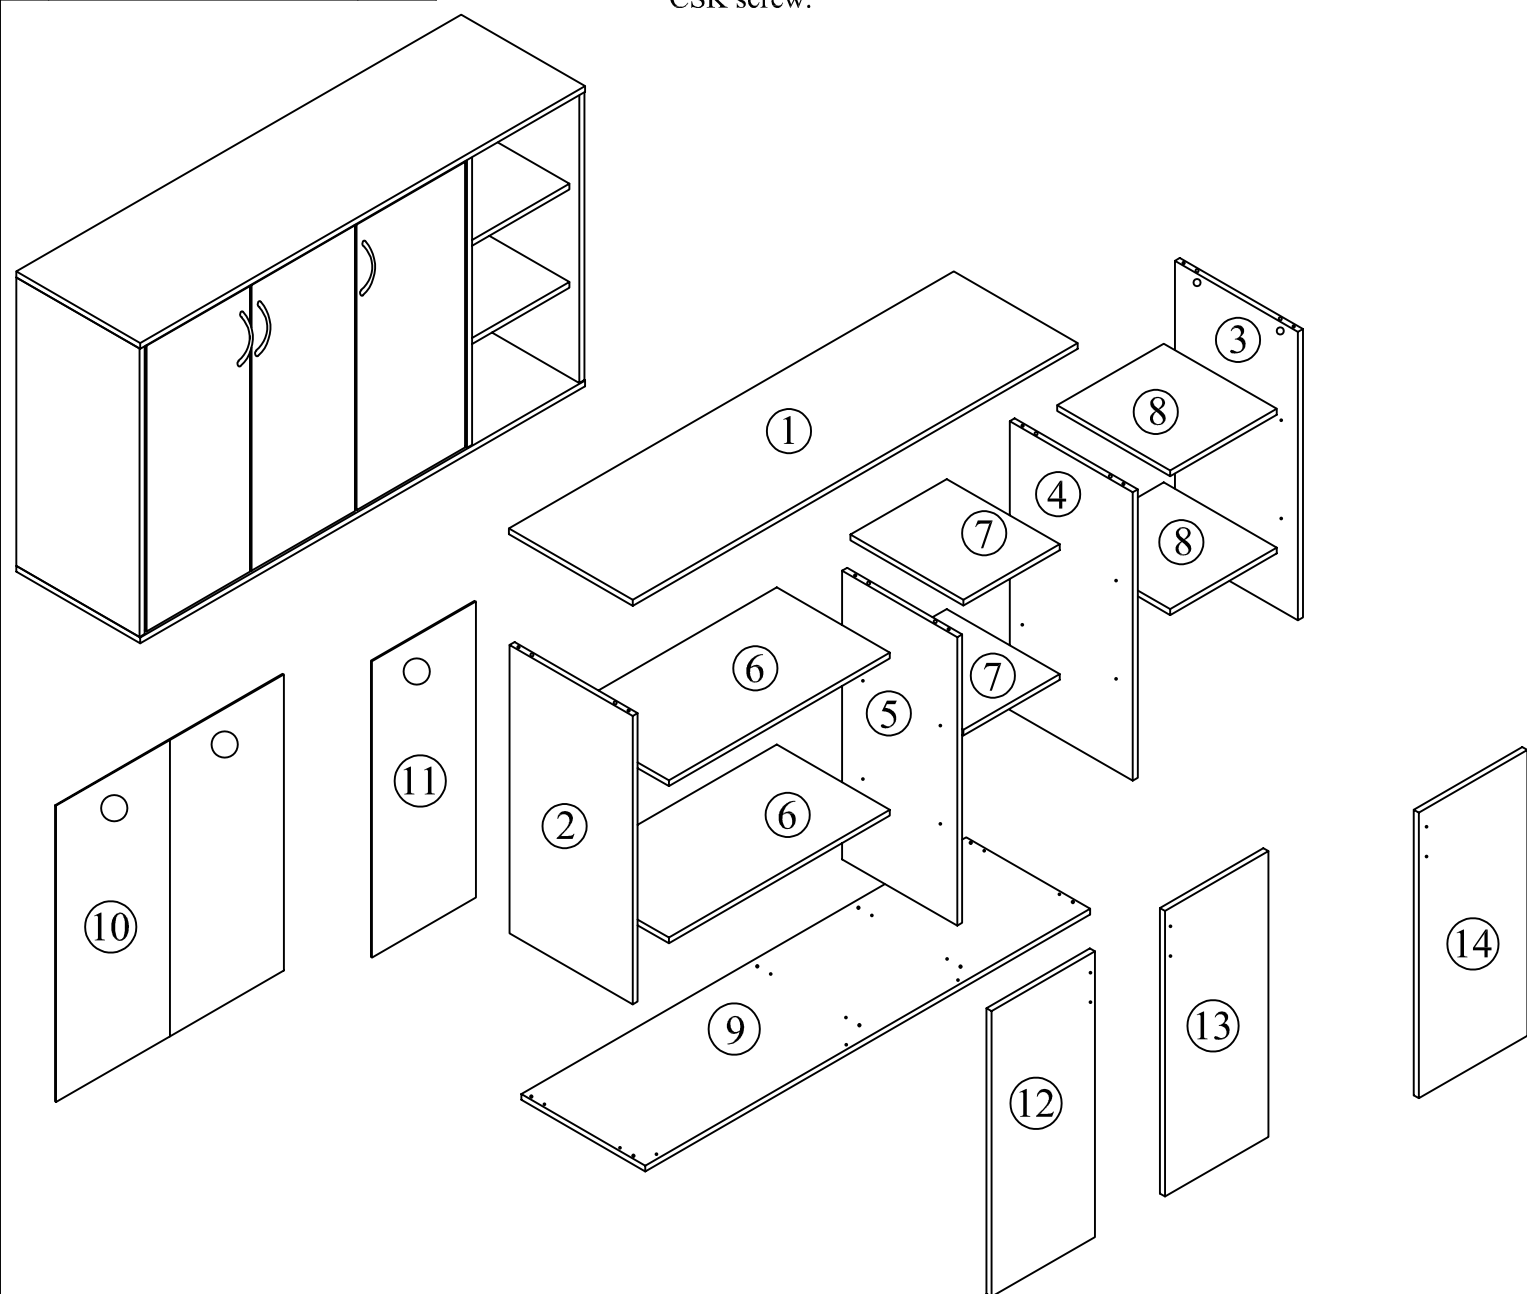

 
Step 1

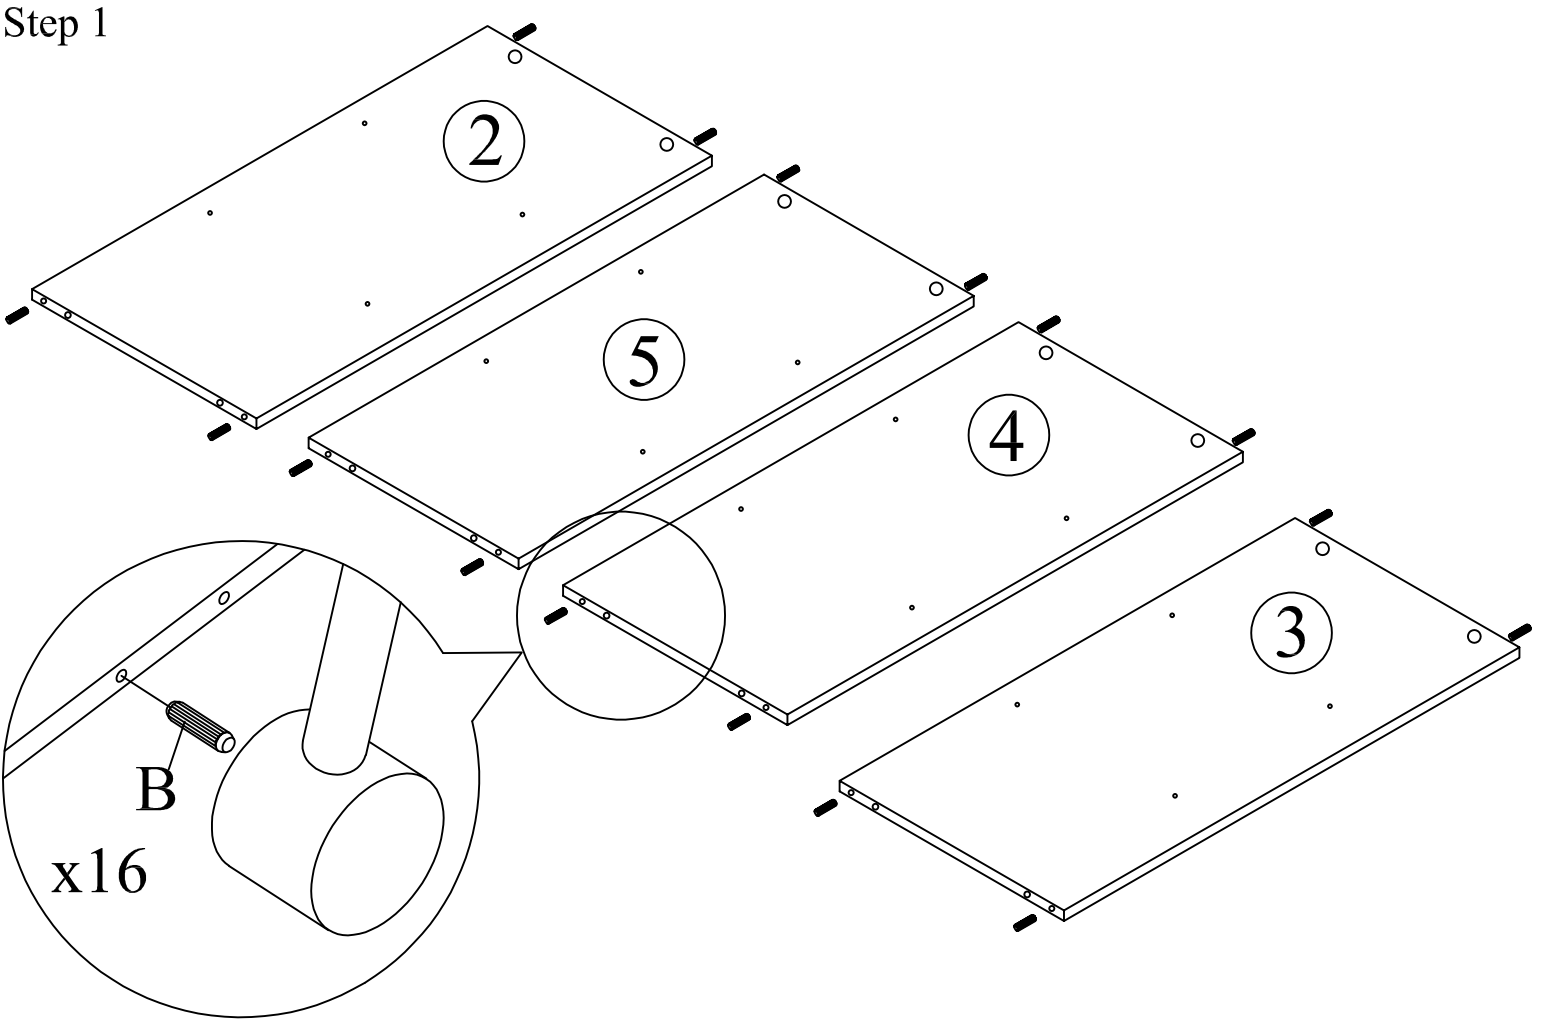

 
Step 2

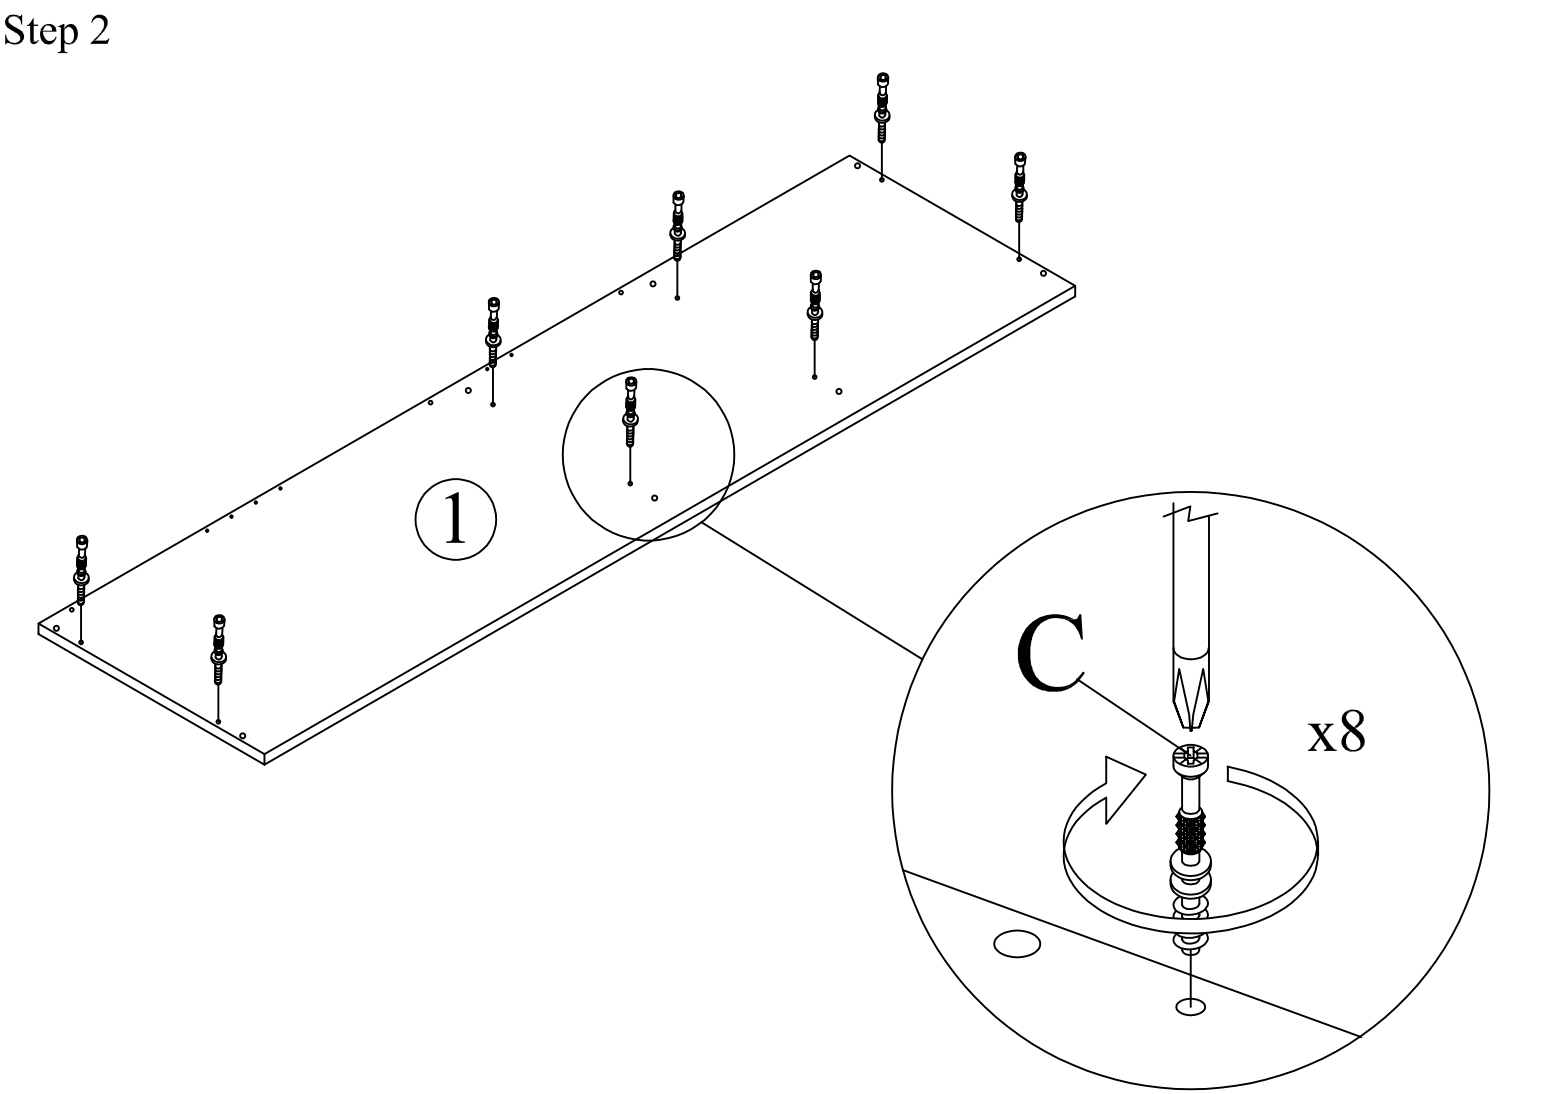

 
Step 3

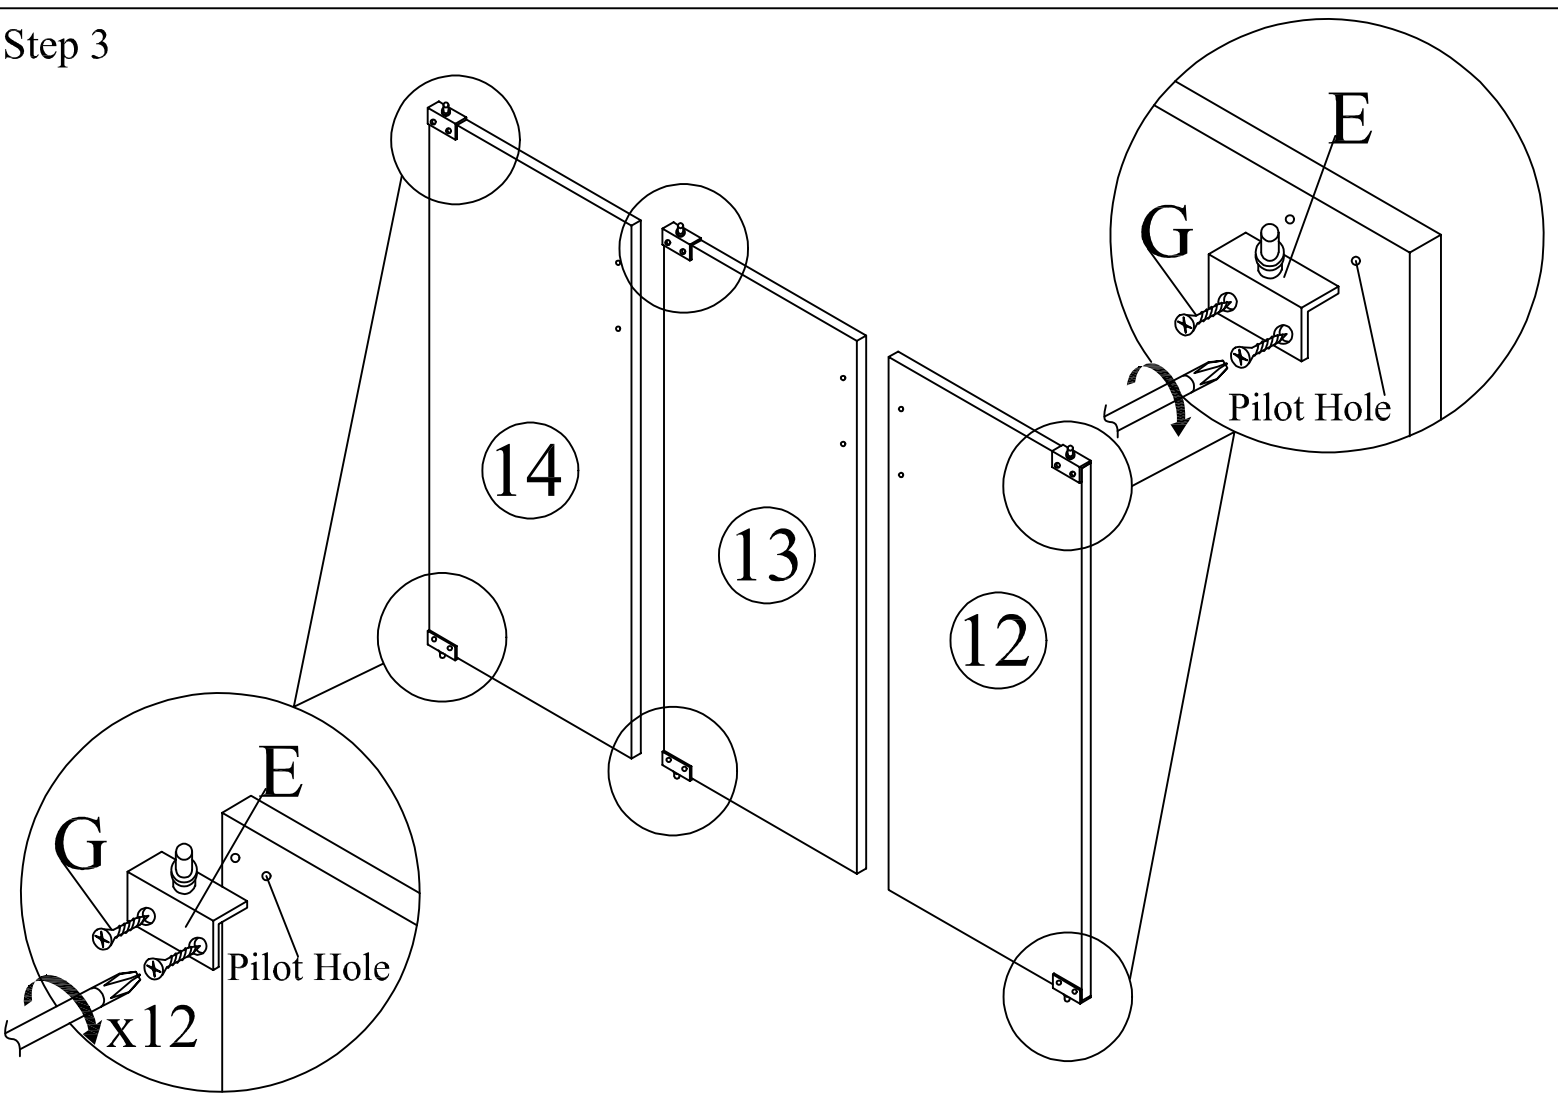

 
Step 4

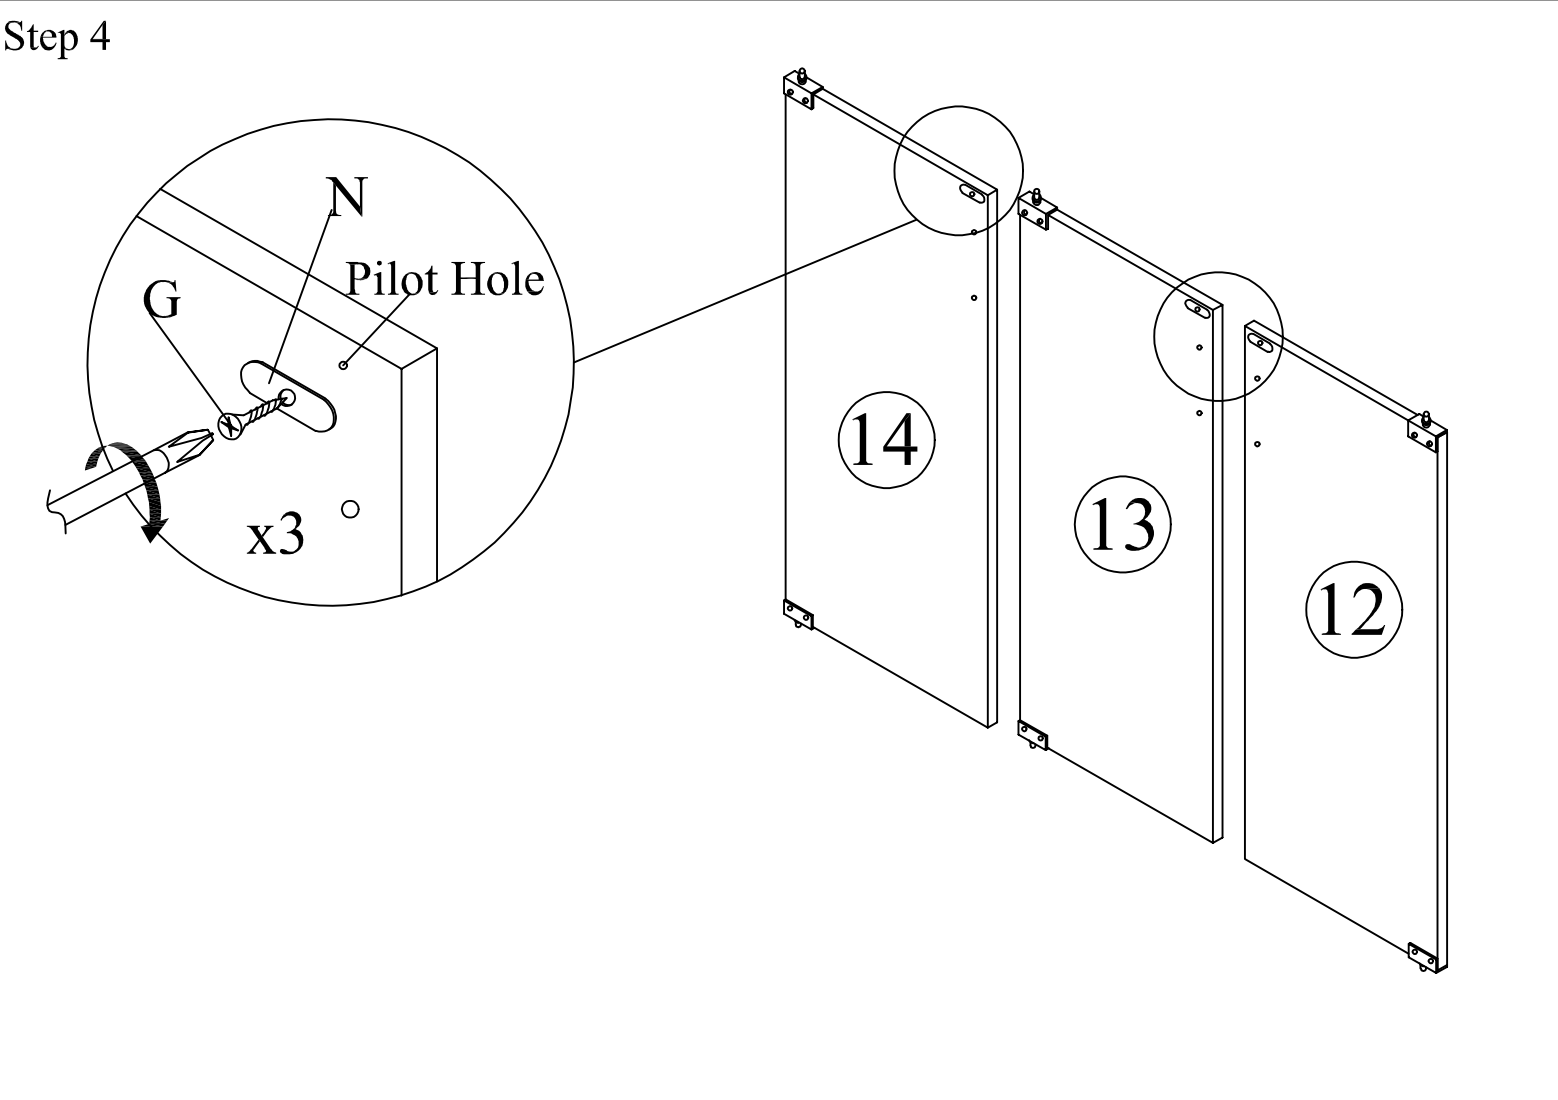

 
Step 5

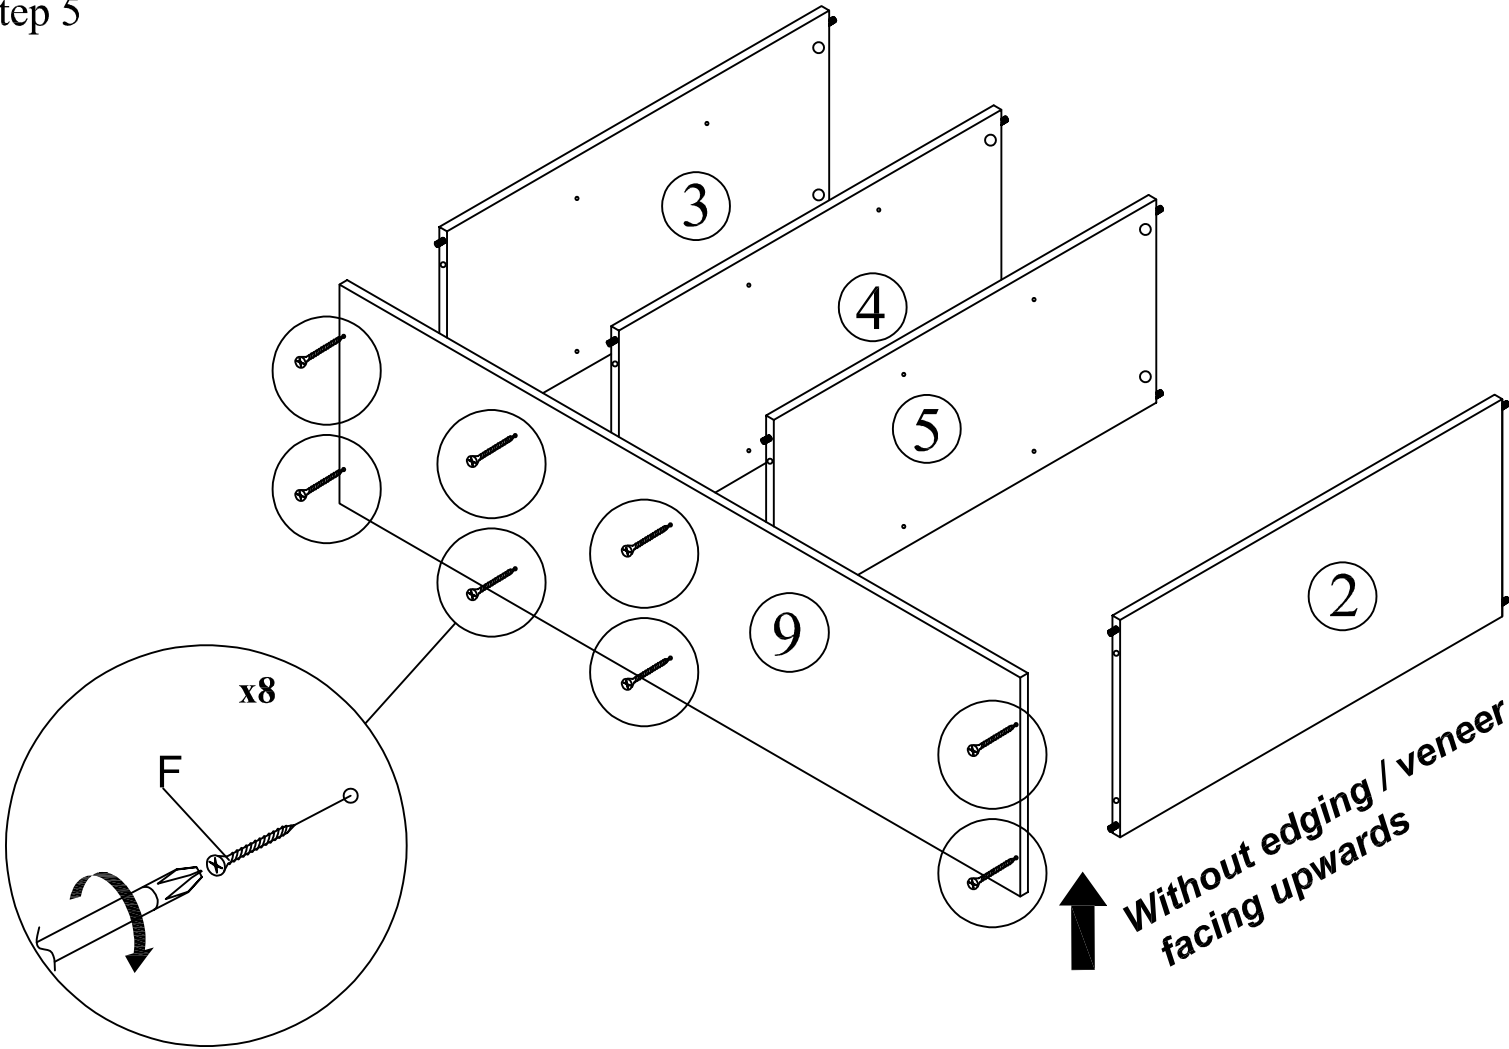


 Step 6

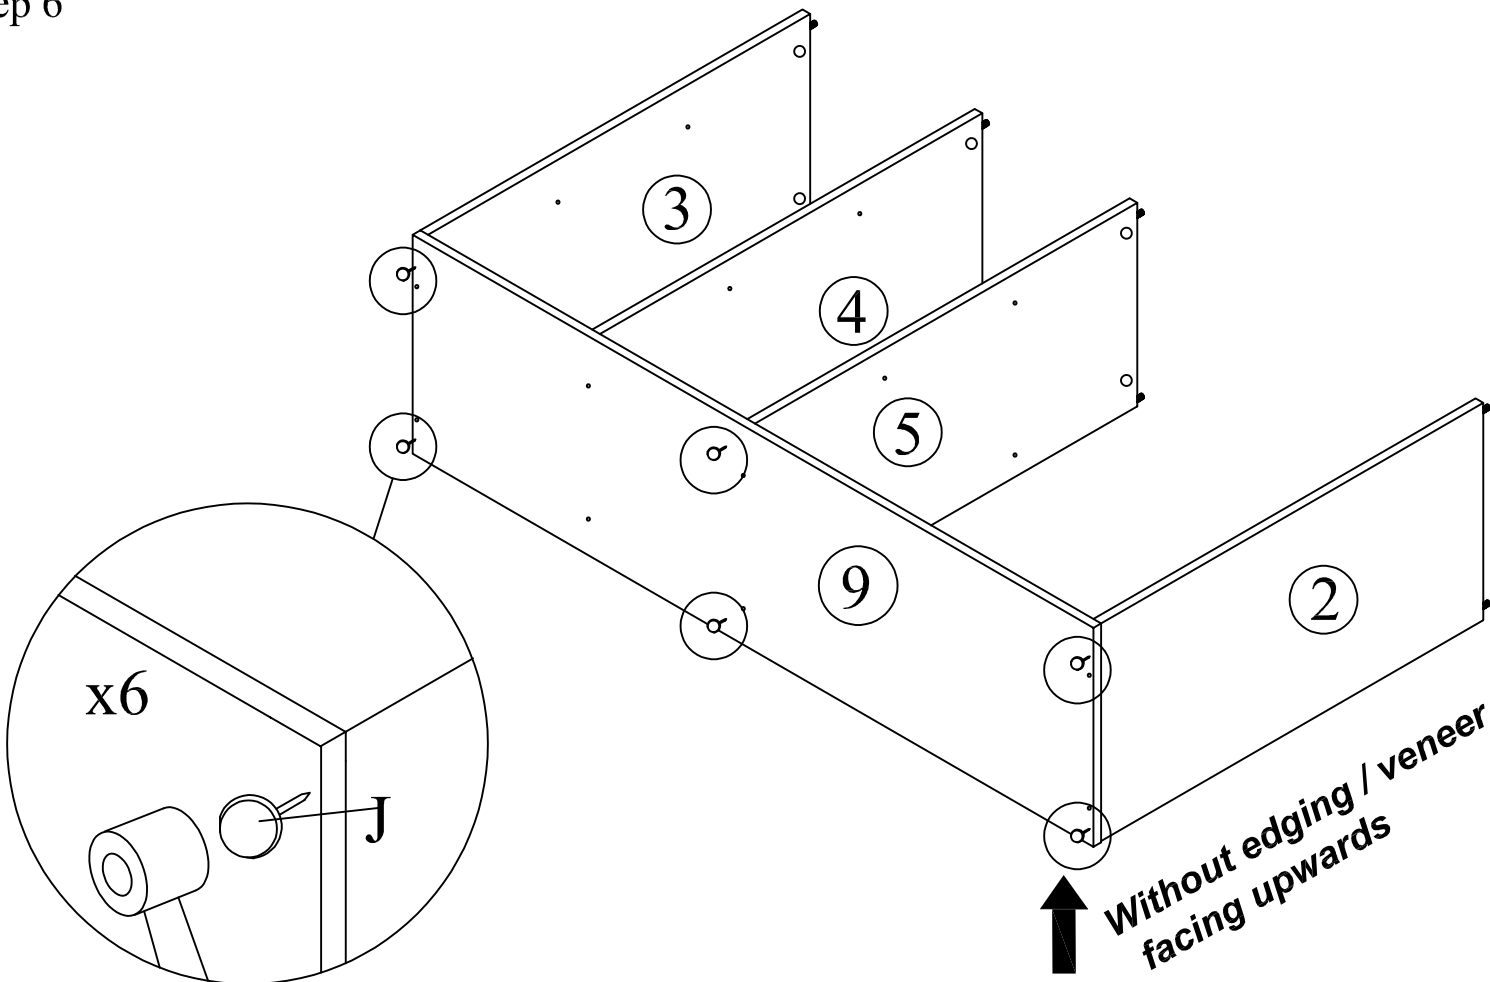


 Step 7

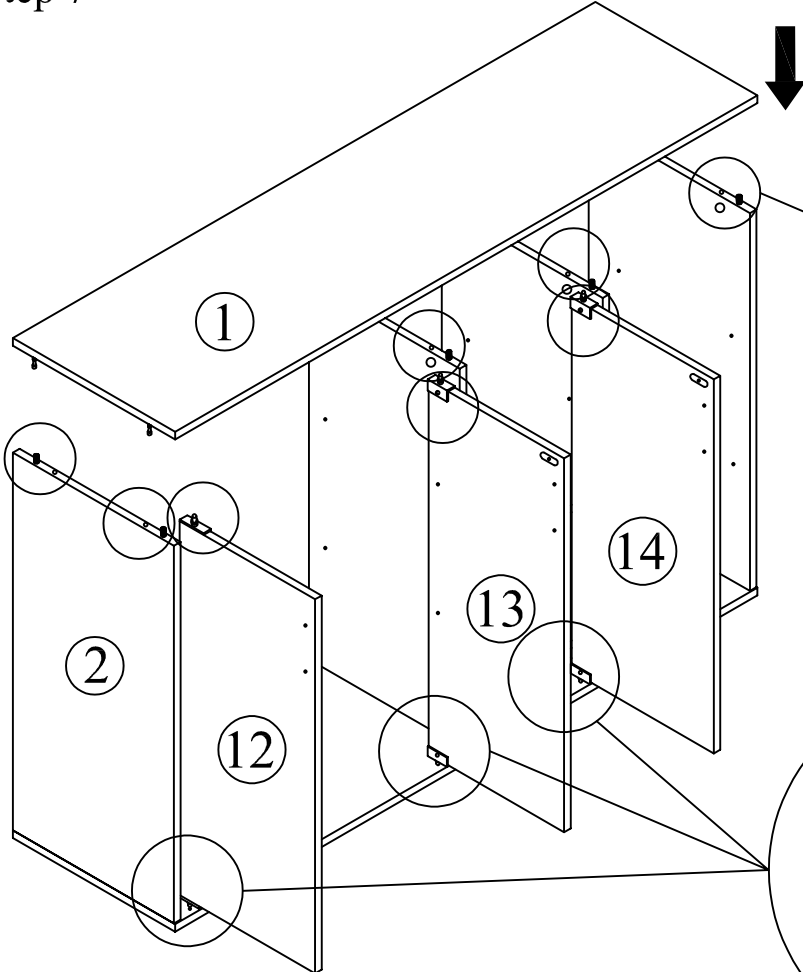


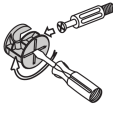

 This is how a mini fix works...
The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.


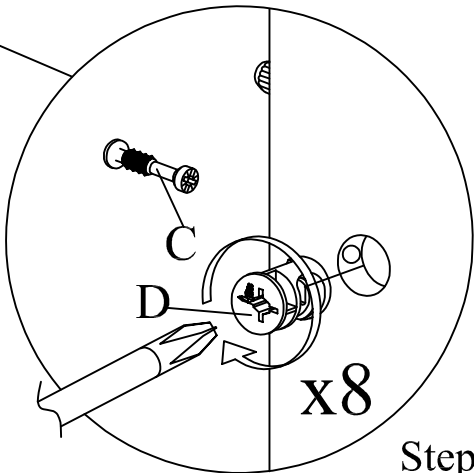


 Step 7.2

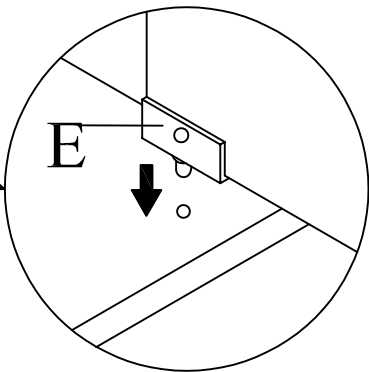


Step 7.1

  Step 8

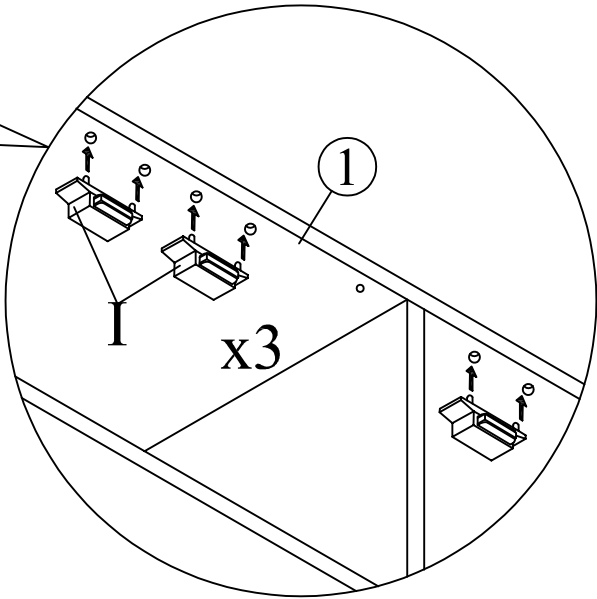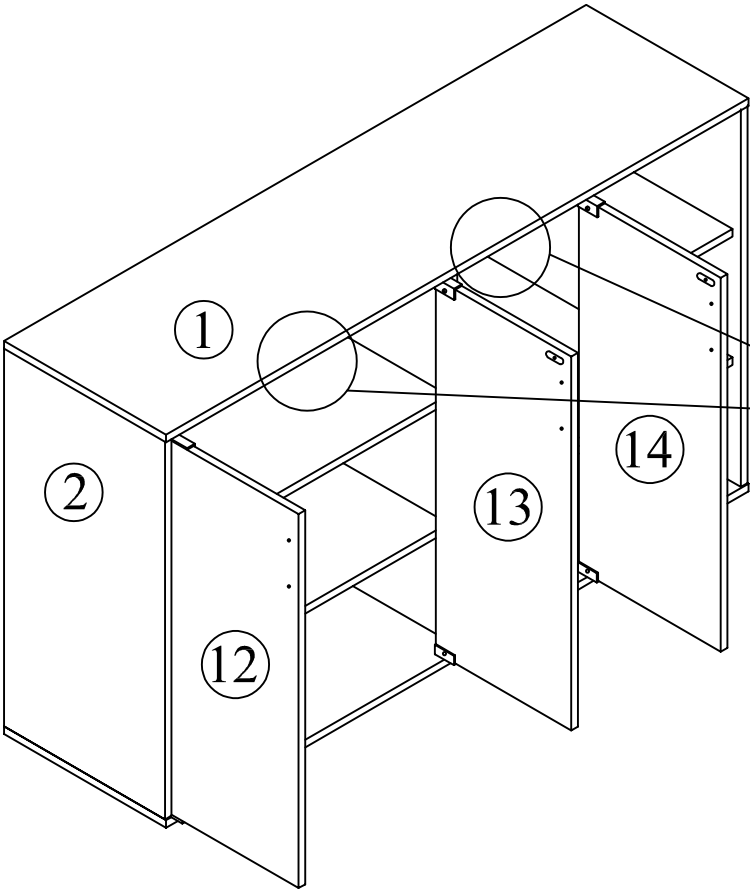


Step 9

 Back View

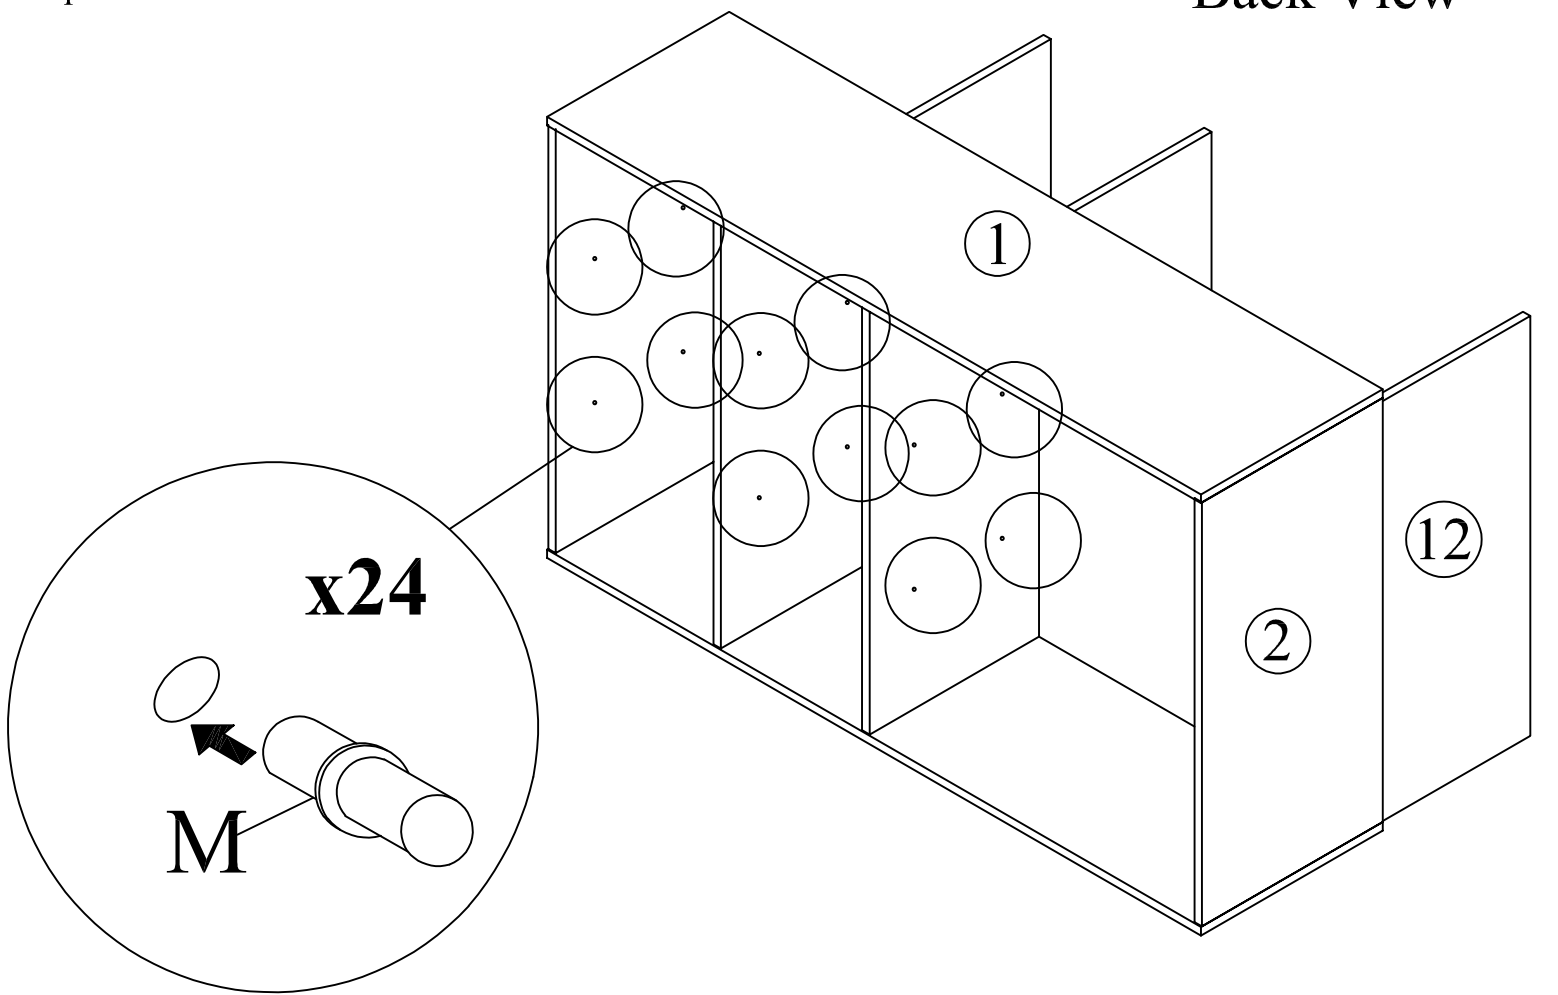


Step 10

   
Back View

 
 
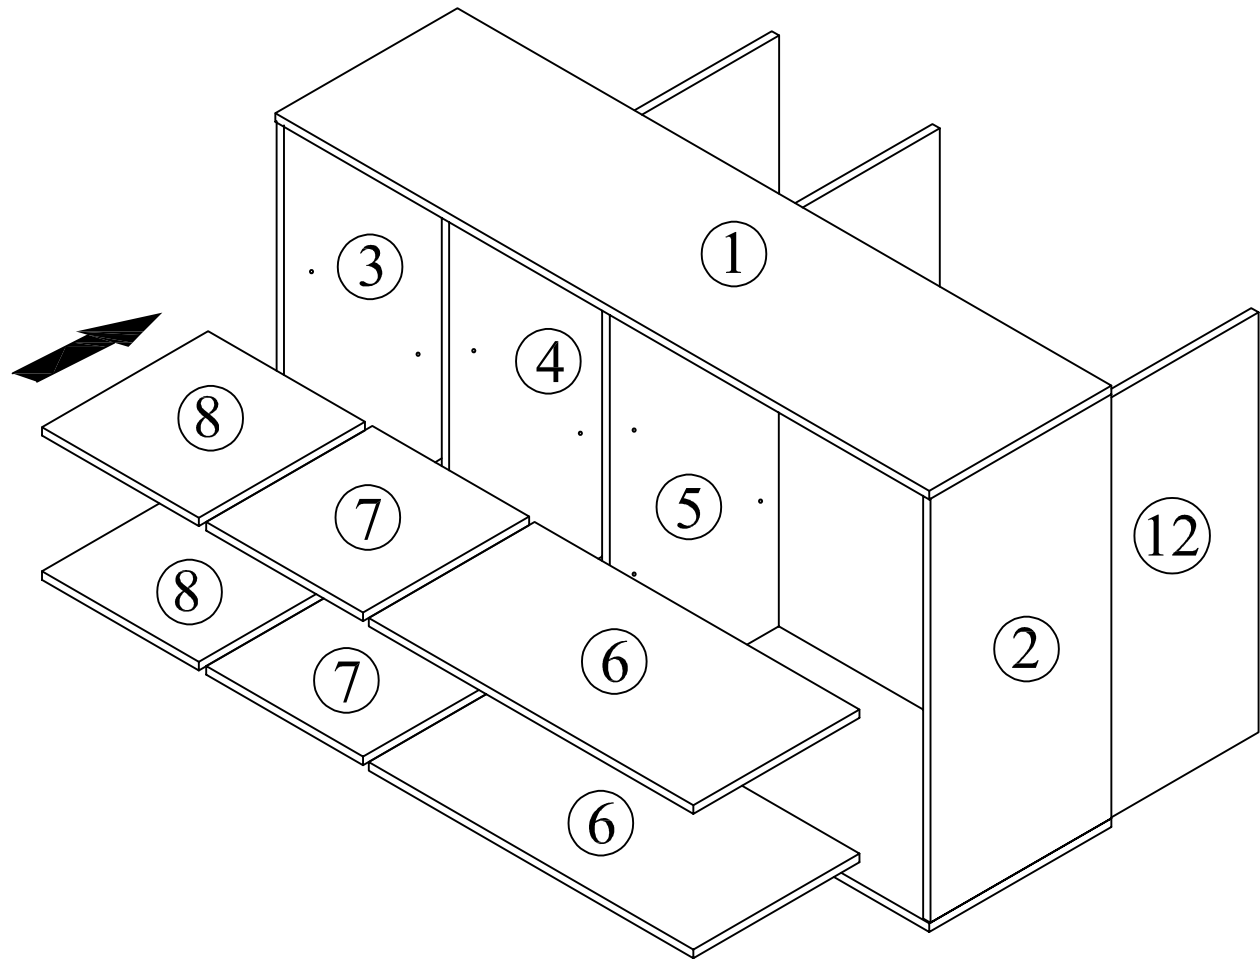

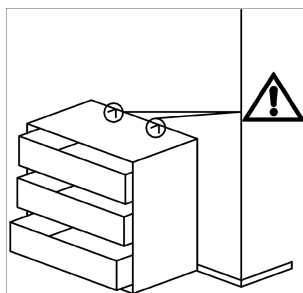
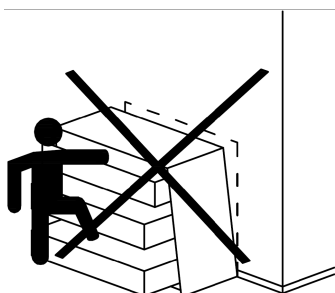


Step 11

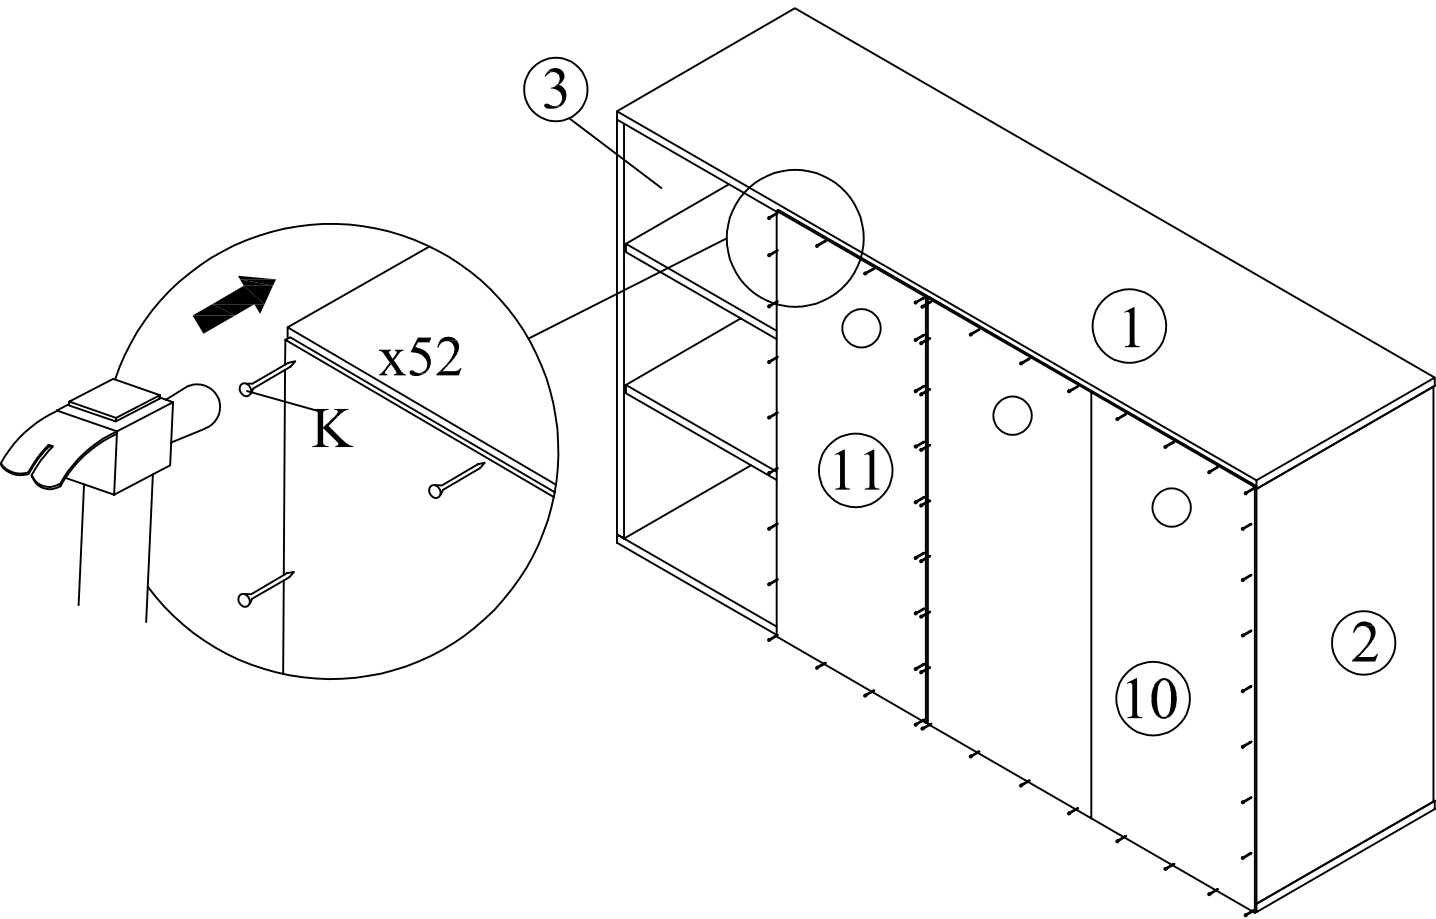


Step 12

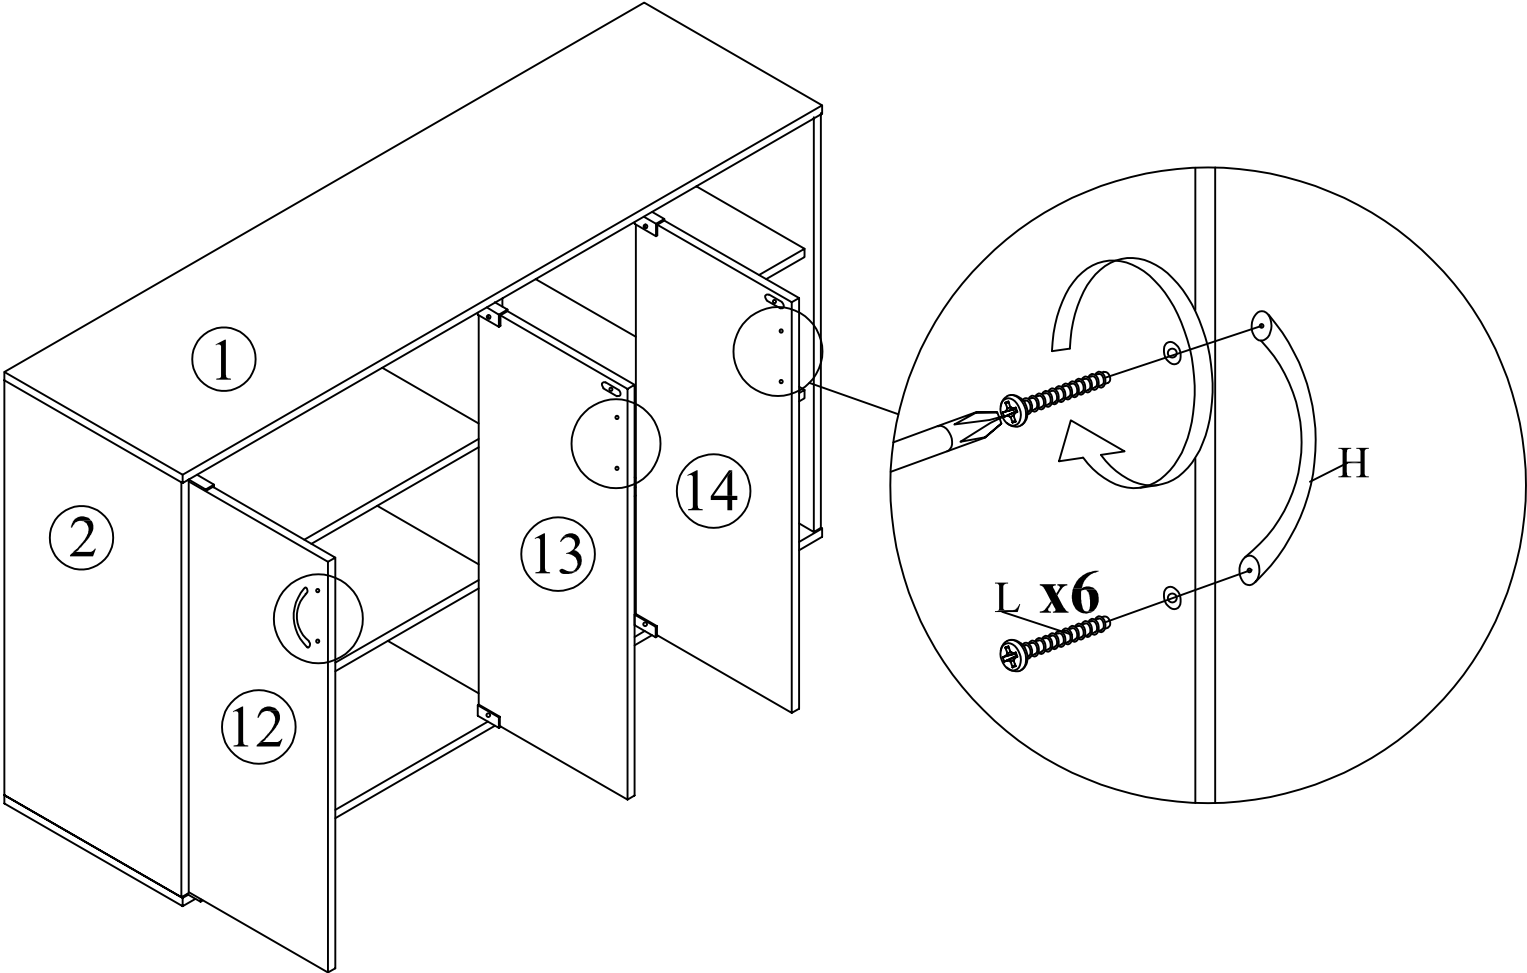
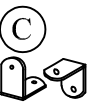
<p>Anti - Tipping</p>	<p>Ⓐ</p>  <p>CSK Screw M3.5x16mm 1PC</p>	<p>Ⓑ</p>  <p>CSK Screw M4x50mm 1PC</p>	<p>Ⓒ</p>  <p>L BRACKET 2PCS</p>	<p>Ⓓ</p>  <p>CABLE TIE 1PC</p>		
---------------------------	---	---	--	---	--	---

 BACK VIEW

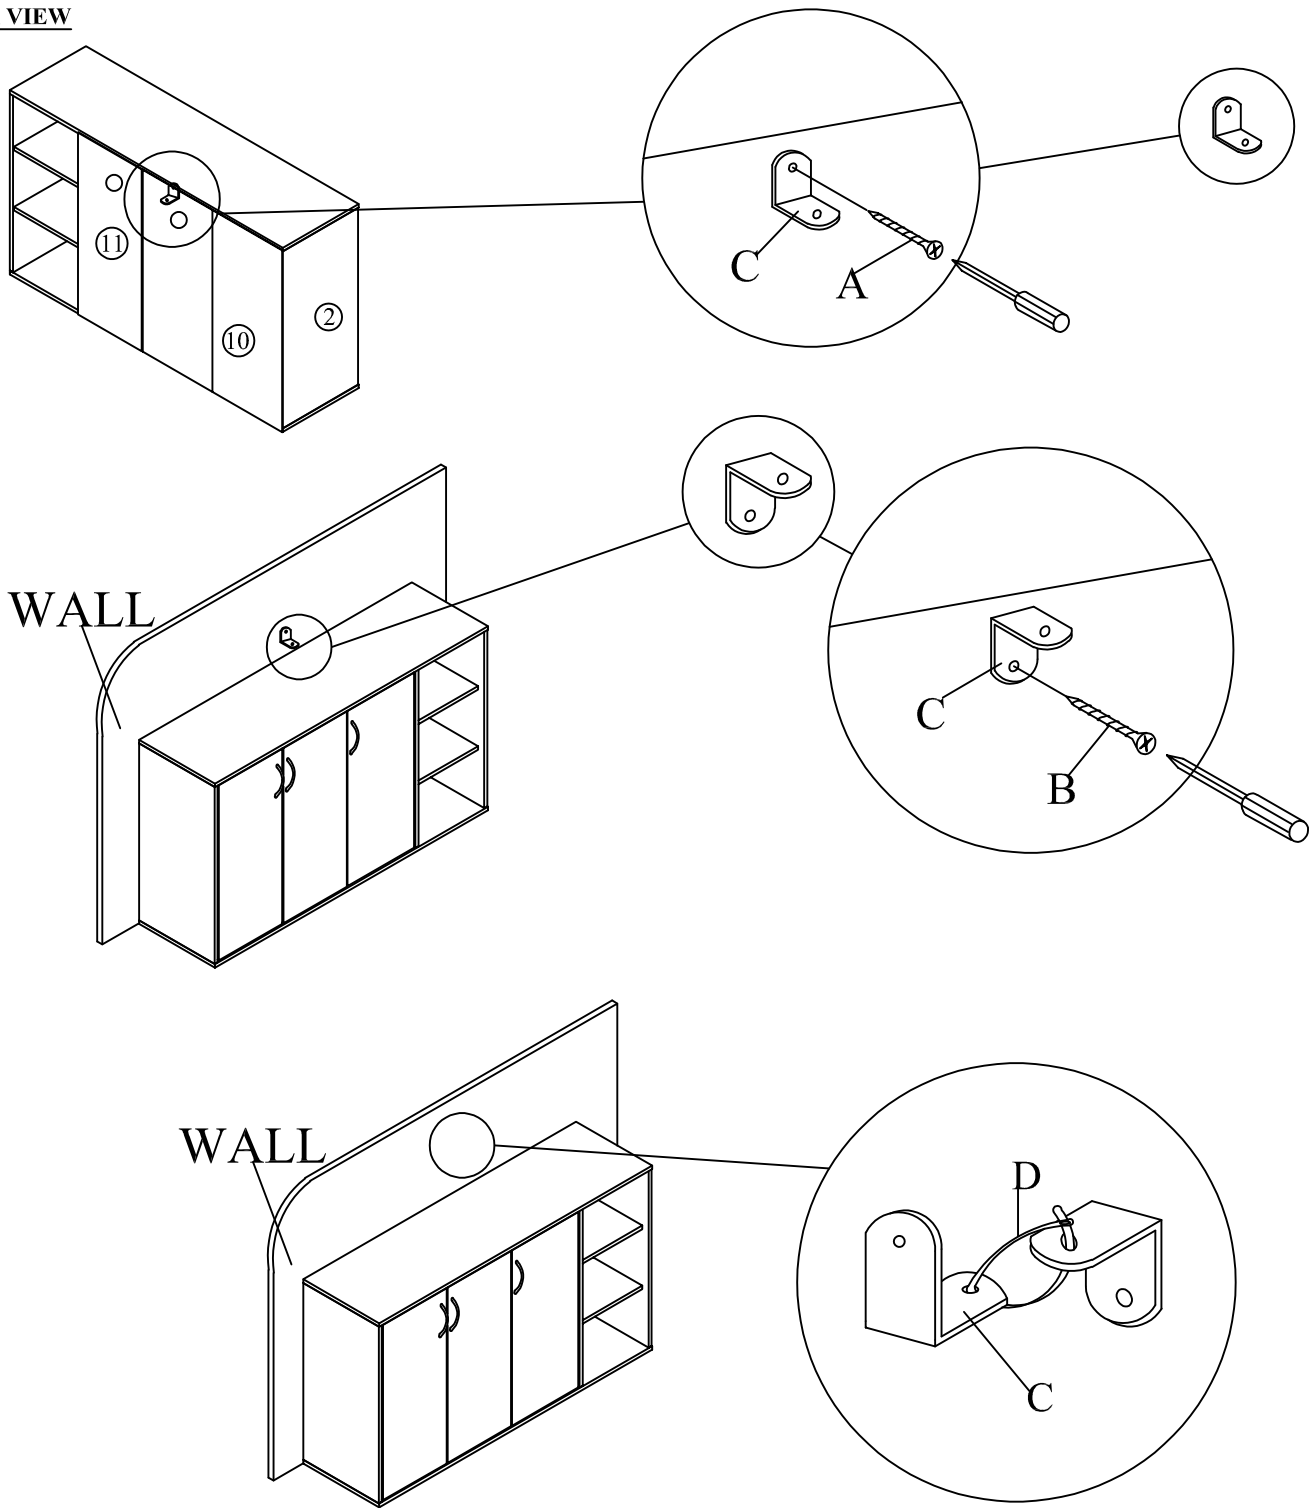

RETURN / DAMAGE CLAIM INSTRUCTIONS

1. DO NOT discard of the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

2. Take a photo of the box markings.

A photo of the markings (text) on the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

3. Take a photo / Video of Damage (if applicable).

A photo /Video of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

4. Send us an email with the images requested.

Email us directly with the attached images, order number (SOXXXX) and a description of your claim.

Auckland / Waikato / BOP Branch: sales@tsbliving.co.nz

Christchurch Branch: customersupport@tsbliving.co.nz

Wellington Branch: wellington@tsbliving.co.nz