







 

 

 







Assembly Instructions

Model : RB 8011-B


Part List		QTY
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Center Panel	1
5	Support Panel	1
6	Shelf Panel	1
7	Bottom Panel	1
8	Leg Panel	1
9	Back Panel (Big)	1
10	Door Left	1
11	Door Center	1
12	Door Right	1
13	Drawer Front Panel	1
14	Drawer Side Panel (L)	1
15	Drawer Side Panel (R)	1
16	Drawer Back Panel	1
17	Drawer Bottom Panel	1
18	Back Panel (Small)	2

Hardware		QTY
A	Wood Dowel 6 x 30mm 	23
B	Mini Fix Bolt 	8
C	Mini Fix Housing 	8
D	CSK Screw M4x38mm 	14
E	CSK Screw M3.5x12mm 	19
F	14" Drawer Slide 	1
G	Nail 	54
H	White Nail Leg 	4
I	Handle 	4
J	CSK Screw M4x25mm 	8
K	Magnet Plate 	3
L	Magnet 	3
M	Door Support 	6
N	Shelf Support 	4
O	V Bracket 	2
P	Pipe 	1

   
*Please use screwdriver when assemble CSK screw.Screwdriver (not provided)

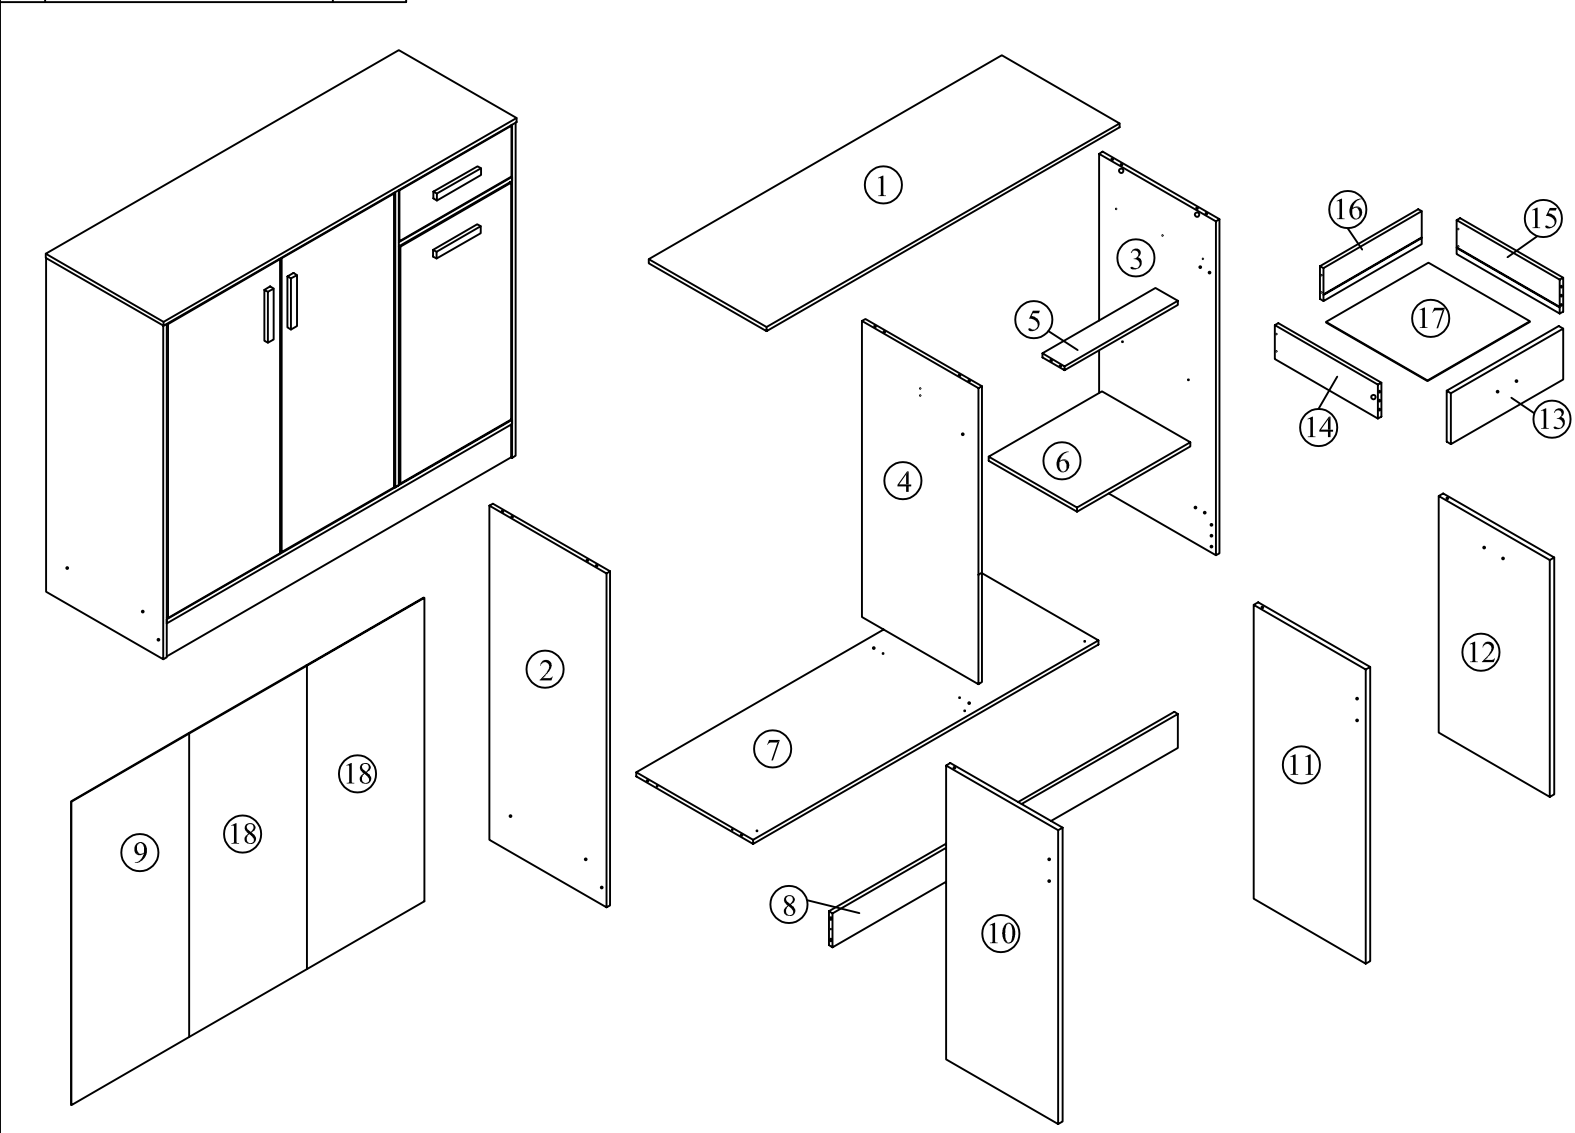

 
Step 1

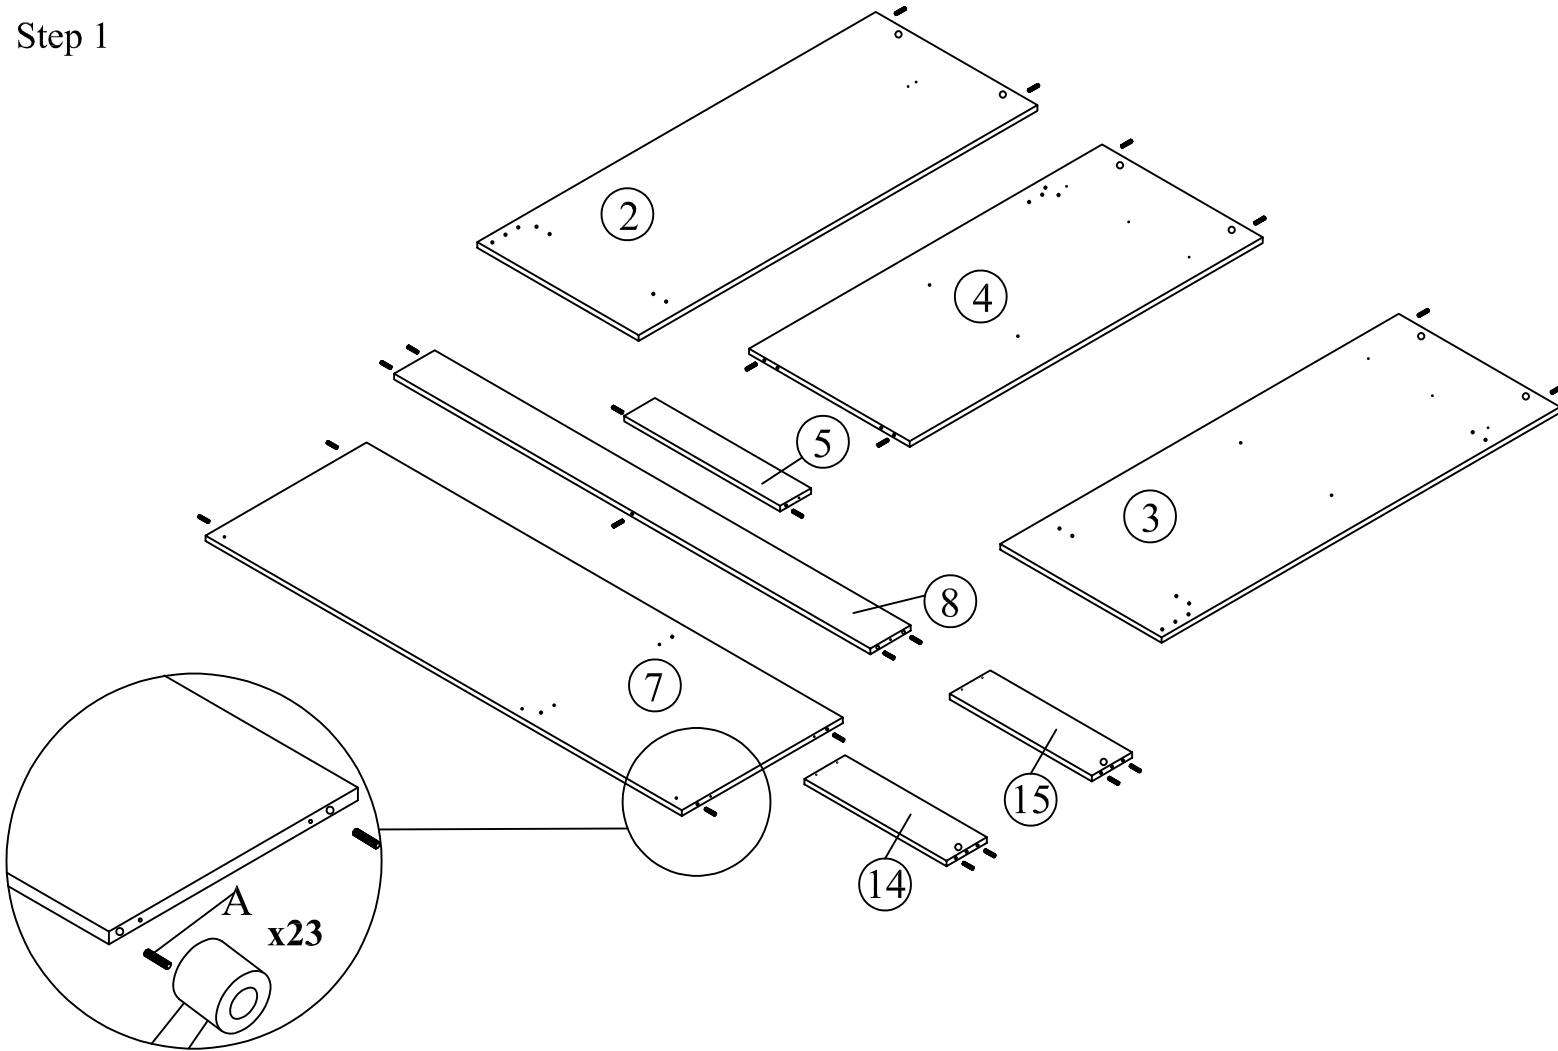

 
Step 2

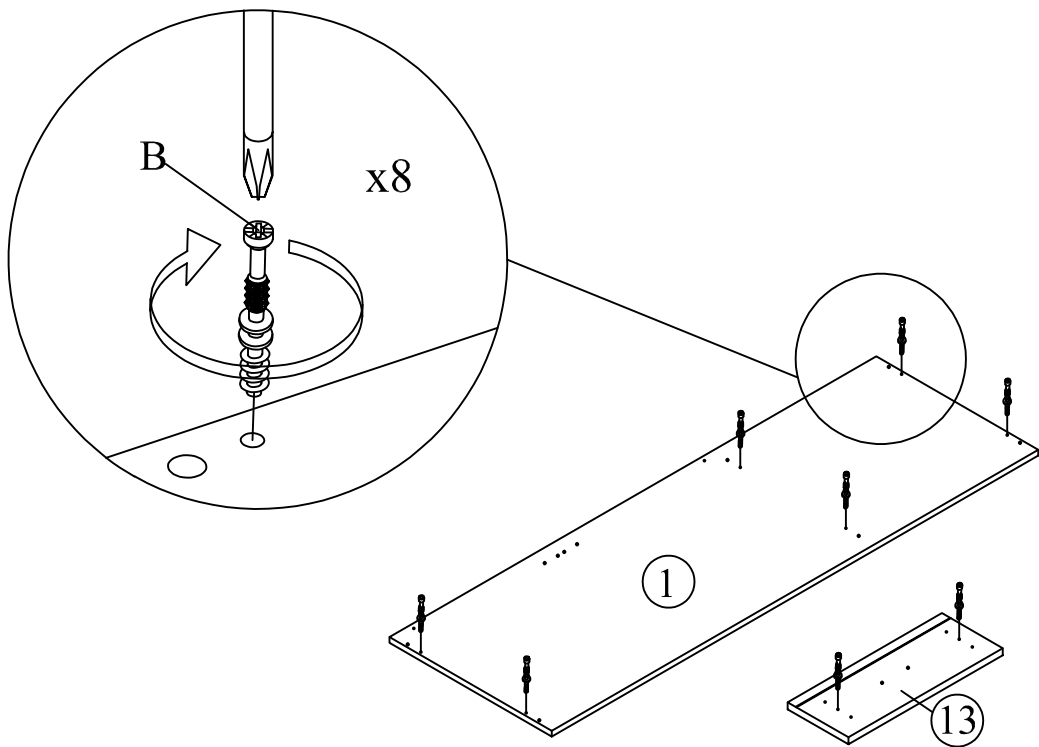

 
Step 3

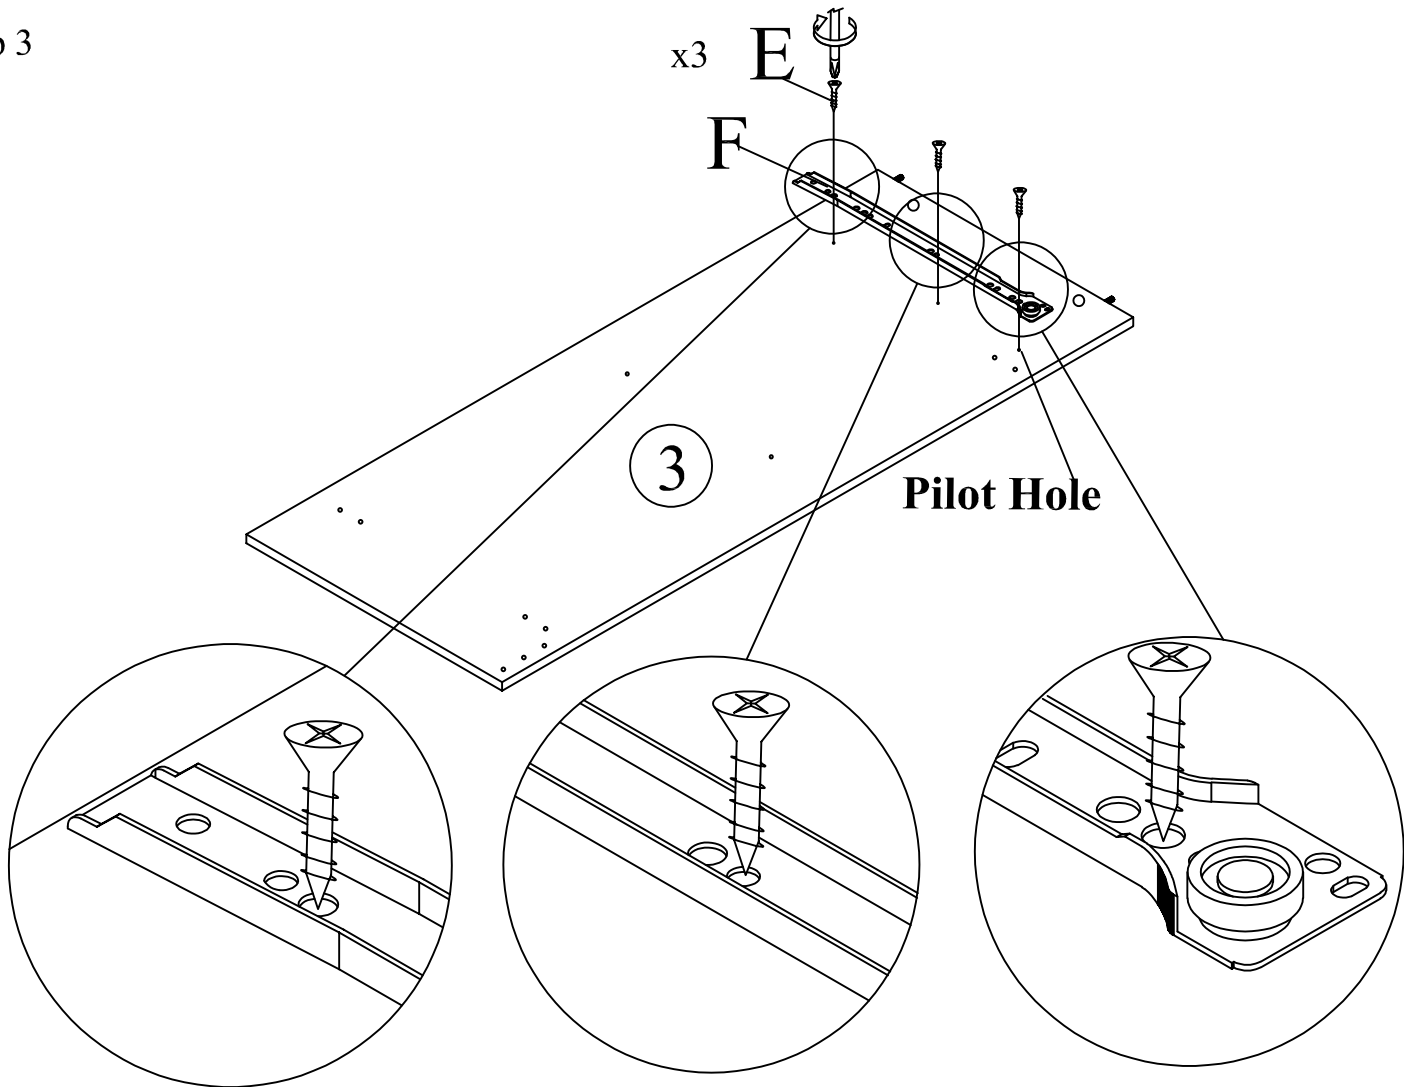

 
Step 4

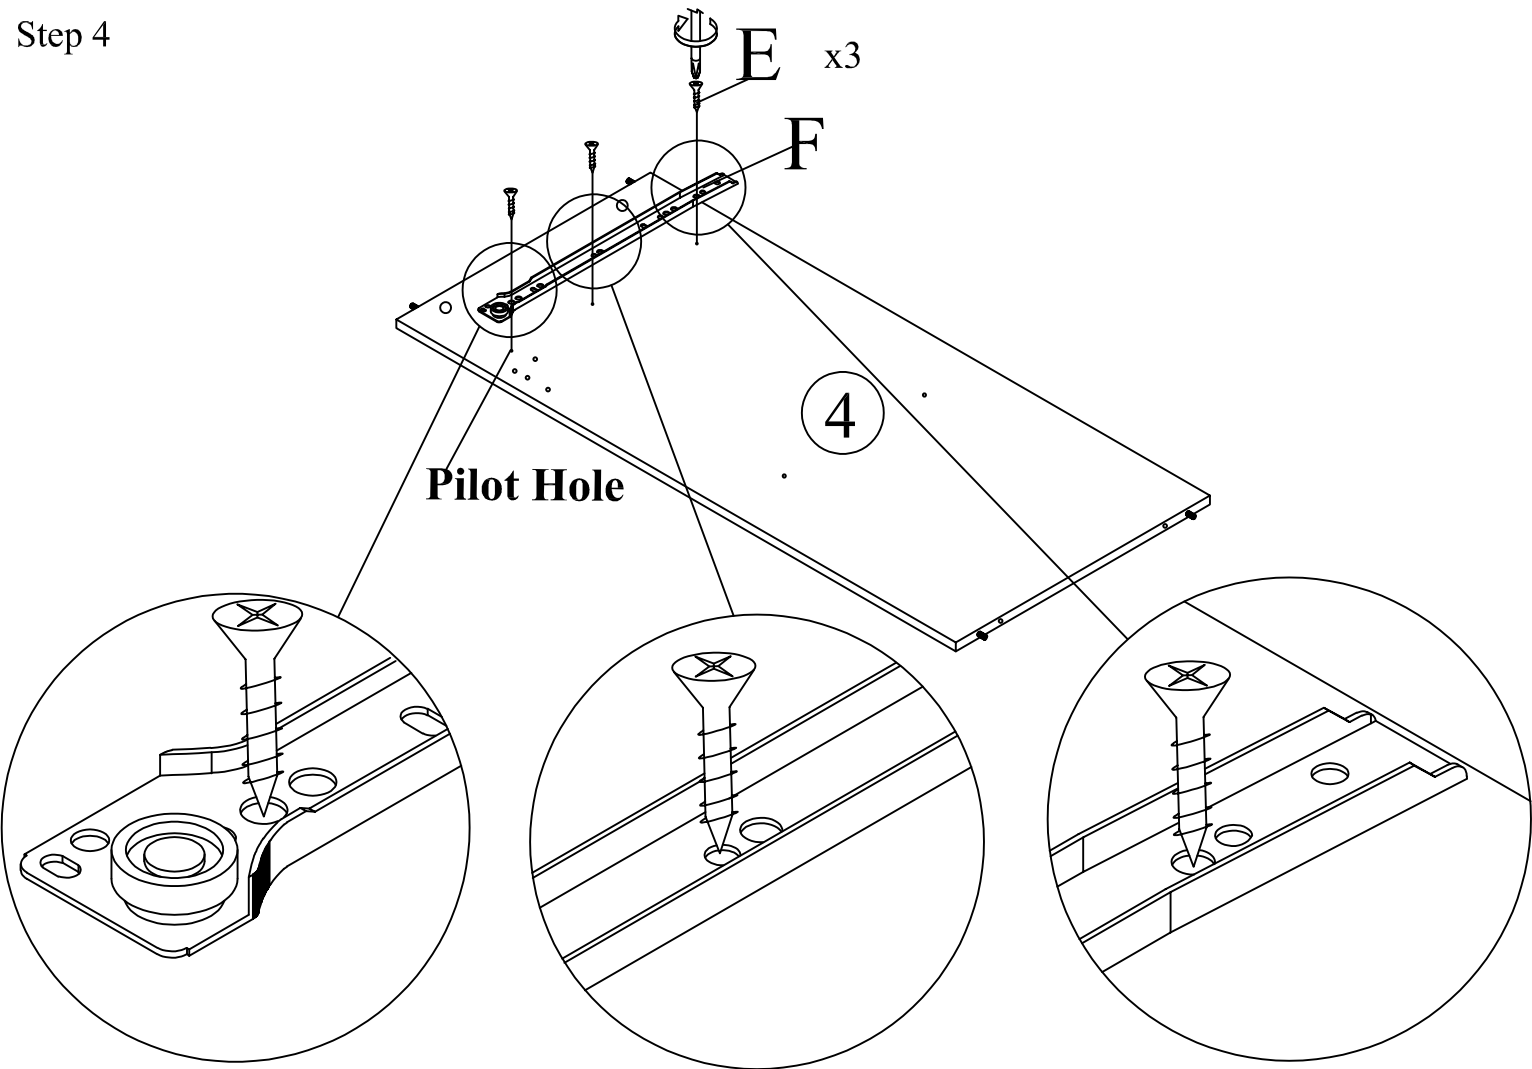

 
Step 5

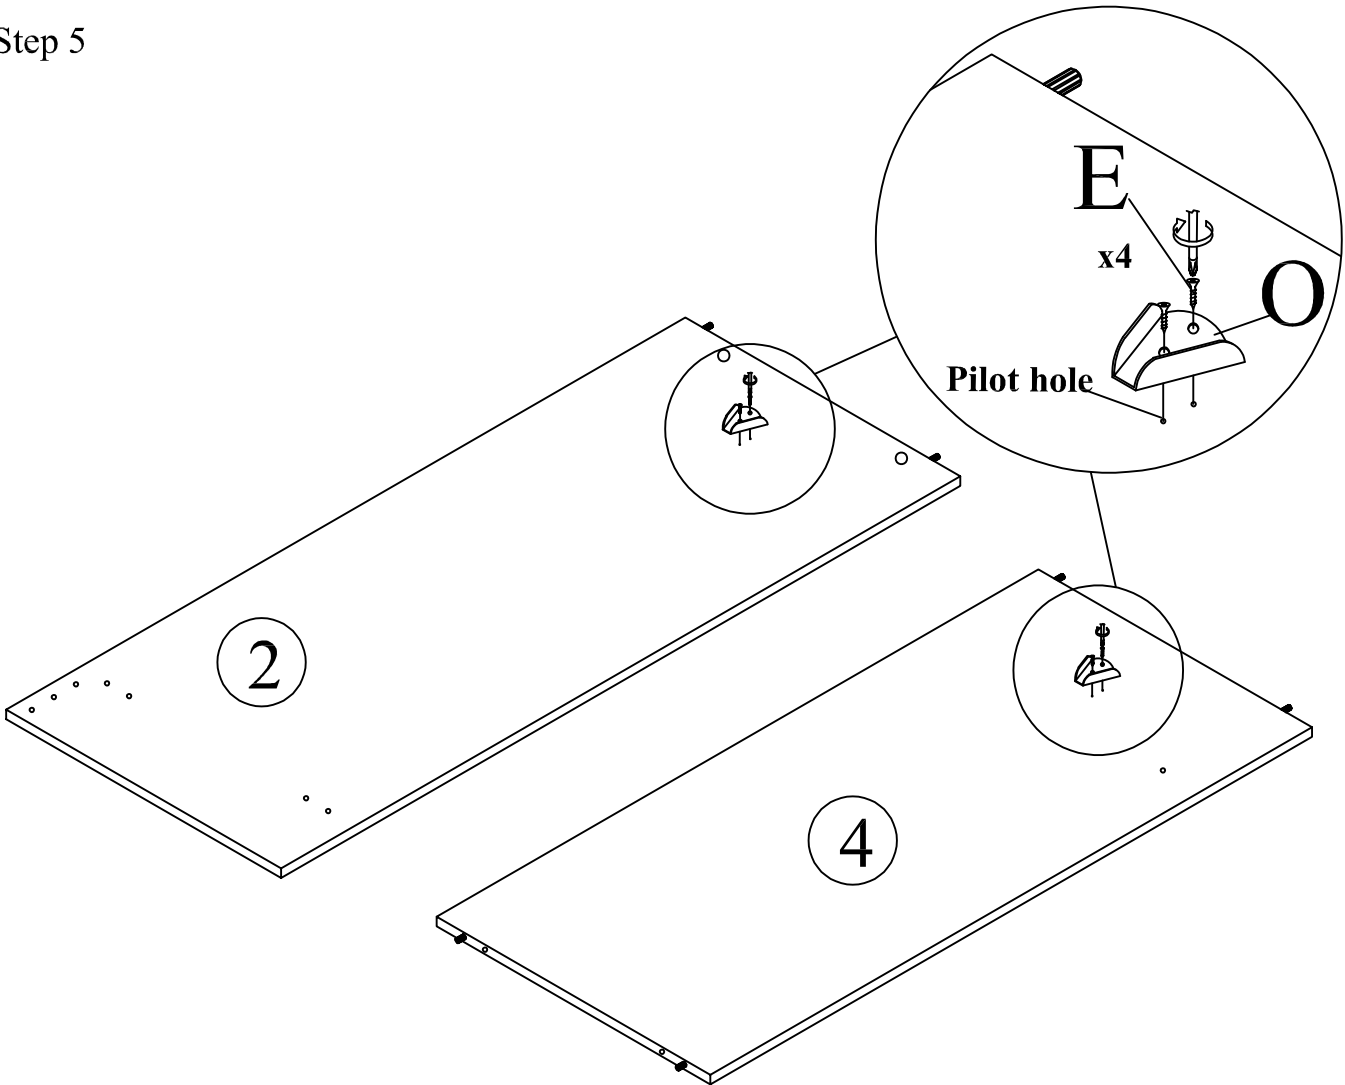

 
Step 6

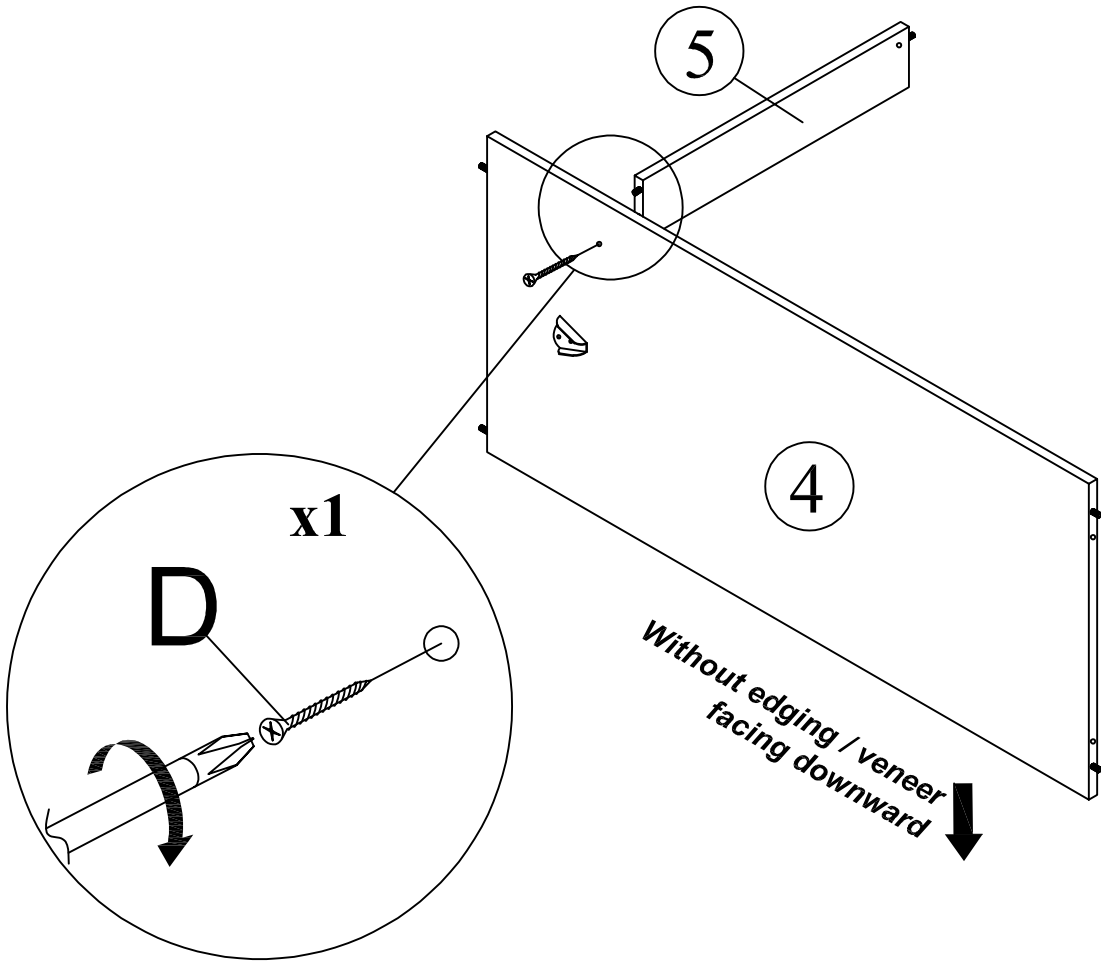

 
Step 7

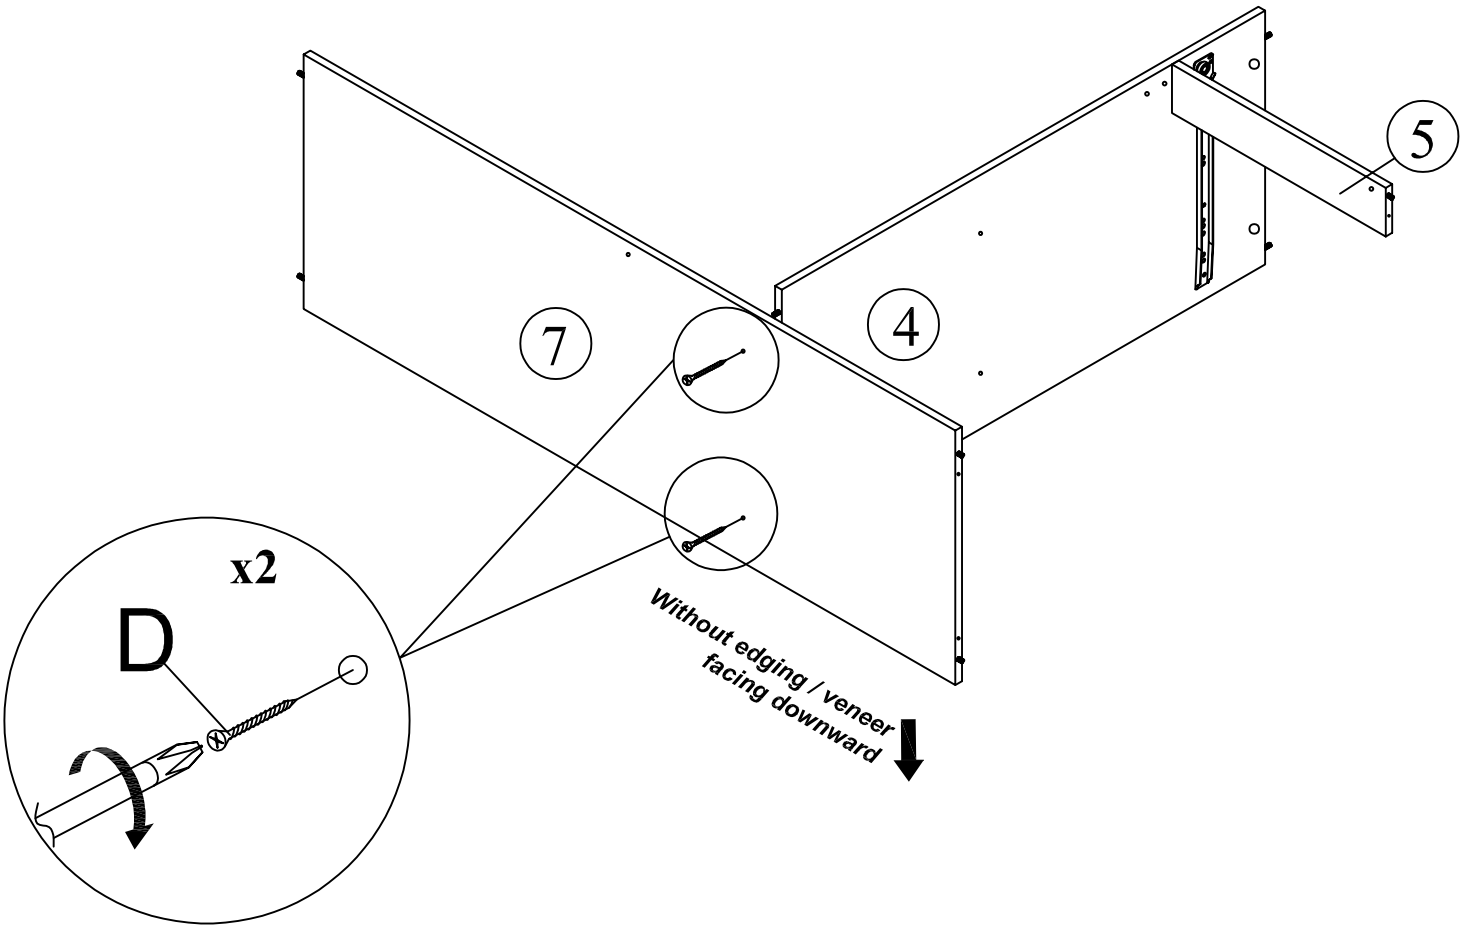

 
Step 8

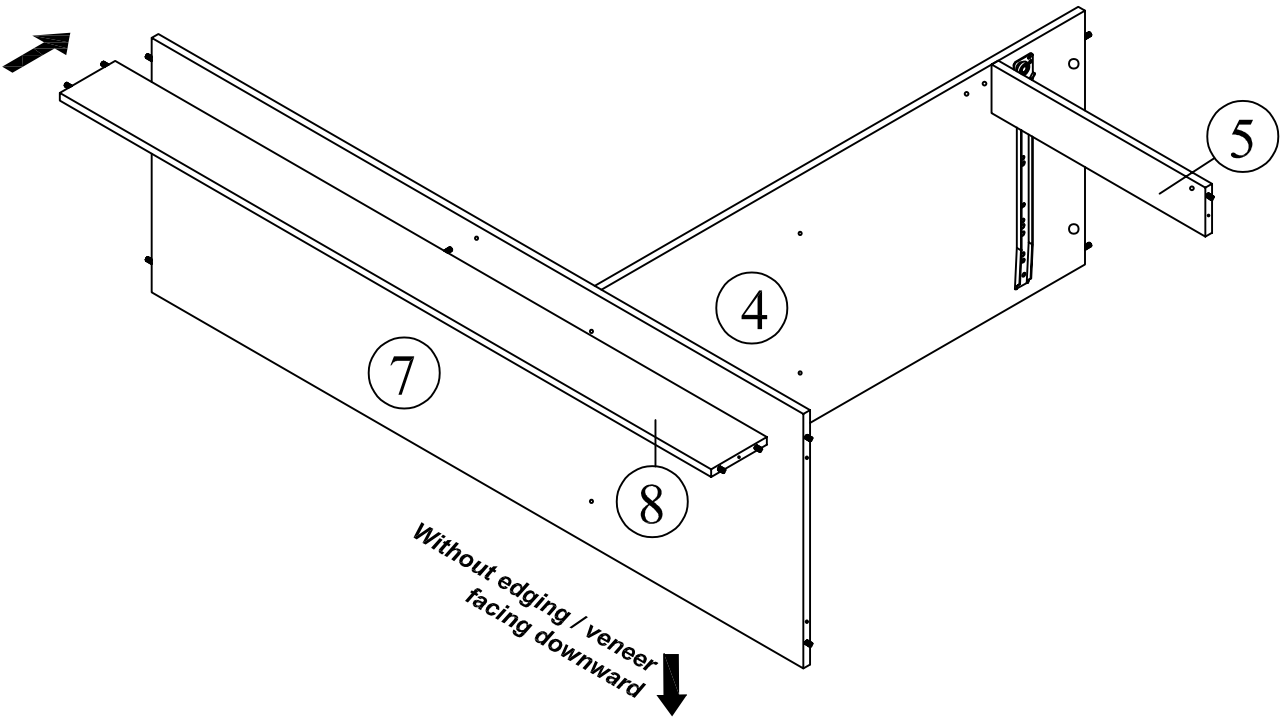

 
Step 9

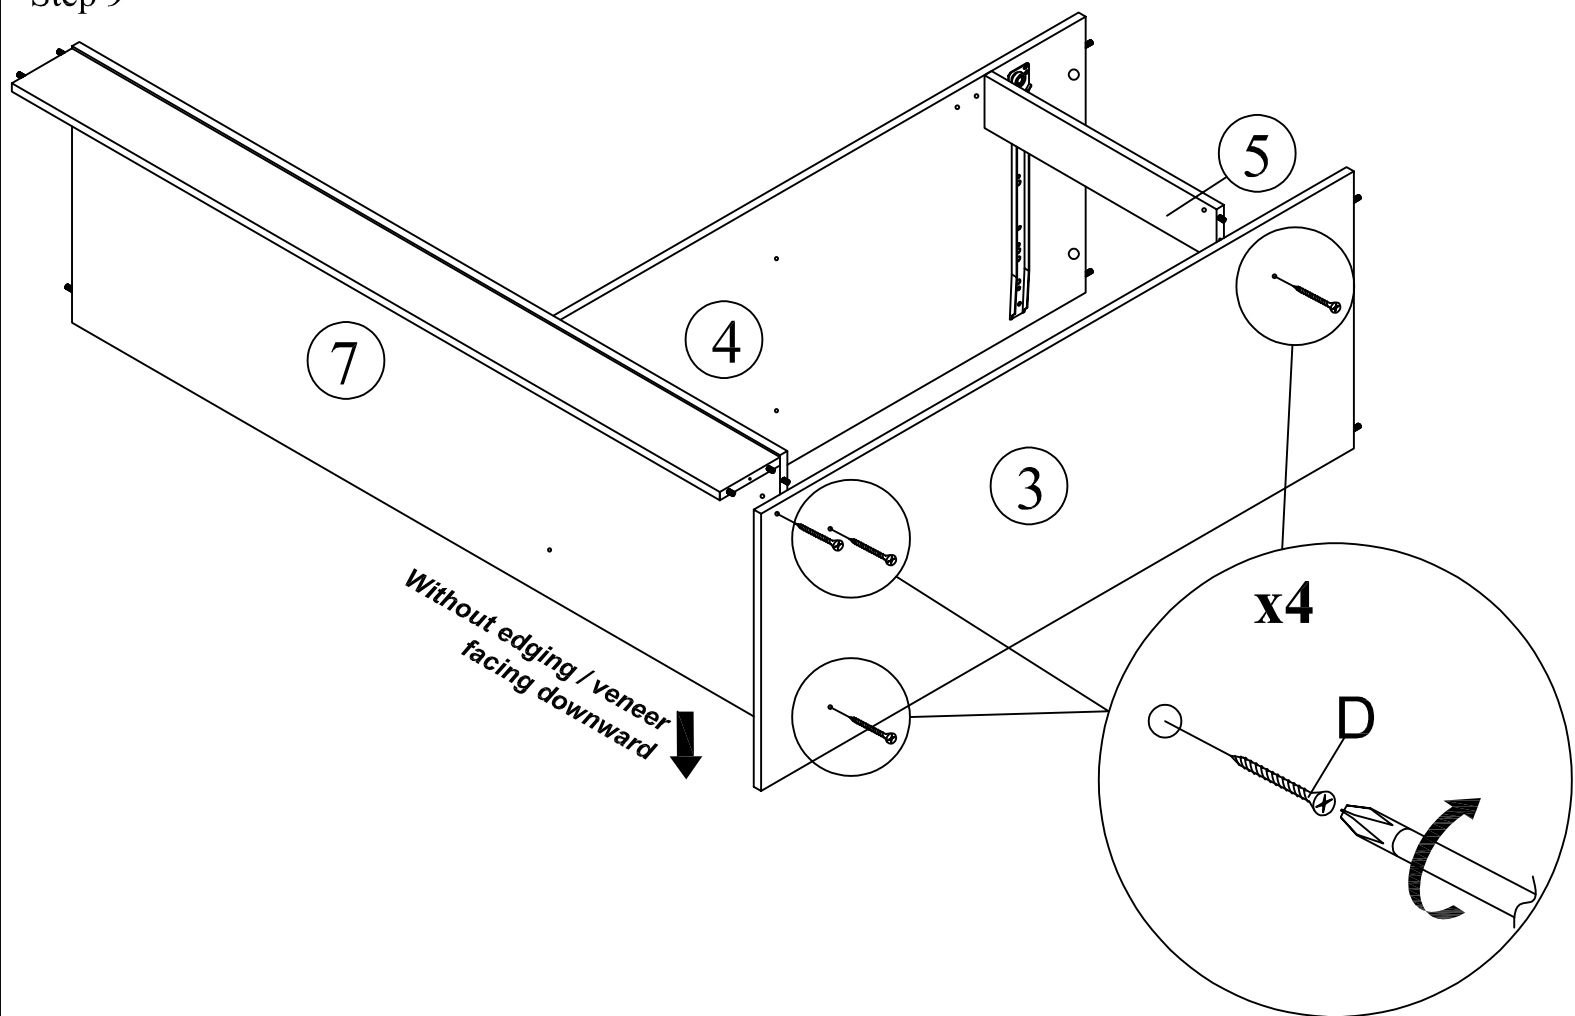

 Step 10

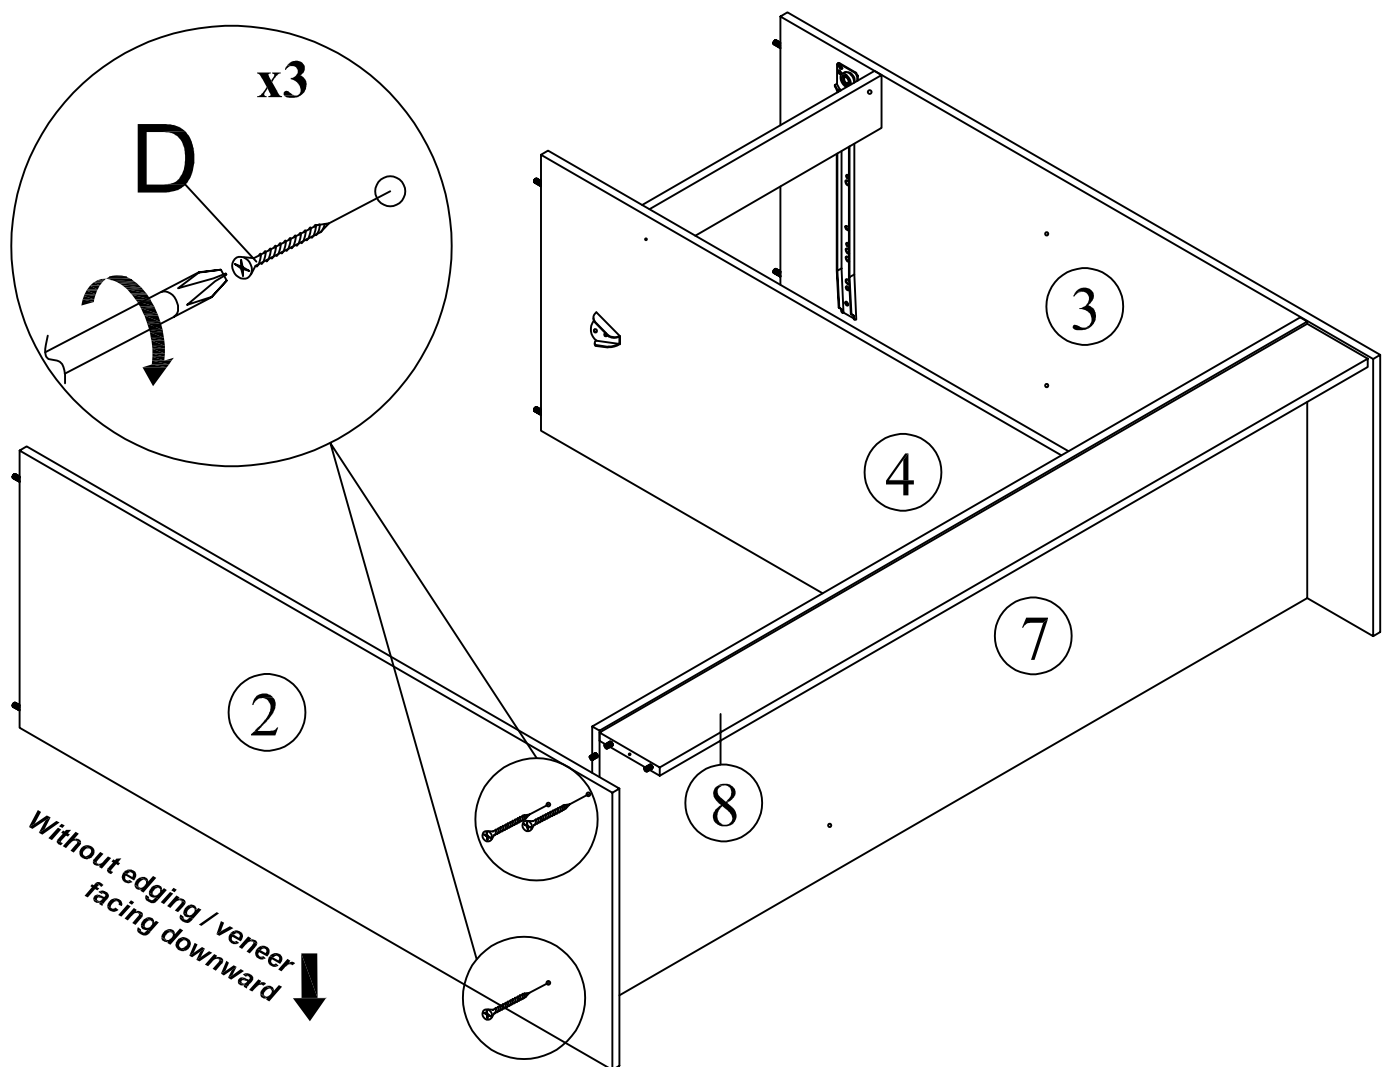


 Step 11



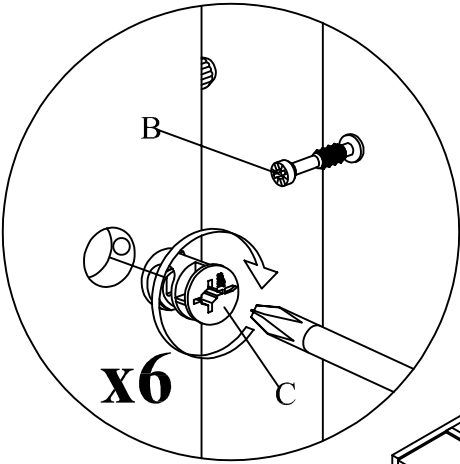


This is how a mini fix works...

 The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

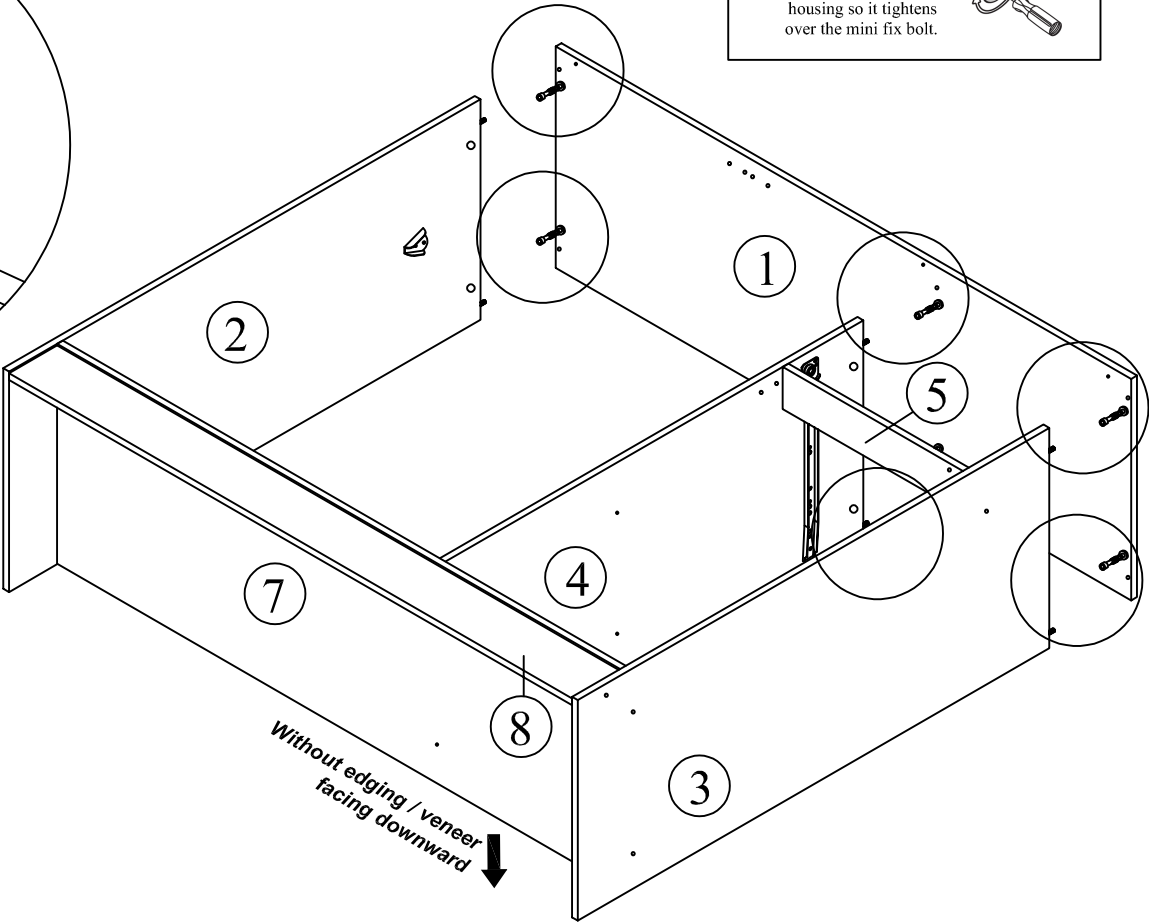


   Step 12

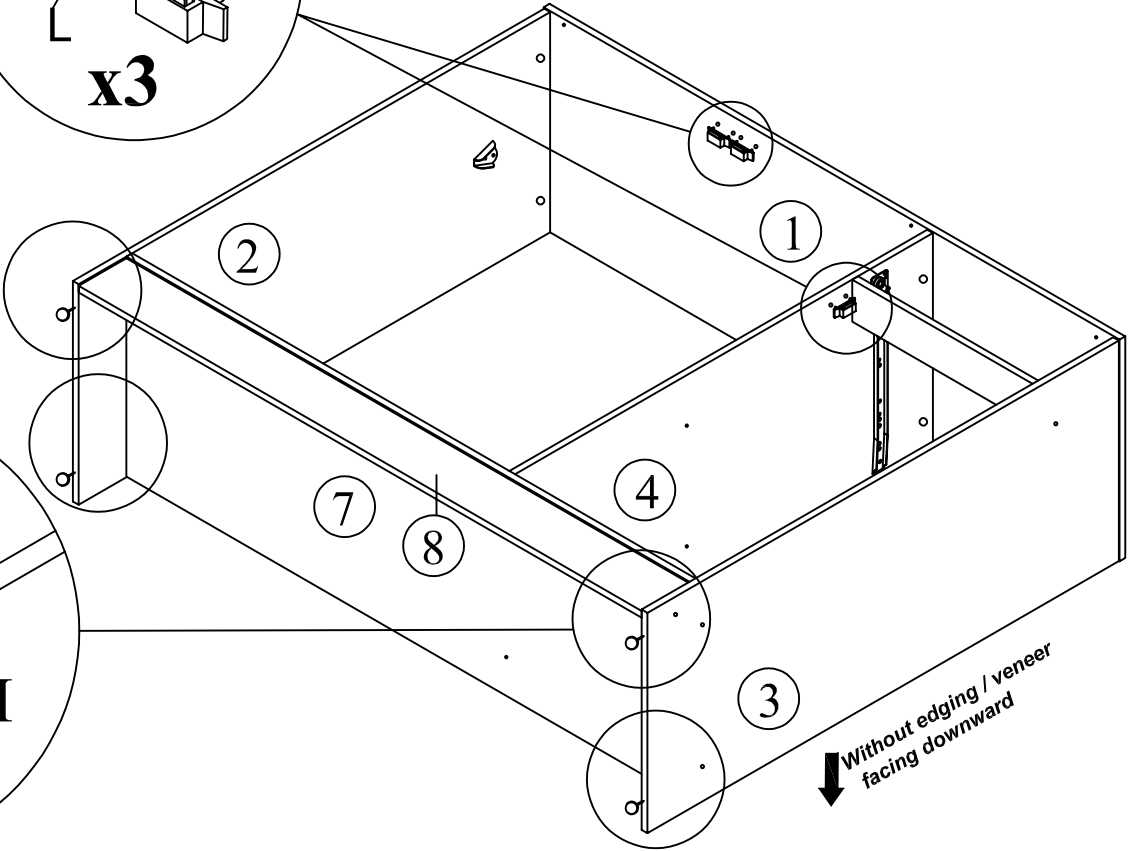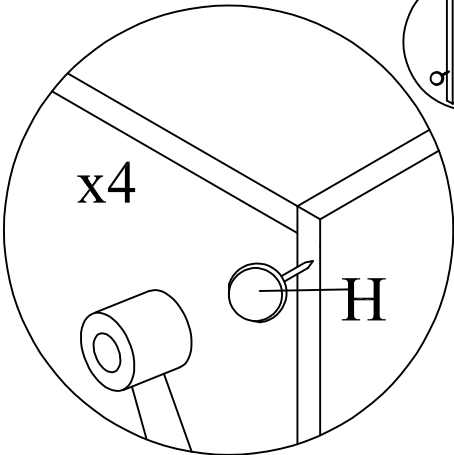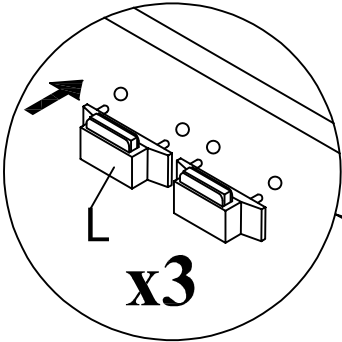


Step 13

 
BACK VIEW

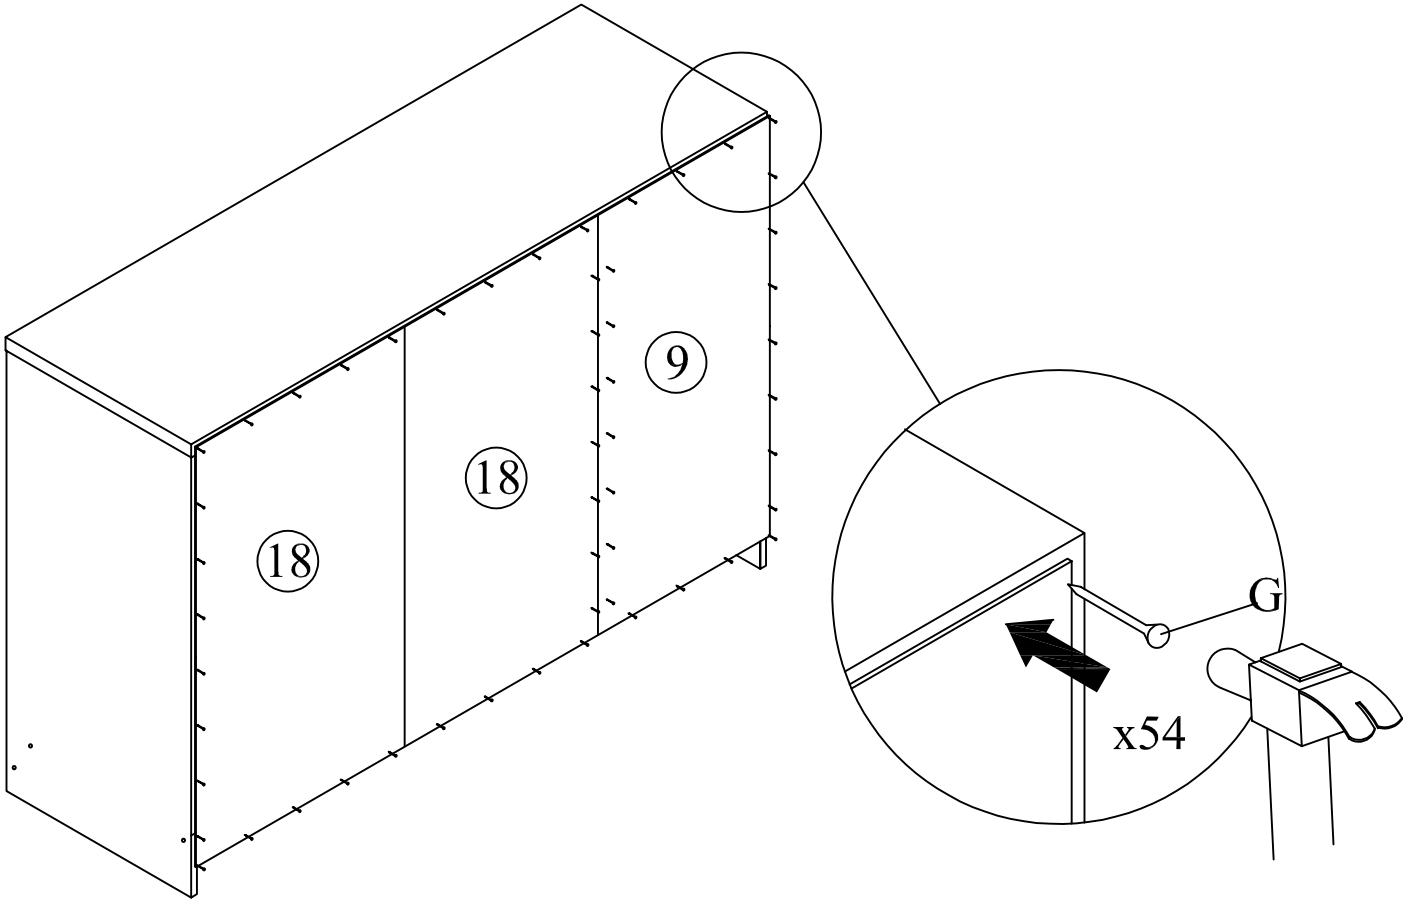

 
Step 14

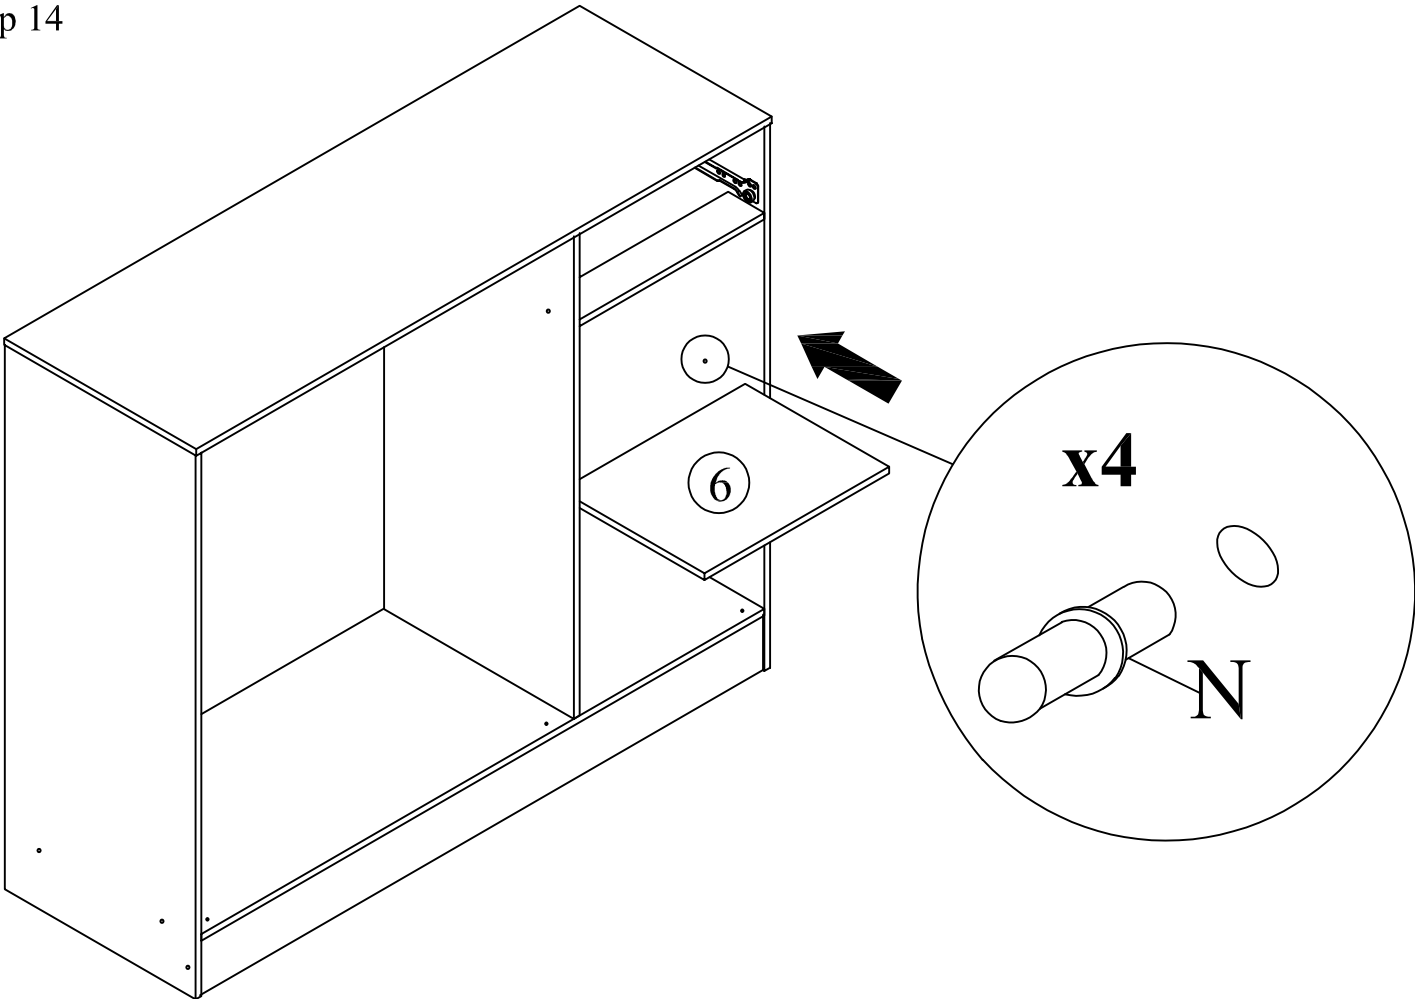

 
Step 15

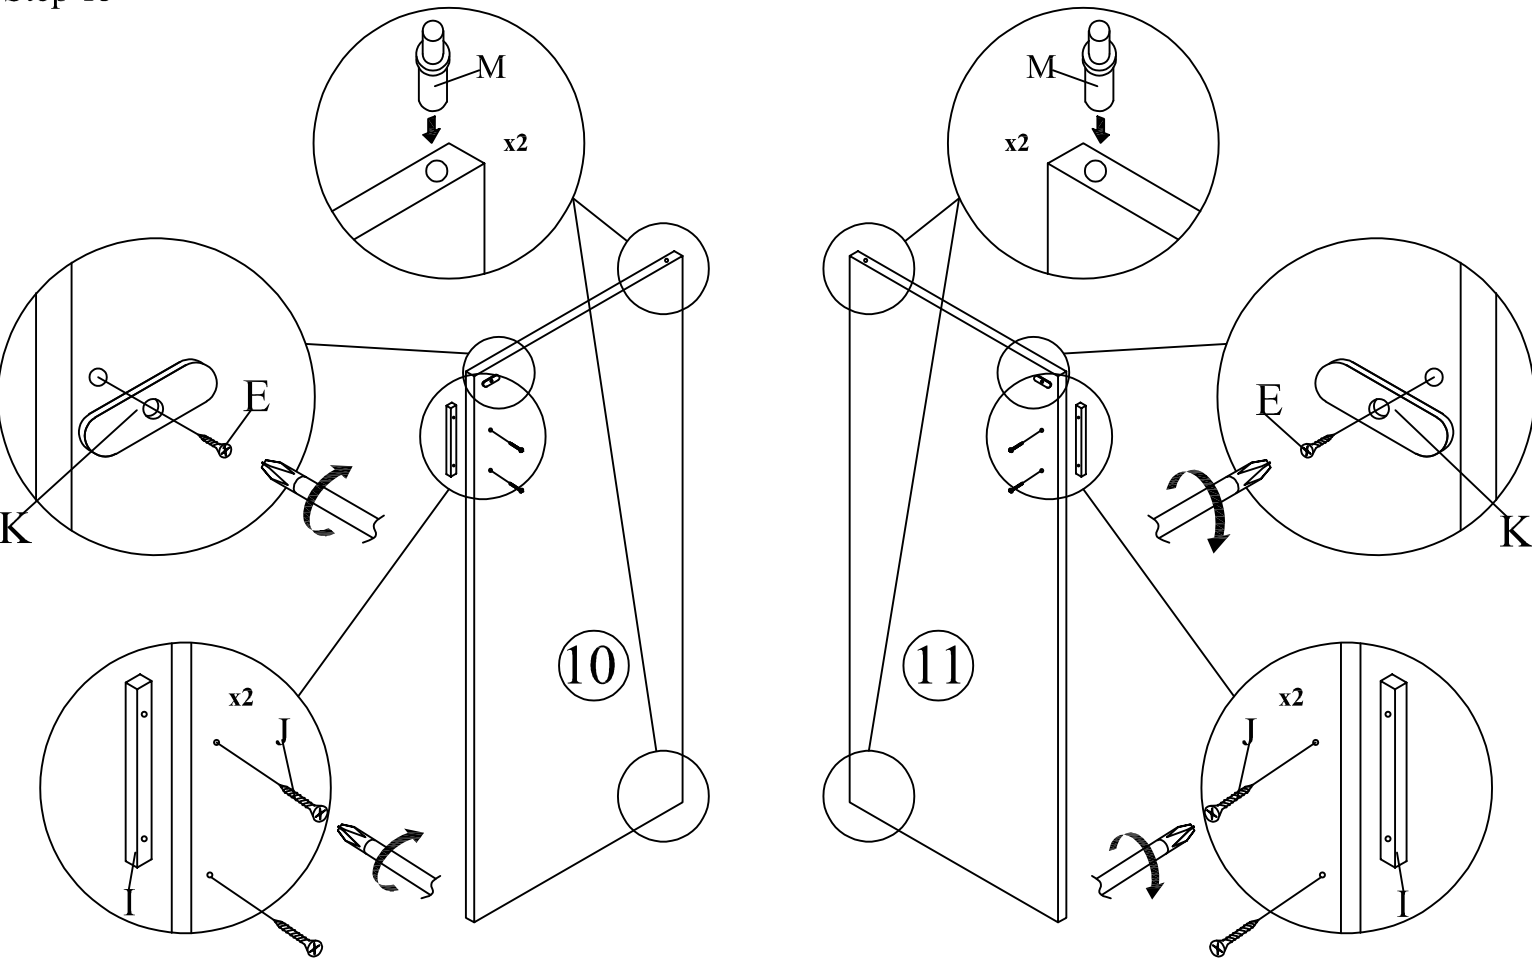

 Step 16

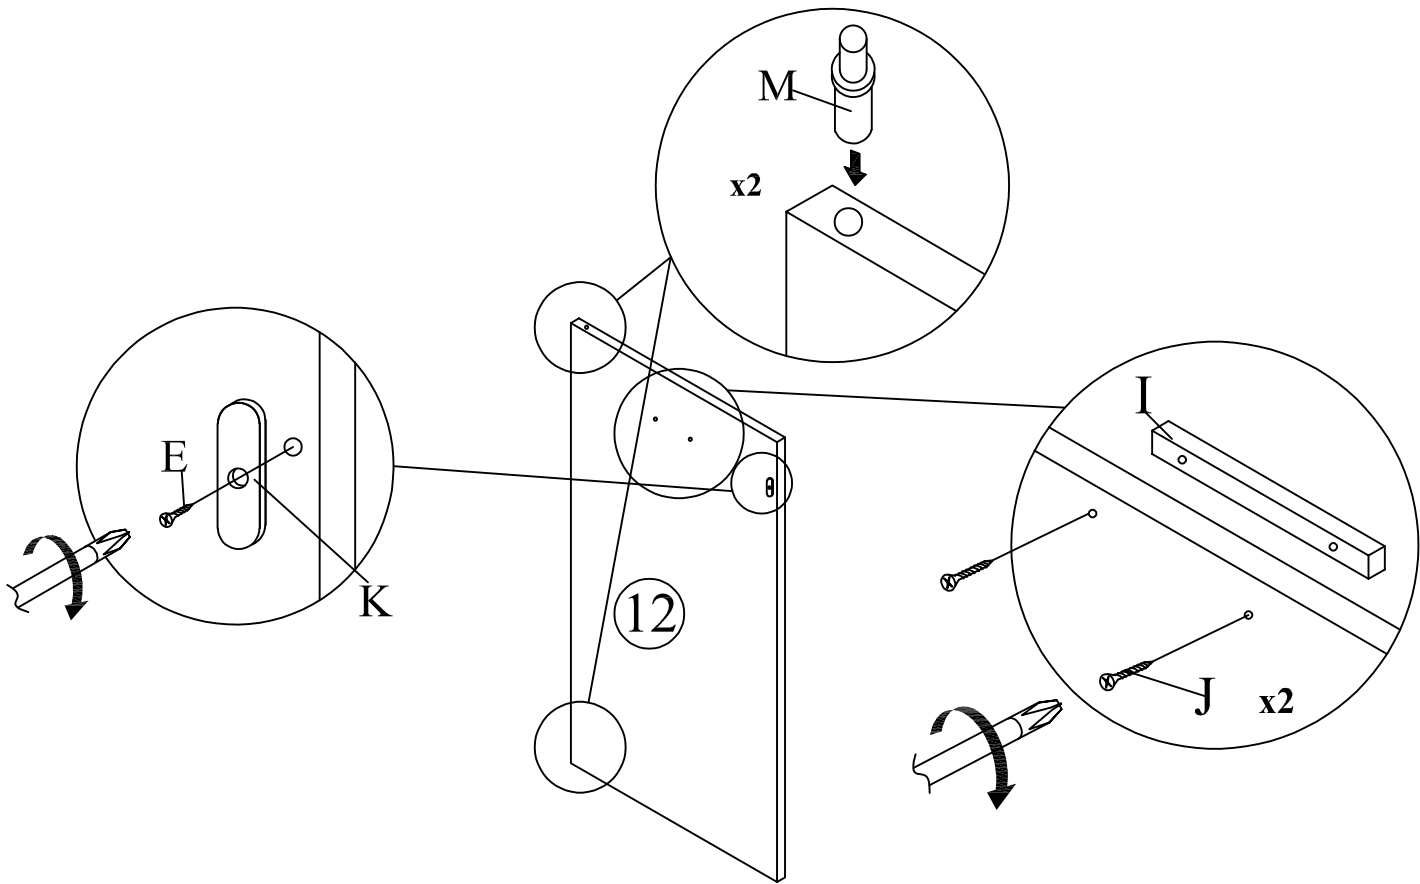


 Step 17

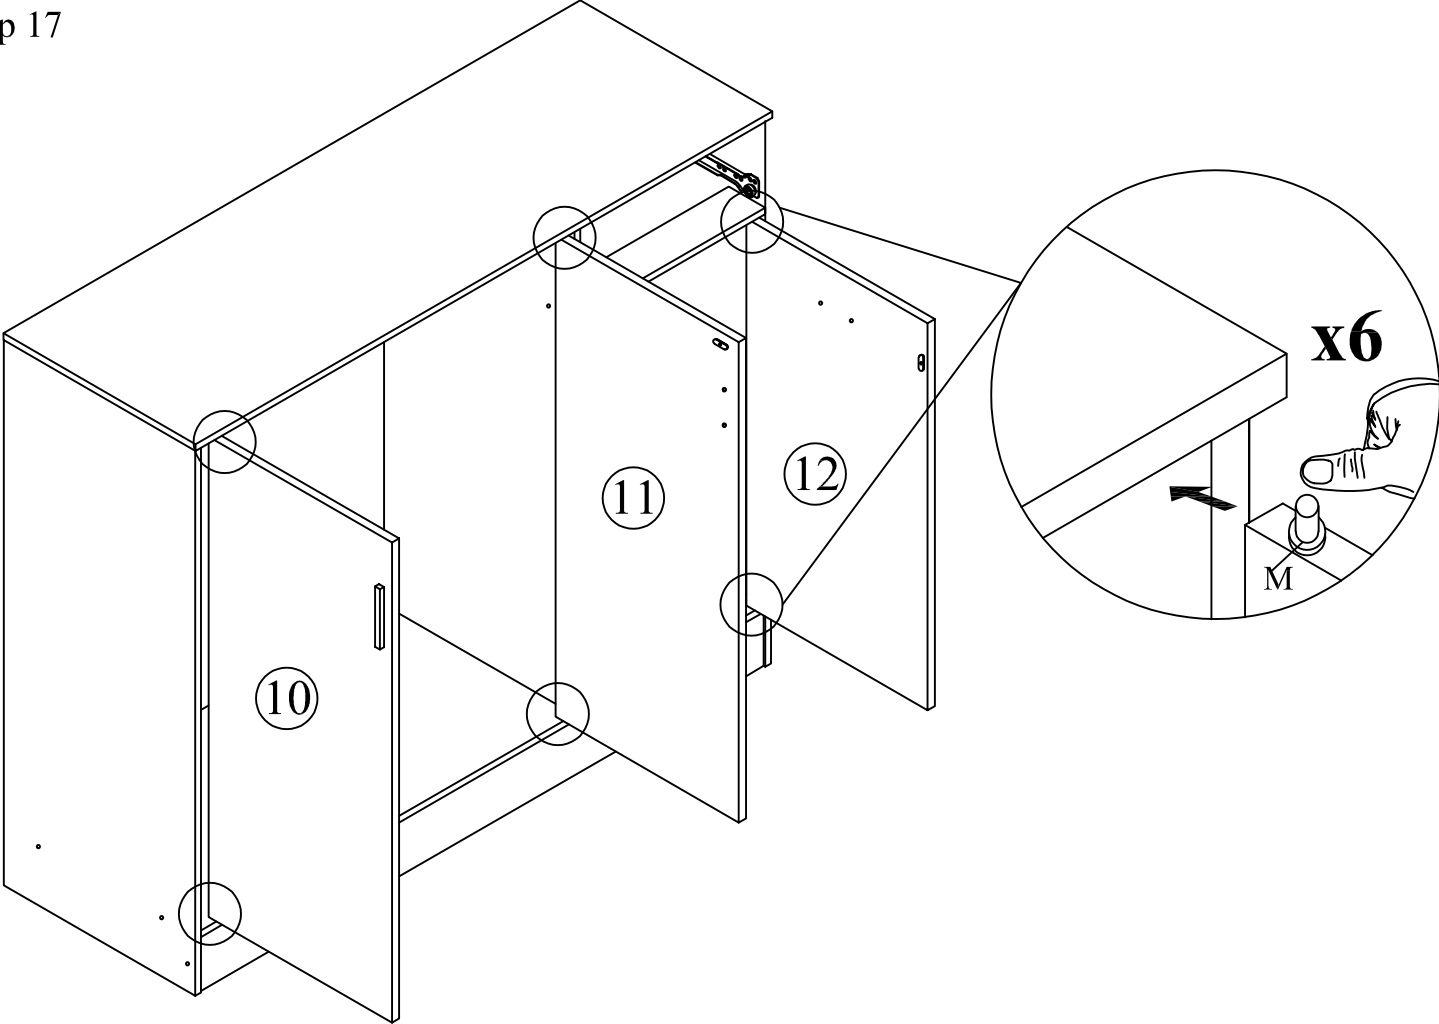


Step 18

 Step 18.1

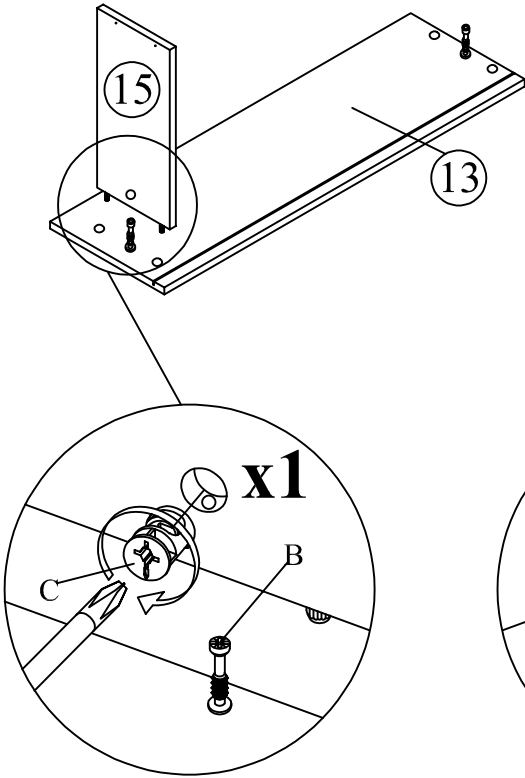


This is how a mini fix works...

 The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

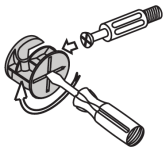


 Step 18.2

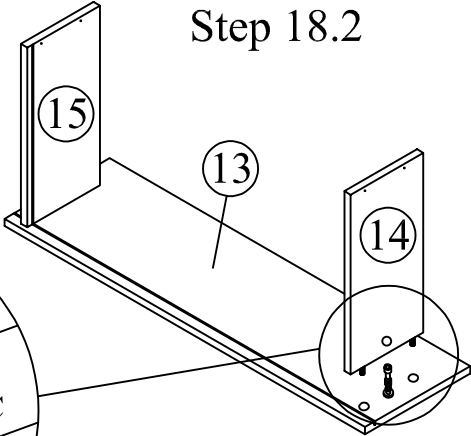


Step 19


 
Step 19.1

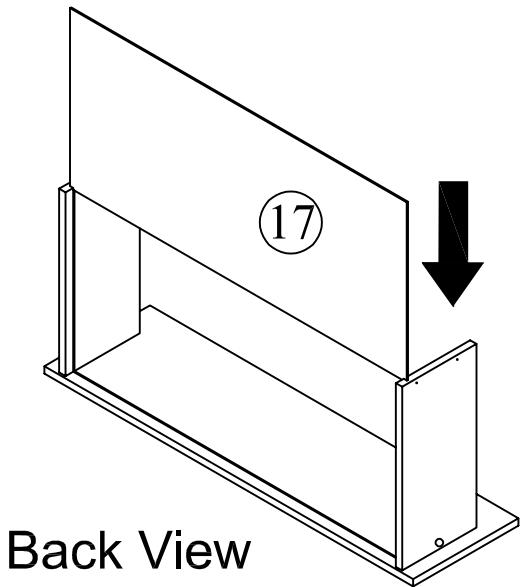

 
Step 19.2

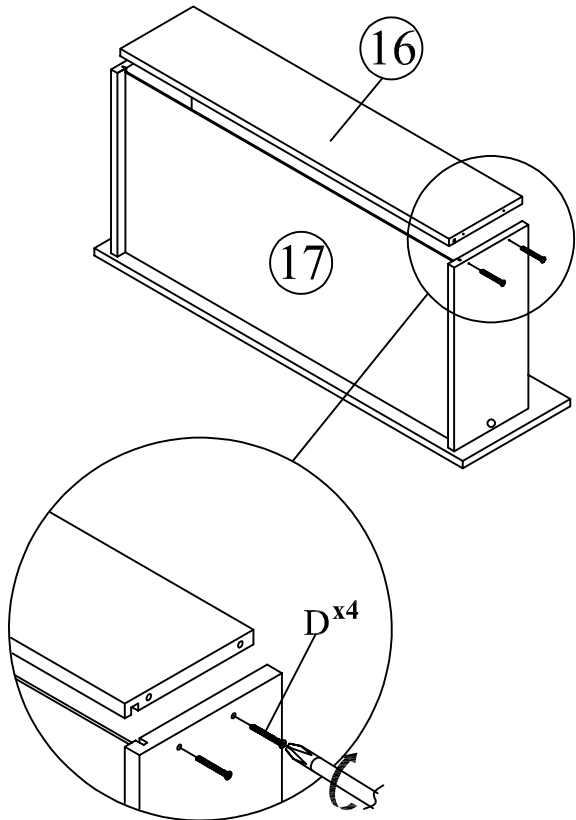

  
Step 20

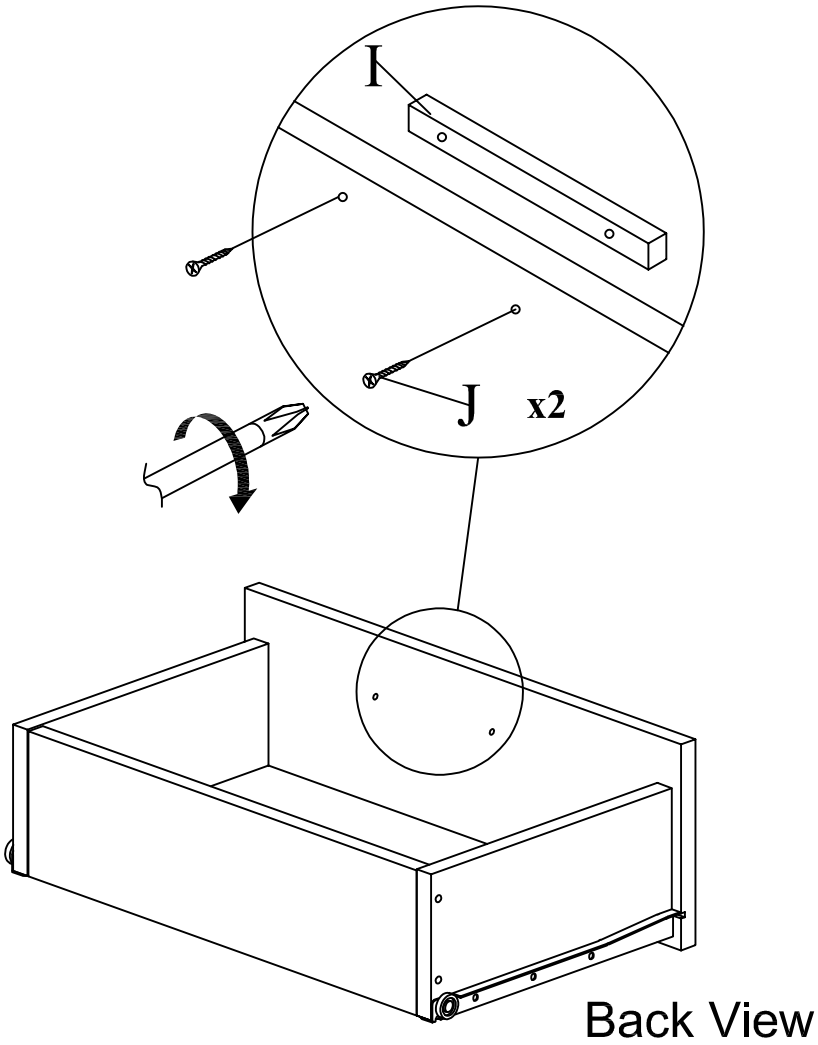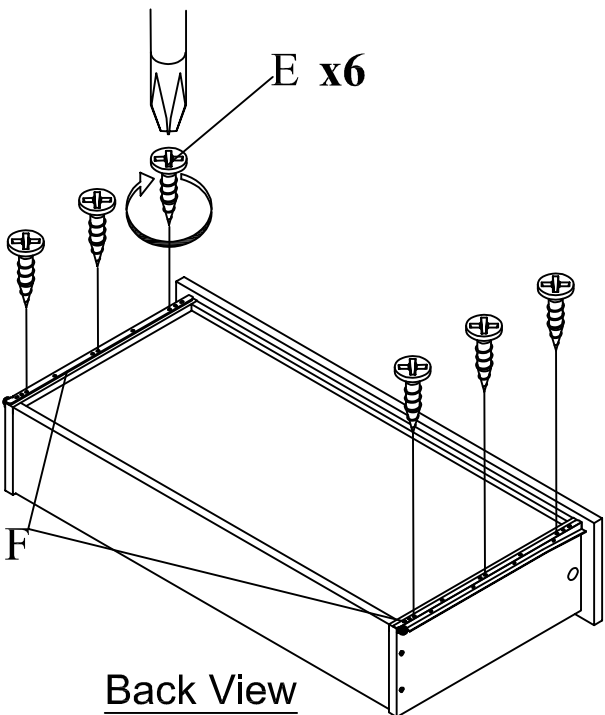

 Step 21

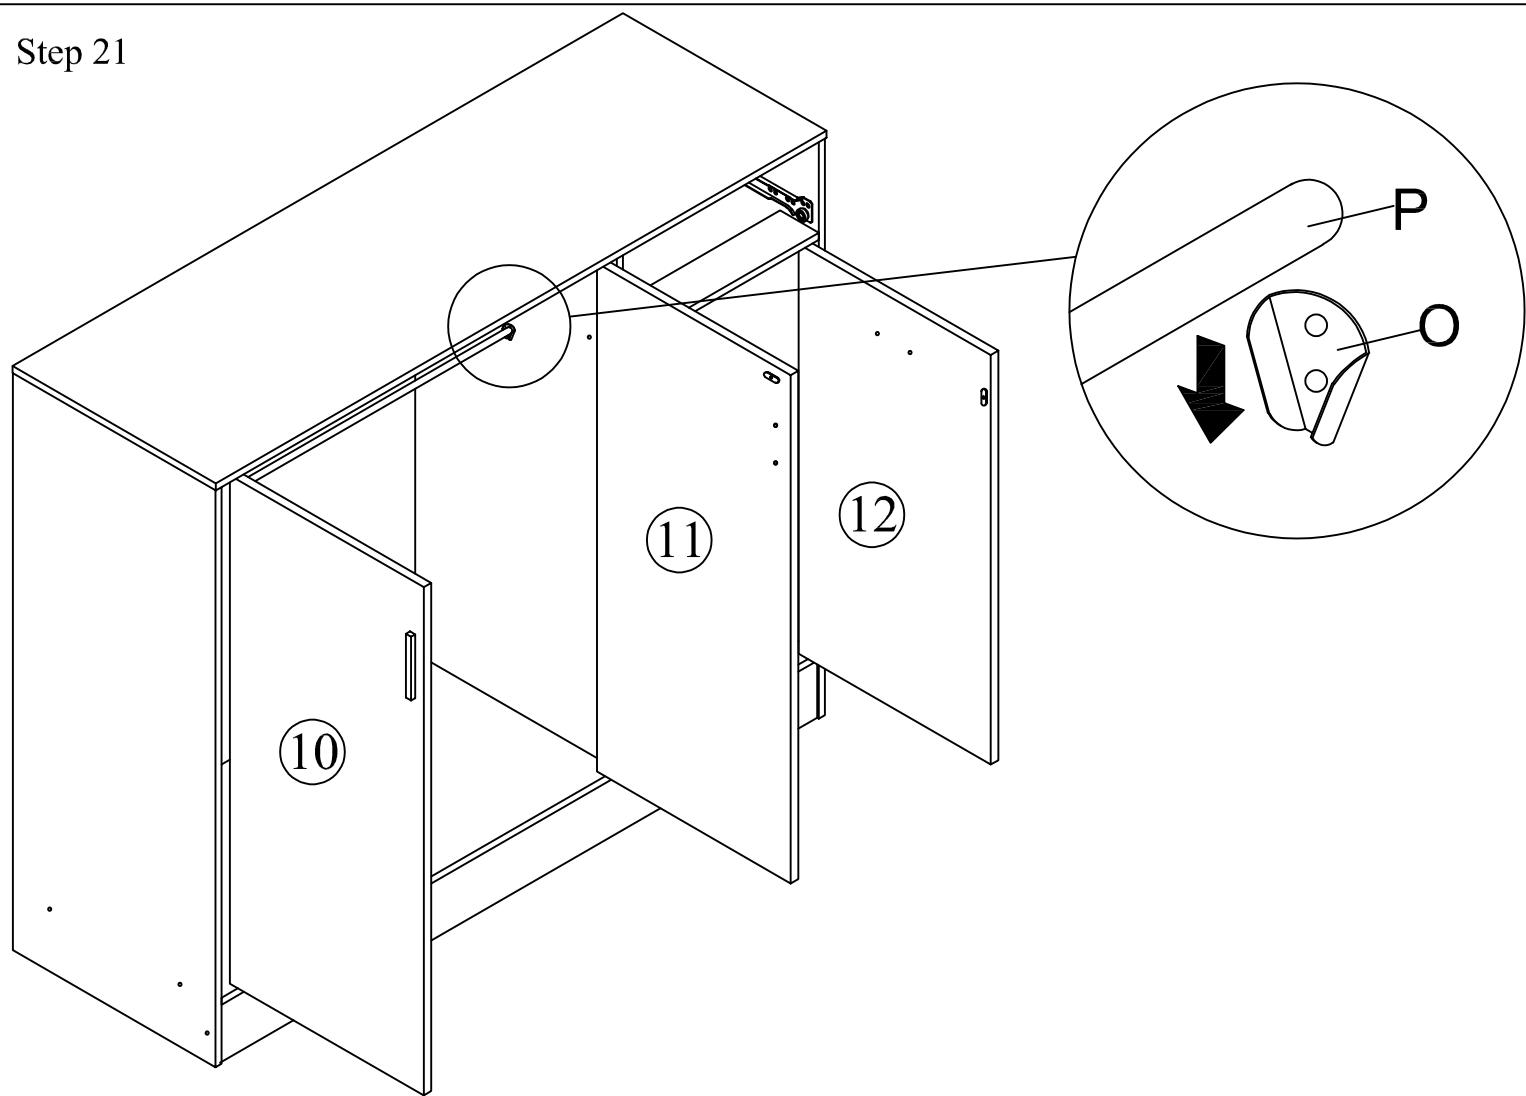

 Step 22

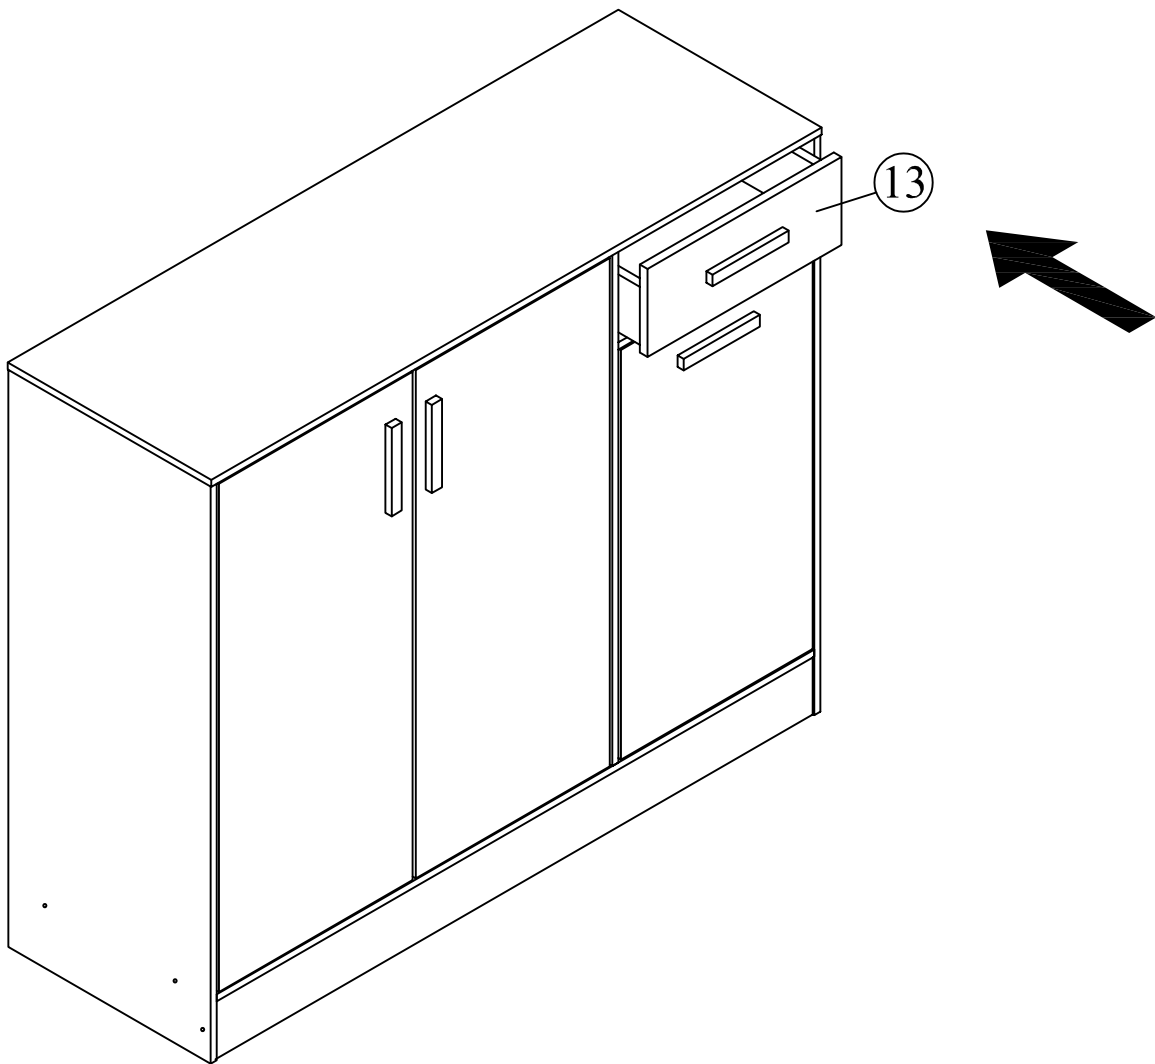


Anti - Tipping

(A)



CSK Screw
M3.5x16mm
1PC

 (B)



CSK Screw
M4x50mm
1PC

 
 
(C)





L BRACKET
2PCS





CABLE TIE
1PC

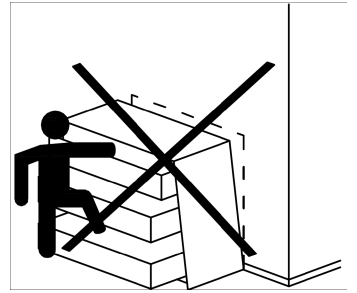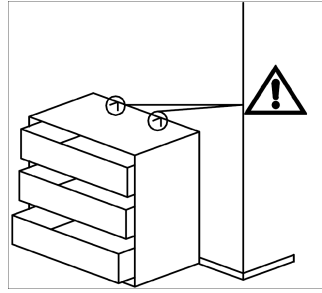



BACK VIEW

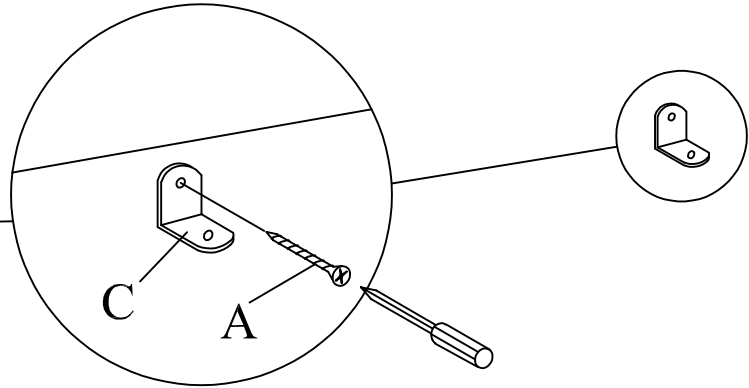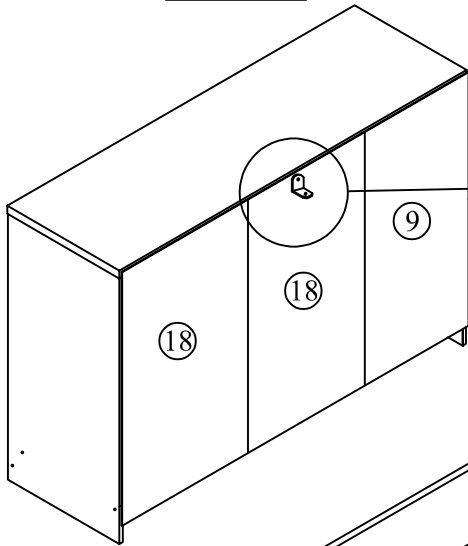  

WALL

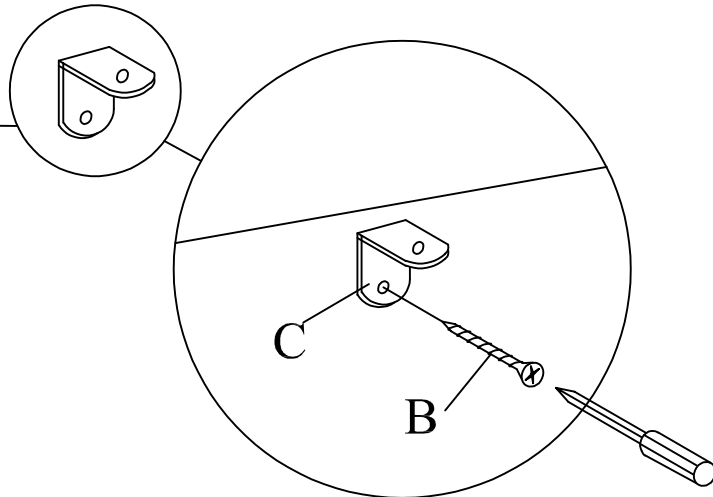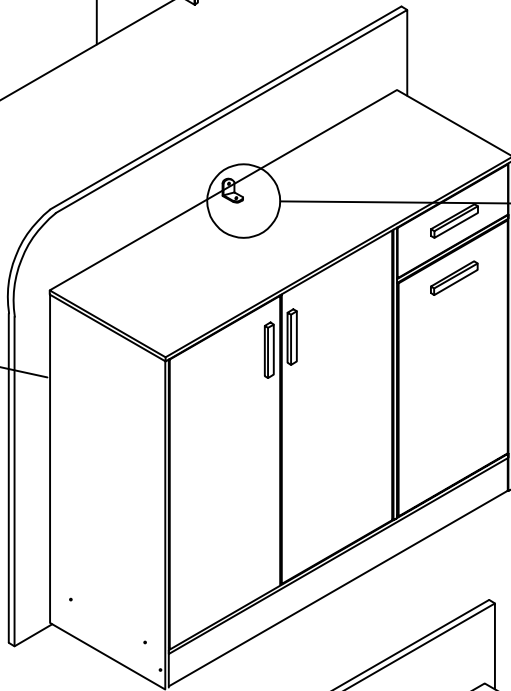  

WALL

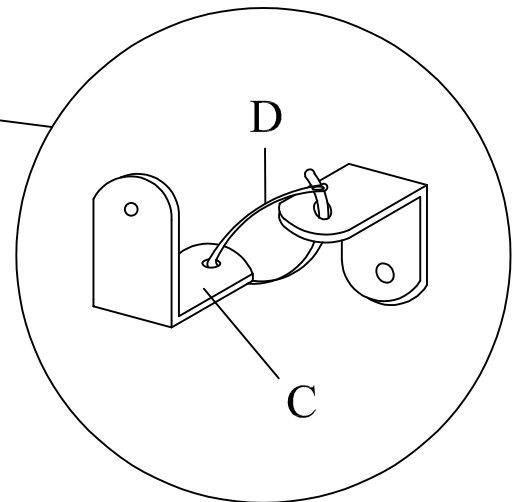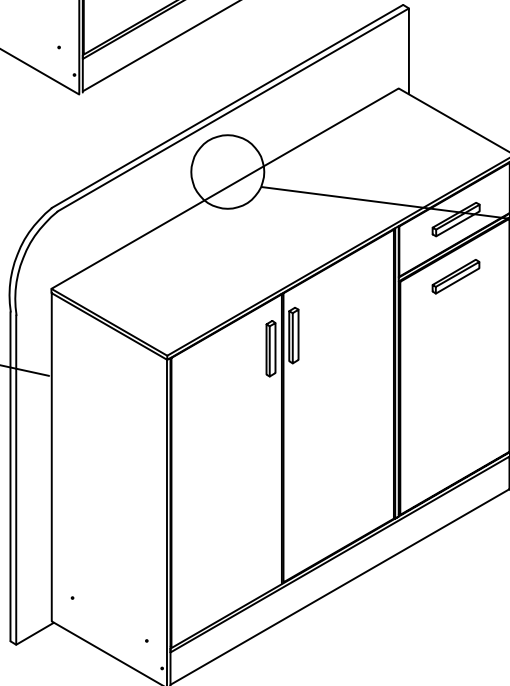  

RETURN / DAMAGE CLAIM INSTRUCTIONS

1. **DO NOT** discard of the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

2. Take a photo of the box markings.

A photo of the markings (text) on the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

3. Take a photo / Video of Damage (if applicable).

A photo /Video of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

4. Send us an email with the images requested.

Email us directly with the attached images, order number (SOXXXX) and a description of your claim.

Auckland / Waikato / BOP Branch: sales@tsbliving.co.nz

Christchurch Branch: customersupport@tsbliving.co.nz

Wellington Branch: wellington@tsbliving.co.nz