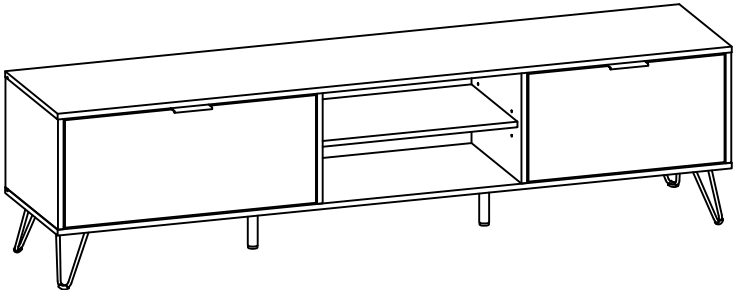 



ASSEMBLY INSTRUCTIONS

MODEL: ZINNIA TV STAND

















PART LIST		
NO	DESCRIPTION	QTY
1	Back Panel	1pc
2	Side Panel (L)	1pc
3	Side Panel (R)	1pc
4	Center Panel (L)	1pc
5	Center Panel (R)	1pc
6	Short Door	1pc
7	Long Door	1pc
8	Shelf Panel	2pcs
9	Top Panel	1pc
10	Bottom Panel	1pc



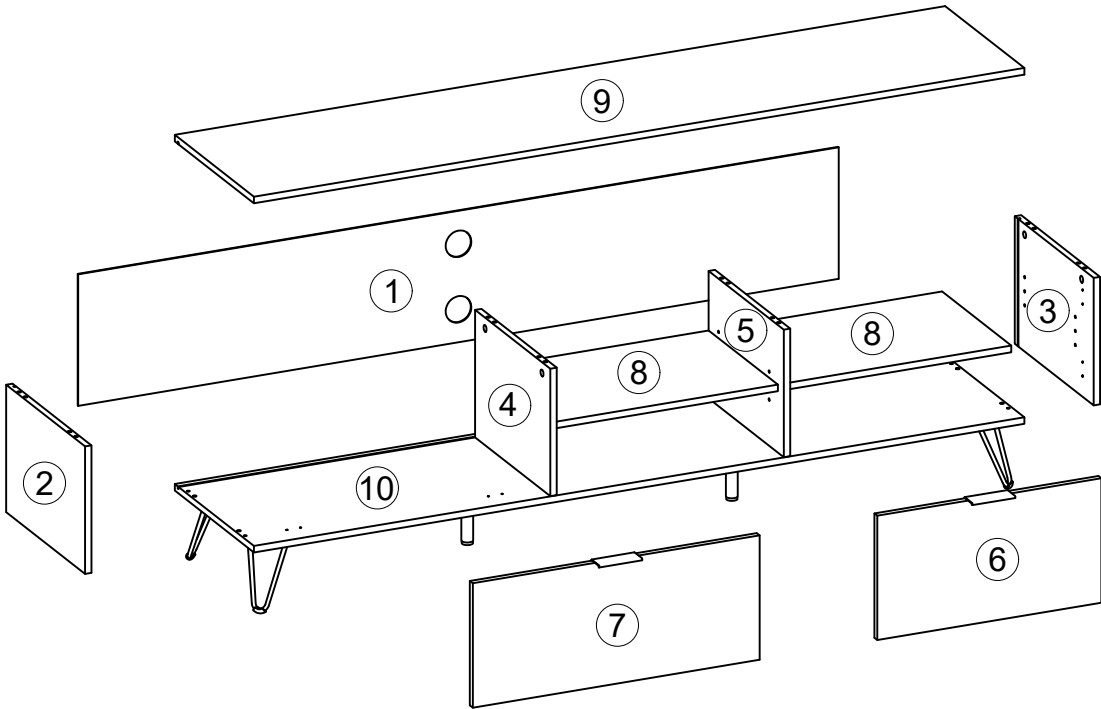 
ASSEMBLY COMPLETE




HARDWARE LIST

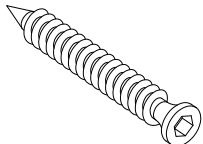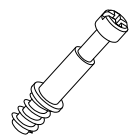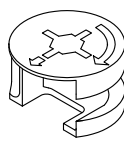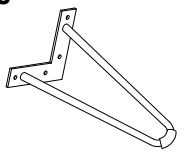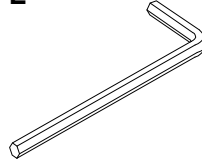                A 	B 	C 	D 
CSK Cap Screw M6x50 8pcs	Wood Dowel M8 x 25 16pcs	CSK M4 x 16 24pcs	Center Leg 2pcs
E 	F 	G 	H 
Quick Fix Bolt 8pcs	Quick Housing Ø15x12 8pcs	Handle 2pcs	CSK M3.5 x 16 28pcs
I 	J 	K 	L 
CSK M3 x 20 8pcs	Leg 4pcs	Hinges 7/8 4set (Soft)	Allen Key M4 1pc
M 	N 	O 	P 
Back Ply Stopper 8pcs	Cap Cover 8pcs	2 Pin Stopper 2pcs	Shelf Support Pin 8pcs
Q 	  		
Q1=1pc	Gas Spring 1 Set		
Q2=1pc	Q3=1pc	Q4=5pc	

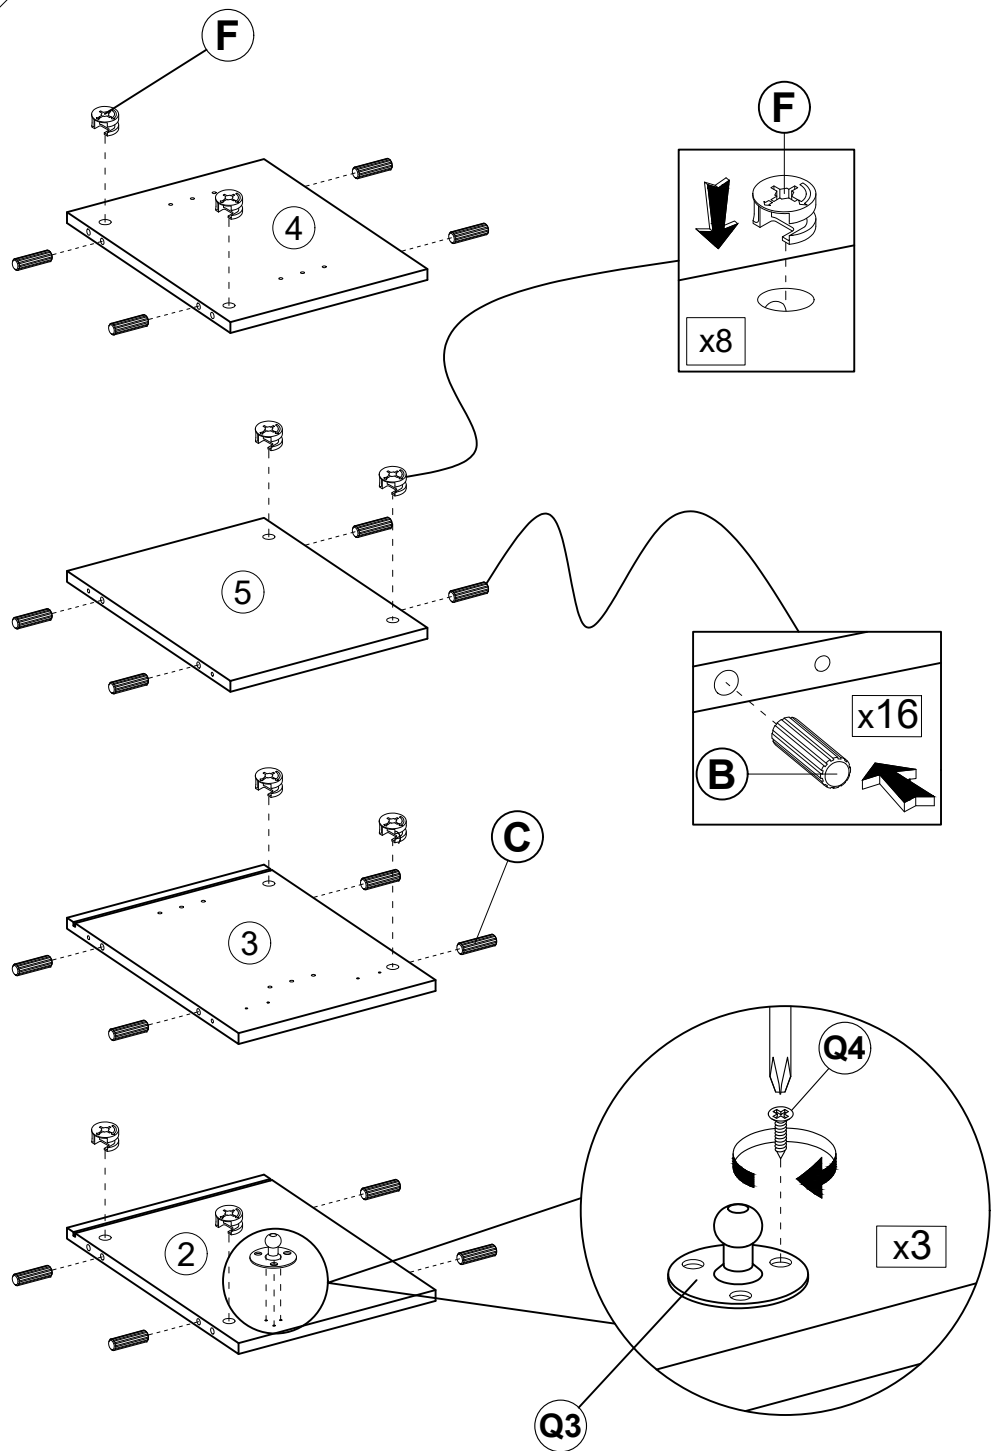 
1



2

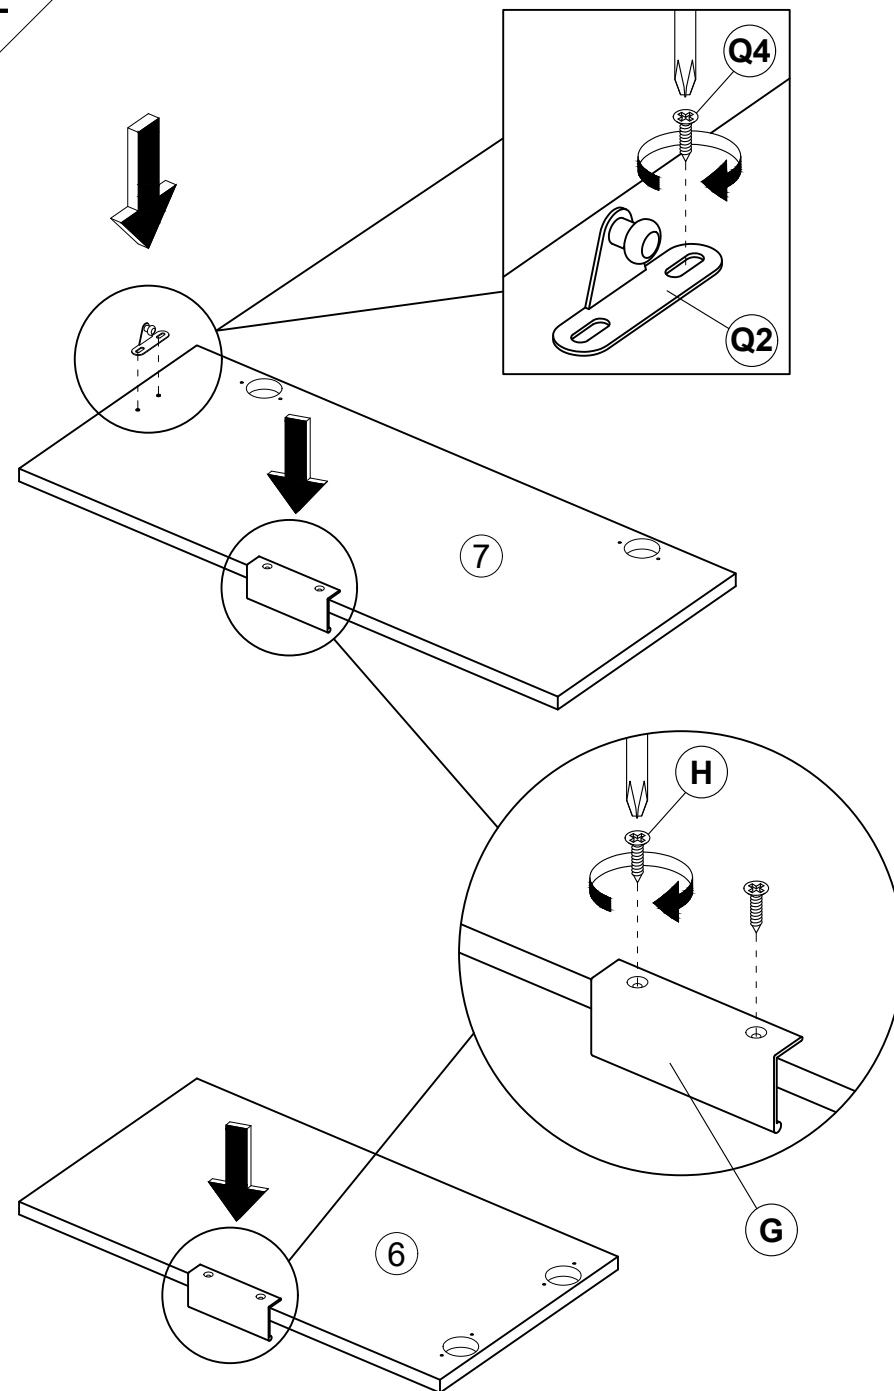 

3

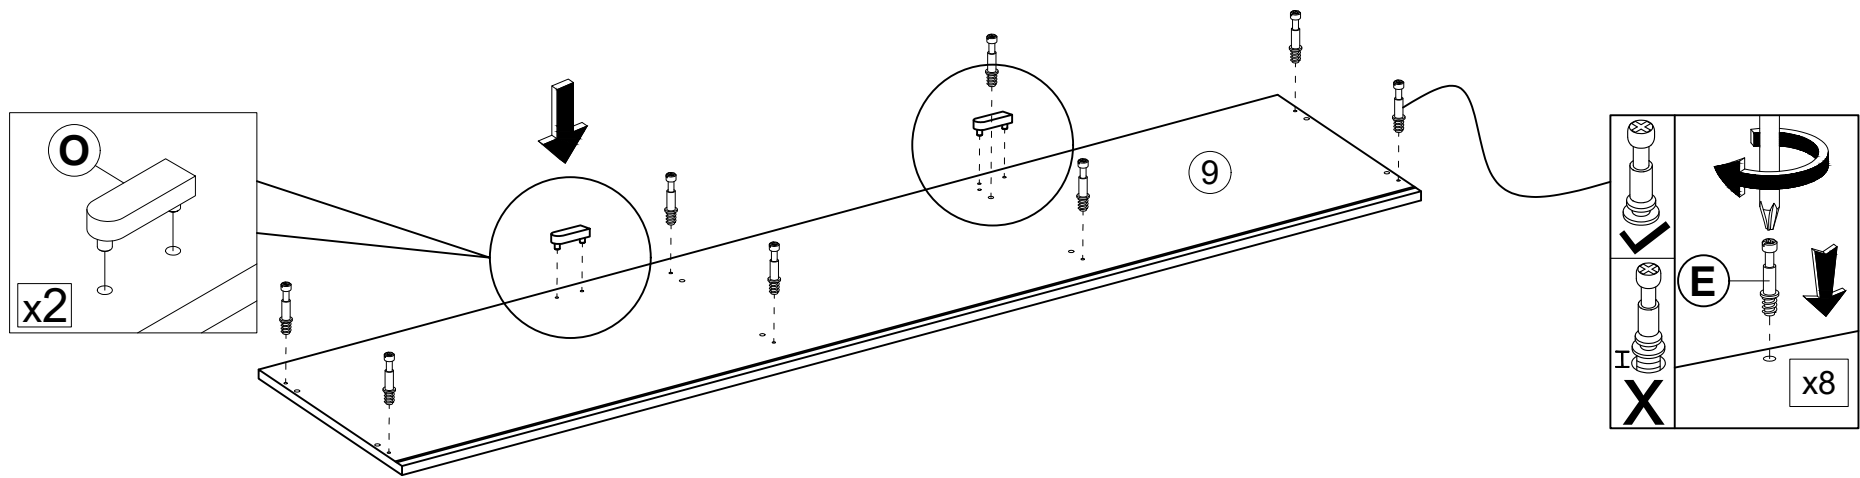 

4

