 
 



2406878、2406879  
ASSEMBLY INSTRUCTION  
《Before assembling,read all the instruction》

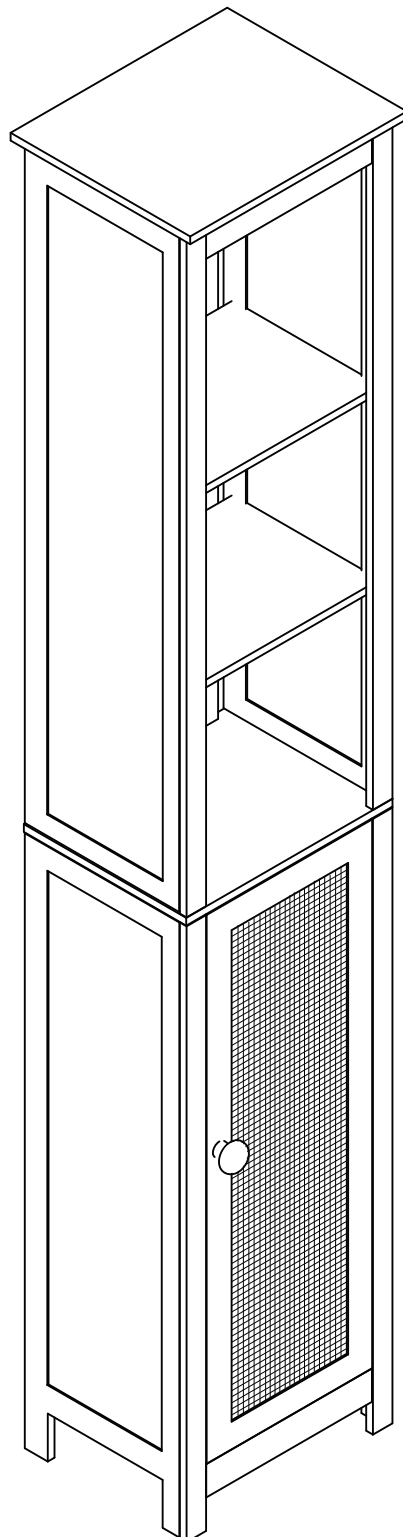


2 Person

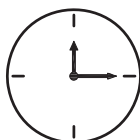

  30 MIN

 







 
 




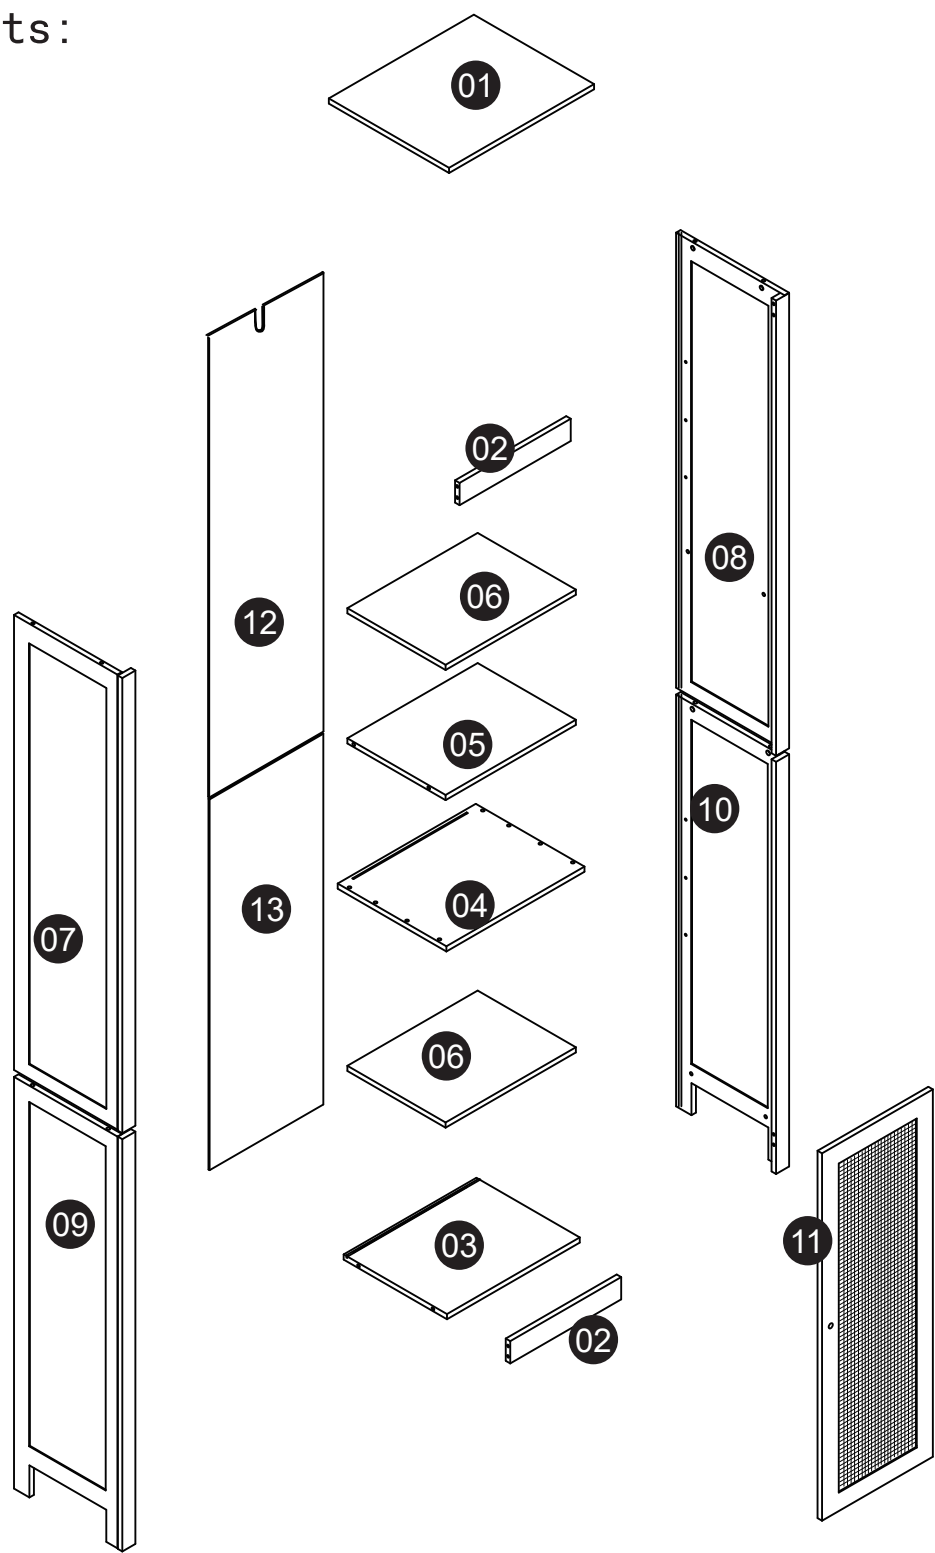




SLOTTED SCREWDRIVER(Not Provided)




POZI SCREWDRIVER(Not Provided)

Components:




A	x 16	B	x 16	C	x 8	D	x 4	E	x 9	F	x 2
											
				6X30mm		8X50mm		3X12mm			
G	x 1	H	x 1	I	x 1	J	x 1	K	x 5	L	x 8
											
M	x 1	N	x 1	O	x 1	P	x 2				
											
						3X14mm					


# Step1

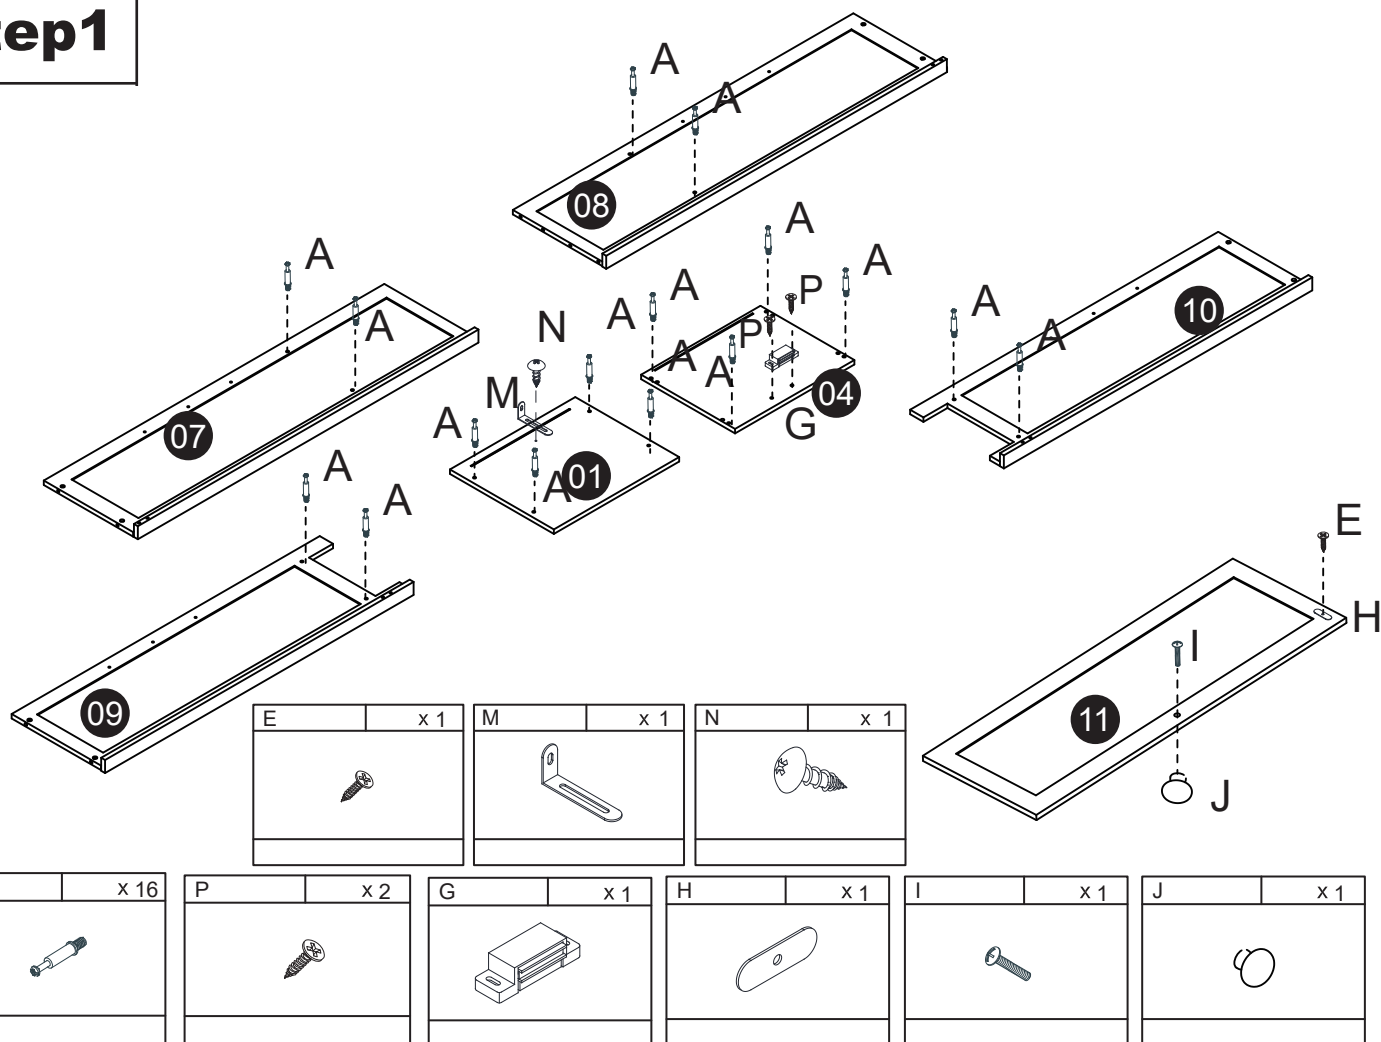 


# Step2


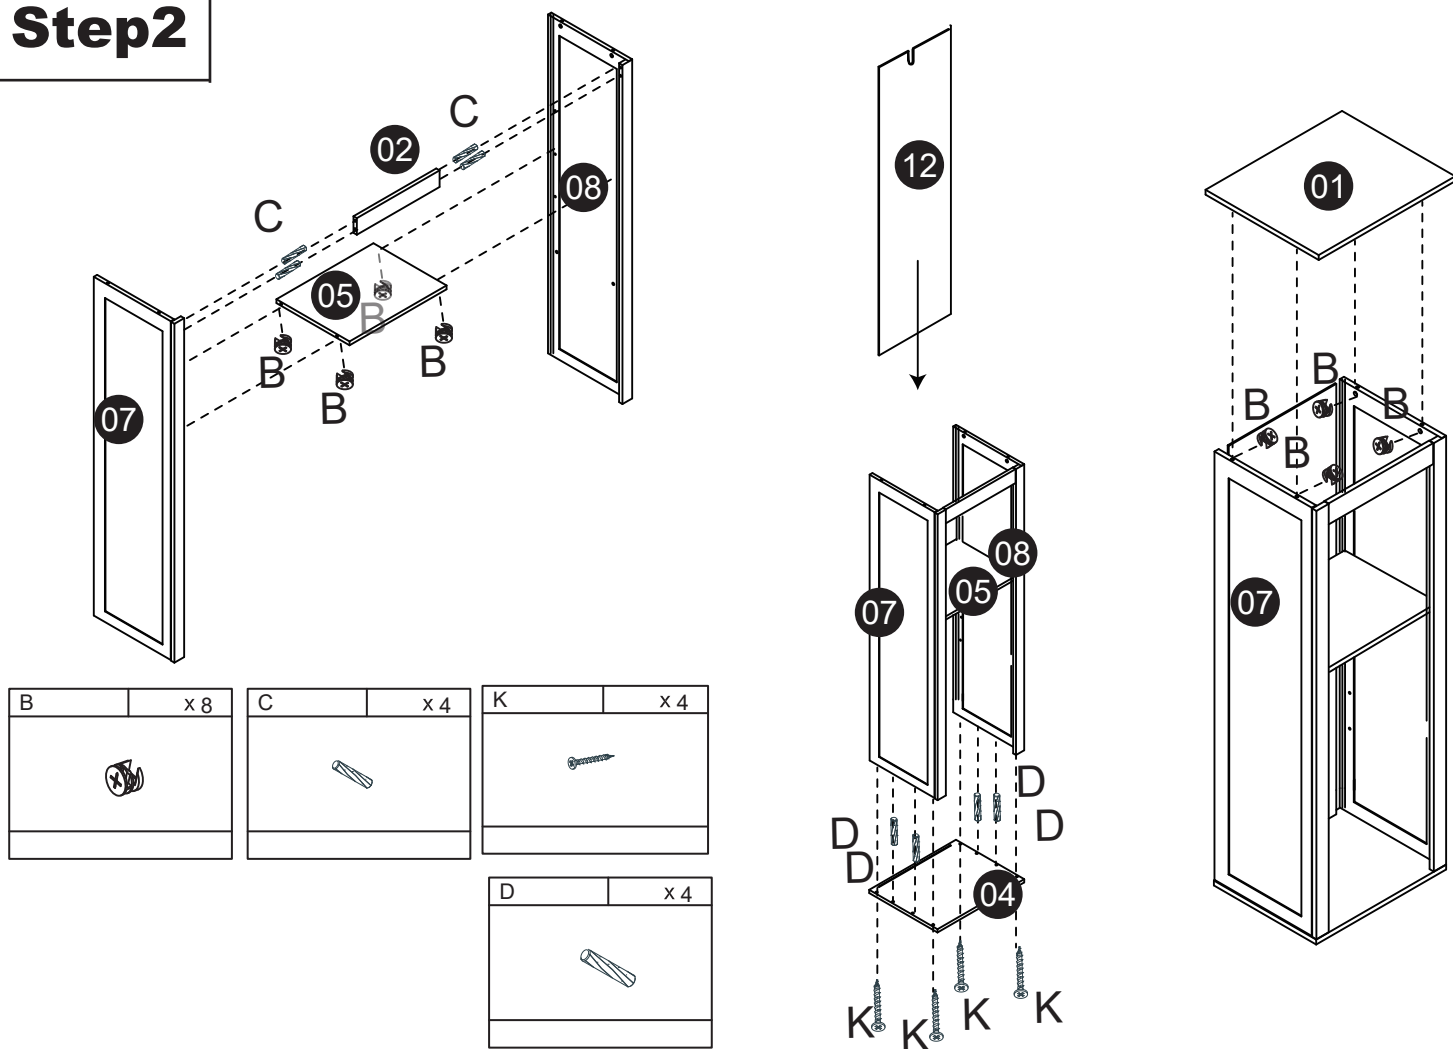 


 Step3

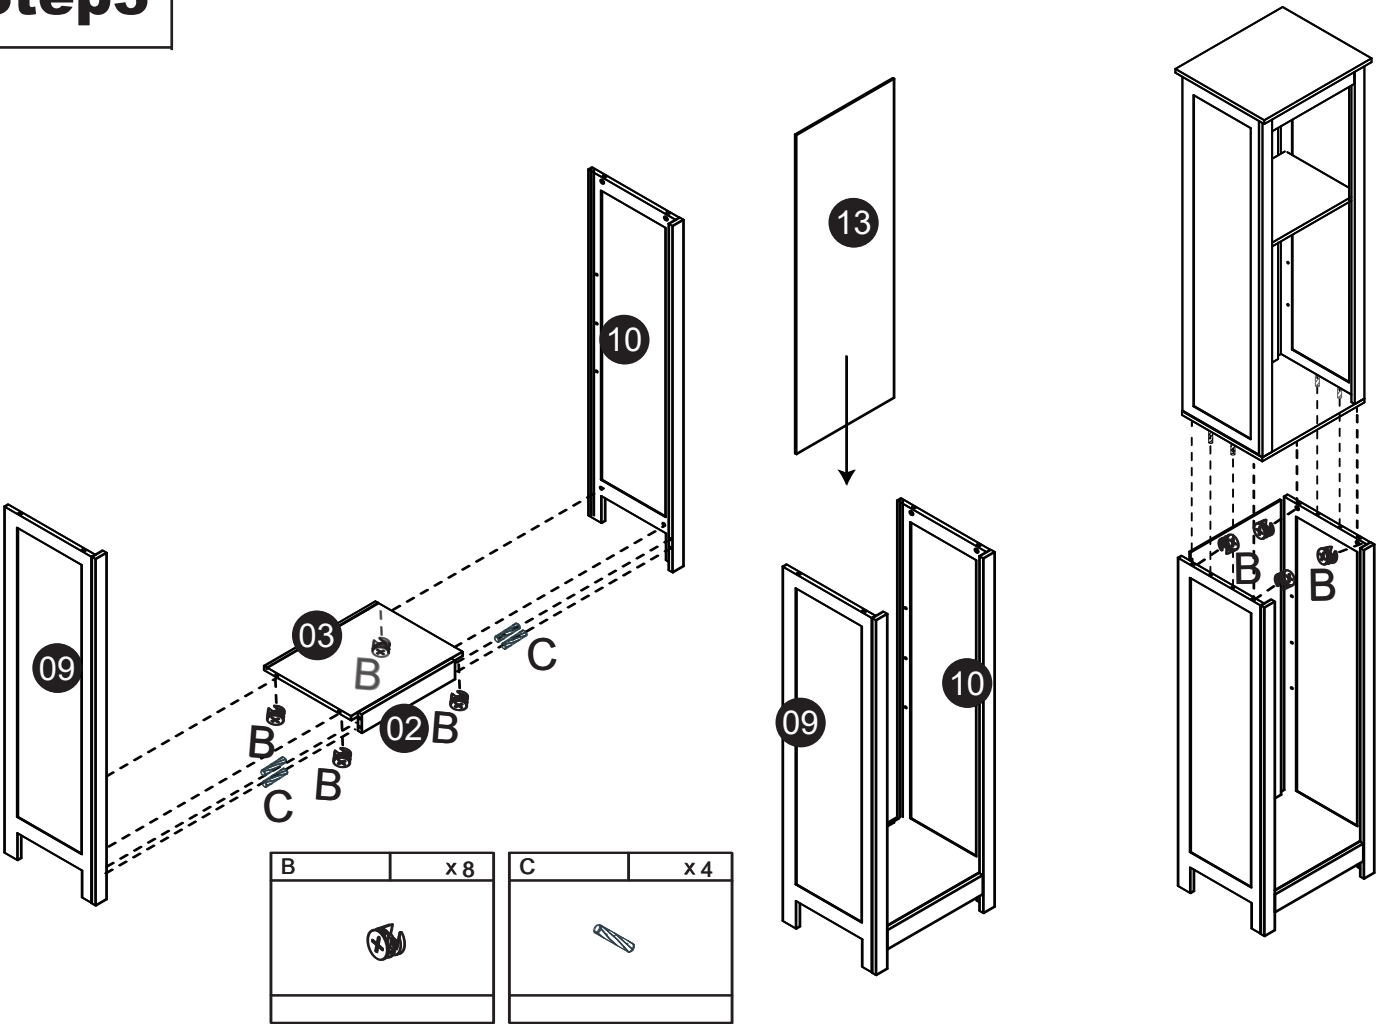

   Step4

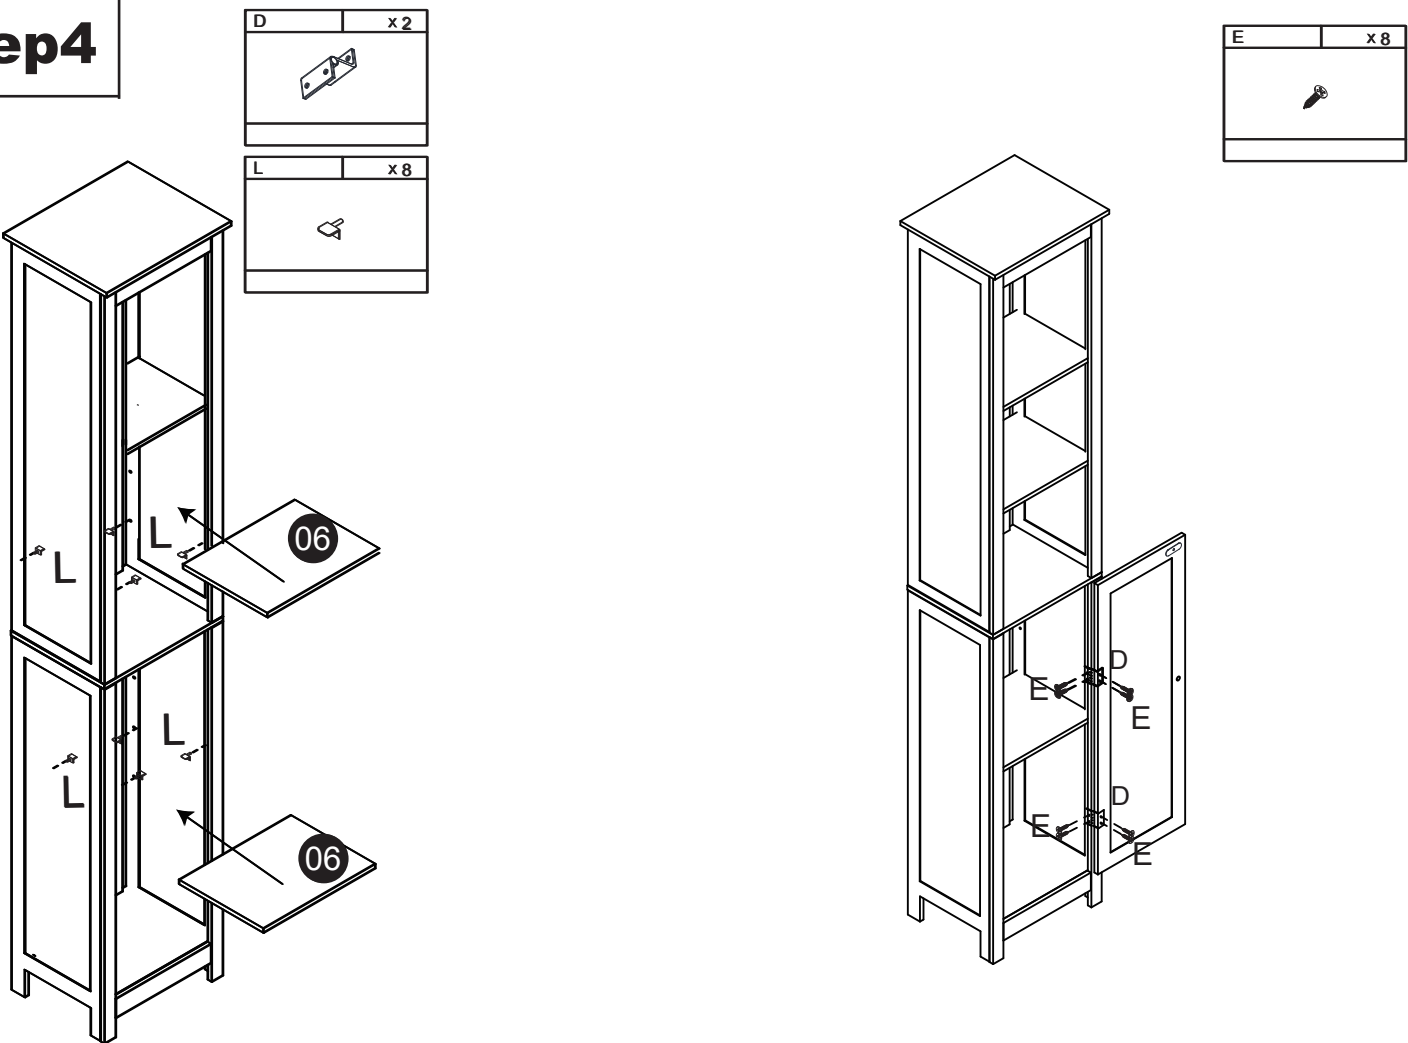

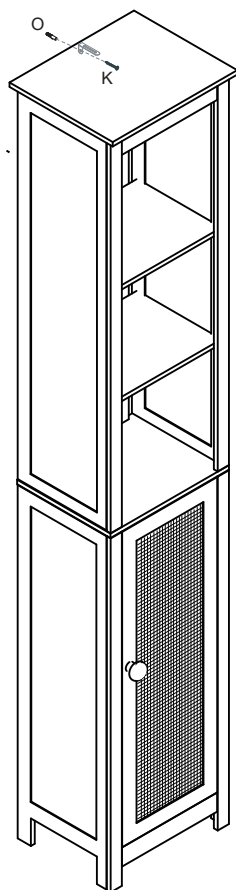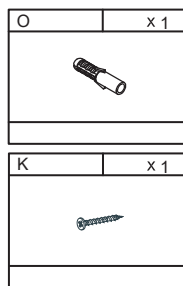

## SAFETY NOTICE

### PREVENT FURNITURE TIP OVER ACCIDENTS

Free Standing Furniture above 600mm in height must be securely attached to the wall to prevent it from tipping over and causing injury.

Please Use the anti-tip restraint provided

One end of this restraint must be secured to the cabinet with the screw(s) provided in the fittings pack.

The other end of the restraint must be attached to the wall with hardware appropriate for that wall type.

Never put a TV or other heavy objects on top of a chest of drawers or any furniture not intended for use with a TV.

Place heavy objects in the lowest drawers or shelves

Never let children climb or hang on drawers, doors or shelves