 
 
 


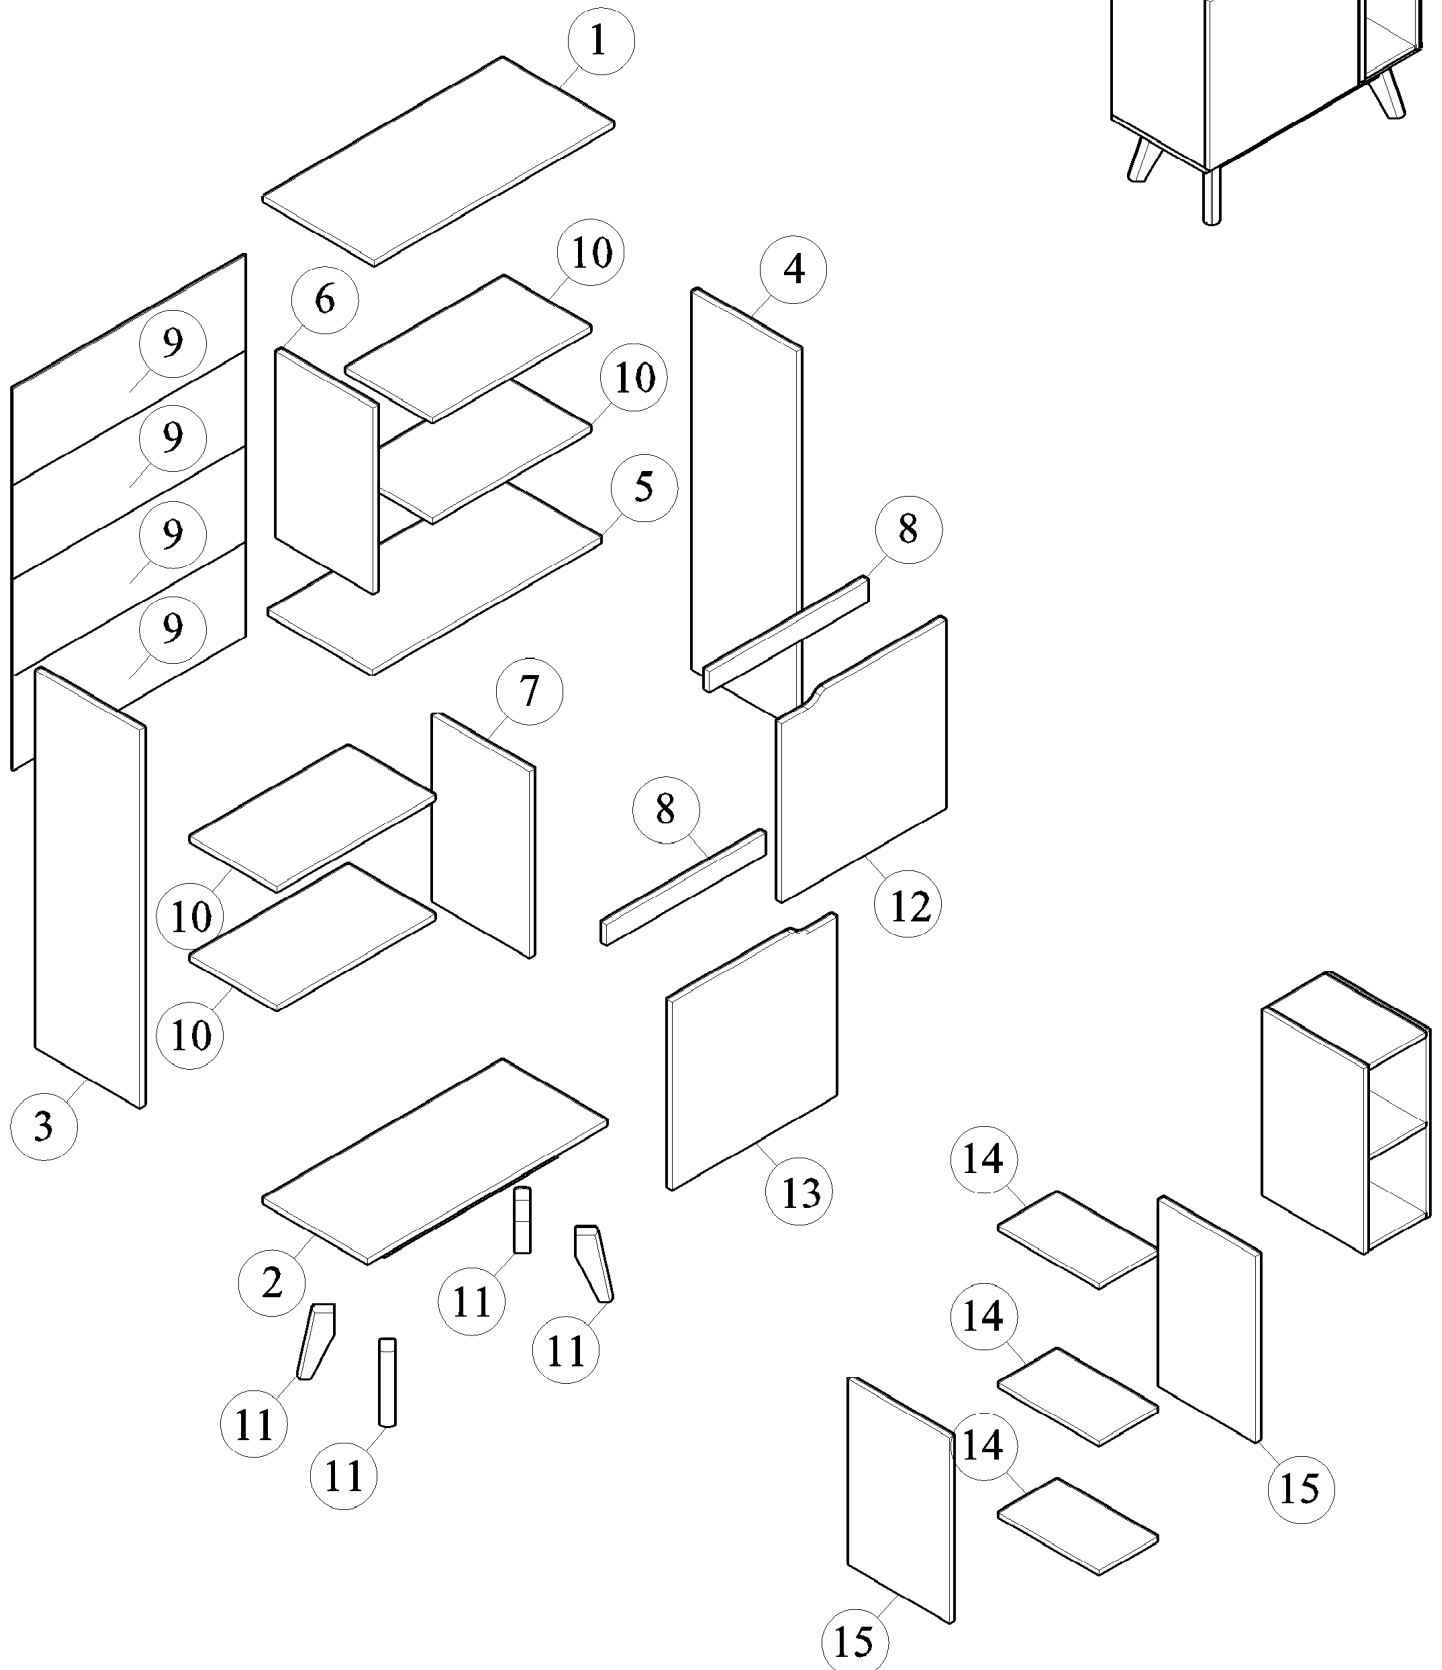

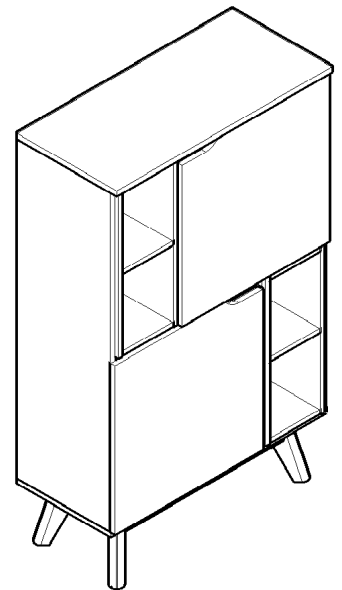




 
 




ASSEMBLY INSTRUCTIONS

FL SC 00081221-MP




ASSEMBLY INSTRUCTION MODEL: FL SC 0081221-MP


A	B	C	D	E	F
 20X WOOD DOWEL M8X30	 16X IRON SHELF SUPPORT	 6X MINIFIX M5X24	 6X CASING	 6X CAPWOOD M6X50	 8X SCREW M7X50
					 4X STUB
					 4X SCREW M3X20(SV)

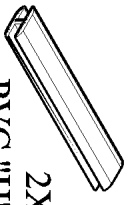  G	H	I	J	K
 32X WOOD DOWEL M6X30	 4X HINGES 5/8"	 24X SCREW M3.5X16	 4X WHITE PIN LEG	 1X ALLEN KEY
				 2X PVC "H" RAIL

 
1.

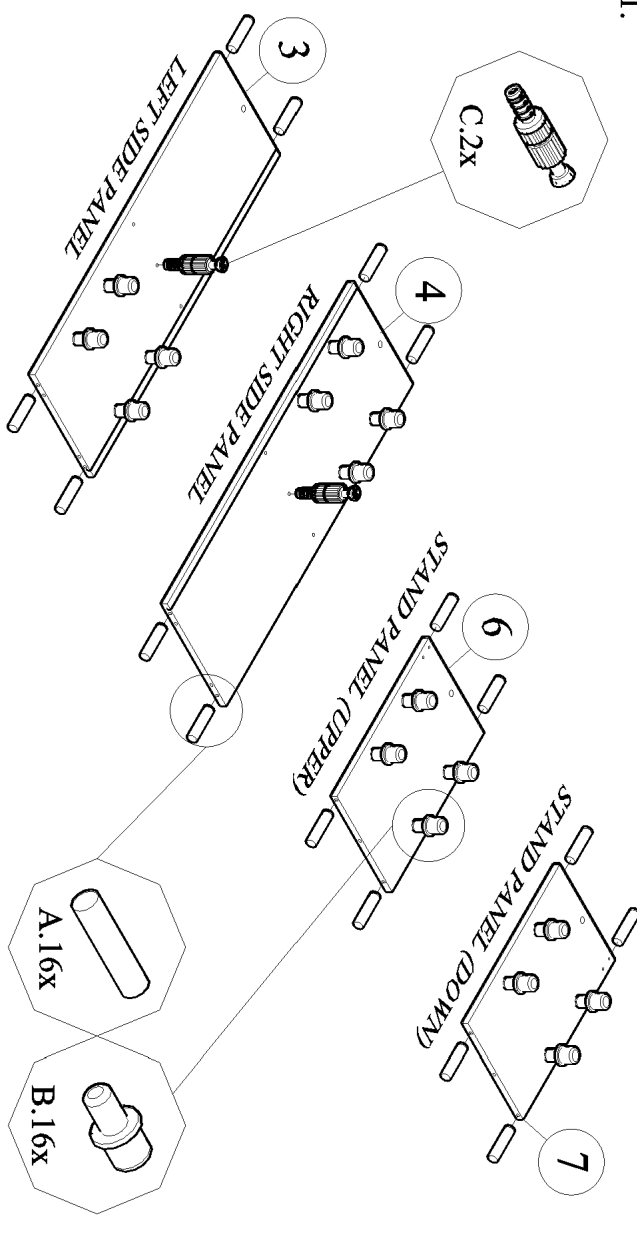

 
2.

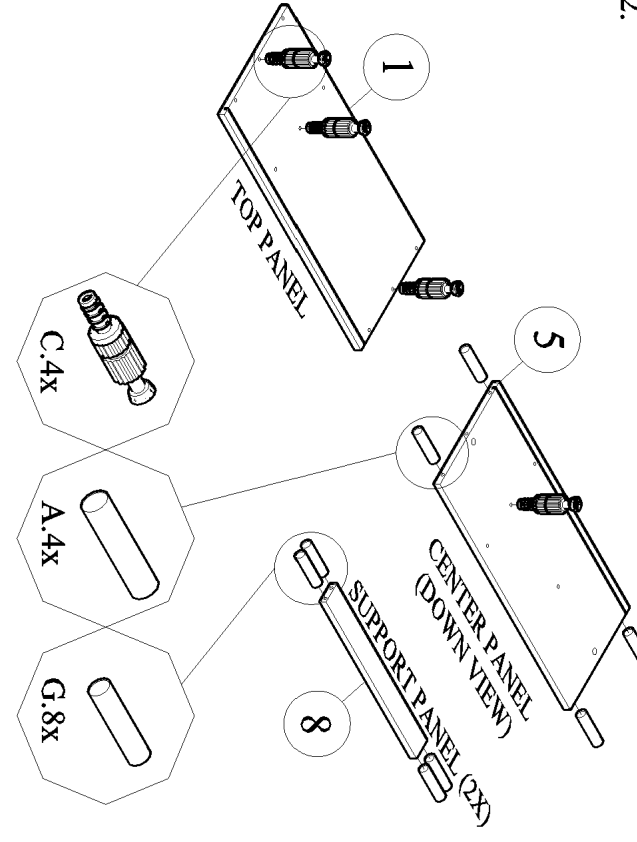

 
3.

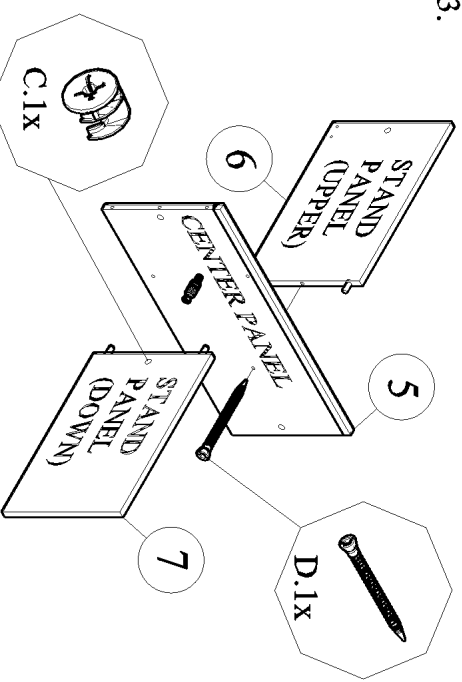


 4.

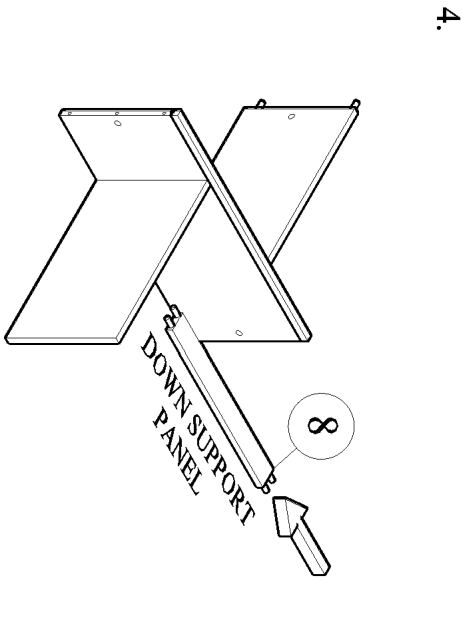


  5.

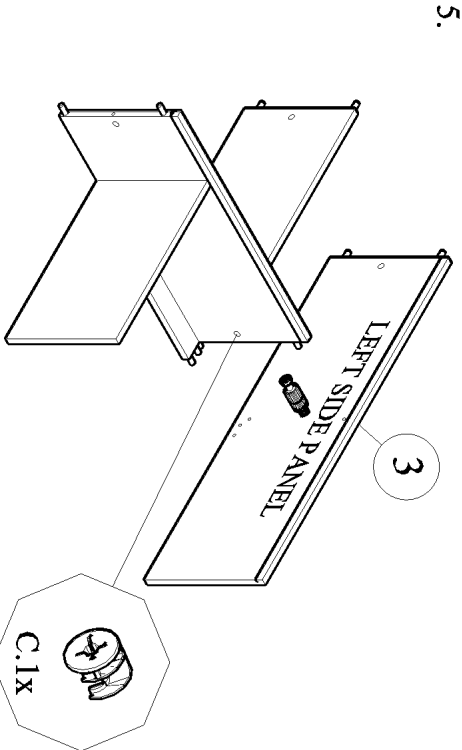


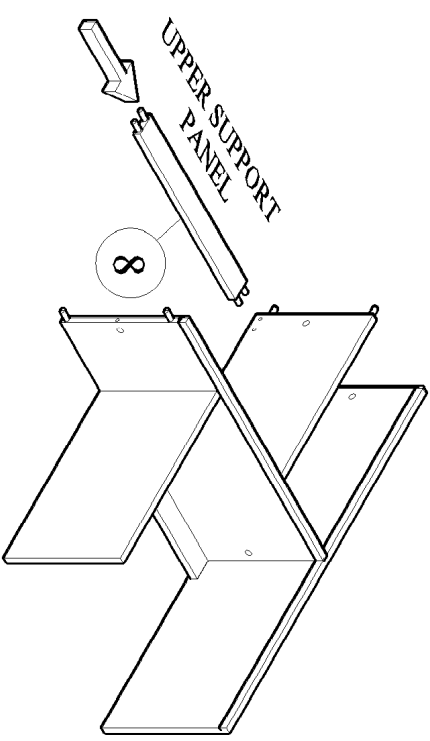

 
6.

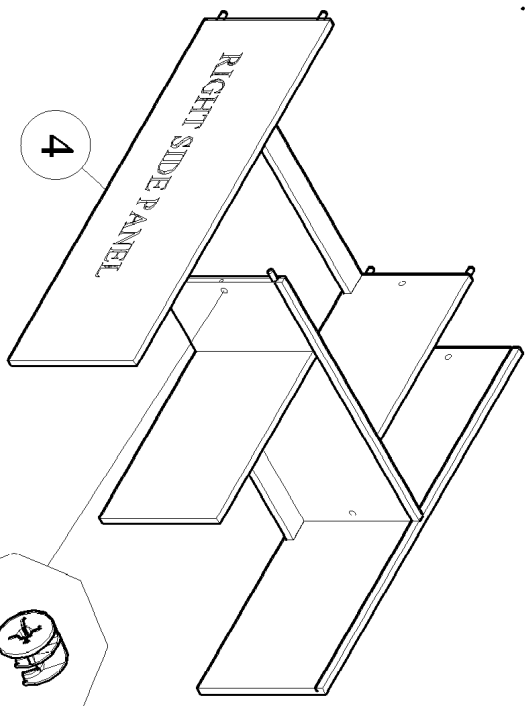

 
7.

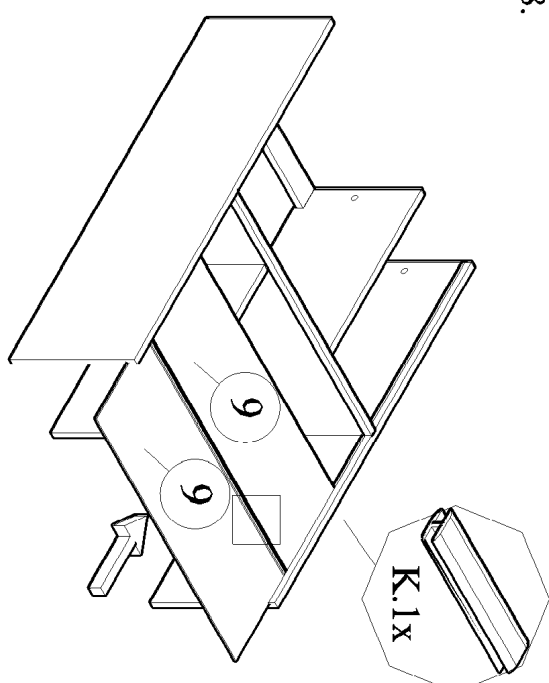

 
8.

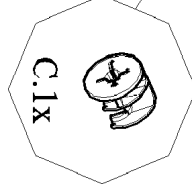


 
9.

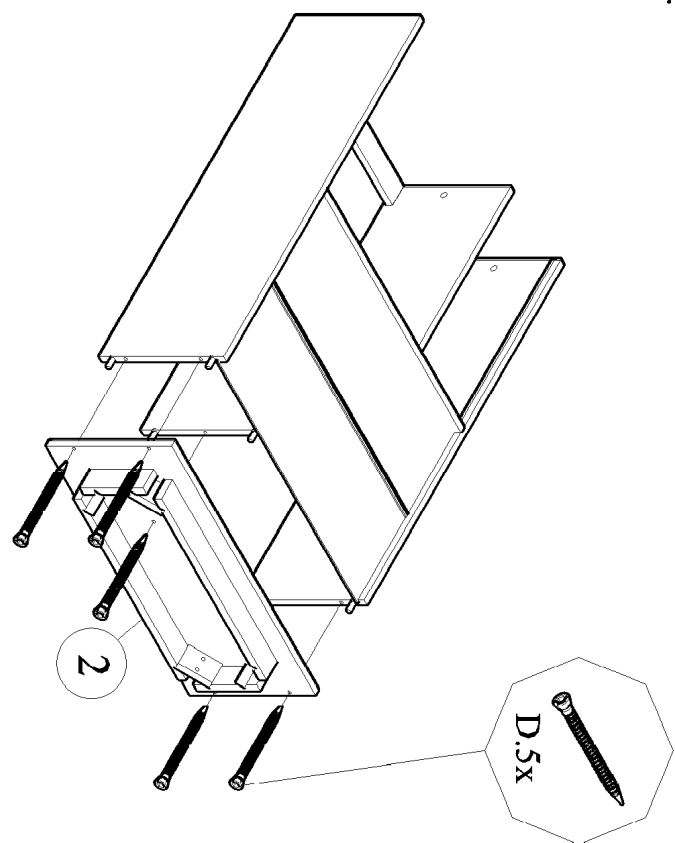

 
10.

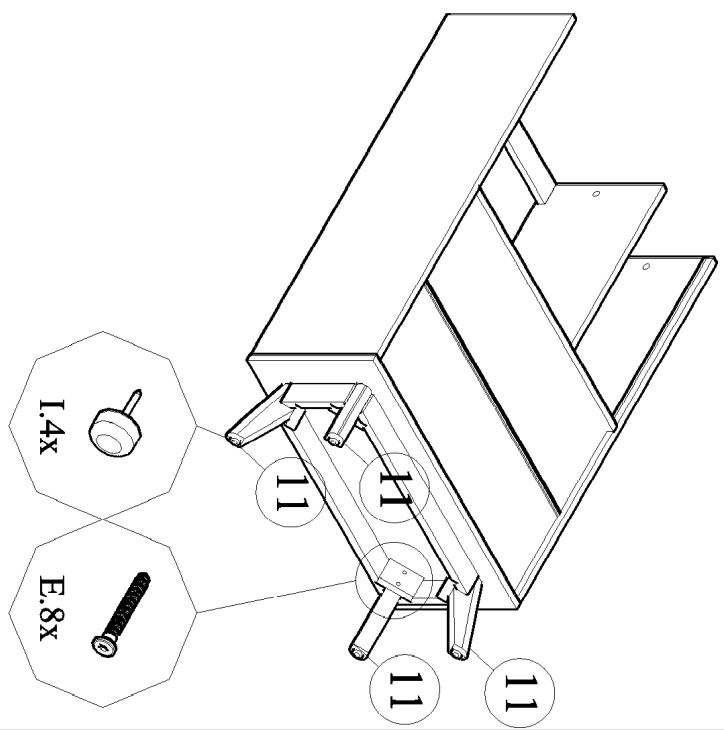

  
11.

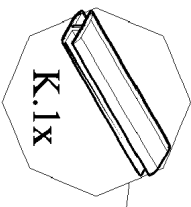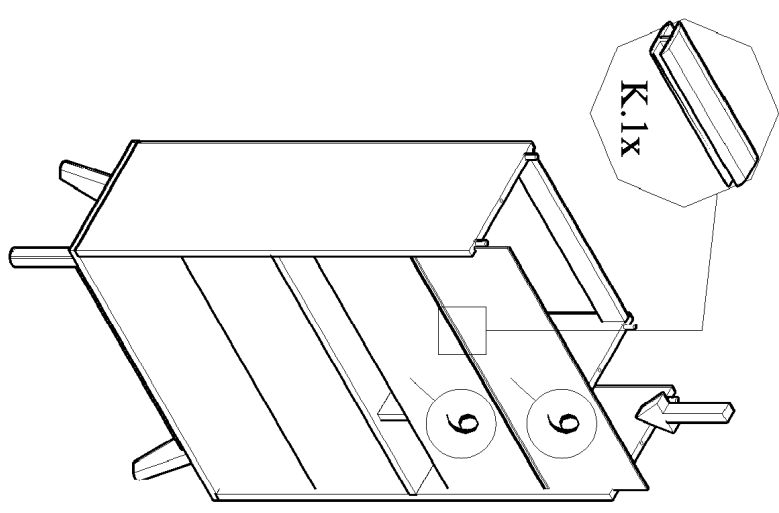

 
12.

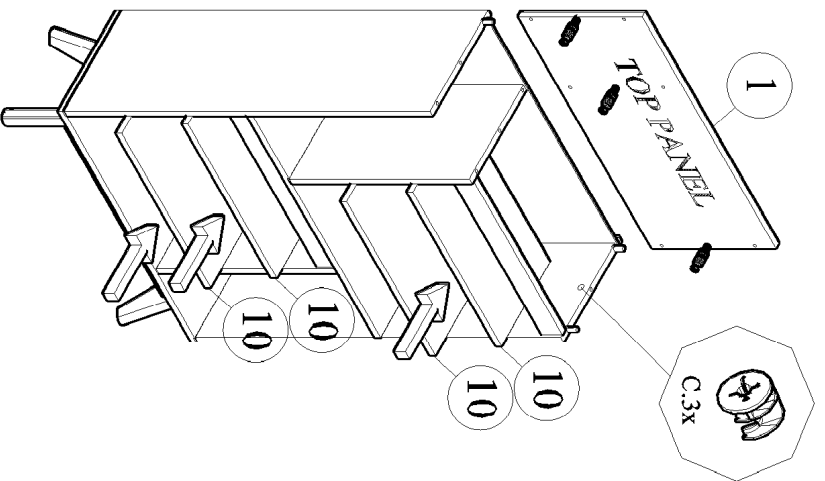

 
13.

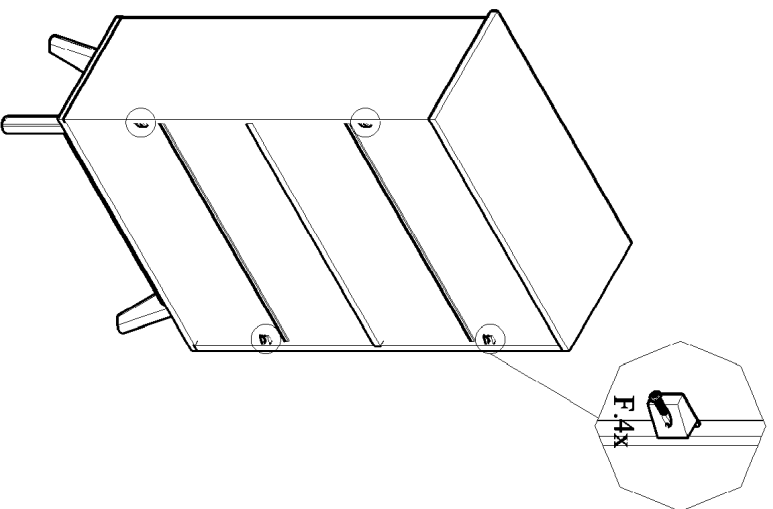

 
14.

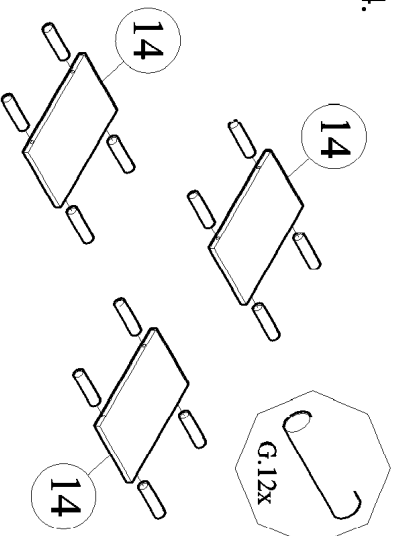

 
15.

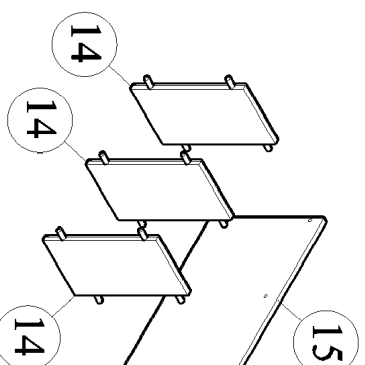

 
16.

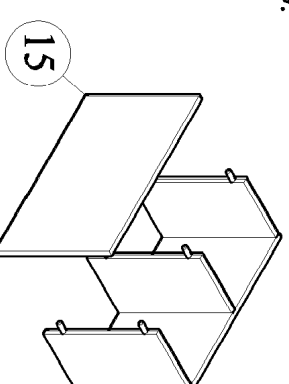

 
17.

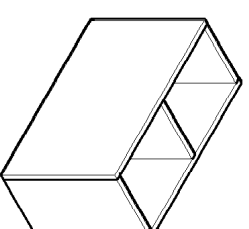

 
18.

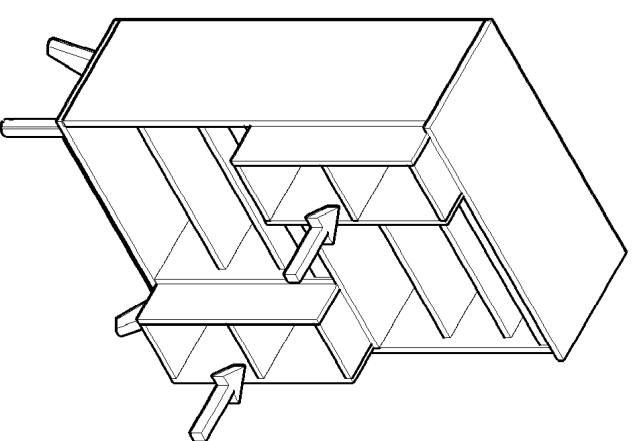

 
19.

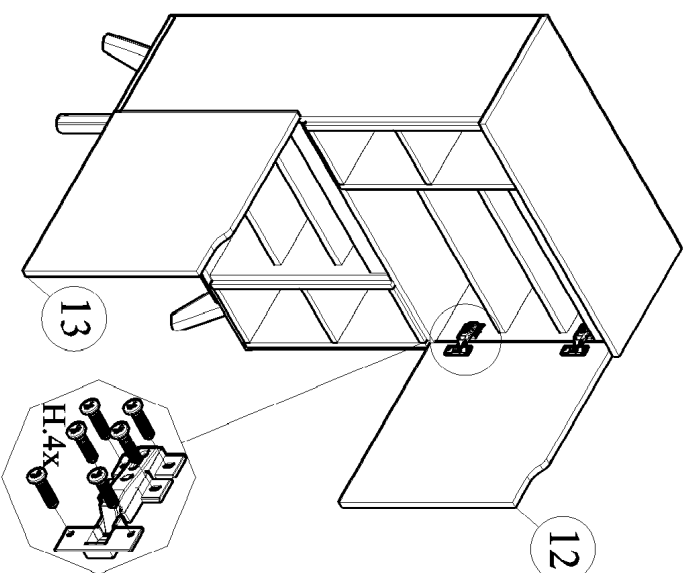

COMPLETE

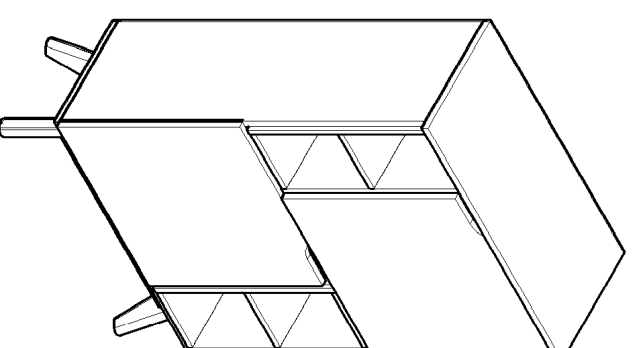 


BOX INSTALLATION (2X)

 


HOW TO ADJUST GLASS/DOORS

- There is a gap between the door and the shelf with doors closed

 Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

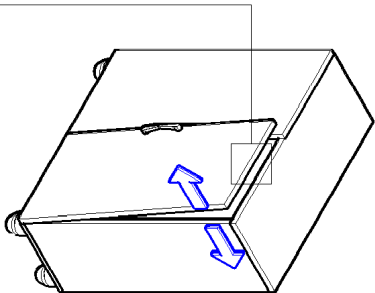

 
If there is a gap between the doors on the top.

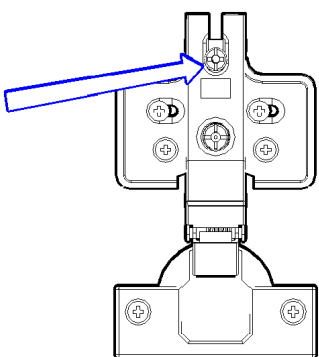


Loosen this screw, adjust by moving back and forth

- There is a gap in the middle with doors closed

 Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

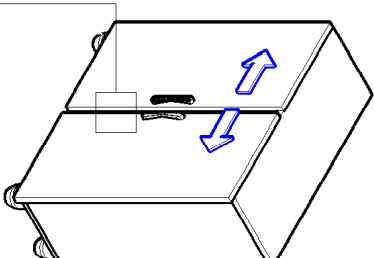

If the gap is wide

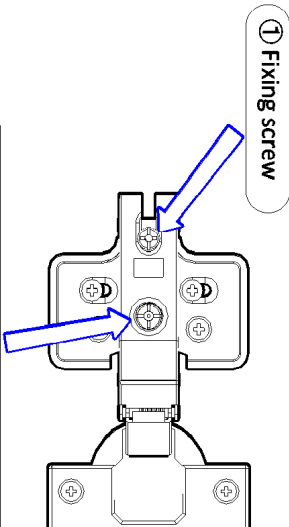 


① Fixing screw

② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)



- There is a V gap when doors are closed

Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

 If there is a gap between the doors on the top (Please adjust slide hinge the top part door)

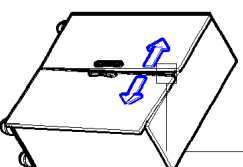

  If there is a gap between the doors on the bottom (Please adjust slide hinge the bottom part door)

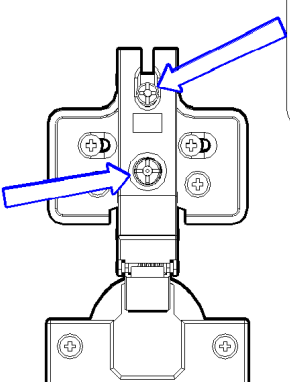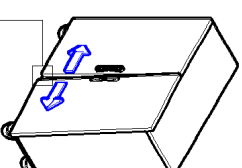


① Fixing screw

② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)


- There is a gap on the top of the door when doors are closed
(Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)

Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.

 (Please loosen the slide hinge screws of the door completely you are adjusting before moving it up and down.)

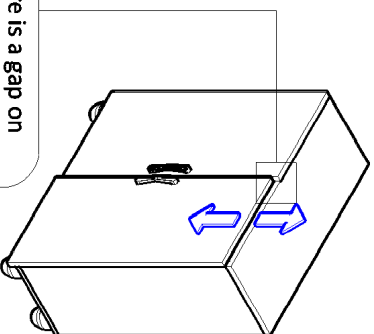

 If there is a gap on the top of the door

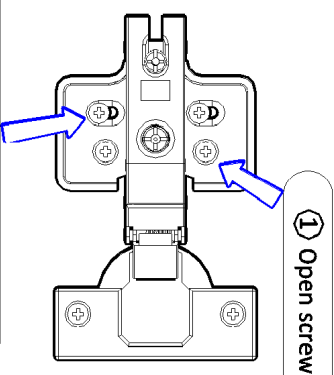

① Open screw

② Slide hinge screws (Please loosen these screws before adjusting)