Bestway®

bestwaycorp.com/support



OWNER'S MANUAL

58946

WARNINGS

- Keep these instructions in a safe place. If instructions are missing, please search for them on our website, **www.bestwaycorp.com**.
- ⊳⊏⊲ Detachable supply unit.
- The appliance is only to be used with the adapter (XVE024-1260180-6).
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- Disconnect the pump from the supply mains before carrying out user maintenance such as cleaning the filter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance contains batteries that are non-replaceable.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life, the whole luminaire must be replaced.

PRODUCT DESCRIPTIONS

Item Number:	58946
Charging Time:	DC 12.6V 3 - 4 Hours
Working Time:	Approximately 90 minutes
Minimum Filtration Accuracy:	45um
Waterproof Rating:	IPX8
Working Water Depth:	80 cm (31.5") - 2 m (78.7")
Debris Compartment:	2 L (0.53 gal.)
Compatible with above ground and in-ground pools Recommended pool sizes: Round - Up to 6.10 m (20') in diameter Rectangular - Up to 6.10 m (20') in width Oval - Up to 6.10 m (20') in width	

PARTS & TOOLS

Compare the parts in your box to the parts listed in the back of the manual. Verify that the equipment components represent the model that you had intended to purchase. If any parts are damaged or missing at the time of purchase, visit our website **bestwaycorp.com/support**.
Before assembling the product, take a few minutes to become familiar with all the parts.

SETUP INSTRUCTIONS

For installation instructions, follow the illustrations in the back of the manual. Drawings are for illustration purposes only. May not reflect actual product. Not to scale.


- The transparent debris compartment has a stainless steel strainer to catch larger debris and a Type VI filter cartridge for smaller debris. Always use the stainless steel filter screen when operating the product. If cleaning large debris, the Type VI filter cartridge should be removed for better performance.
- The large brush head is designed for cleaning the center of the pool and must be kept flat on the pool bottom during use; the small brush head is designed for cleaning the corners of the pool.

SETUP INSTRUCTIONS

Helpful Tip:


IMPORTANT: The following notes will be helpful during use. Please keep for reference.
Step 1: Fully charge the product (about 3 - 4 hours) before using it for the first time.
NOTE: During charging, ensure the product is positioned in a cool and ventilated environment. Avoid covering the product to prevent overheating and possible damage.
Step 3: The product can be used handheld or with the included lightweight poles for pool cleaning. To use the poles, follow the illustrations in this step for proper assembly guidance.

Power Indicator Light

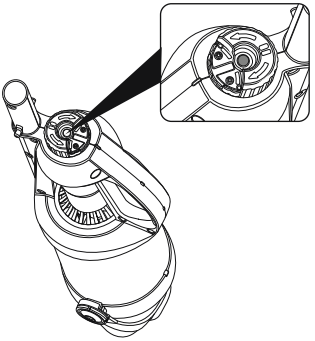

Blinking Red Light	• The product is charging • The battery will be depleted in 1-3 minutes
Blinking Green Light	• Switch is on but the product is out of the water
Green Light	• Charging is complete • The product is working in the water

Function Descriptions

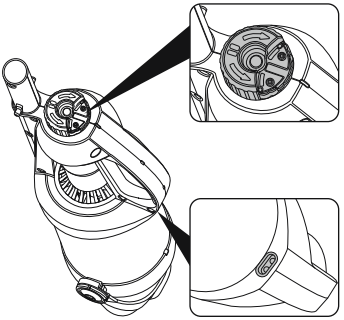

	Switch Off
	Working with the LED guide light OFF
	Working with the LED guide light ON

NOTE: Do not aim the LED guide light at eyes or faces.

MAINTENANCE & STORAGE INSTRUCTIONS



Maintenance

For maintenance instructions, refer to the illustration steps in the back of the manual. Drawings are for illustration purposes only. May not reflect actual product. Not to scale.
Clean the stainless steel strainer and Type VI filter cartridge when they become dirty for better performance. Clean the Type VI filter cartridge promptly if it is dirty, and replace it if necessary.
NOTE: To retrieve the product, pull the pole towards yourself as much as possible and carefully lift it out of the water. Hold the pole with one hand and the handle with the other for optimal control and safety. Please refrain from lifting the pole while it is suspended in the air or leaning it against the pool frame, as this could potentially result in damage to the product. Hold it over the pool until the water in the debris compartment flows out. Then remove it from the water, as shown in Figure 1.

MAINTENANCE & STORAGE INSTRUCTIONS



Storage

Battery will be depleted during extended storage. Make sure to fully charge the product before storage.
To optimize the performance of the battery, the product must be recharged at least once every two months when not in use.
Remove all accessories; be sure that the product and accessories are completely clean and dry before storage.
If all the parts are not completely dry, mold may result. Before storage, remove and dispose of the filter cartridge.
We recommend not using the product when the ambient temperature is below 10ºC / 50ºF and to disassemble it for storage, as the product will likely be damaged when the ambient temperature is below 10ºC / 50ºF.
Store the product in a dry place with a moderate temperature between 10ºC / 50ºF and 38ºC / 100ºF.


TROUBLESHOOTING

Problem	Probable Cause	Solution
The product works but the indicator light flashes green.	The built-in sensor is dirty.	Gently use sandpaper to remove corrosion, as shown in Step 7b.
	The build-in sensor failed to detect water.	Immerse the built-in sensor completely in water.
		Submerge the product in water and gently rotate until air is released from the switch.
The product is not cleaning as it should.	The battery level is low.	Charge the product.
	The Type VI filter cartridge is dirty.	Clean the Type VI filter cartridge or replace it.
	The stainless steel strainer is dirty.	Clean the stainless steel strainer.
	The suction port is blocked.	Clean the suction port to ensure that no dirt or debris is blocking it.
	The large brush head was not kept flat on the pool bottom during use.	The large brush head is designed for cleaning the center of the pool and must be kept flat on the pool bottom during use.
The product fails to charge.	The charging head is not properly plugged in.	Insert the charging head correctly.
	The charger is jammed with debris.	Clean and dry the port before charging. If charging is slow, gently use sandpaper to remove corrosion, as shown in Step 7a and 7c.
The product has been charging for more than 7 hours, but it is not fully charged.	There is poor contact between the product and the charger.	Clean and dry the port before charging. If charging is slow, gently use sandpaper to remove corrosion, as shown in Step 7a and 7c.
The indicator light is not on.	The battery is empty.	Charge the product.
	The product is damaged.	For assistance, please visit the support section on our website, **www.bestwaycorp.com**.
The LED guide light is not on when switching to the function.	The battery is empty.	Charge the product.
	The product is damaged.	For assistance, please visit the support section on our website, **www.bestwaycorp.com**.


WARRANTY TERMS

For support and product registration, please visit **bestwaycorp.com/support**.

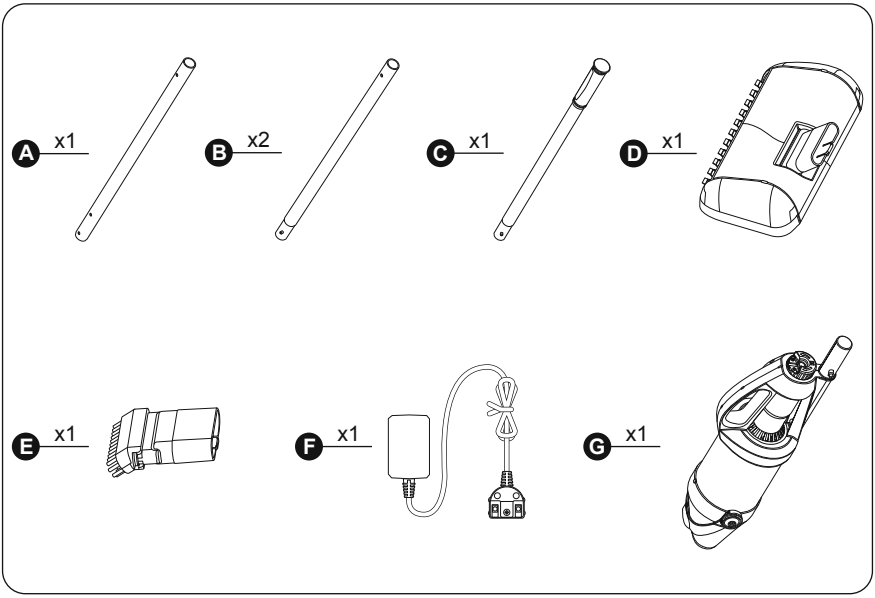



A x1
B x2
C x1
D x1
E x1
F x1
G x1

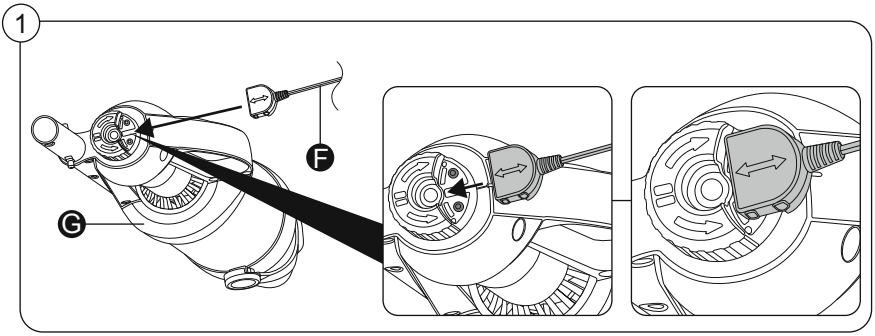



1
F
G

2a

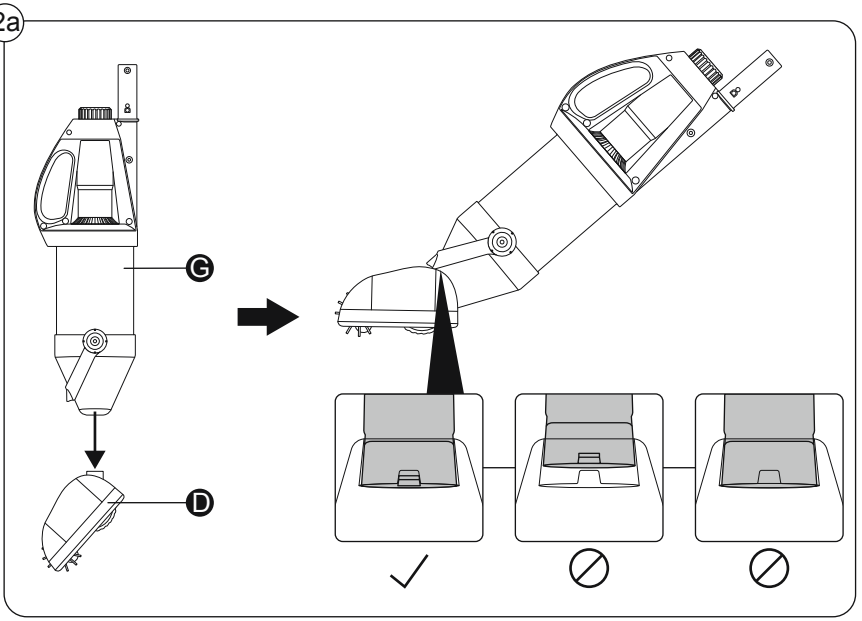


2b

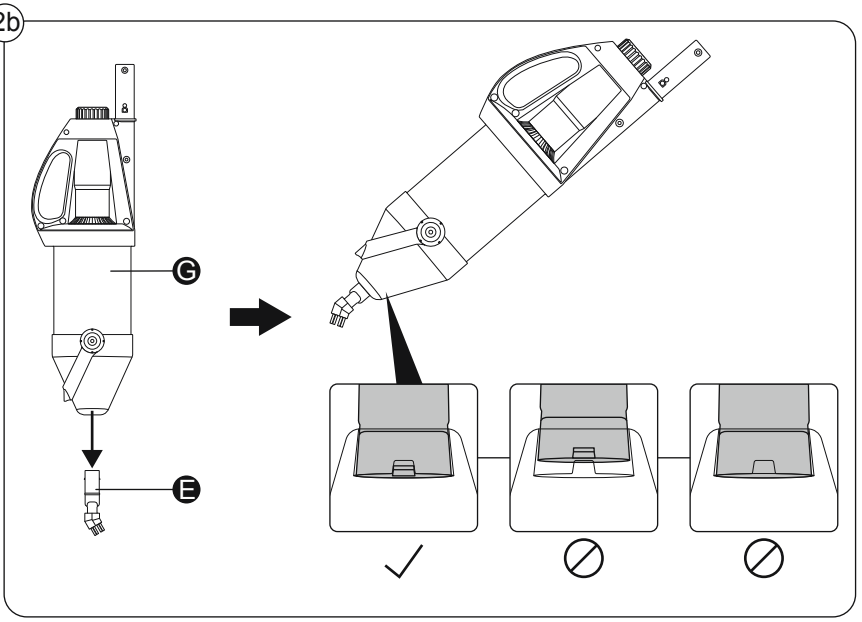





3

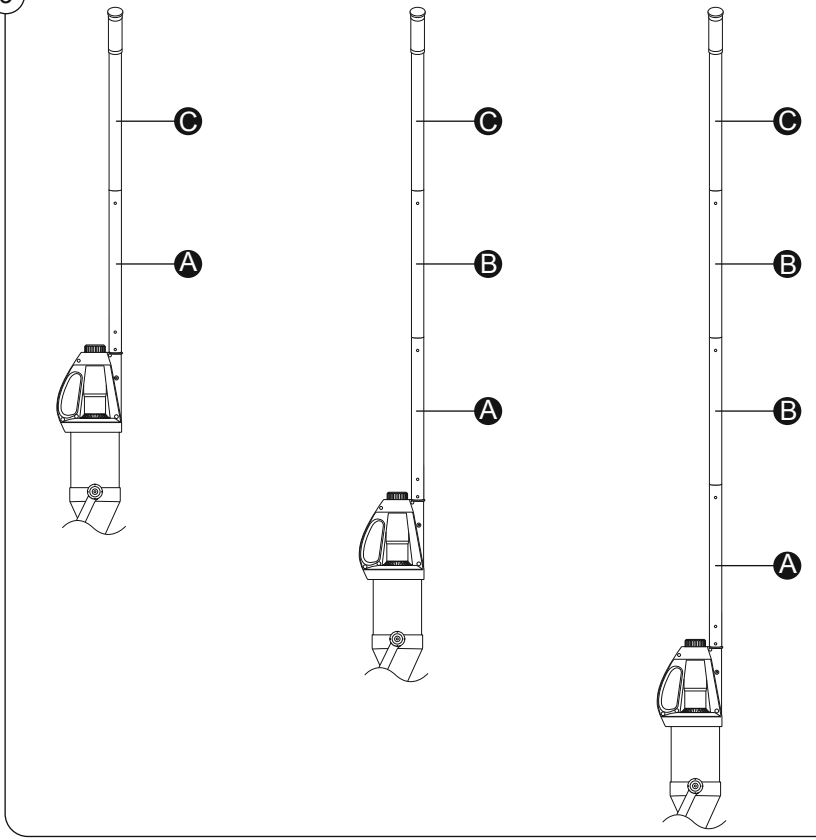


4

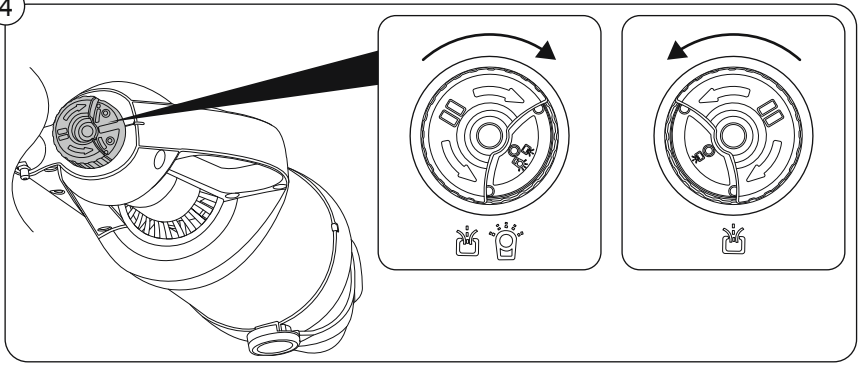



5

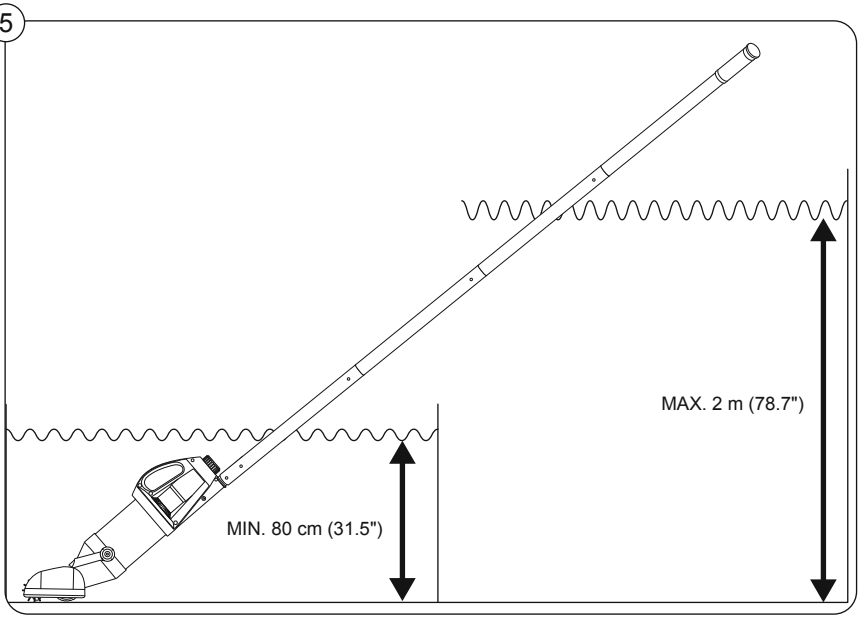


1

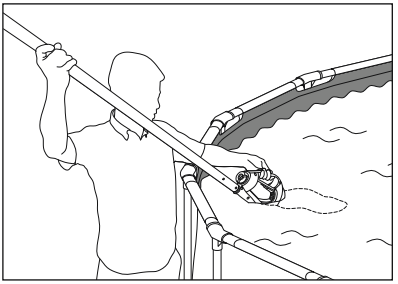

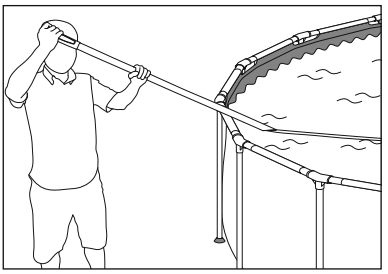


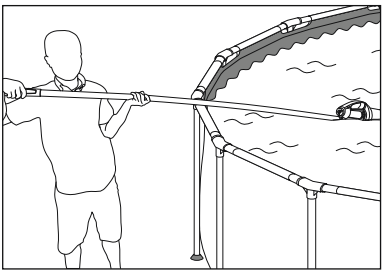


2

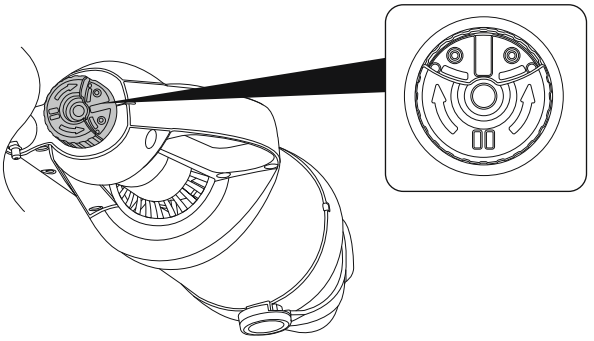


3

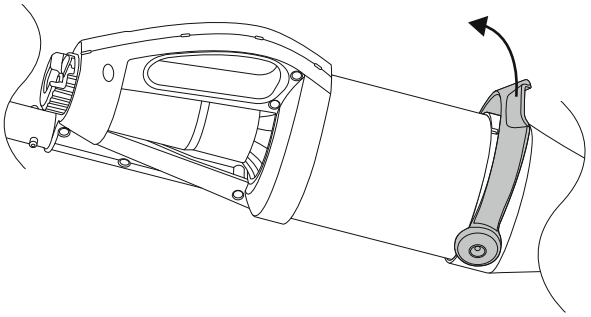

4

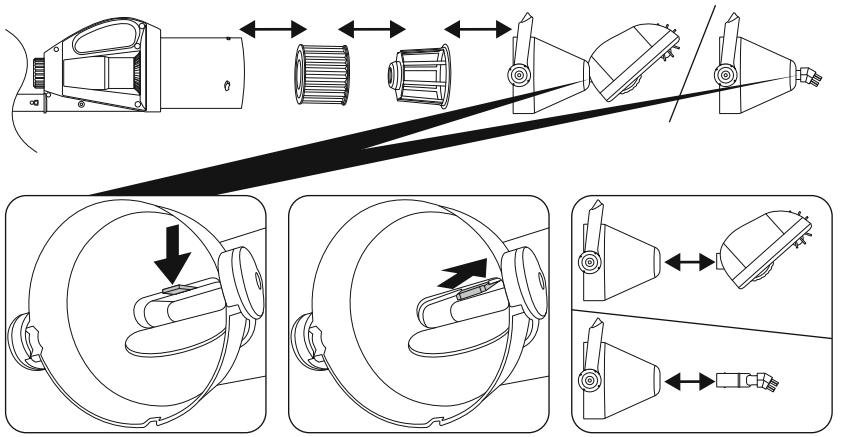


5

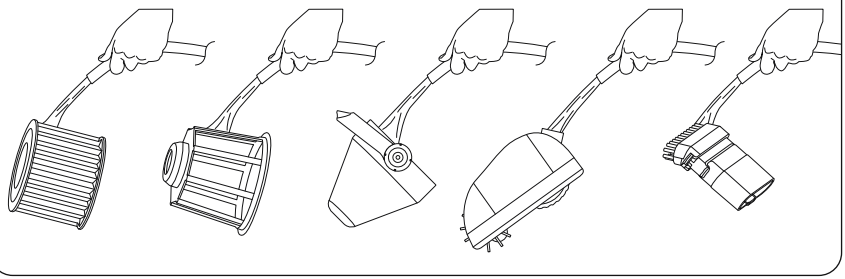




6

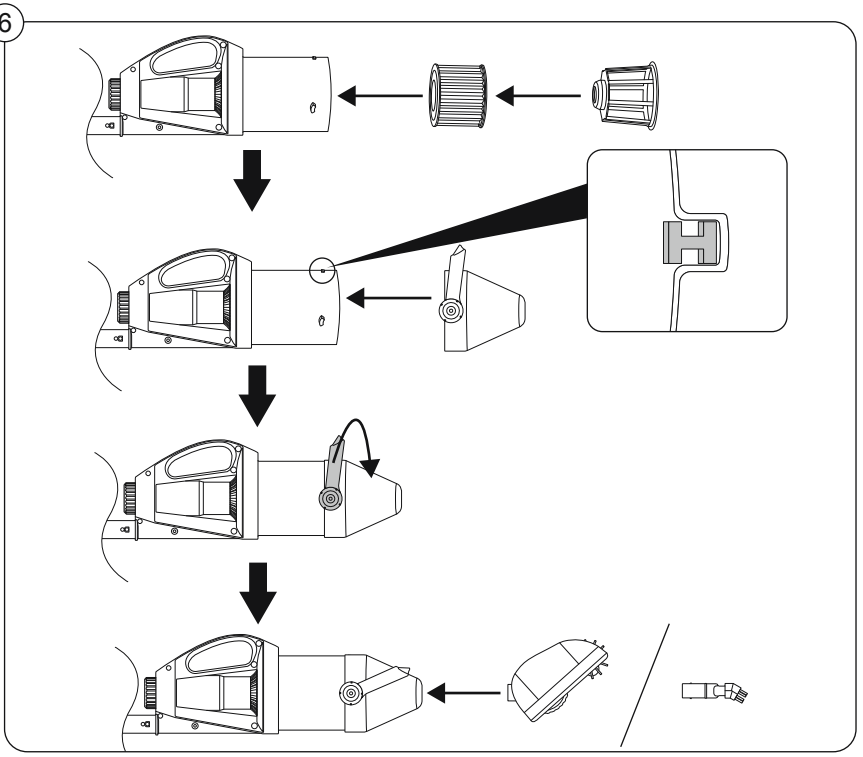

7

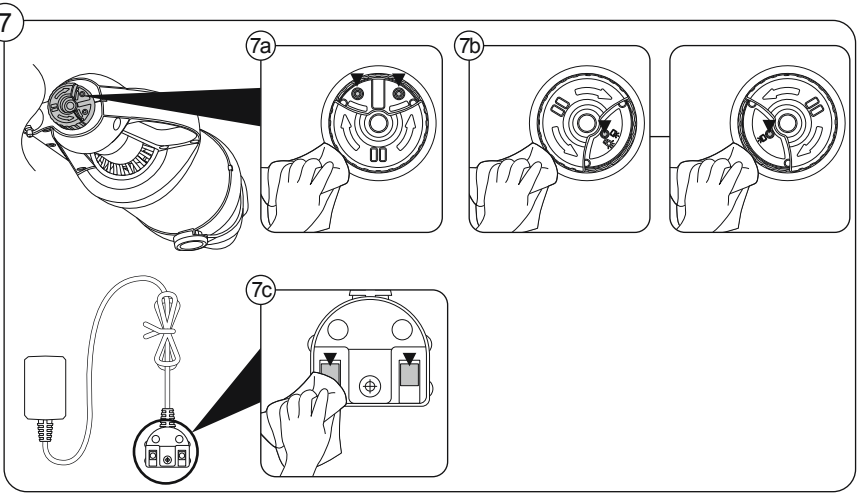

For support please visit us at:

bestwaycorp.com/support

FSC
www.fsc.org
MIX
Paper | Supporting responsible forestry
FSC™ C212938

©2026 Bestway All rights reserved / Tous droits réservés / Todos los derechos reservados / Alle Rechte vorbehalten / Tutti i diritti riservati
Trademarks used in some countries under license from / Marques déposées utilisées dans certains pays sous licence de / Marcas comerciales utilizadas en algunos países bajo licencia de / Marken, abweichend in bestimmten Ländern unter Lizenz von / I marchi commerciali sono utilizzati in alcuni paesi su licenza **Bestway Inflatables & Material Corp.**
Manufactured by / Fabriqué par / Fabricado por / Produziert von / Prodotto da **Bestway (Nantong) Recreation Corp., No.8, West Huimin Road, Rugao Economic Development Zone, Jiangsu, China / No.6 West Jinlun Road, Rugao Economic Development Zone, Jiangsu, China**
Manufactured for, distributed and represented in the European Union by / Fabriqué pour, distribué et représenté dans l'Union européenne par / Fabricado, distribuido y representado en la Unión Europea por / Hergestellt für Vertrieb sowie Vertretung innerhalb der Europäischen Union durch / Fabbricato per conto di, distribuito e rappresentato nell'Unione Europea da **Bestway Europe S.p.a., Via Resistenza, 5, 20098 San Giuliano Milanese (Milano), Italy.**
Represented in United Kingdom by **Bestway Corp UK Ltd. 8 Wentworth Road, Heathfield Industrial Estate, Newton Abbot, Devon, TQ12 6TL.**
Represented in Latin America by / Représenté en Amérique latine par / Representado en Latinoamérica por / Representado na América Latina por **Bestway Central & South America Ltda, Salar Ascotan 1282, Parque Enea, Pudahuel, Santiago, Chile.**
Represented in Australia & New Zealand by **Bestway Australia Pty Ltd, Unit 2/98-104 Carnarvon St Silverwater, NSW 2128, Australia.** (Tel: Australia: (+61) 2 9037 1388; New Zealand: 6498 877 182).
Represented in North America by / Représenté en Amérique du Nord par / Representado en Norteamérica por **Bestway (USA) Inc., 3435 S. McQueen Road, Chandler, AZ 85286, United States of America.**

www.bestwaycorp.com