


ATLANTIS OTTOMAN BED








- DOUBLE & QUEEN

1380 x1880mm & 1530x2030mm


ASSEMBLY INSTRUCTIONS

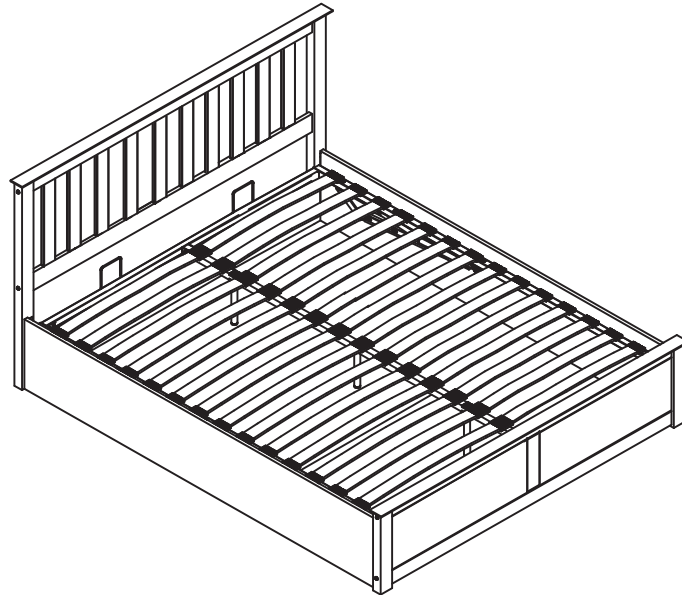




HARDWARE

A x4  Wood Dowel $\Phi 8 \times 30 \text{mm}$	B x48  Wood Dowel $\Phi 6 \times 30 \text{mm}$	C x8  Bolt $\Phi 6 \times 70 \text{mm}$	D x9  Bolt $M6 \times 65 \text{mm}$	E x6  T-Nut
F x6  Bolt $M6 \times 50 \text{mm}$	G x4  Bolt $M6 \times 35 \text{mm}$	H x6  Stud $M6 \times 60 \text{mm}$	J x6  Nut $M6$	K x6  Half Moon Washer
L x1  Spanner $M6$	M x1  Allen Key $M4$	N x8  Bolt & Washer $\Phi 8 \times 20 \text{mm}$	O x24  Bolt $\Phi 8 \times 15 \text{mm}$	P x4  Nut $M8$
Q x1  Spanner $M10$	R x1  Allen Key $M5$	S x2  Screw $\Phi 4 \times 50 \text{mm}$	T x1  Wood Glue	U x6  Screw $\Phi 4 \times 20 \text{mm}$
I x1  Screw driver (not provided)				


COMPONENTS

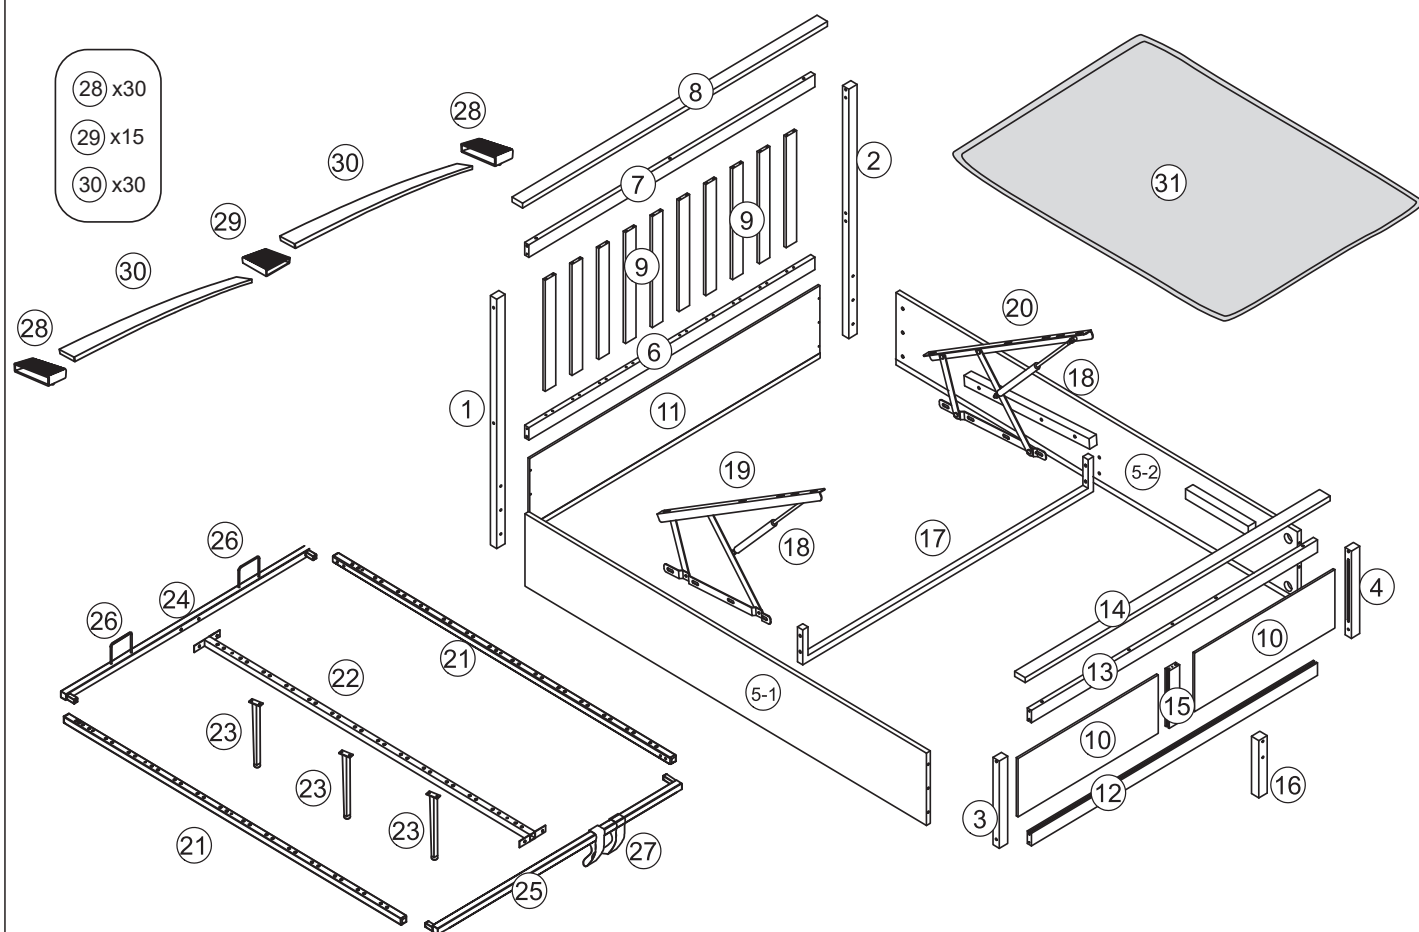

Step 01

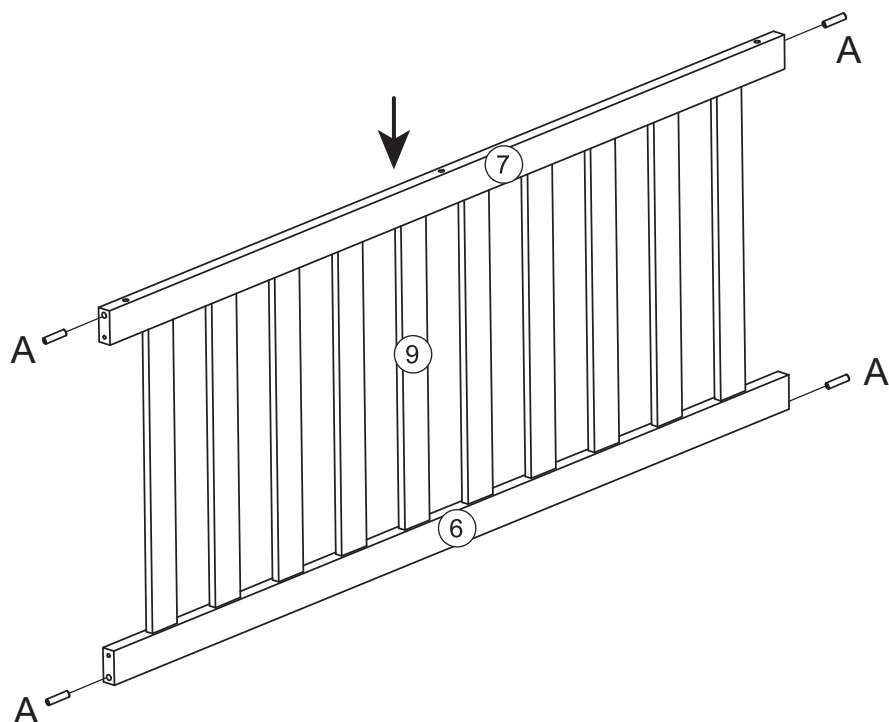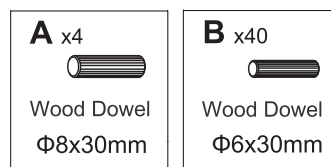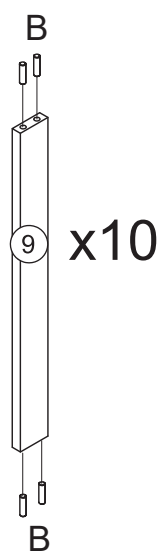


Step 02

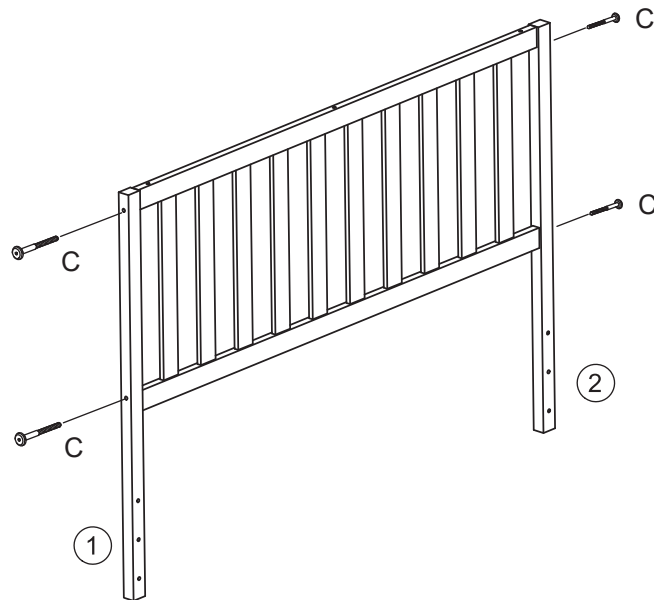



C x4
Bolt
Φ6x70mm

Step 03

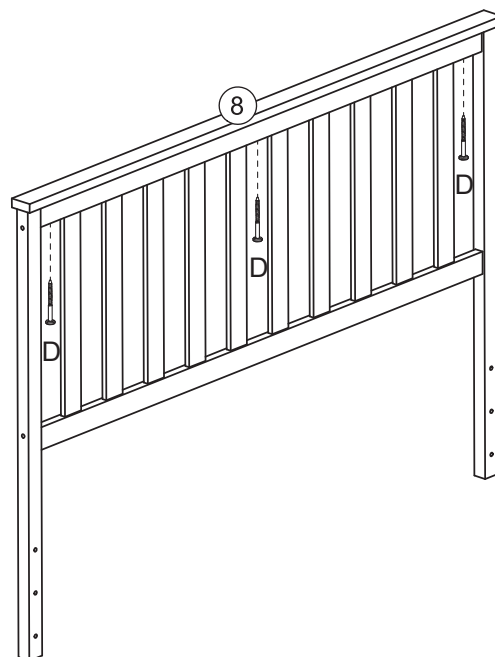

D x3
Bolt
M6x65mm

Step 04


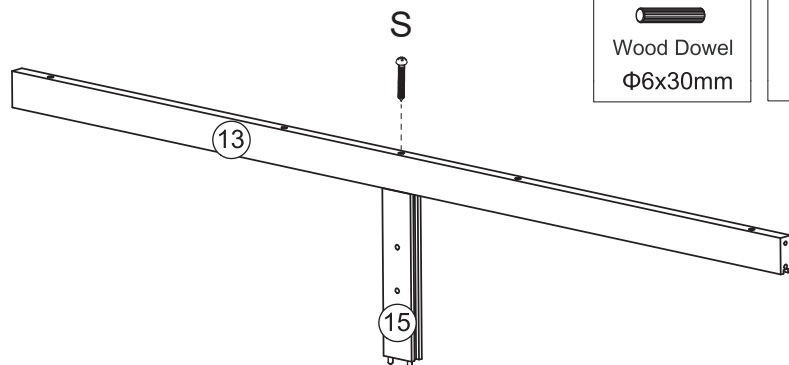



B x4
Wood Dowel
Φ6x30mm






S x1
Screw
Φ4x50mm

Step 05


Please ensure to use "F" bolt to attach the cross rail "13" to Top crown "14" as wrong size of bolt will protrude the top crown

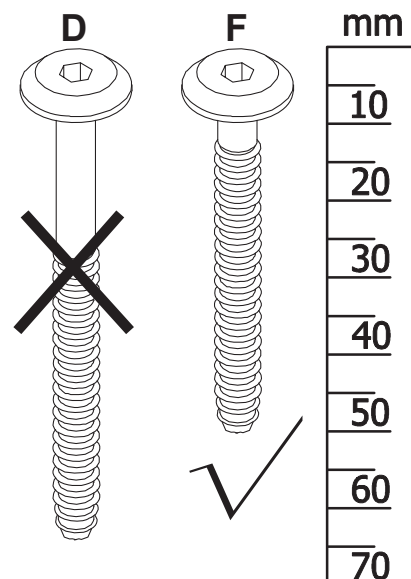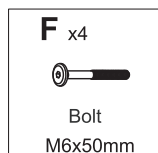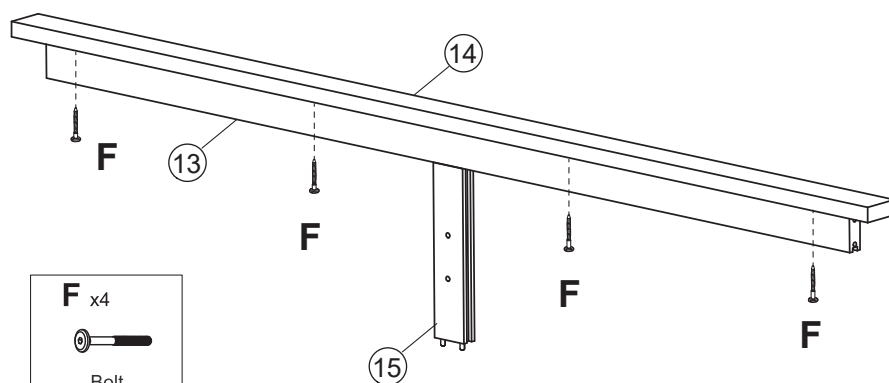


Step 06

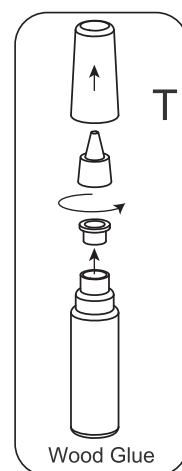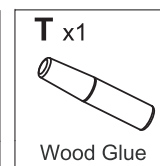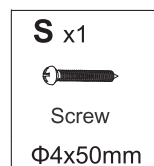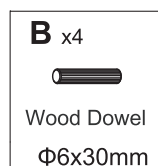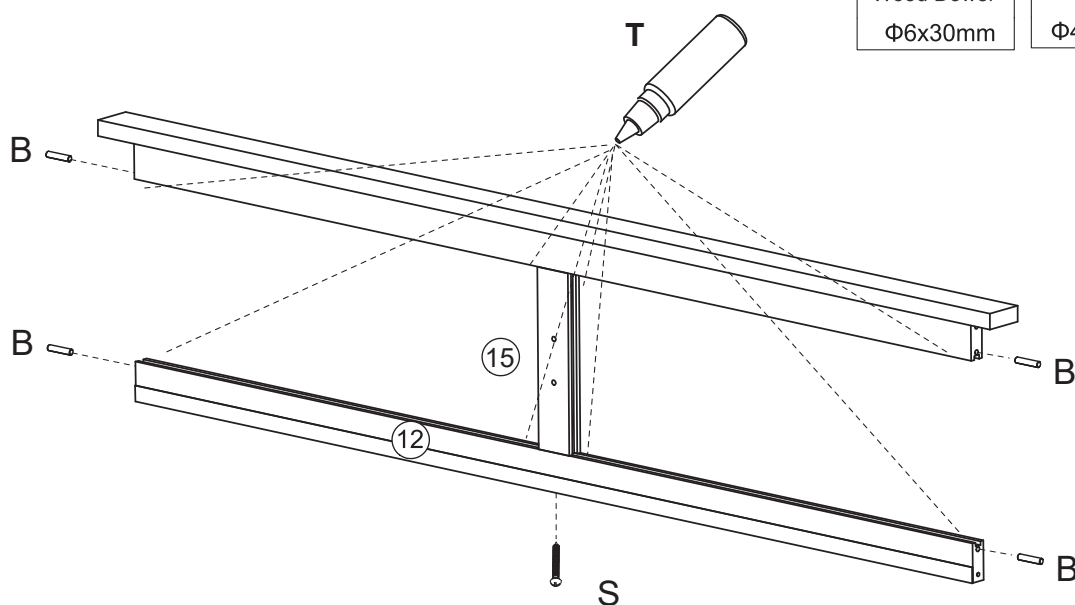

Step 07

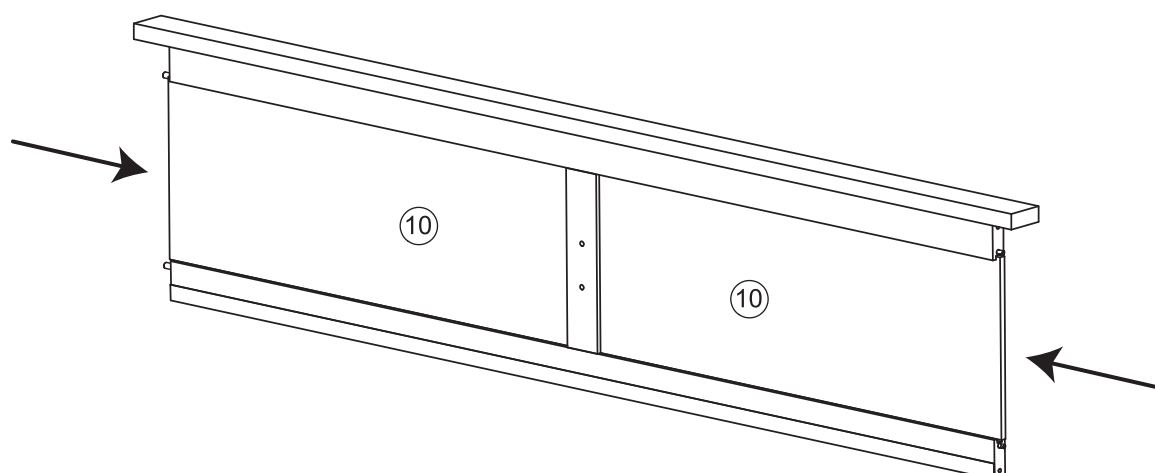

Step 08

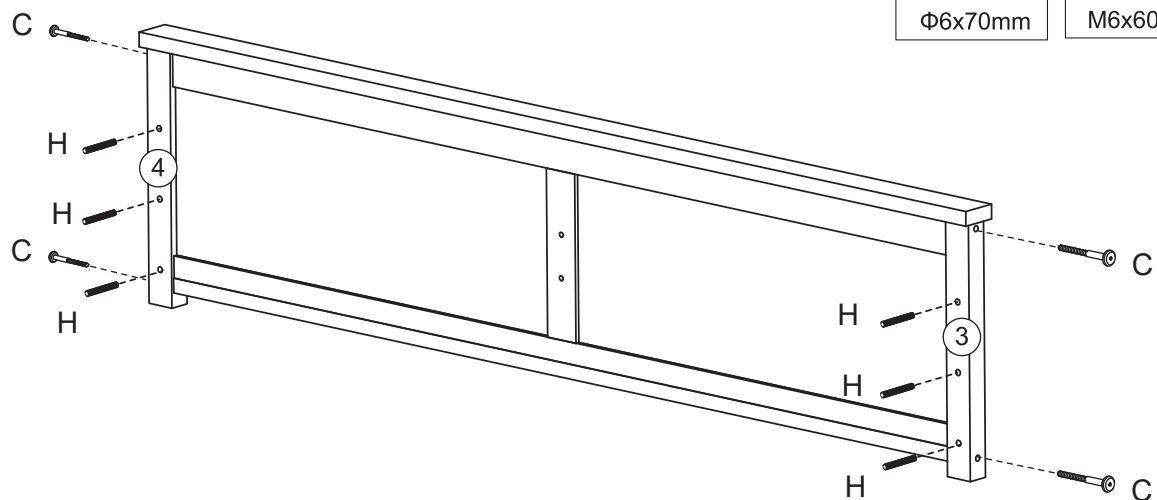

C x4



Bolt

Φ6x70mm

H x6




Stud

M6x60mm

Step 09

Do Not Over Tighten
The Nut "P"

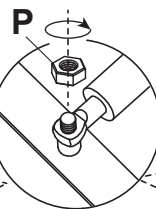

P x4



But


M8

Q x1



Spanner

M10

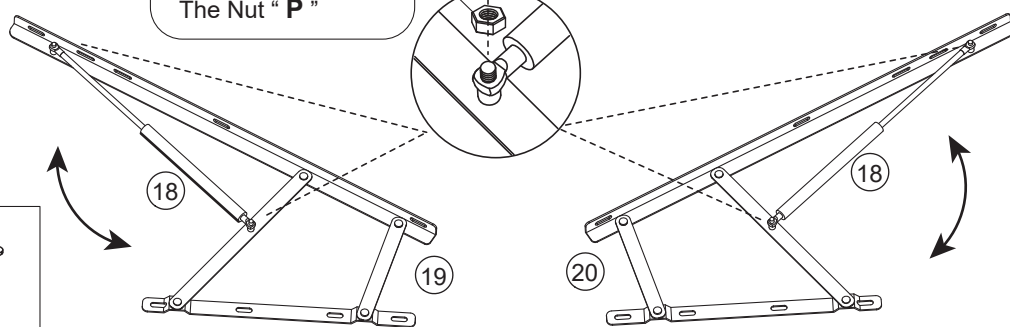


Step 10

N x8




Bolt & Washer


Φ8x20mm

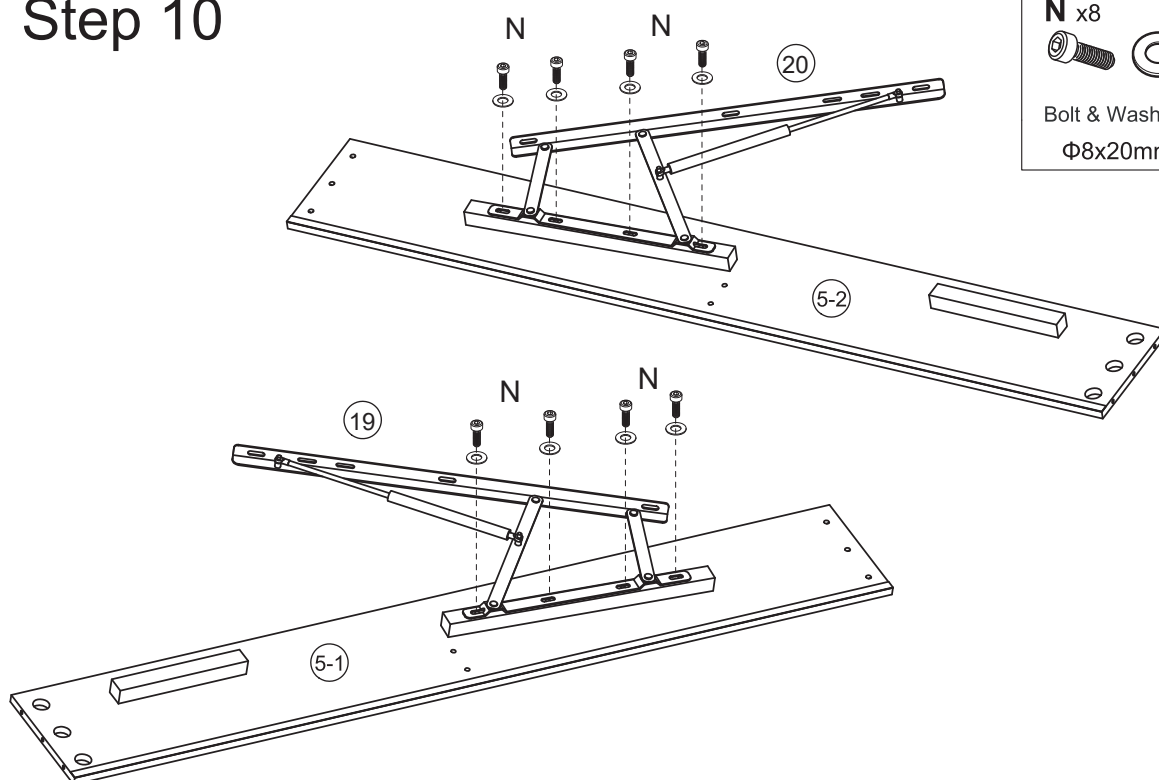


Step 11

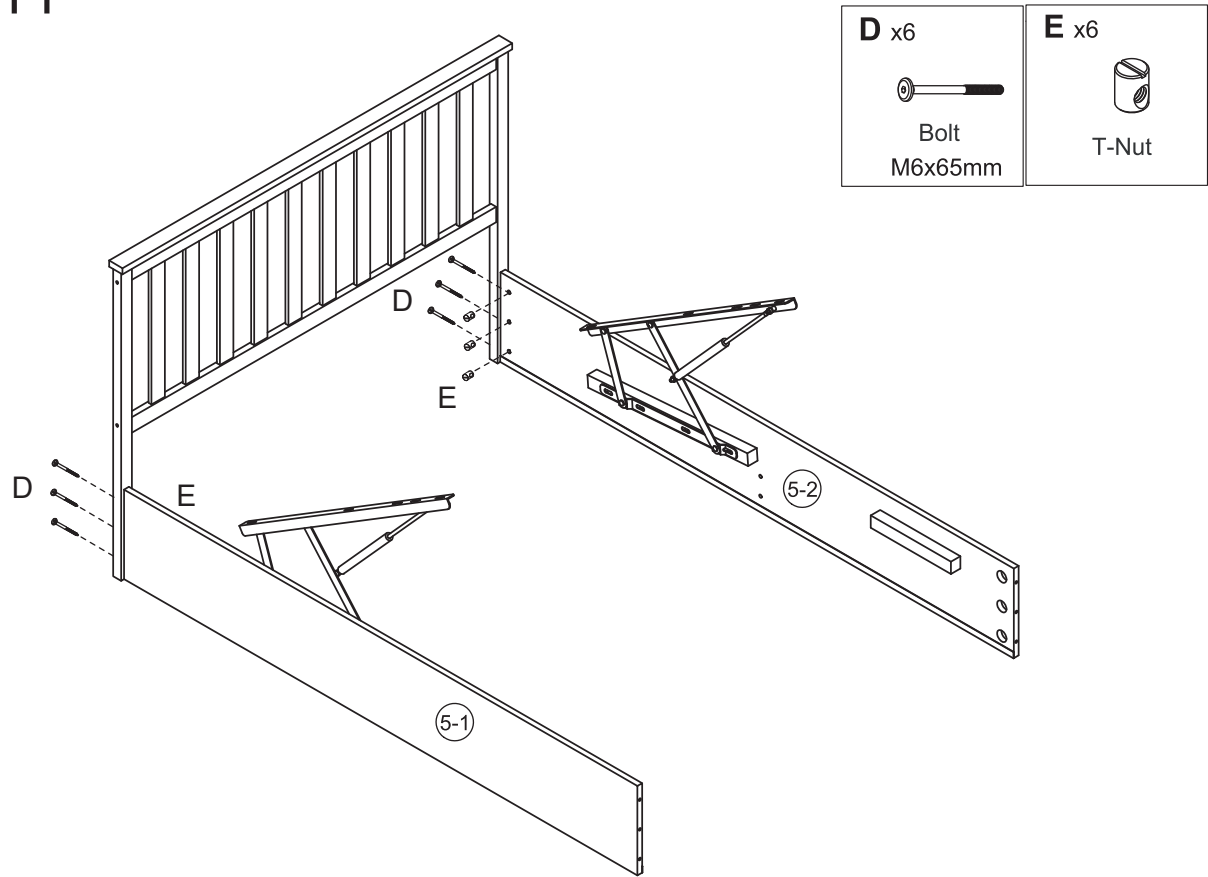


Step 12

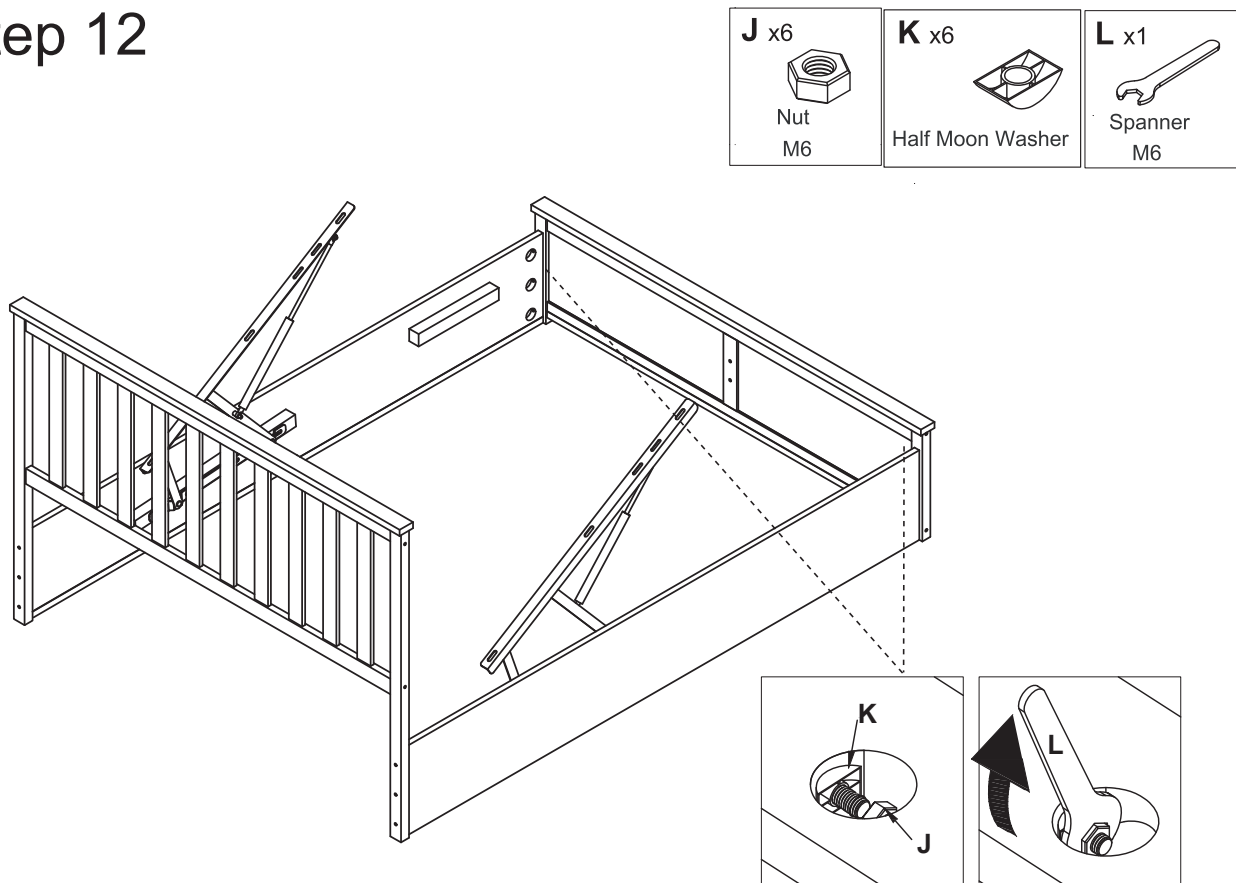

Step 13

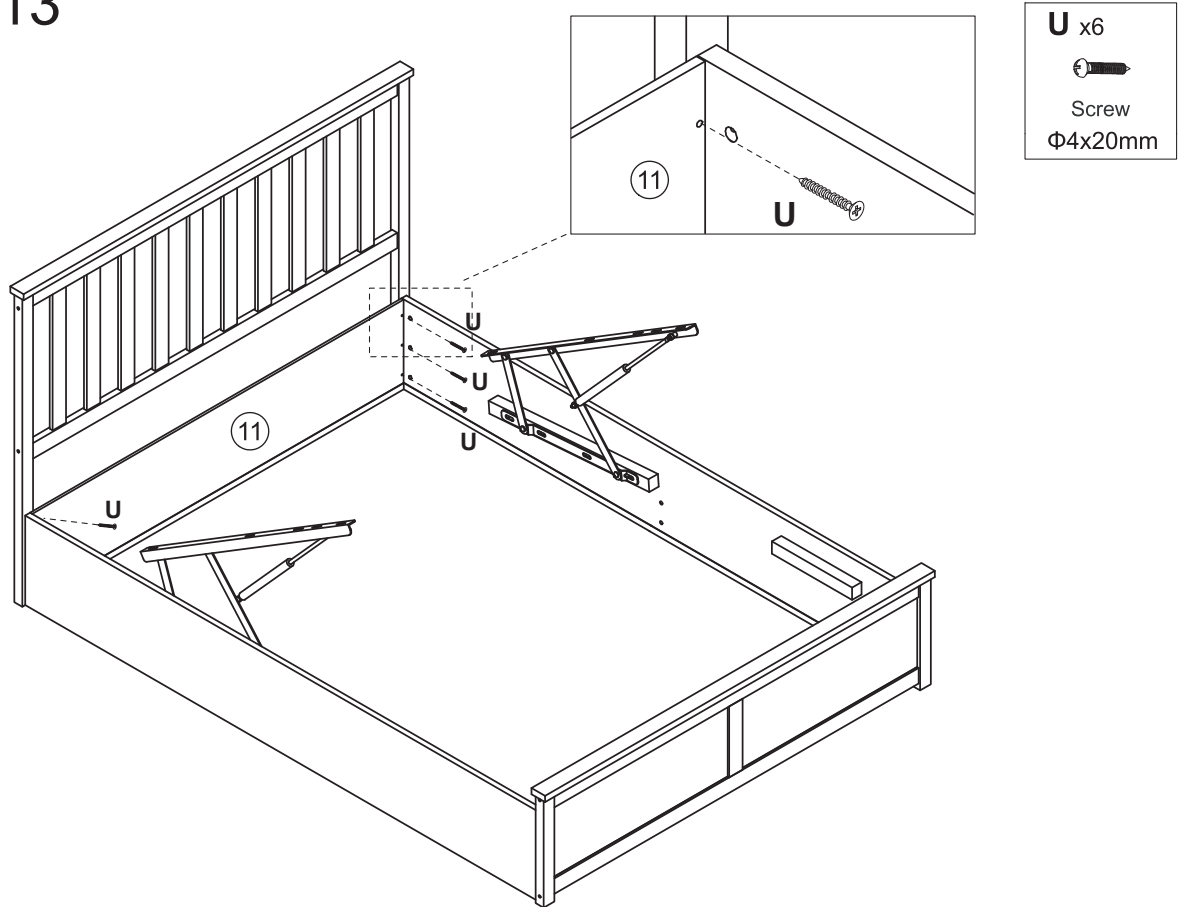

Step 14

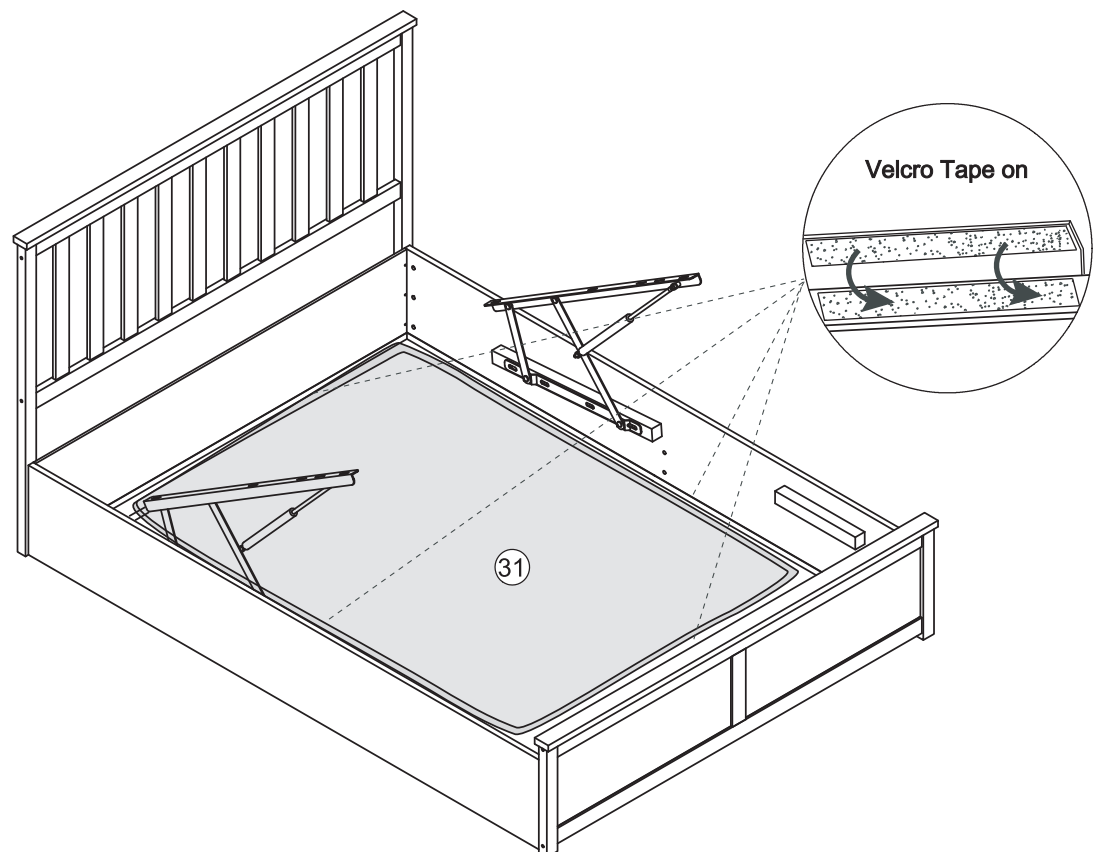

Step 15

G x4



Bolt


M6x35mm

F x2



Bolt

M6x50mm

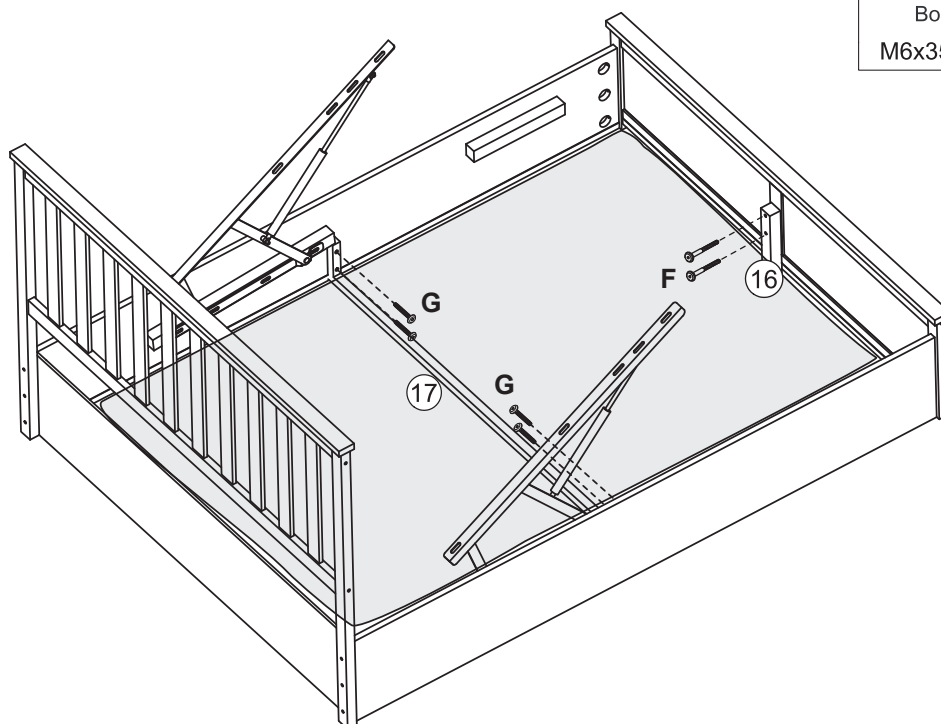


Step 16

O x12




Bolt


Φ8x15mm

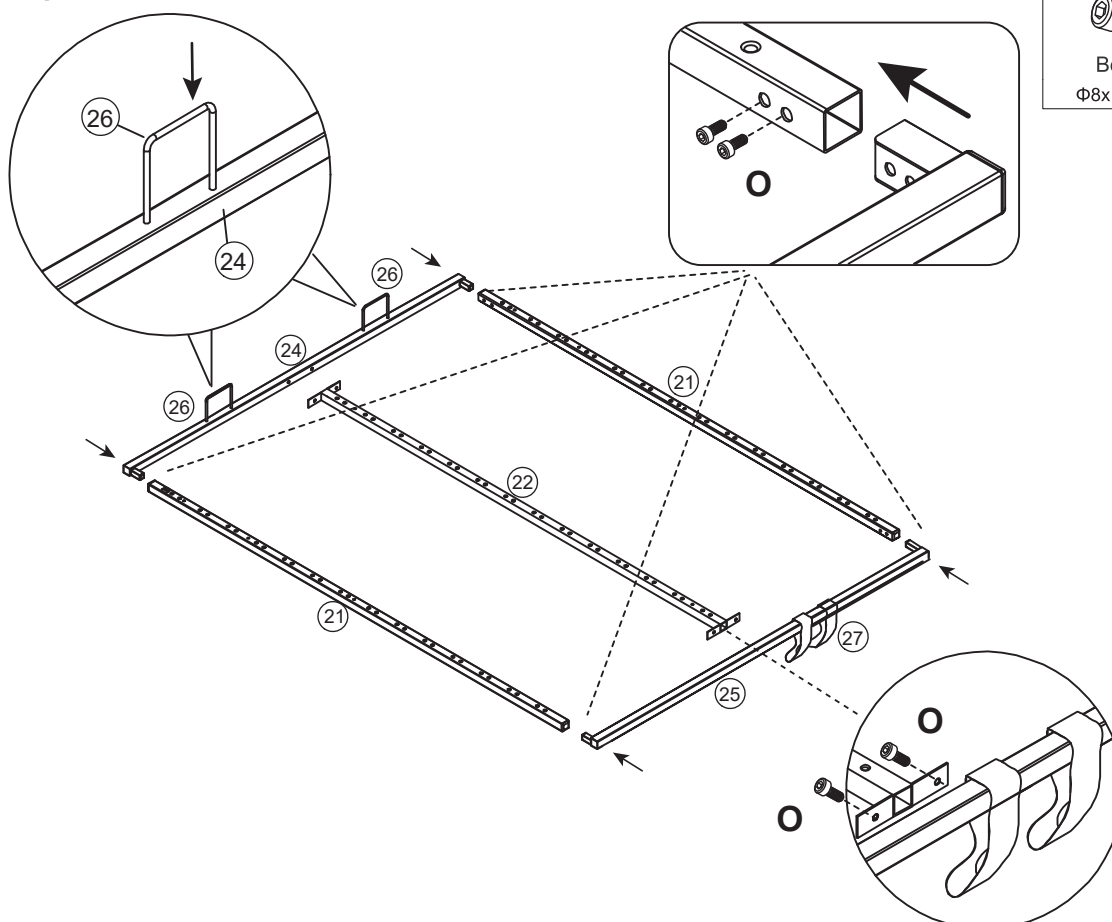



Step 17

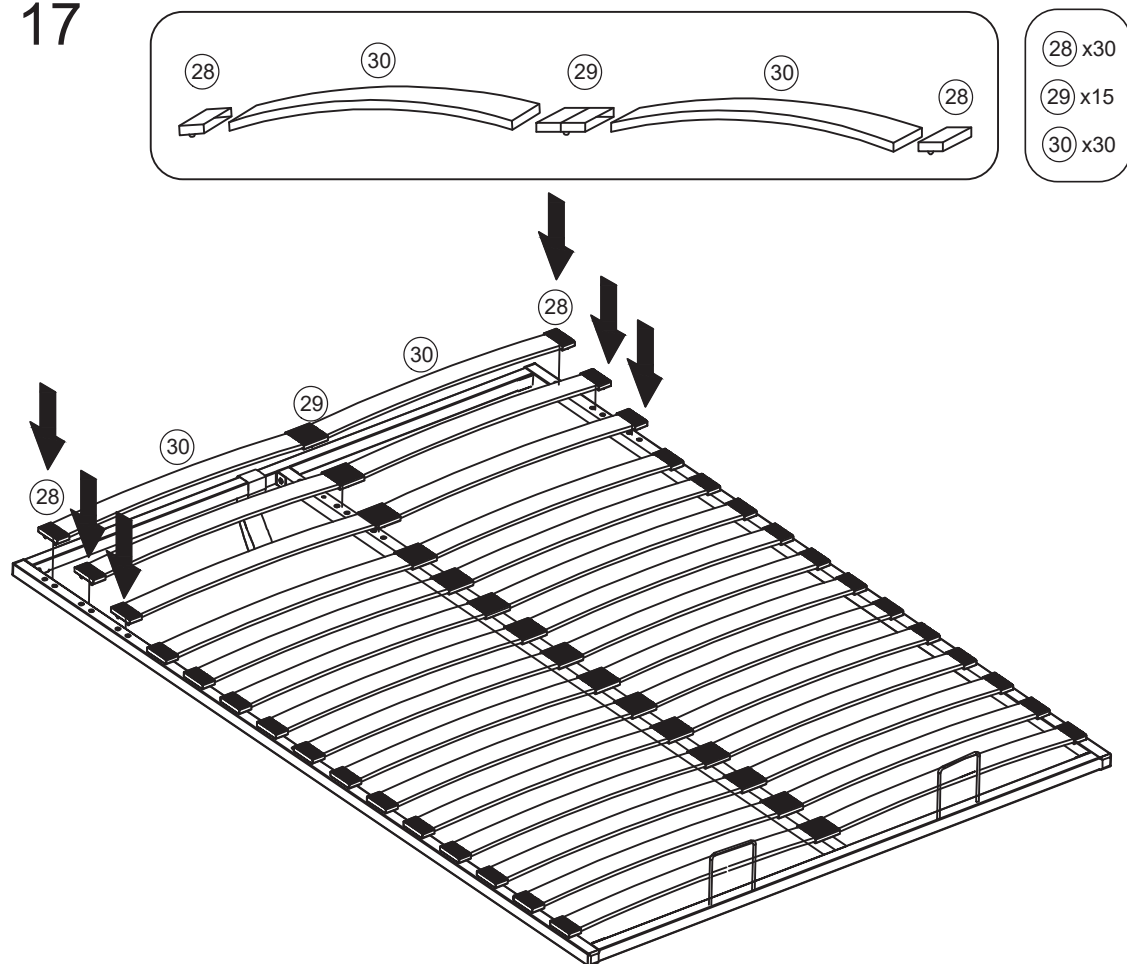

Step 18

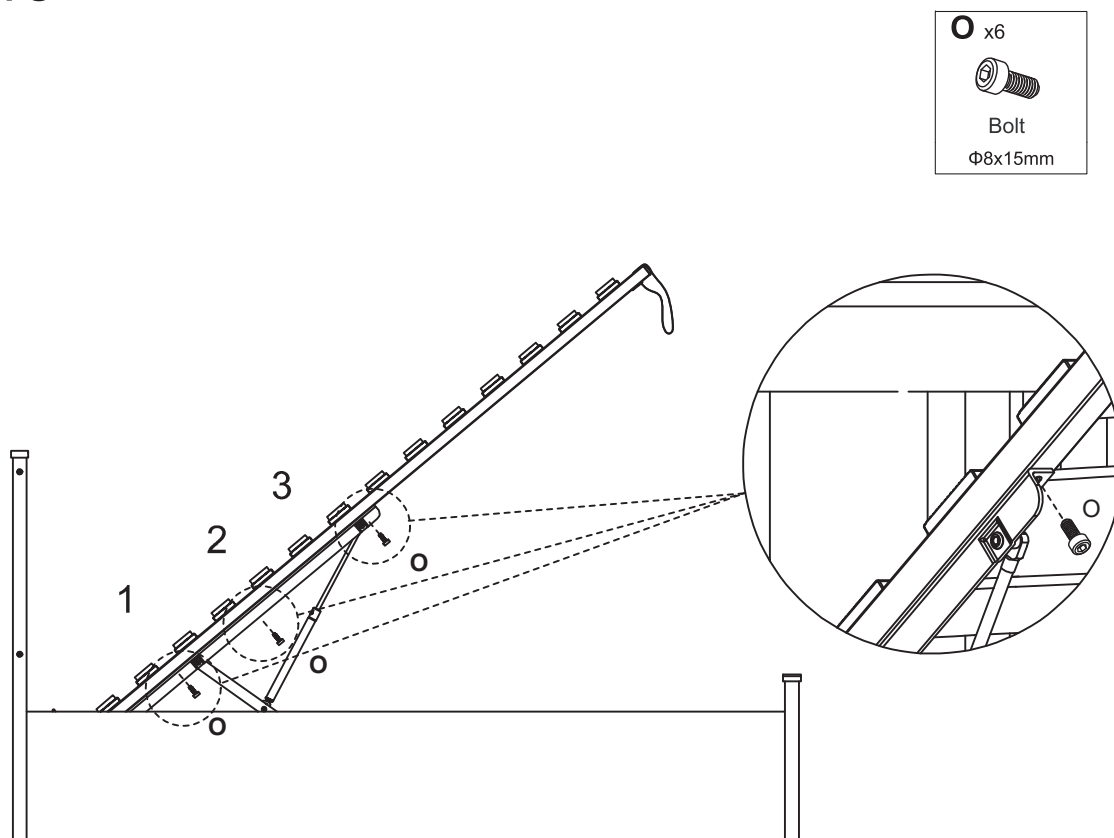

Step 19

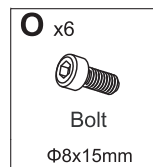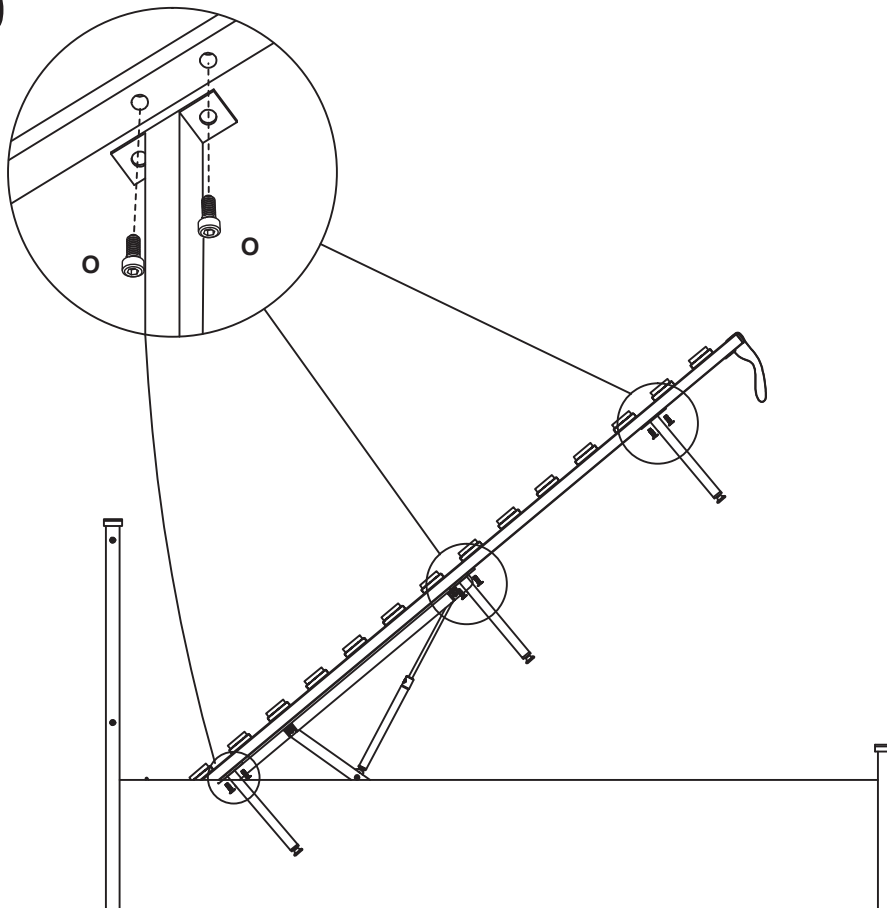

Step 20

Assembly Complete

