

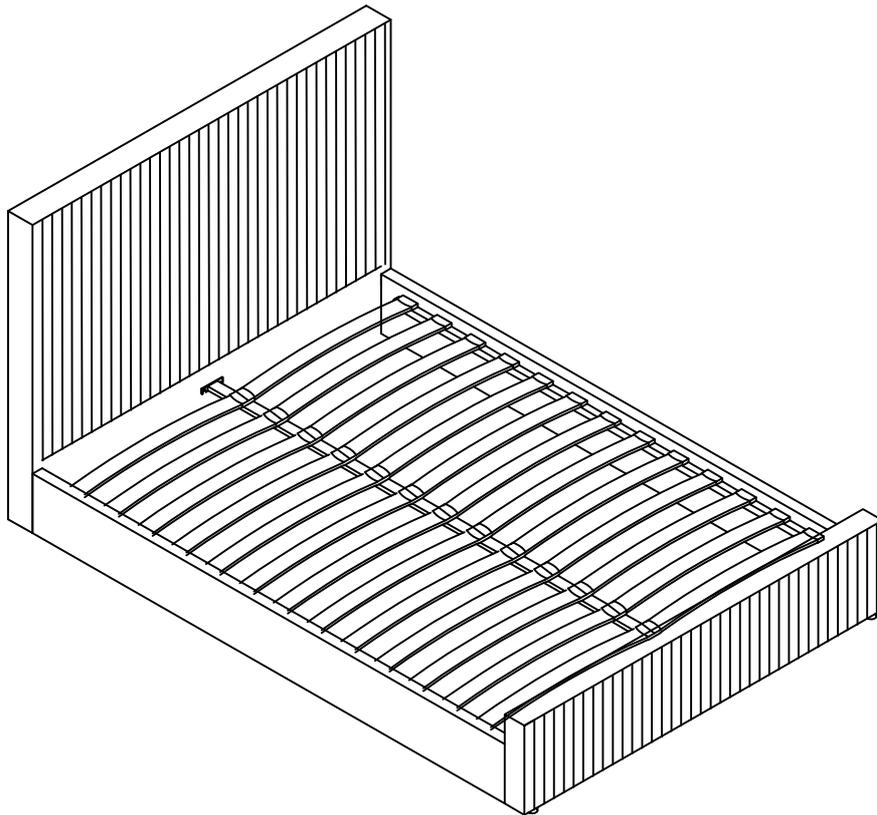
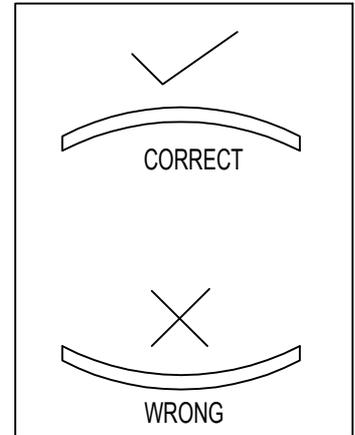
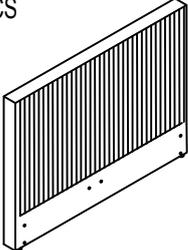
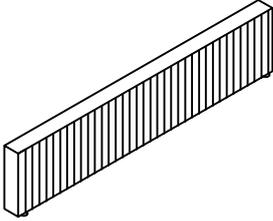
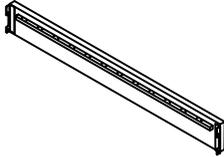





# ASSEMBLY INSTRUCTIONS




CORRECT INSTALLATION OF WOOD SLATS ON BED BASE

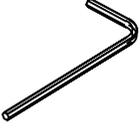


<p>A. 1PCS</p> 	<p>B. 1PCS</p> 	<p>C. 2PCS</p> 	<p>D. 1PCS</p> 
<p>E. 2PCS</p> 	<p>F. 26PCS</p> 	<p>G. 13PCS</p> 	<p>H. 26PCS</p> 
<p>1. M8*20 8PCS</p> 	<p>2. M6*35 4PCS</p> 	<p>3. M8*20 4PCS</p> 	<p>4. M6 4PCS</p> 
<p>5.</p> 	<p>6.</p> 		

# ASSEMBLY INSTRUCTIONS

1

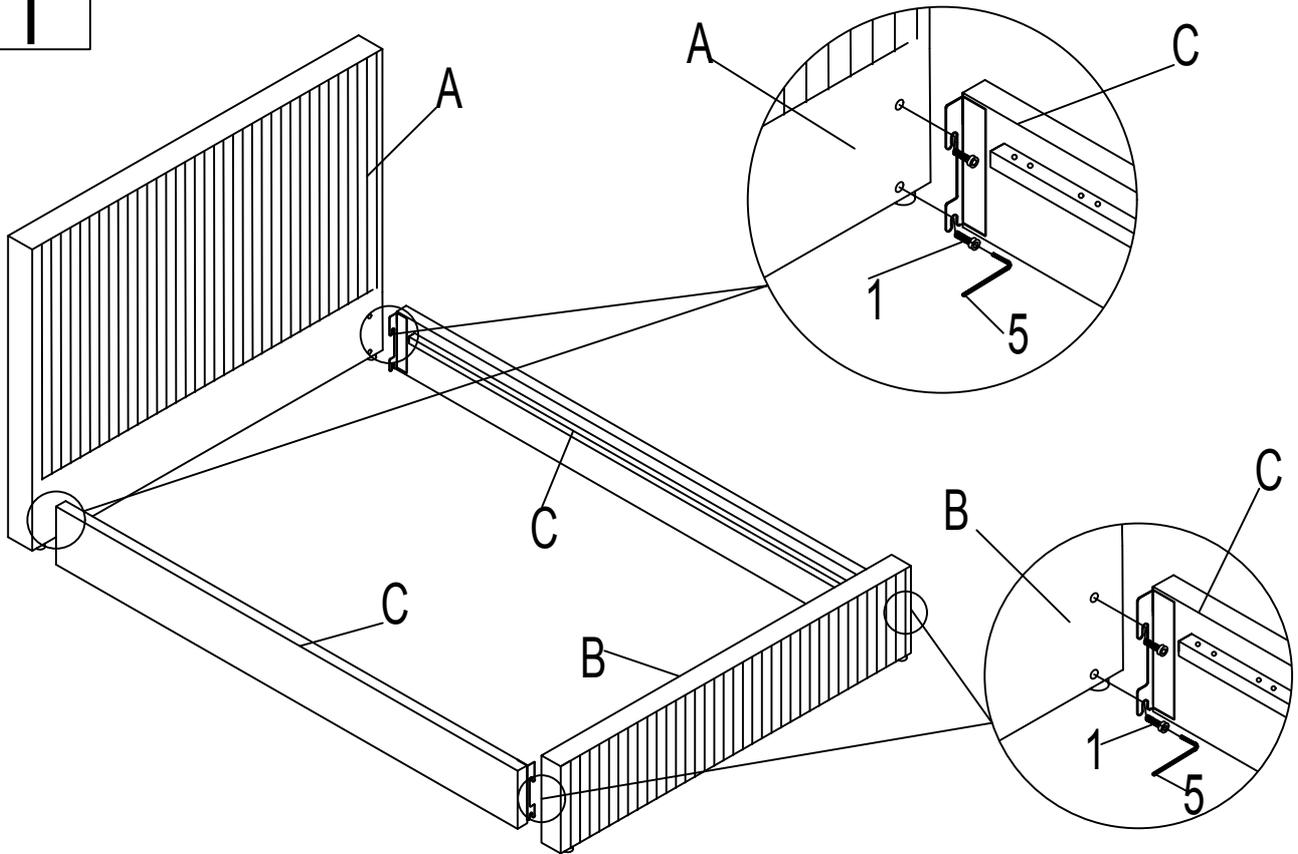


2

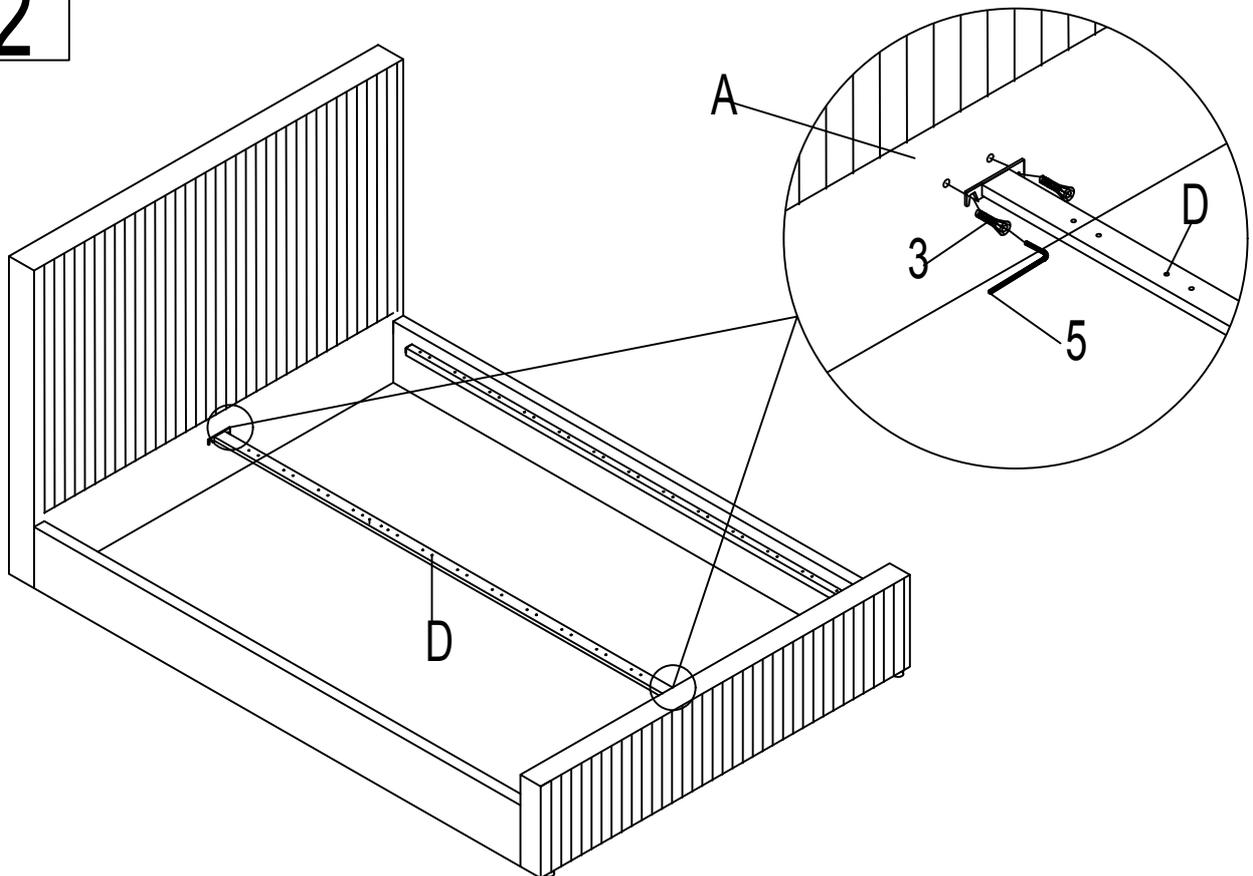

# ASSEMBLY INSTRUCTIONS

3

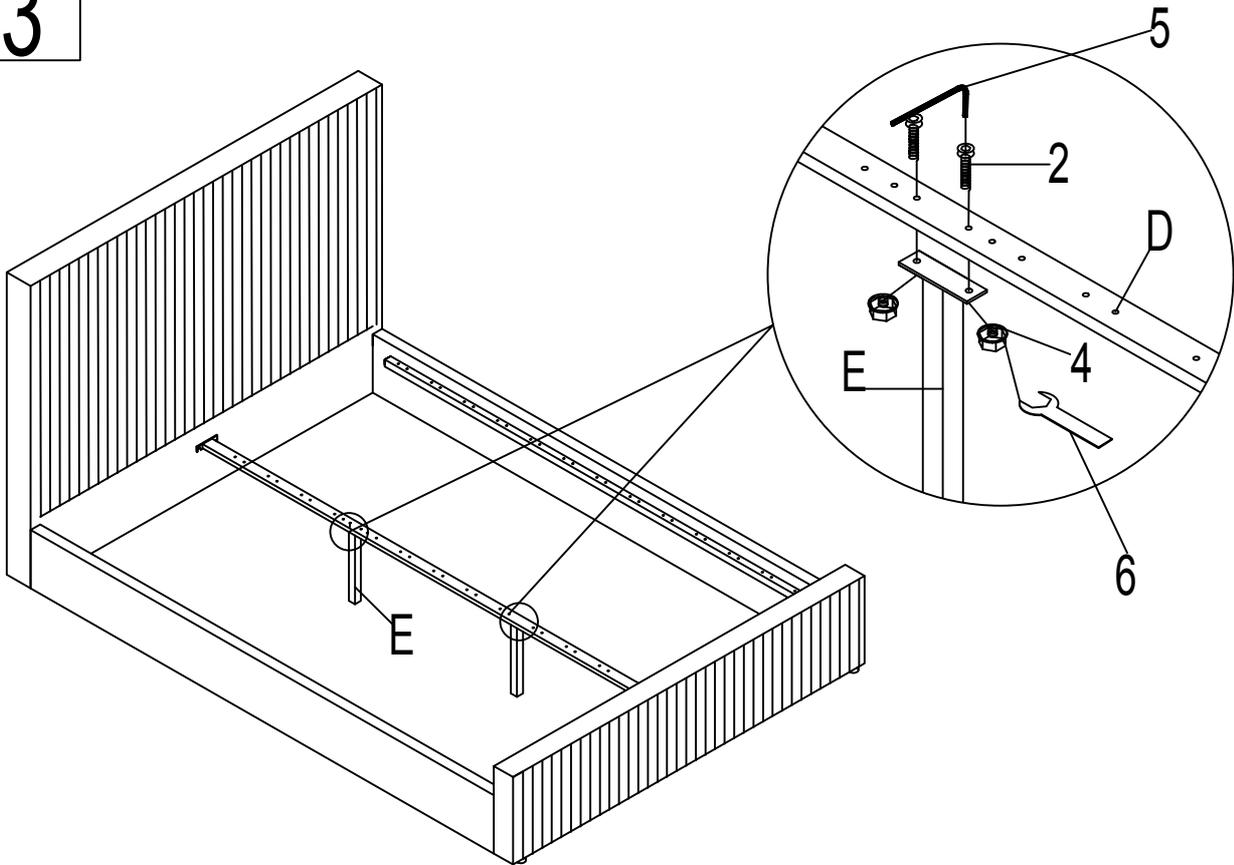

4

