


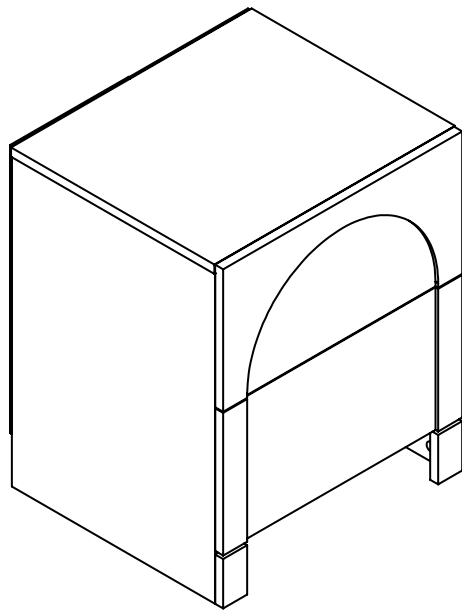
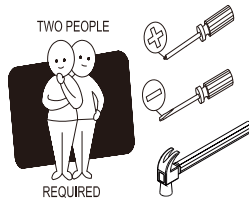



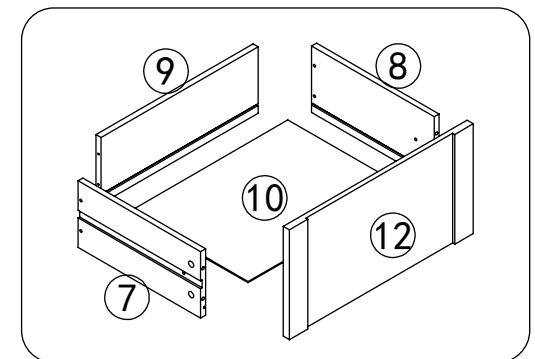


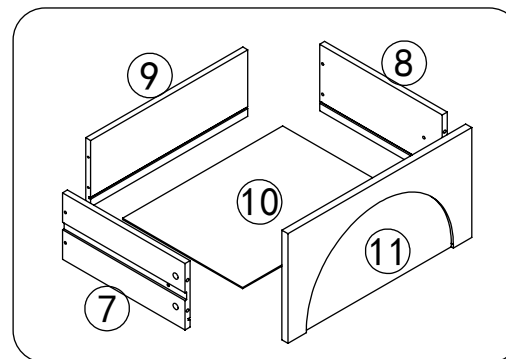

A	x16	B	x8	C	x8	D	x16	E	x12	F	x2	G	x4
									4x40mm				
H	x8	I	x4	J	x12	K	x2	L	x2	M	x2	N	x16
	3x14mm				3x12mm		4x14mm				4x30mm		
O	x4	P	x4	R	x6								
			4x11mm		4x25mm								

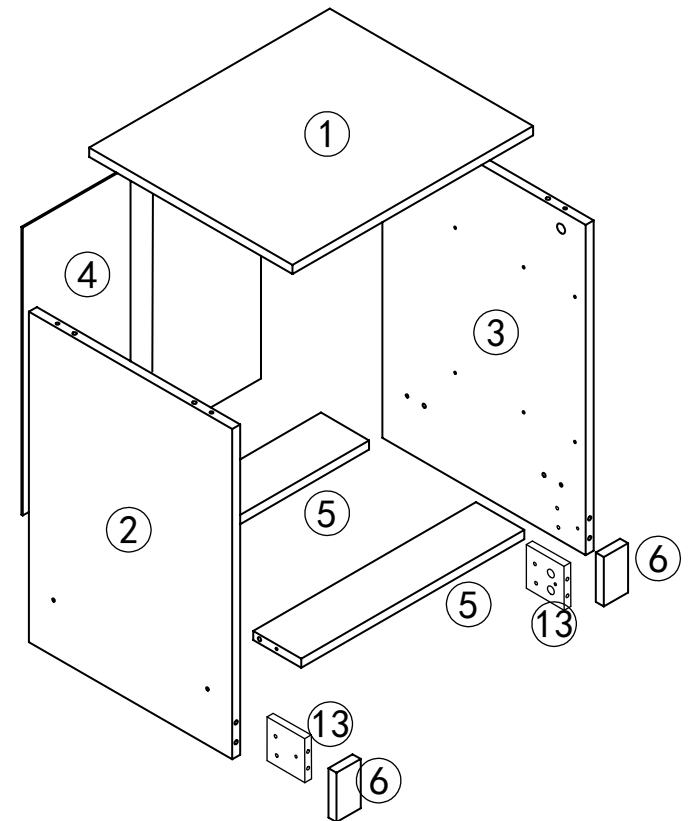


1

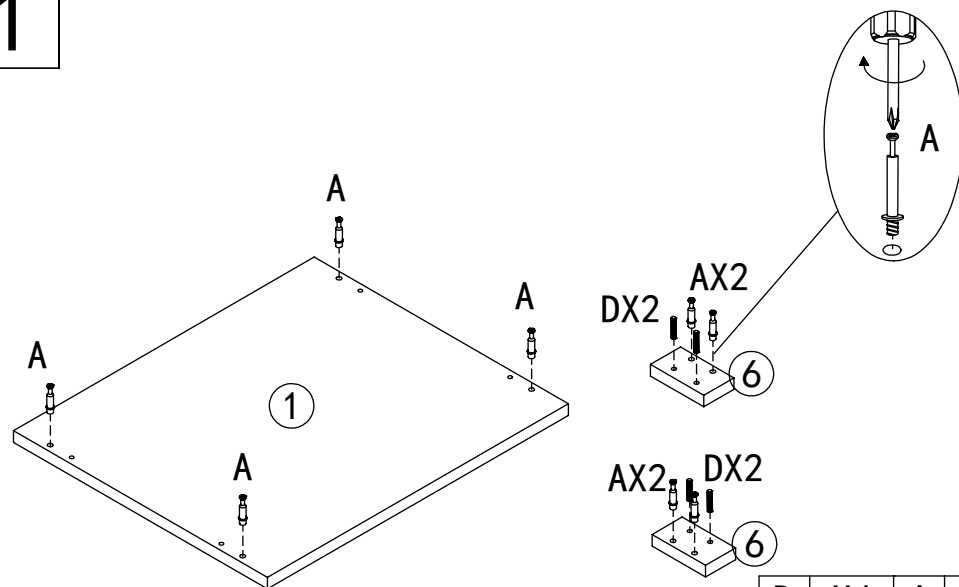



D	X4	A	X8

2

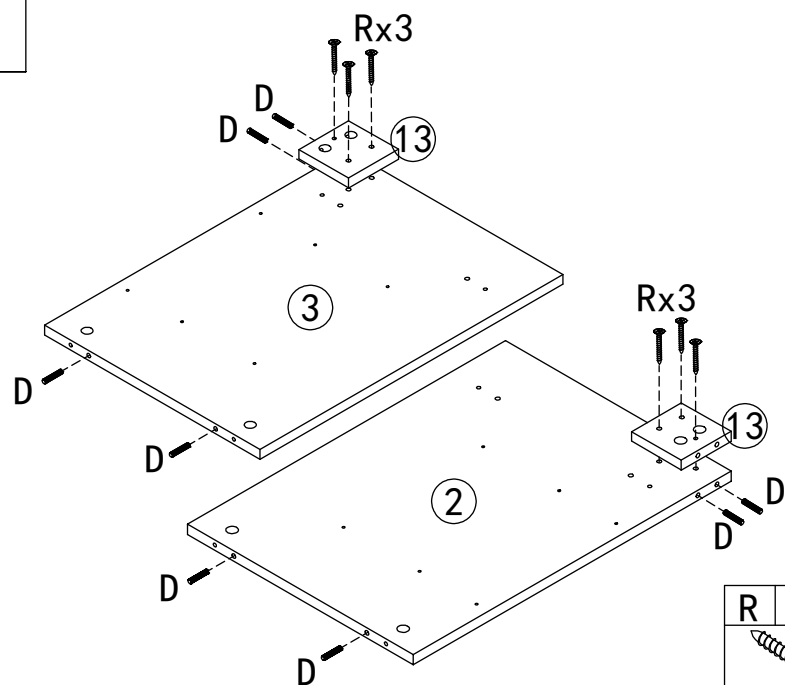


R	X6	D	X8

3

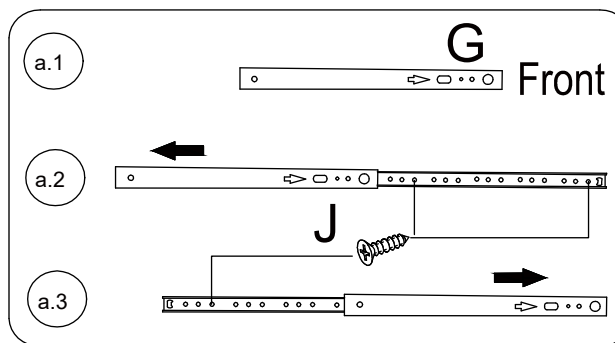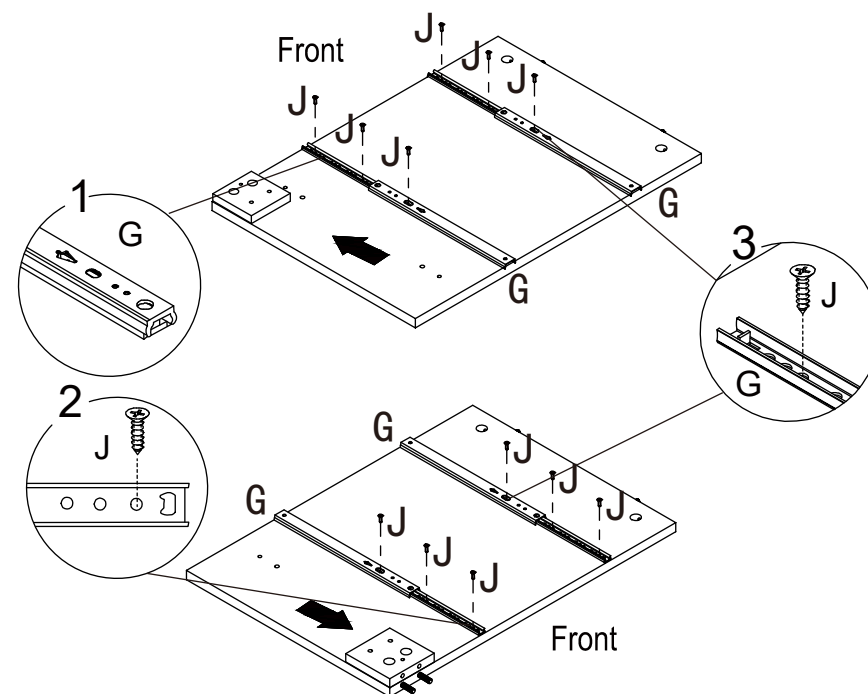


G	X2	J	X12


4

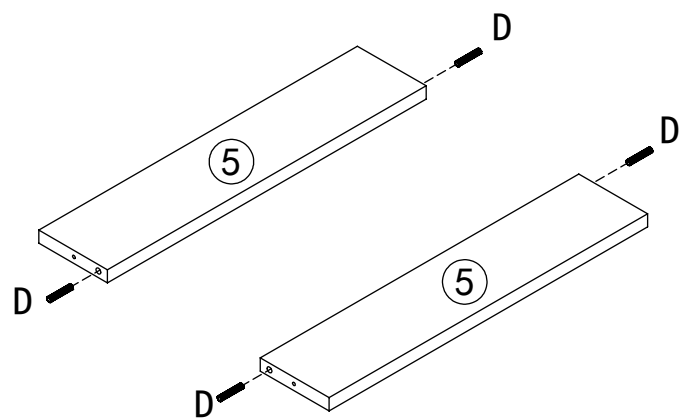



D X4






5

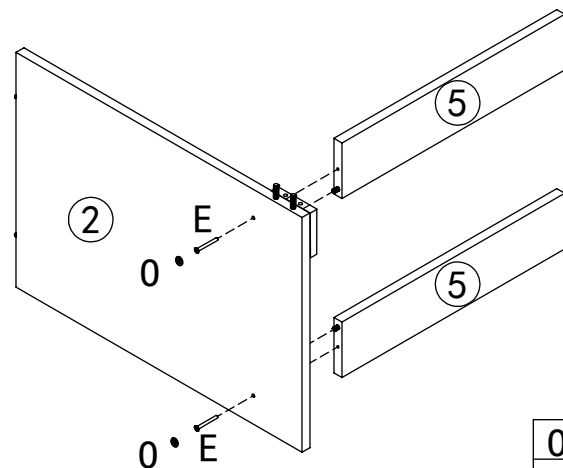

O X2 E X2

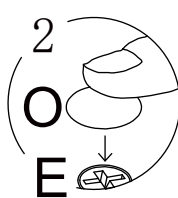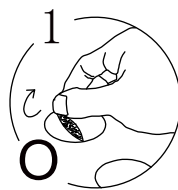





6

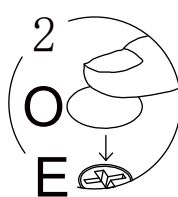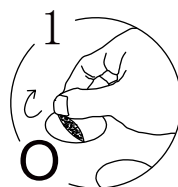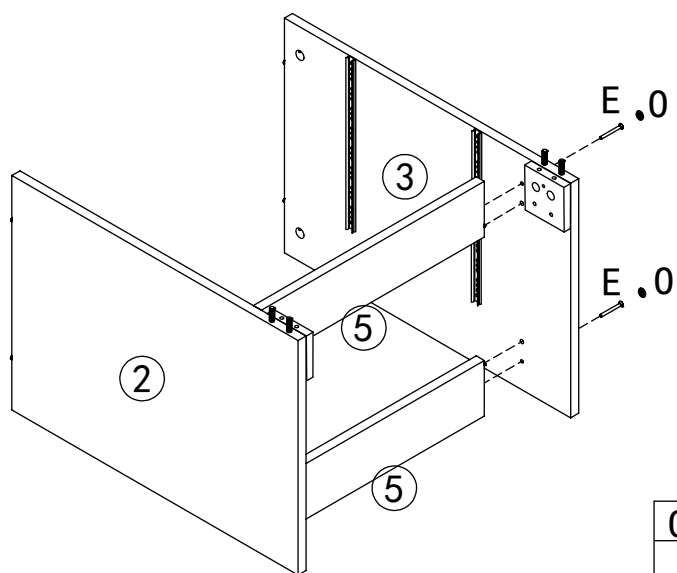

O X2 E X2




7

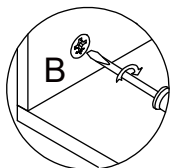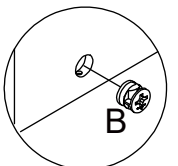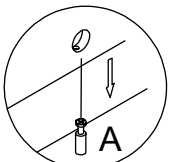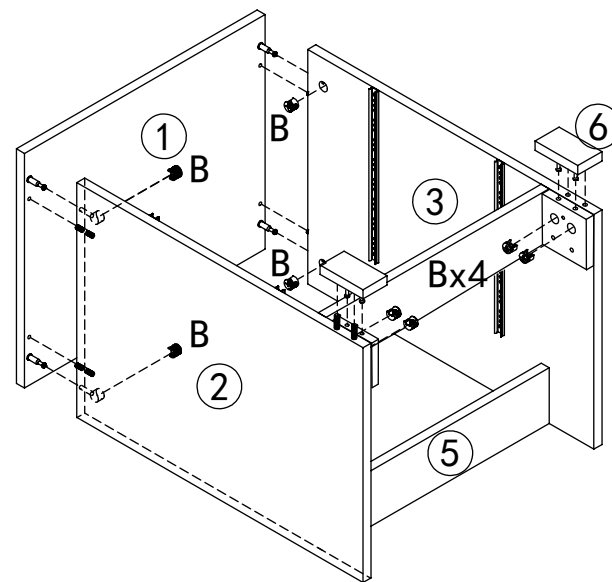


B X8




8

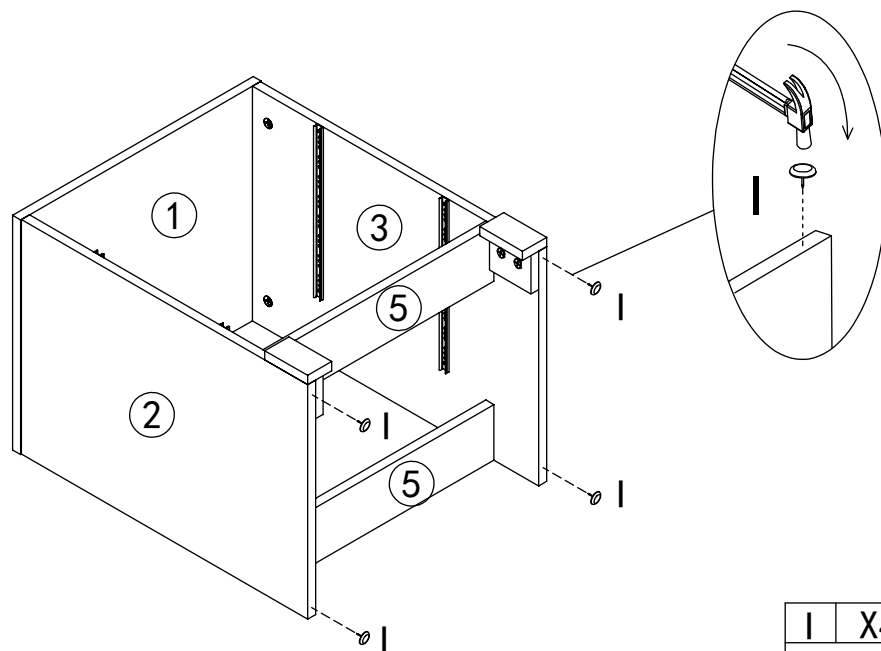


10

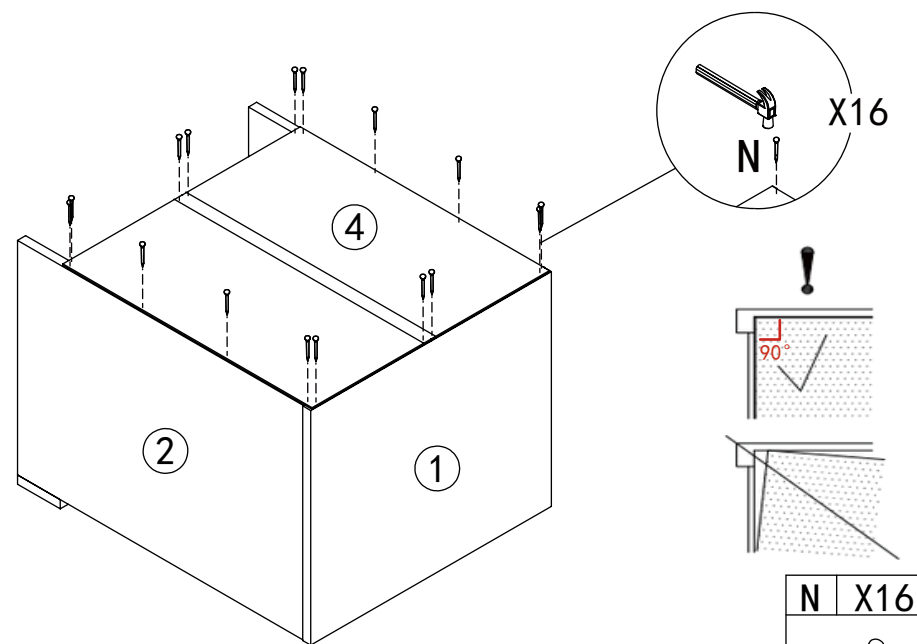

9

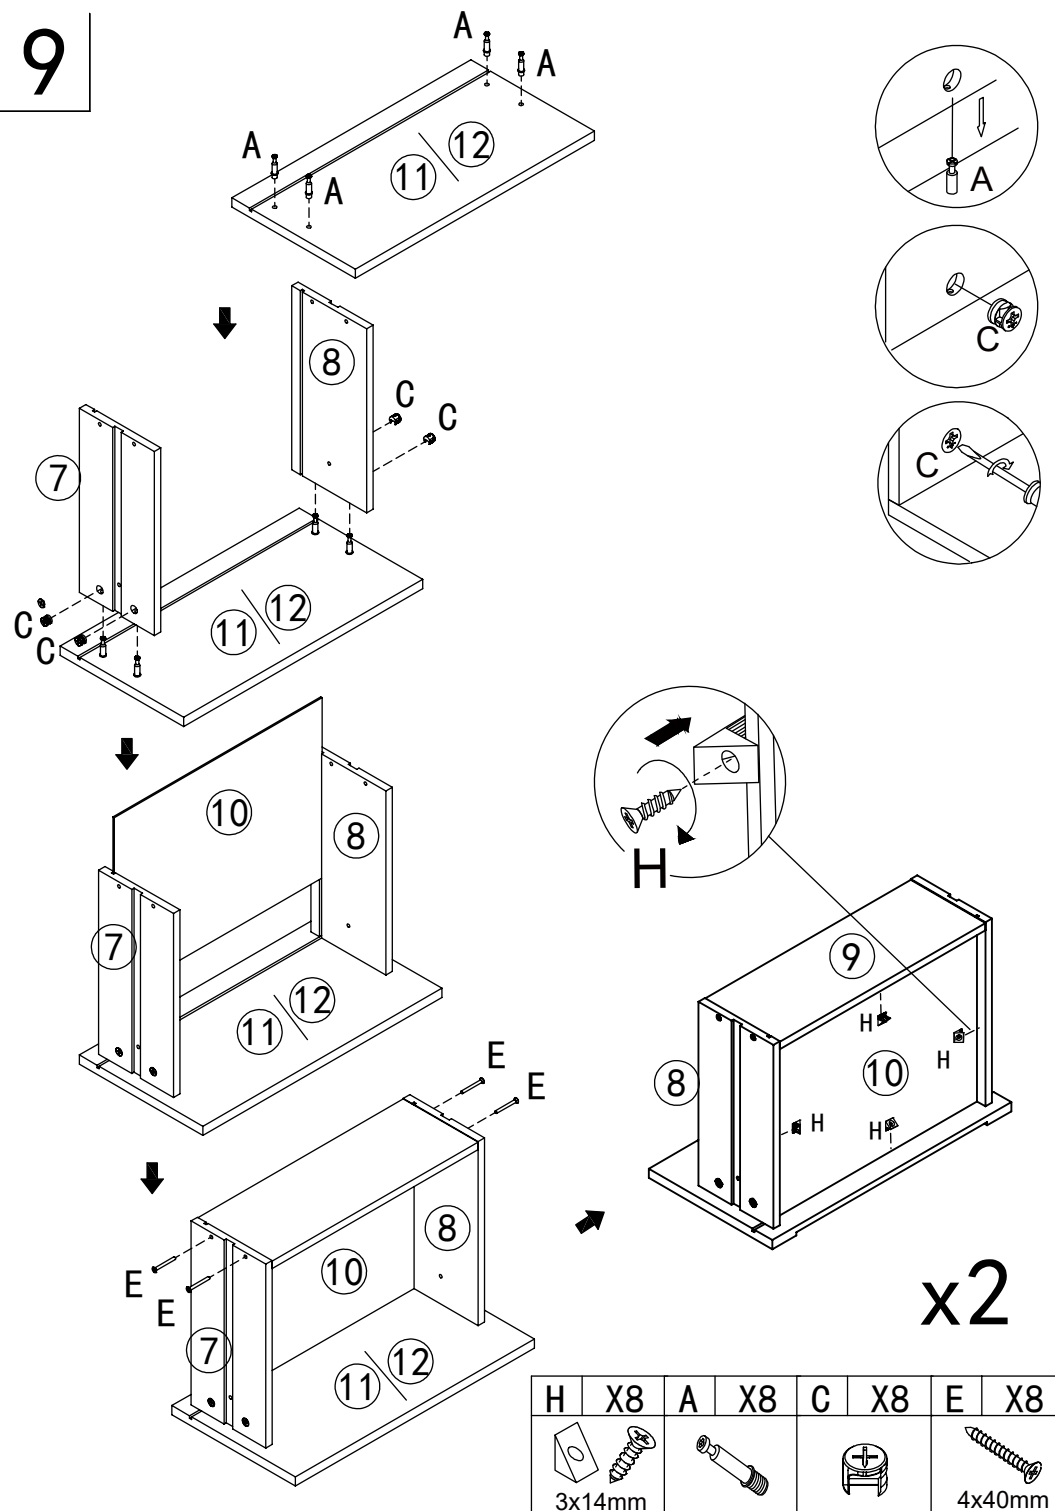


11

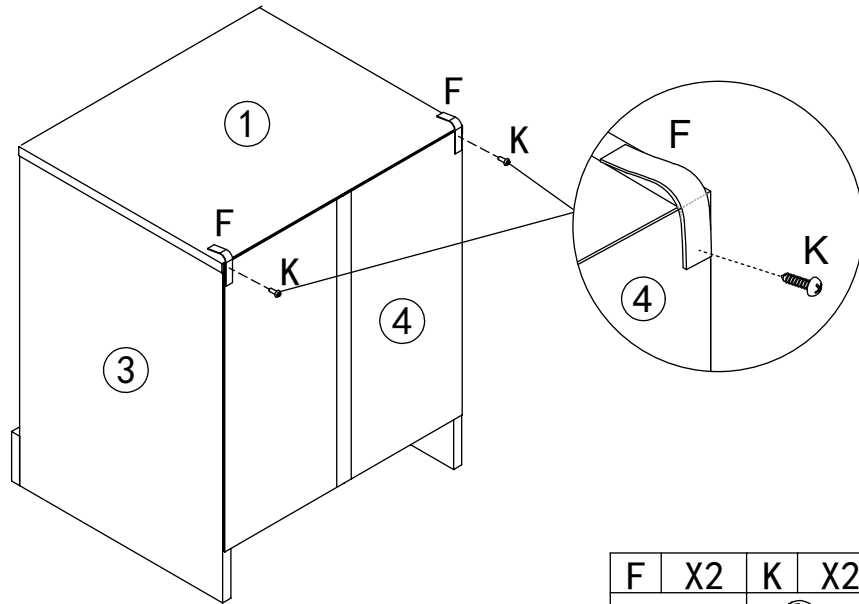


F	X2	K	X2
		4x14mm	

12




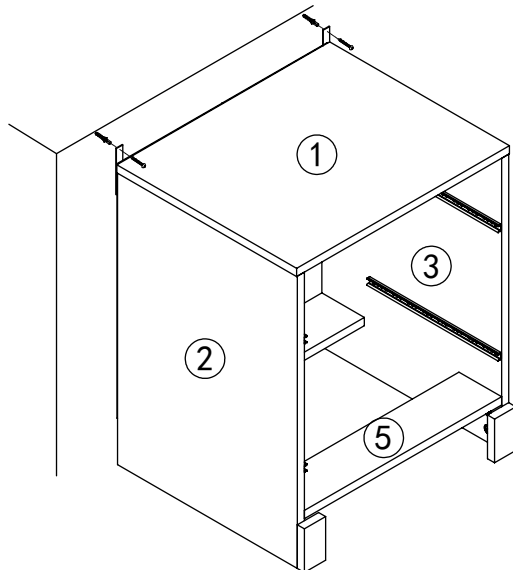


Pre-drilled hole at wall

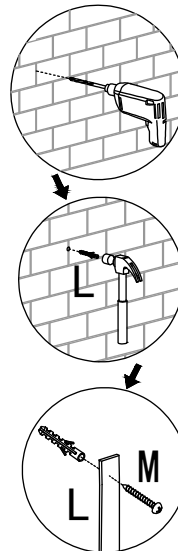

L	X2	M	X2
		M4x30mm	

13

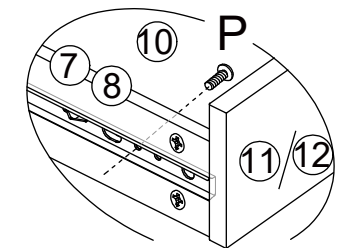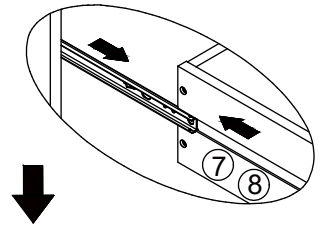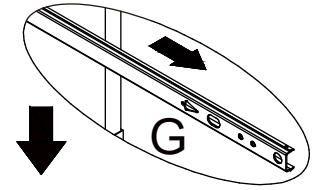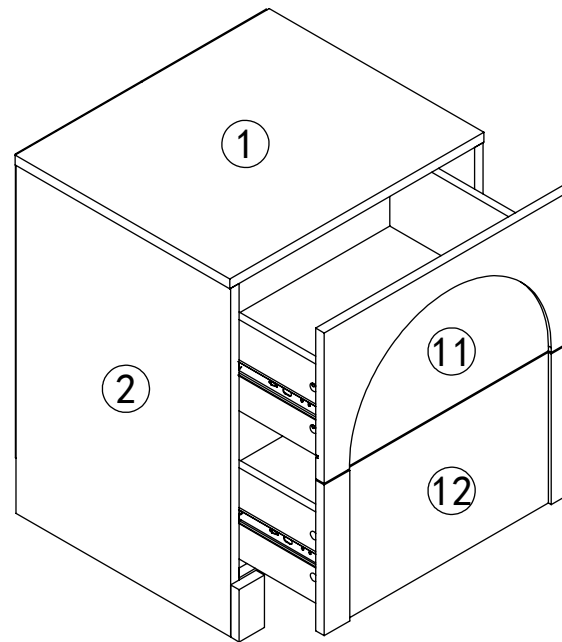

Screw from the inside of the drawers

P	X4
4x11mm	