
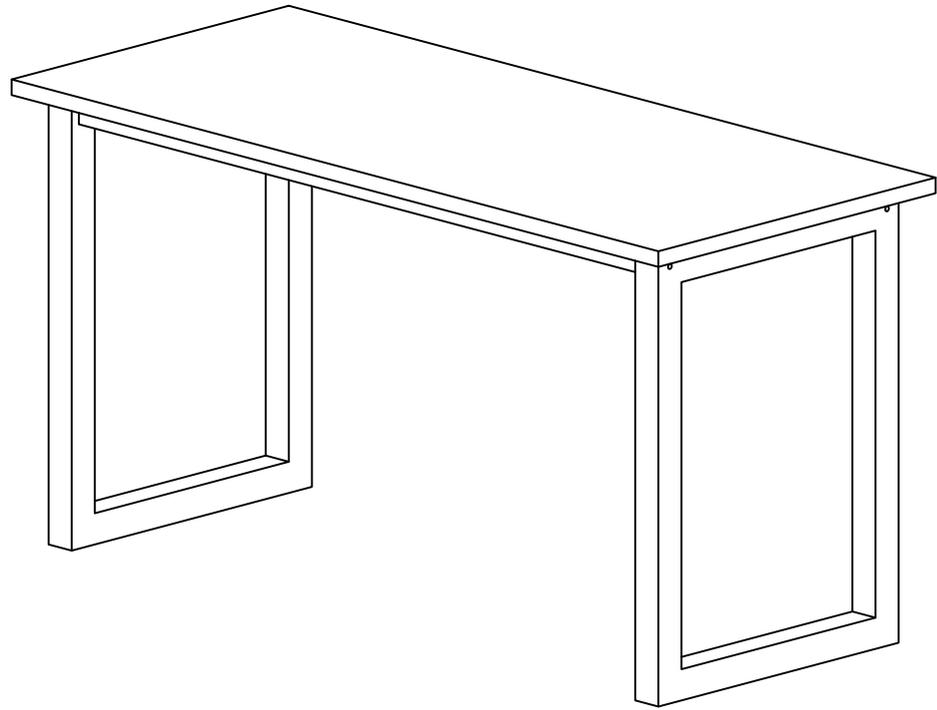






Assembly Instructions



HARDWARE




A		M8X15	8
C		M5	1
E		Felt pad 48x48	4

B		M6X55	4
D		M6X65	2
F		M4	1

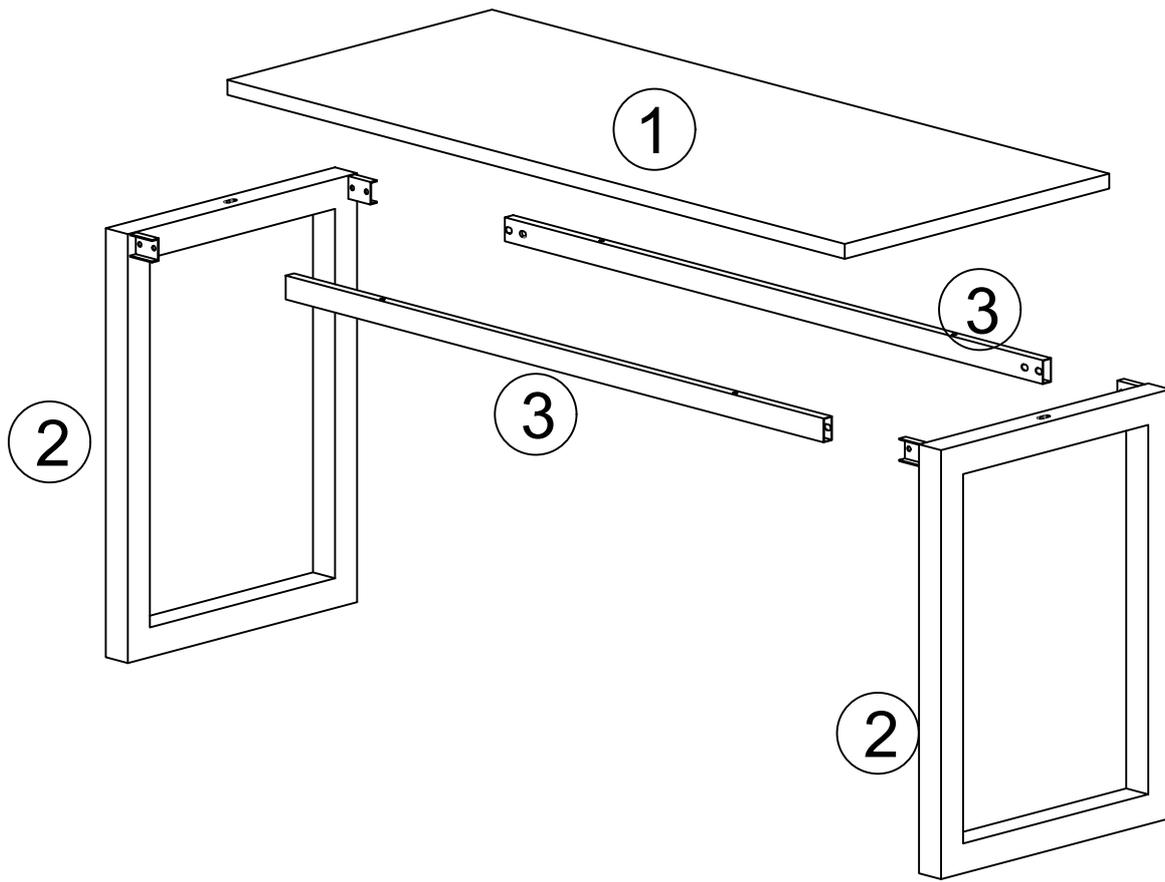

1

Stick the felt pad (E) x 4pcs to the bottom of part [2].

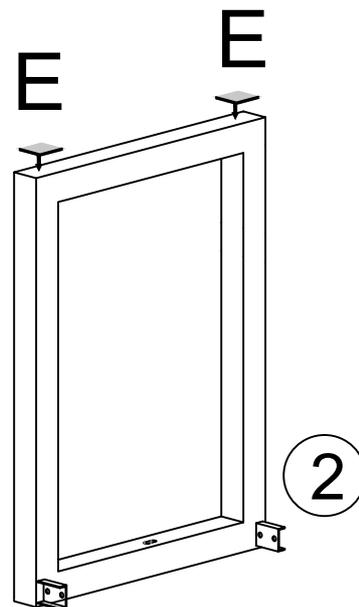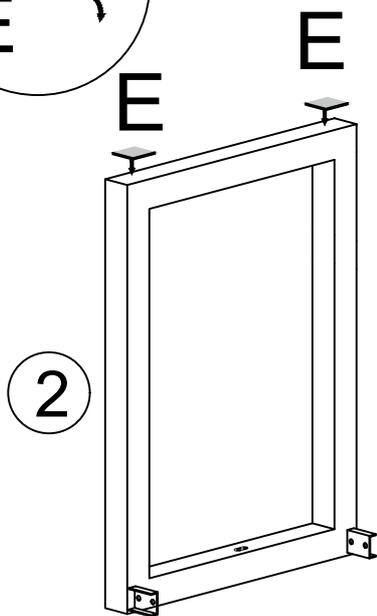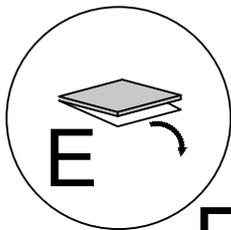


E



Felt pad 48x48



4

2

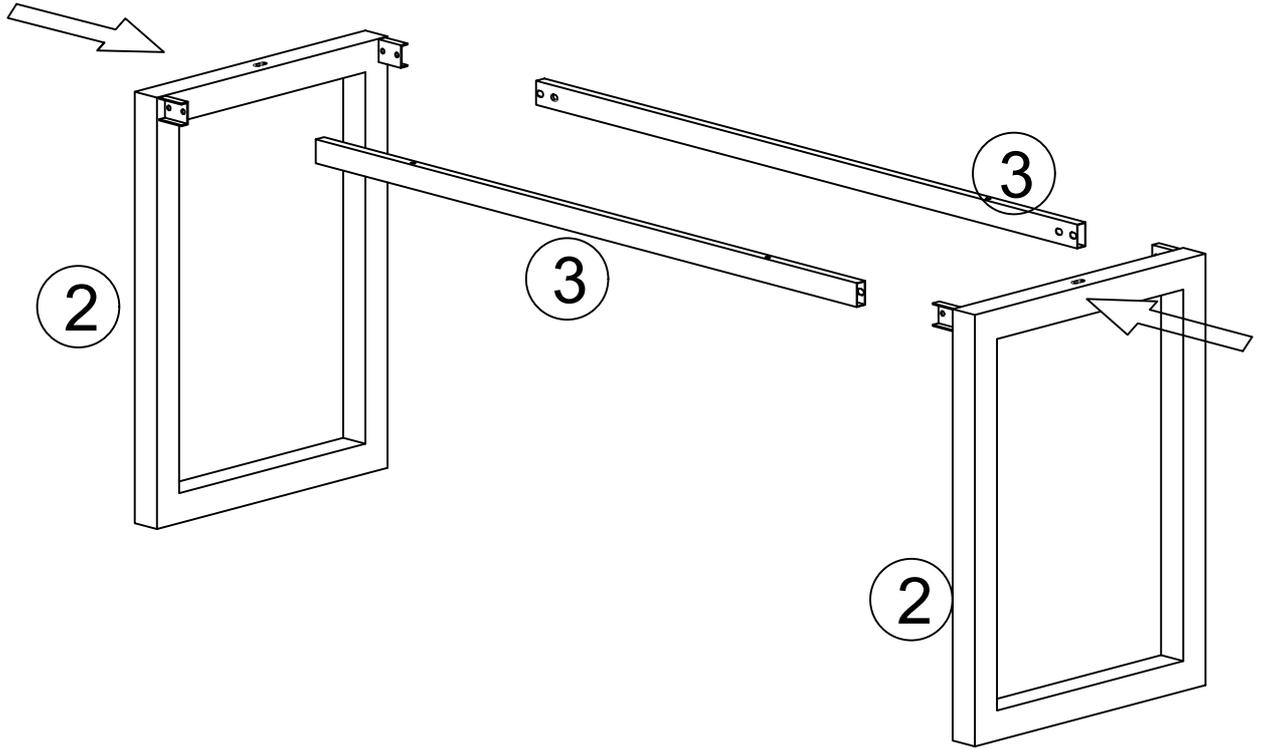

3

Attach panel [3] to unit [2] and secure with Allen bolt (A) x8pcs. Tighten with Allen key(C).

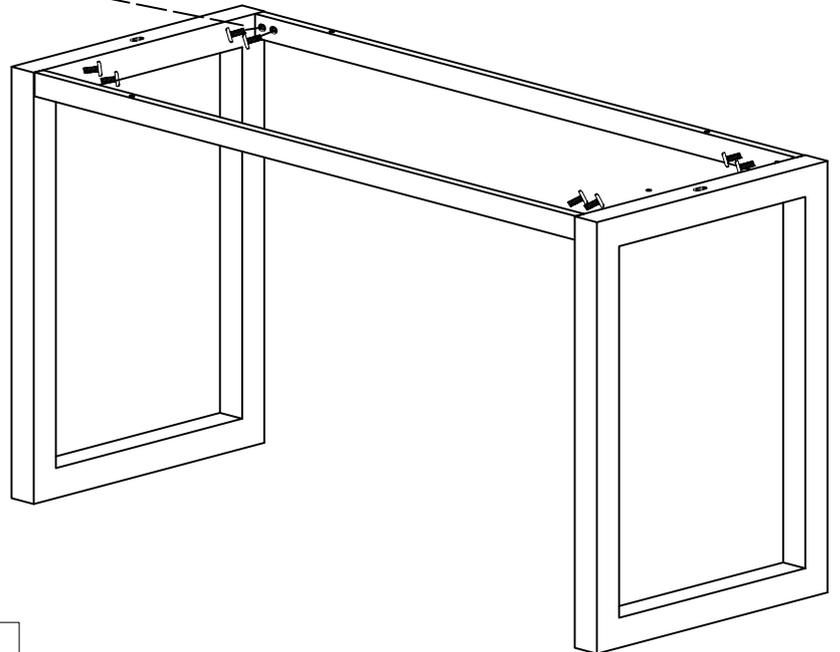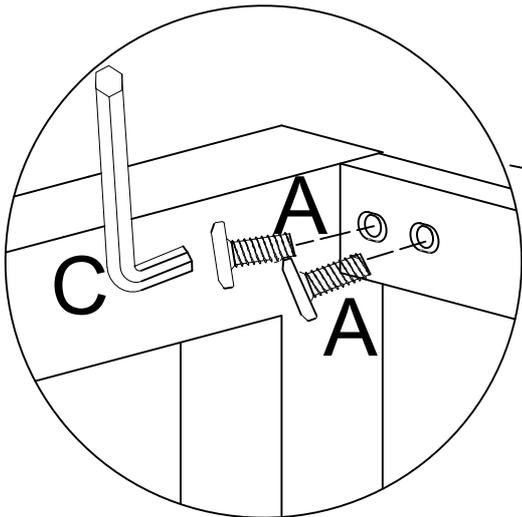


A



M8X15

8

4

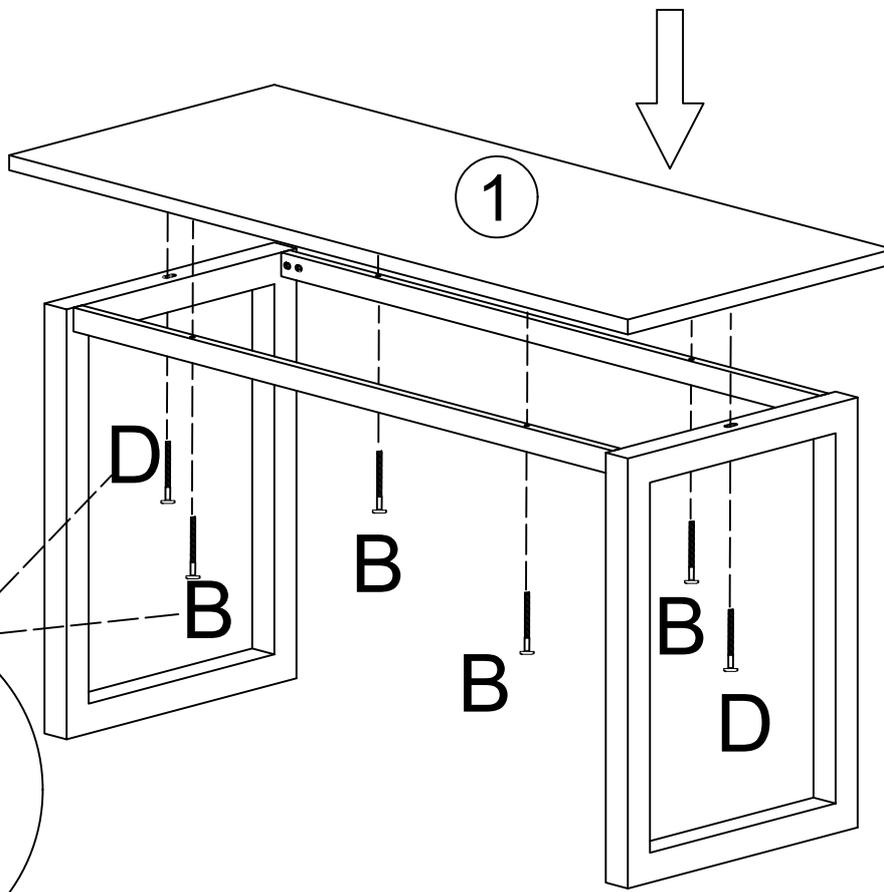

Attach panel [1] to panel [3] and unit [2] and secure with bolt [B][D]. Tighten with Allen key(F).

B

M6X55

4**D**

M6X65

2

5

