


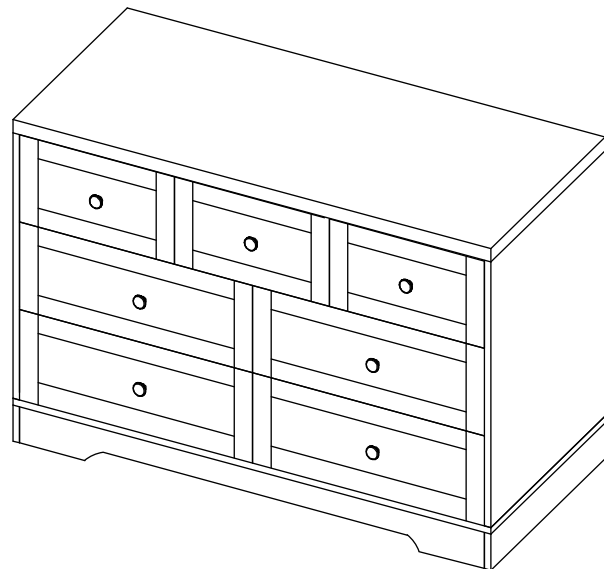


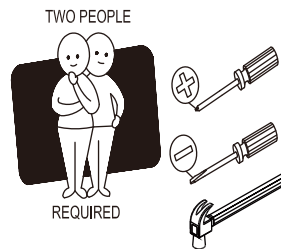


A	x44	B	x16	C	x24	D	x48	E	x8	F	x2
											
						4x40mm				4x30mm	
G	x2	H	x2	I	x2	J	x42	K	x14	L	x42
											
4x14mm						3x14mm				3x12mm	
M	x14	N	x7	O	x7	P	x28	Q	x4	R	x4
											
4x11mm											
S	x1	T	x7								
											
		4x8mm									

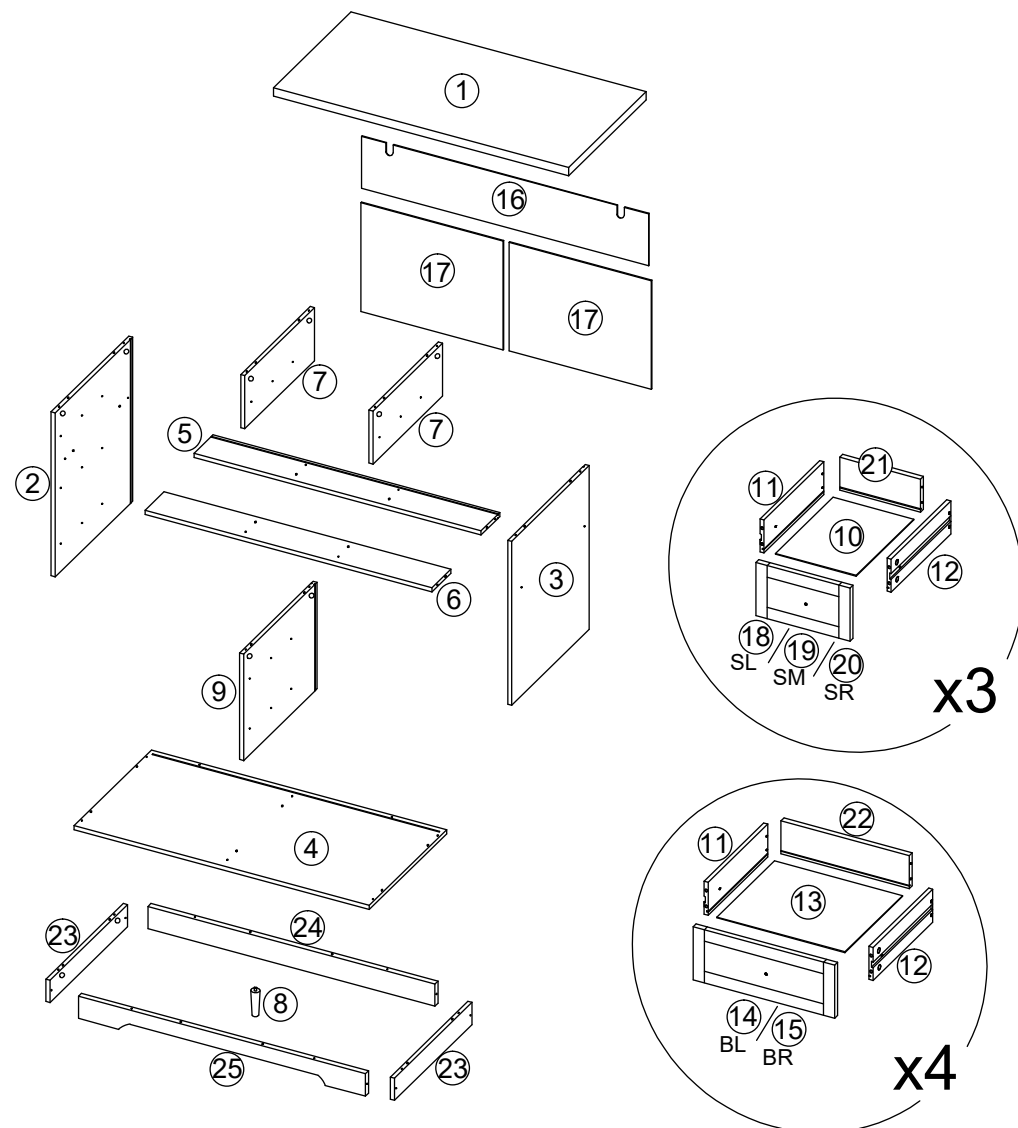

1

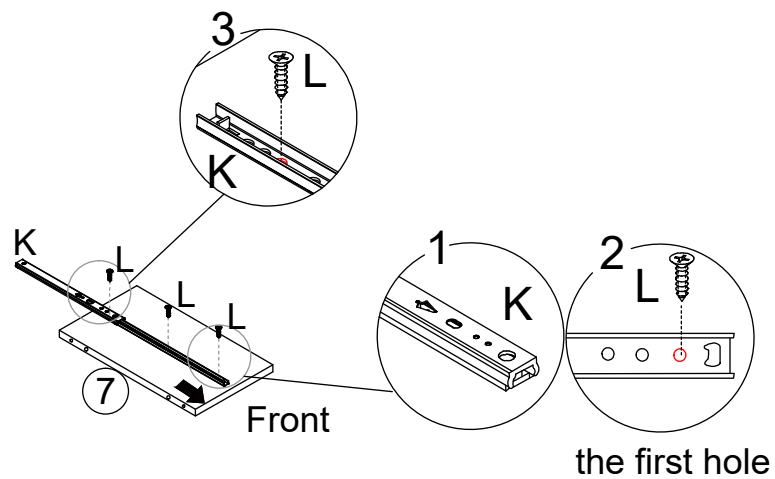


180°

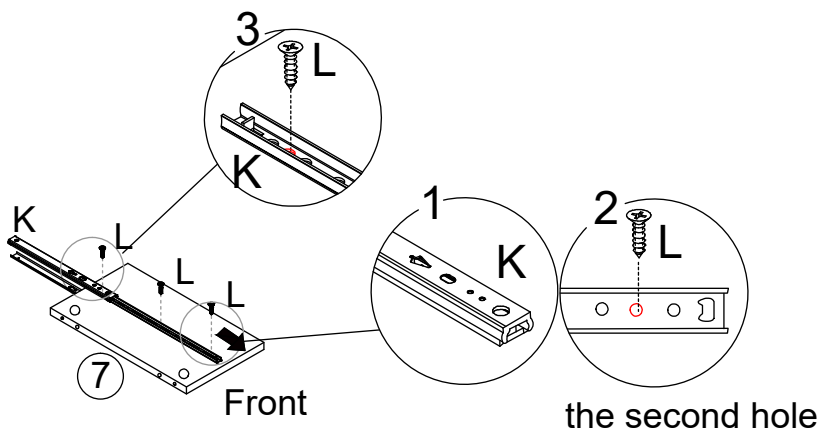

a.1



a.2

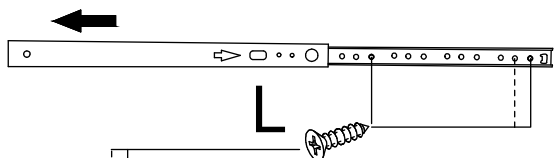


a.3




x2

K	x4	L	x12
			
		3x12mm	

2

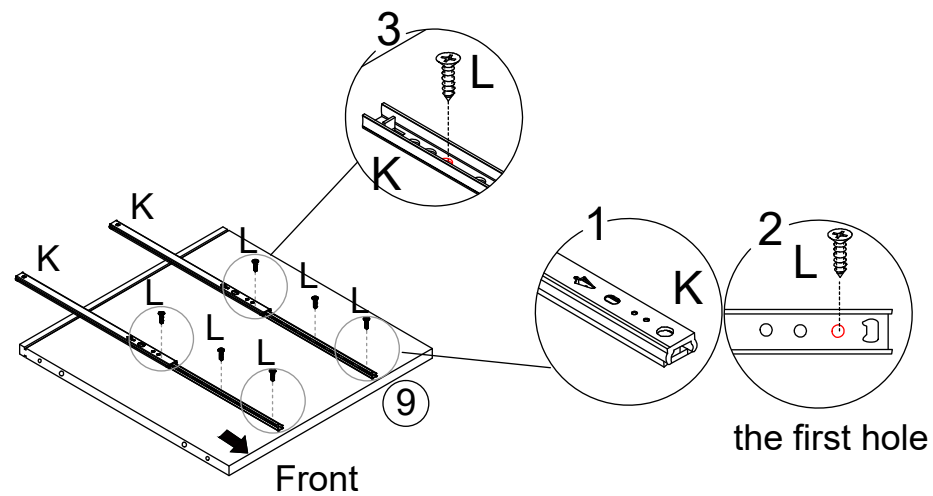


180°

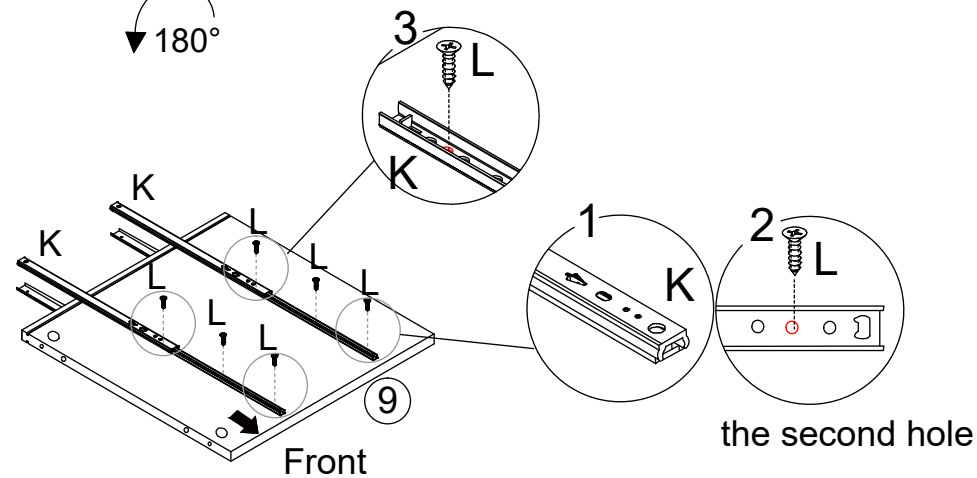

a.1



a.2

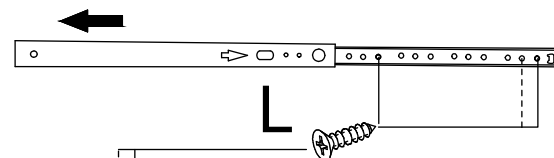


a.3




K	x4	L	x12
			
		3x12mm	


3

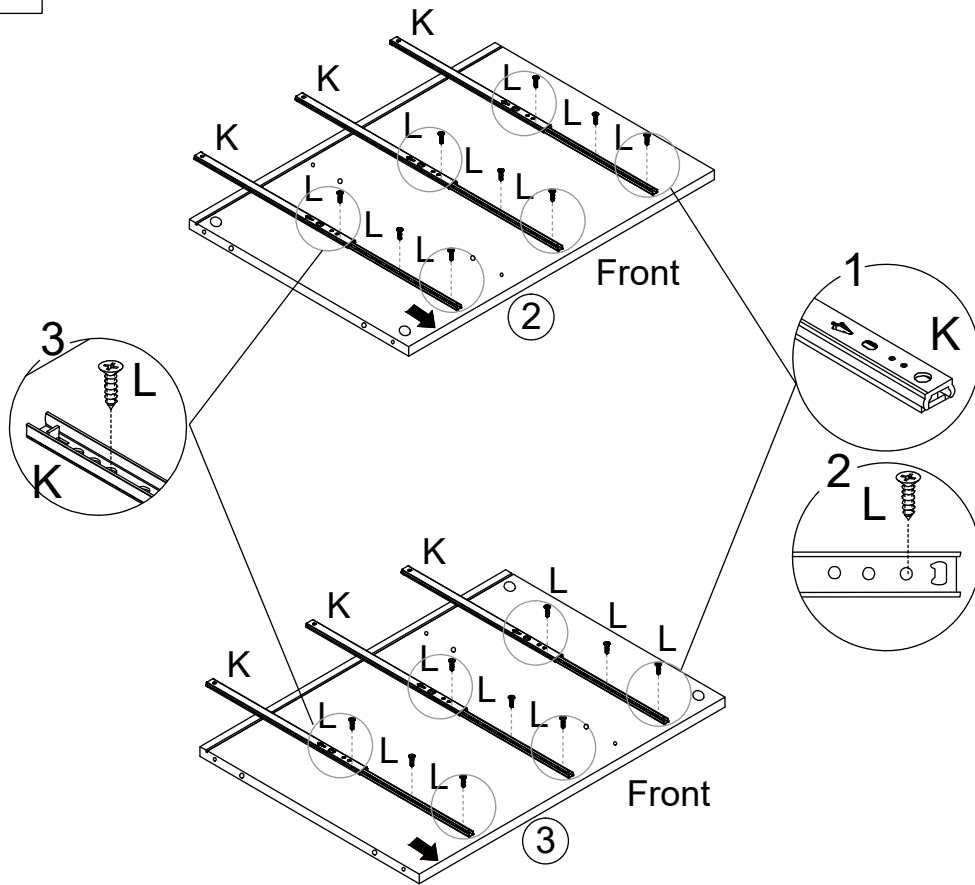


a.1



a.2

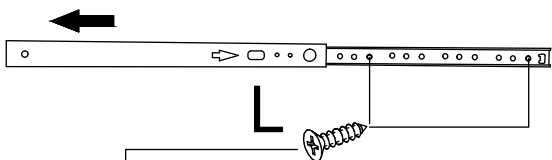



a.3




K	x6	L	x18
			
		3x12mm	

4

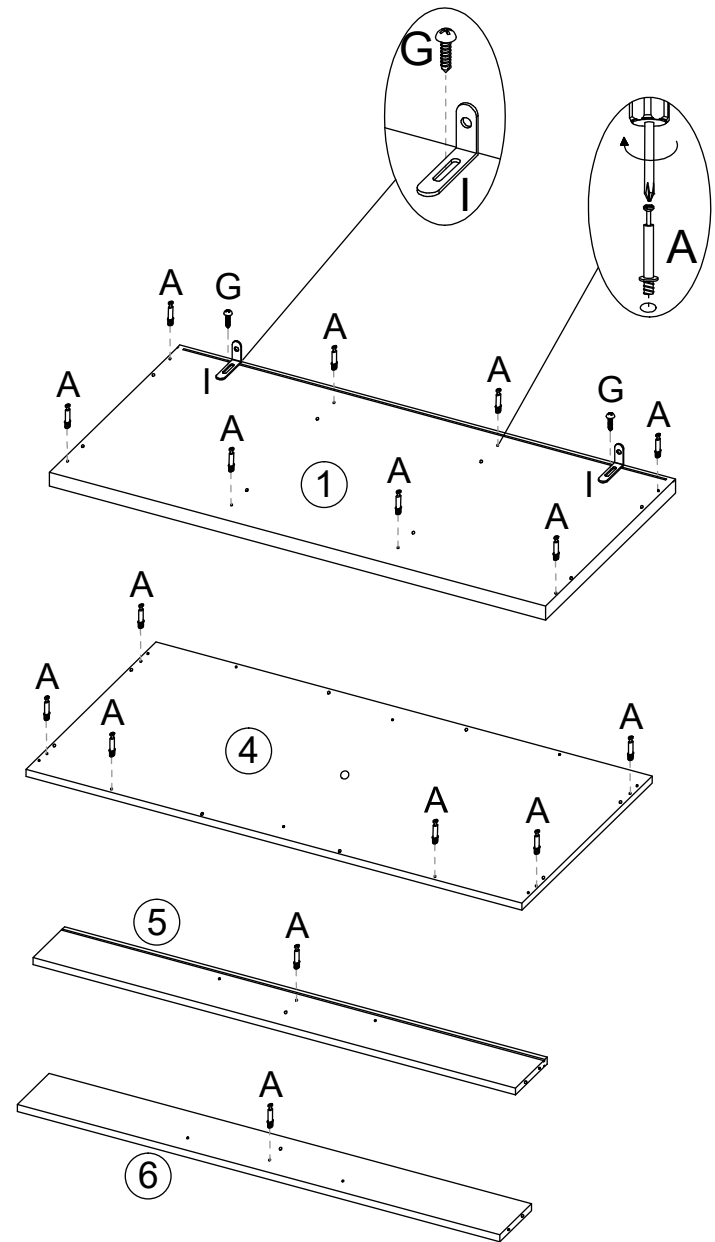



A	x16	G	x2	I	x2
					
		4x14mm			

5

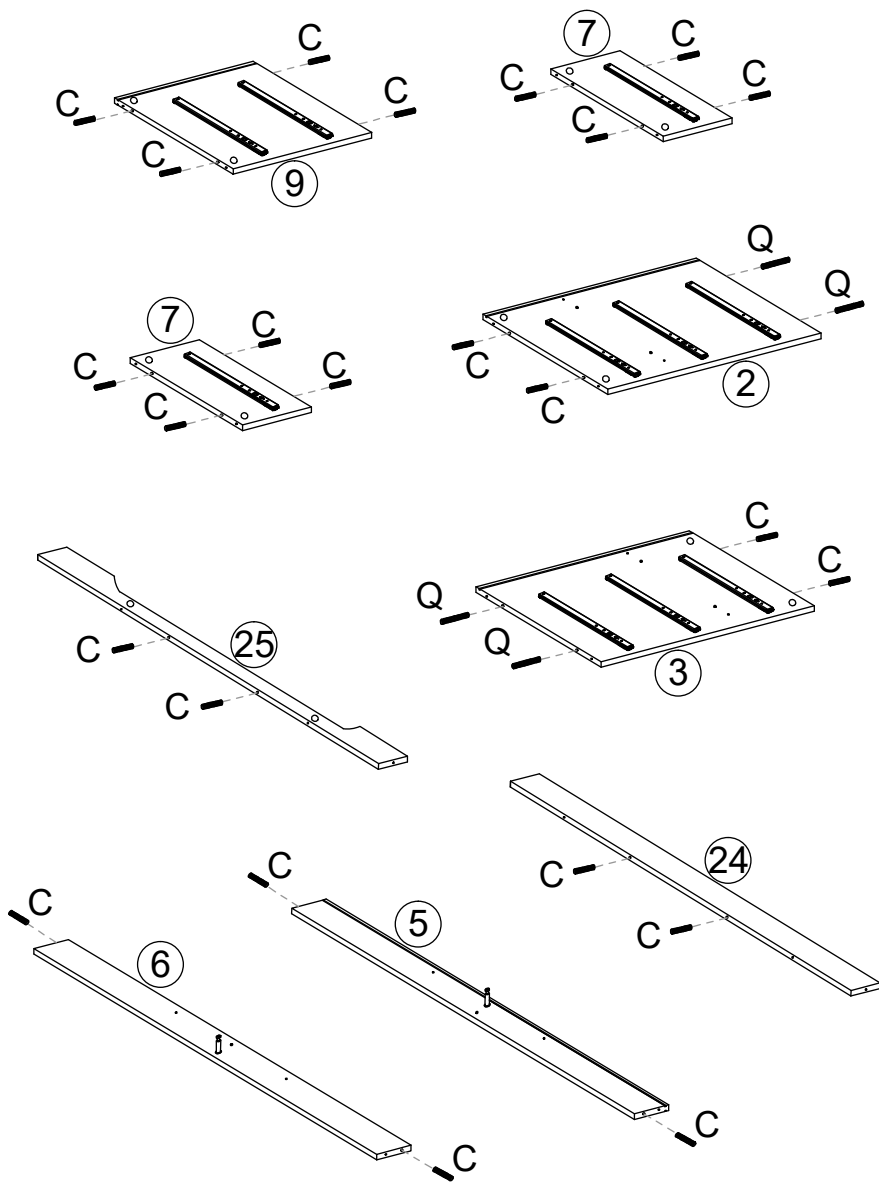


C	x24	Q	x4
			

6

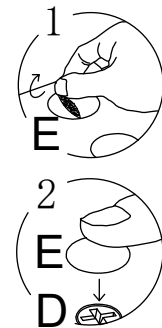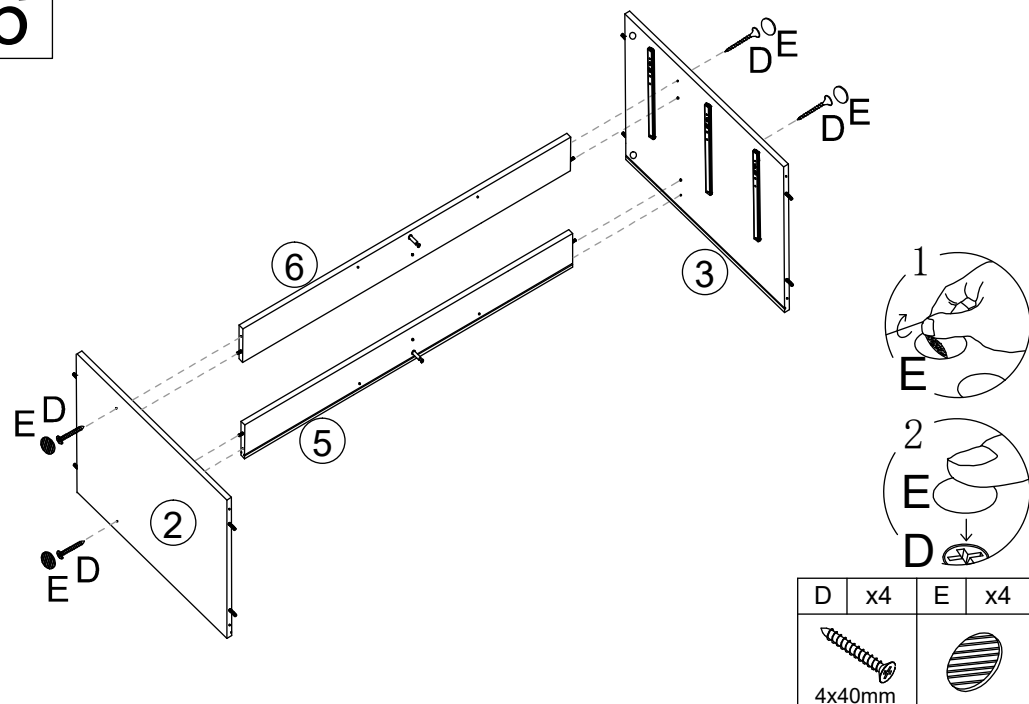






D	x4	E	x4
			
4x40mm			

7


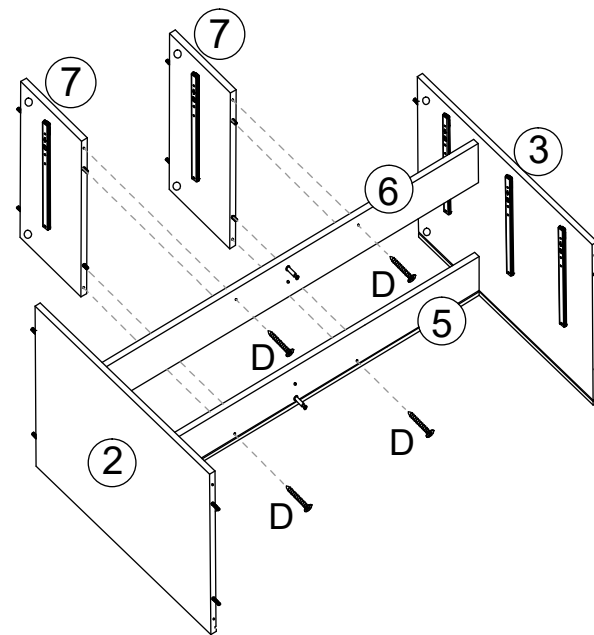


D	x4
	
4x40mm	


8

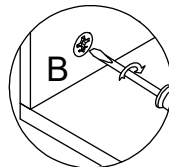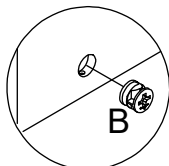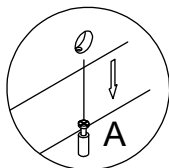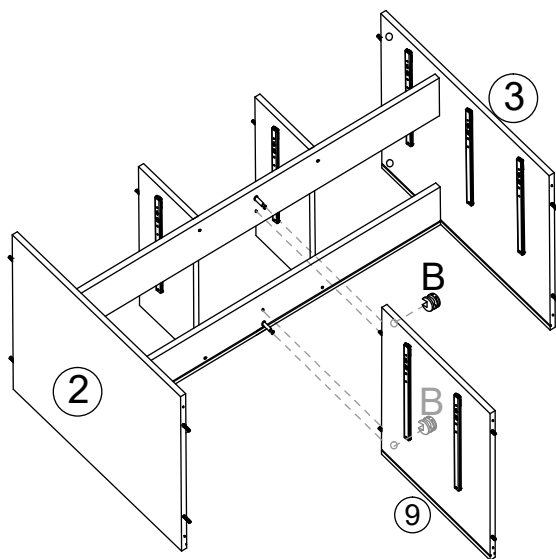






10

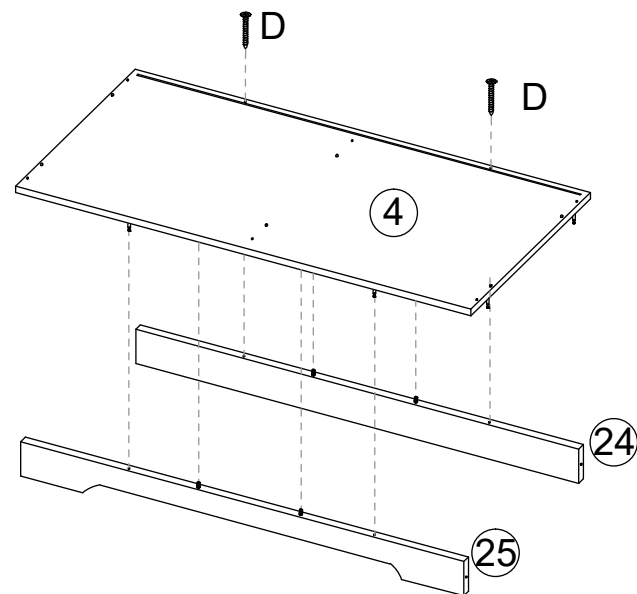


9

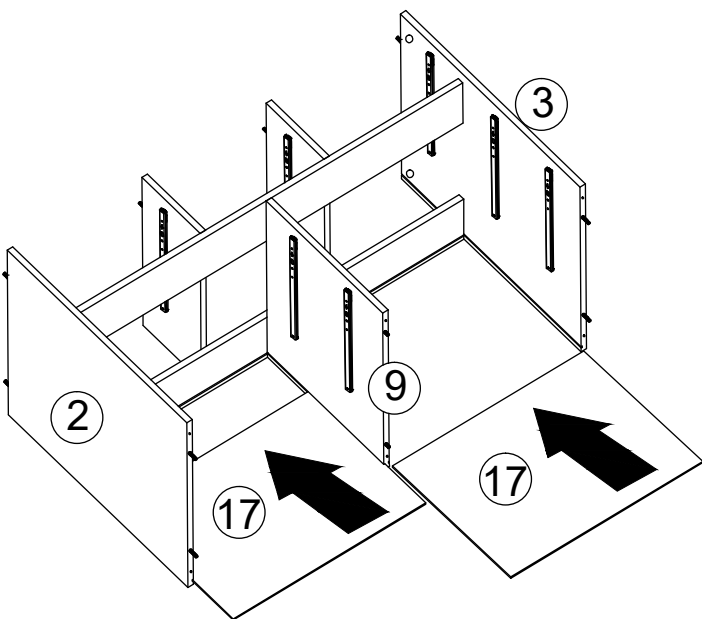

11

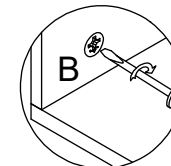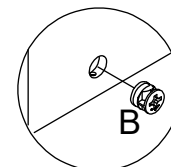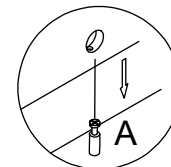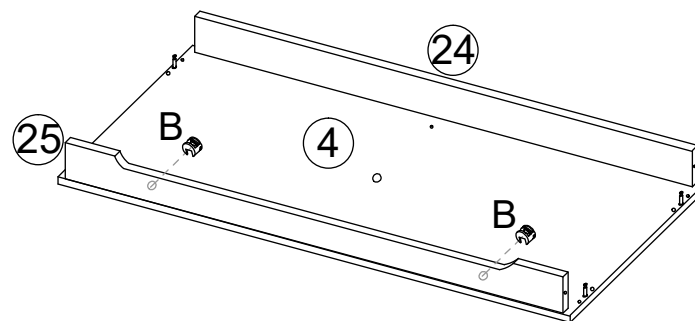



12

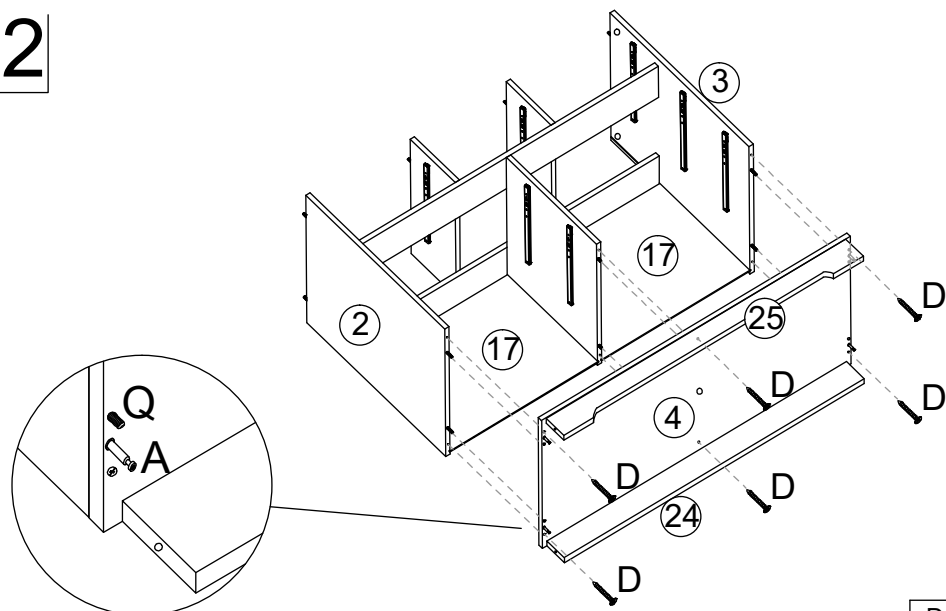

afeter this step,
ready is as pic.



D	x6
	
4x40mm	

14

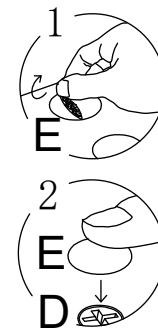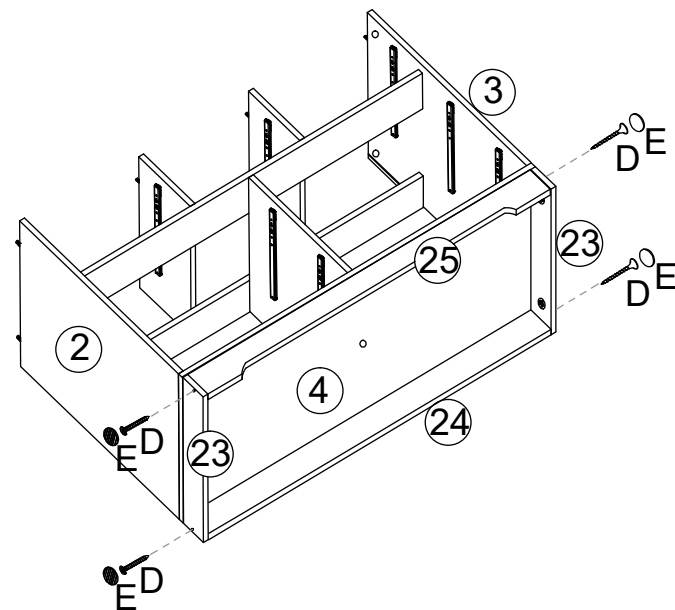


D	x4	E	x4
			
4x40mm			

13

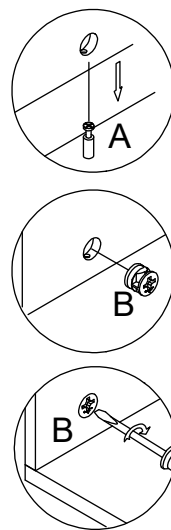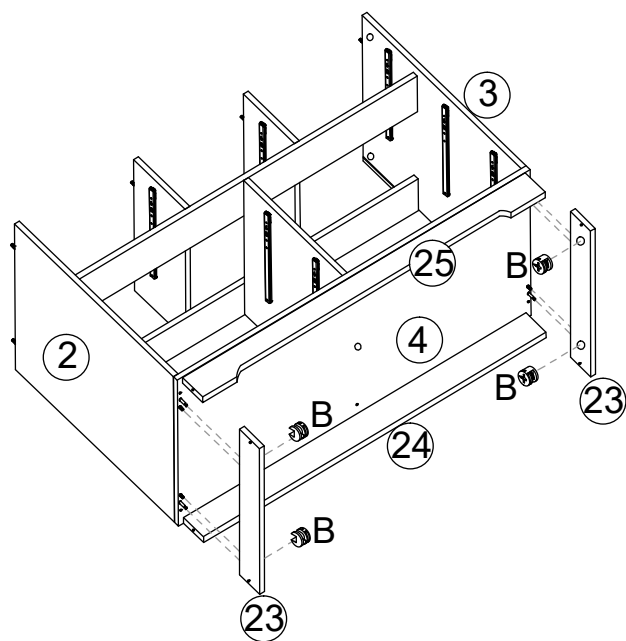


B	x4
	

15

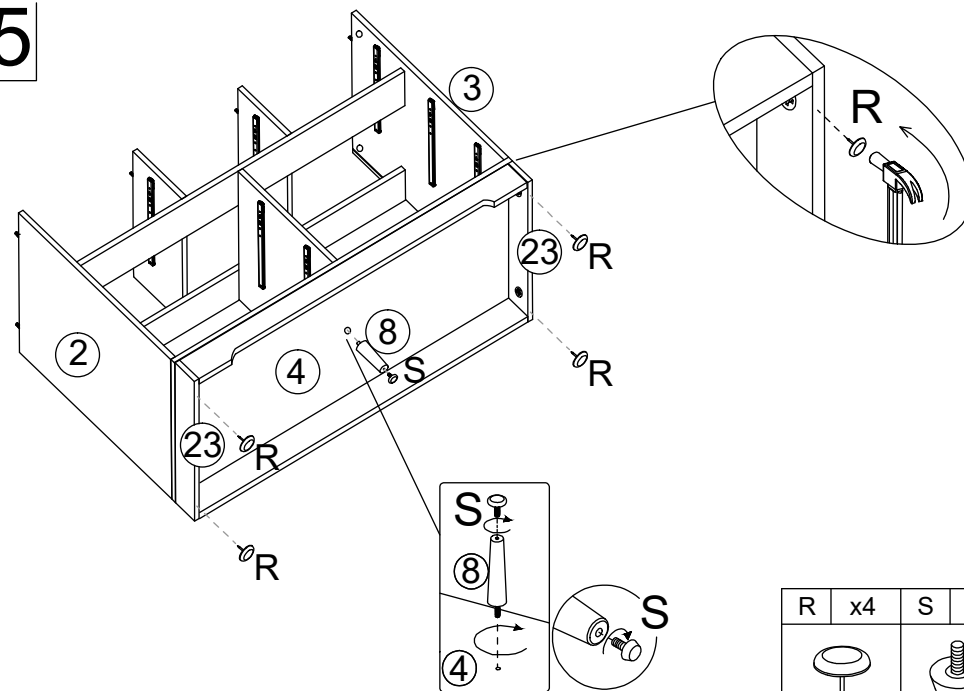


R	x4	S	x1
			

16

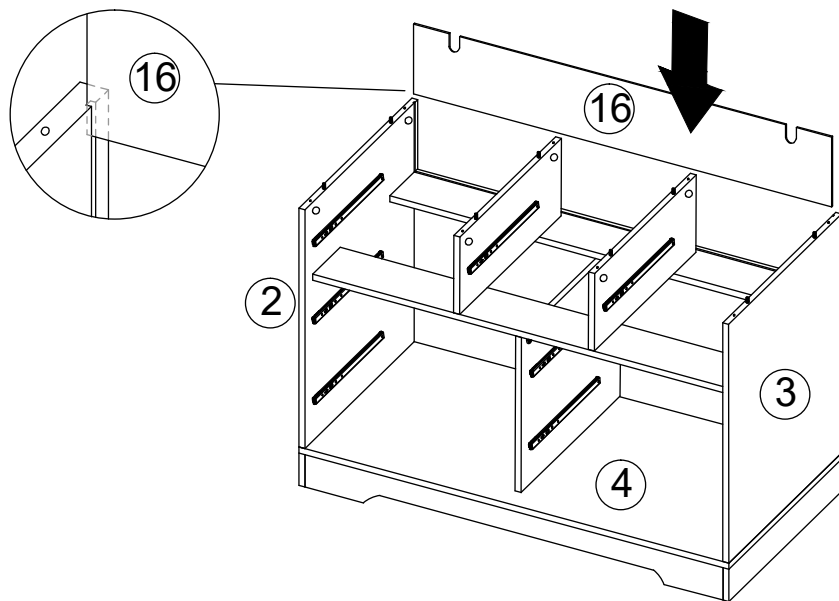


17

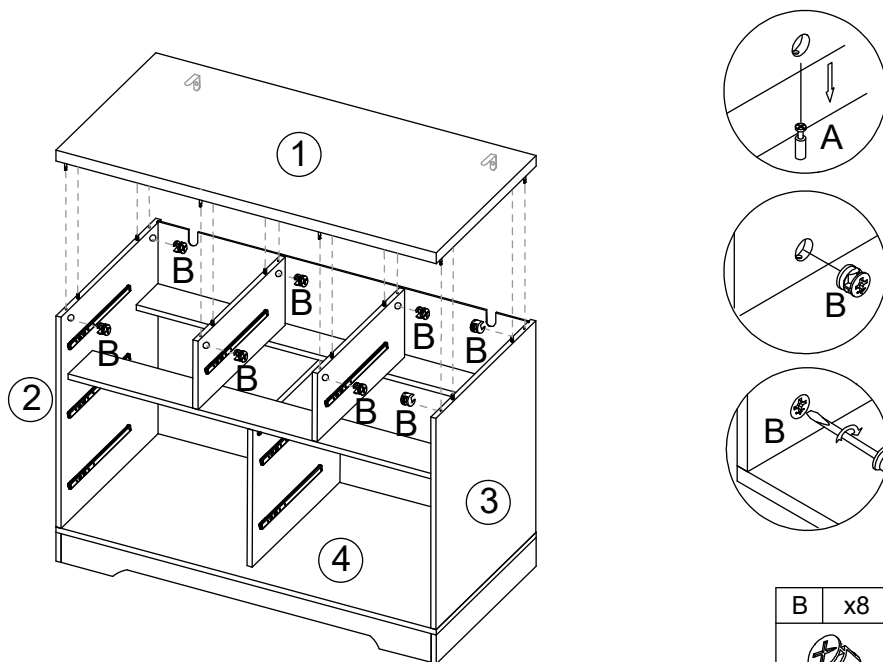

B	x8


18

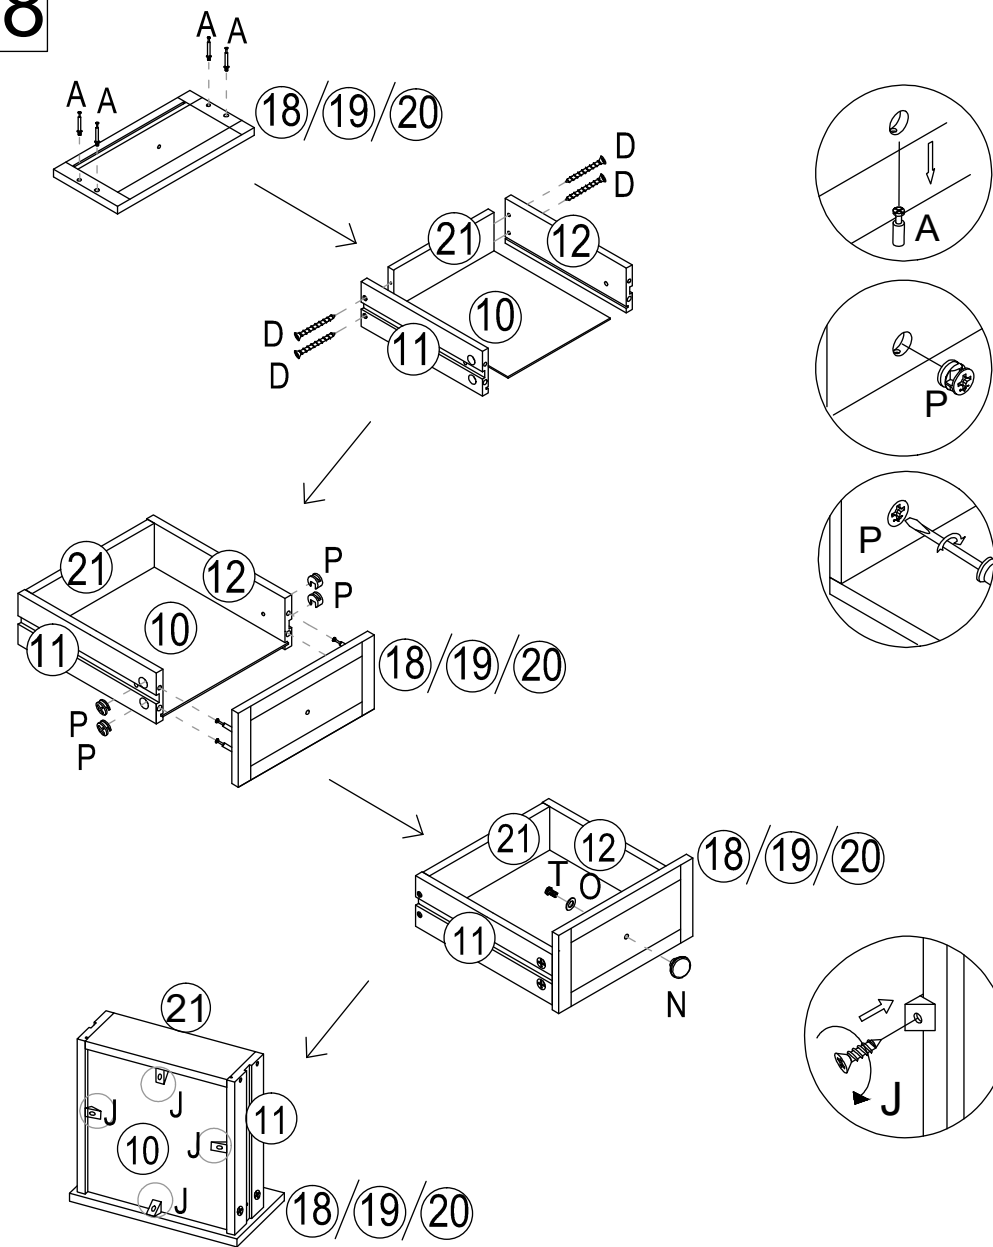

x3

P	x12	A	x12	D	x12	J	x12	T	x3	N	x3	O	x3
				4x40mm		3x14mm		4x8mm					


19

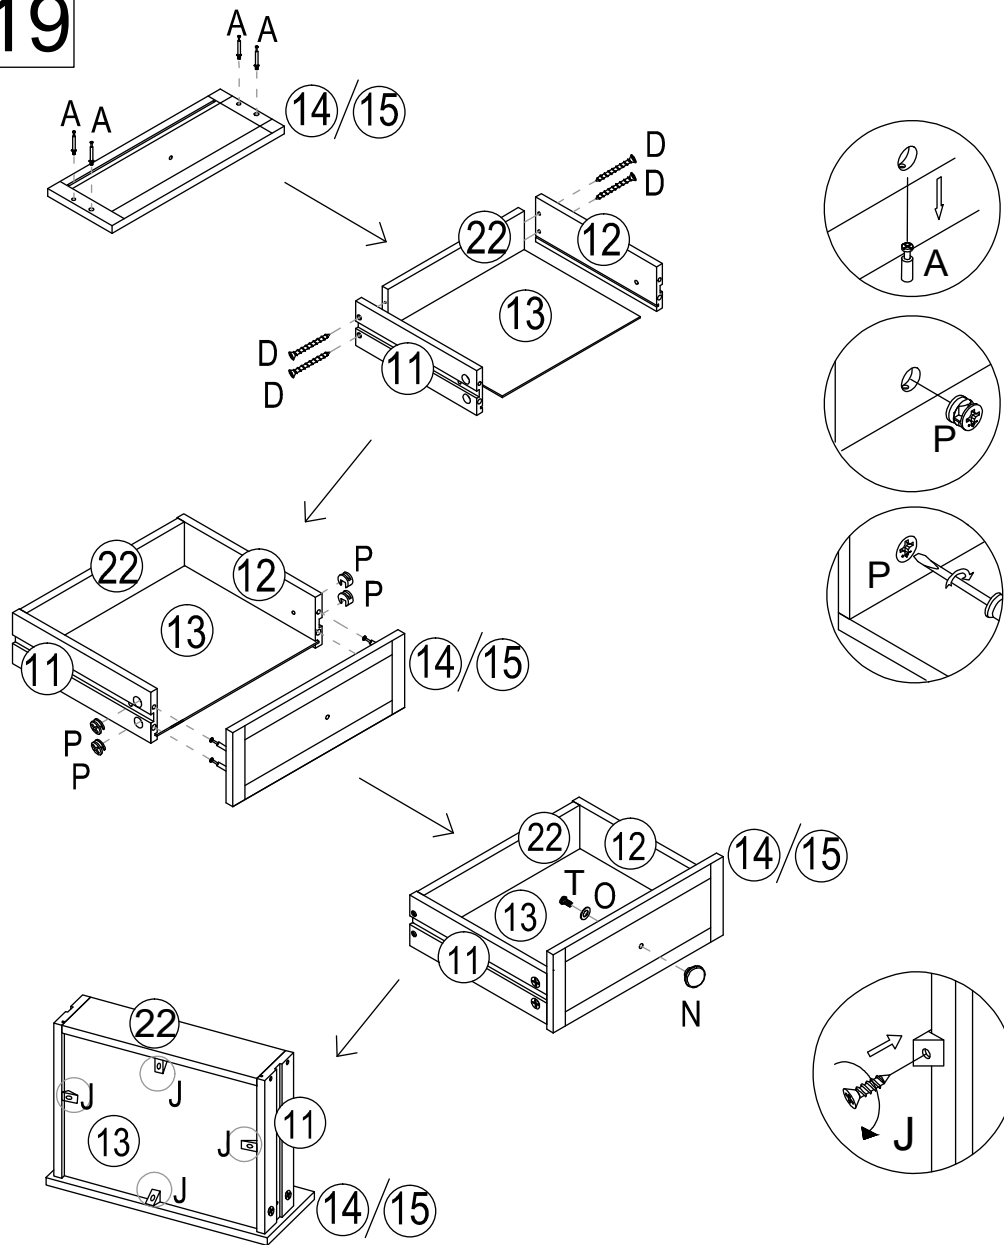


x4

P	x16	A	x16	D	x16	J	x16	T	x4	N	x4	O	x4
				4x40mm		3x14mm		4x8mm					

20

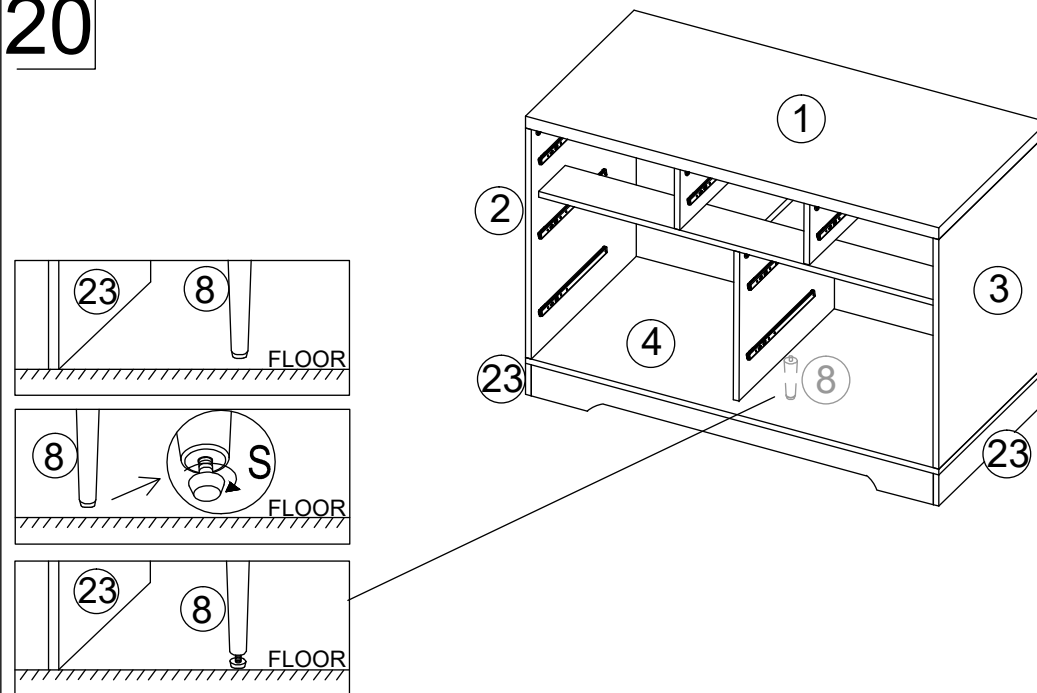



21

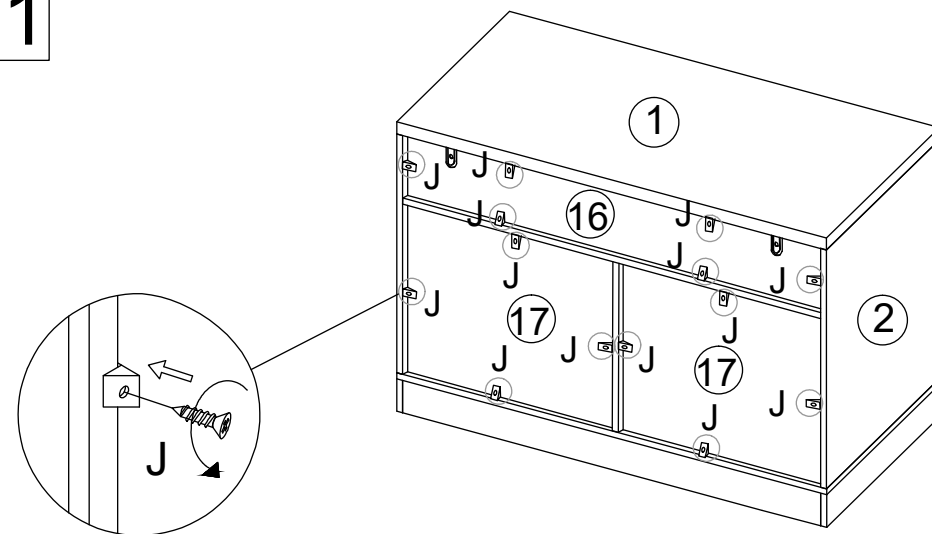

J	x14
	3x14mm


22

Pre-drilled hole at wall

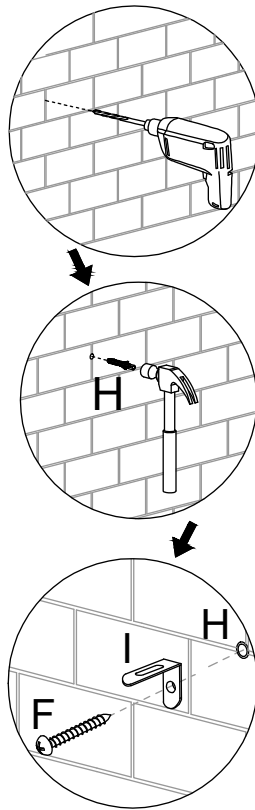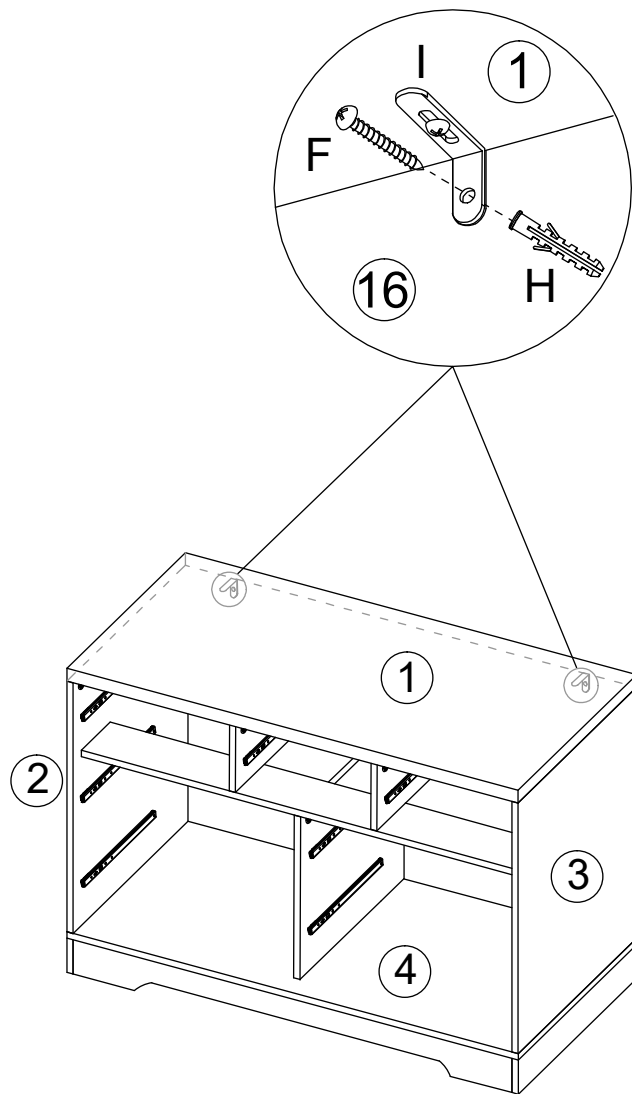

H	x2	F	x2
			
		4x30mm	


23

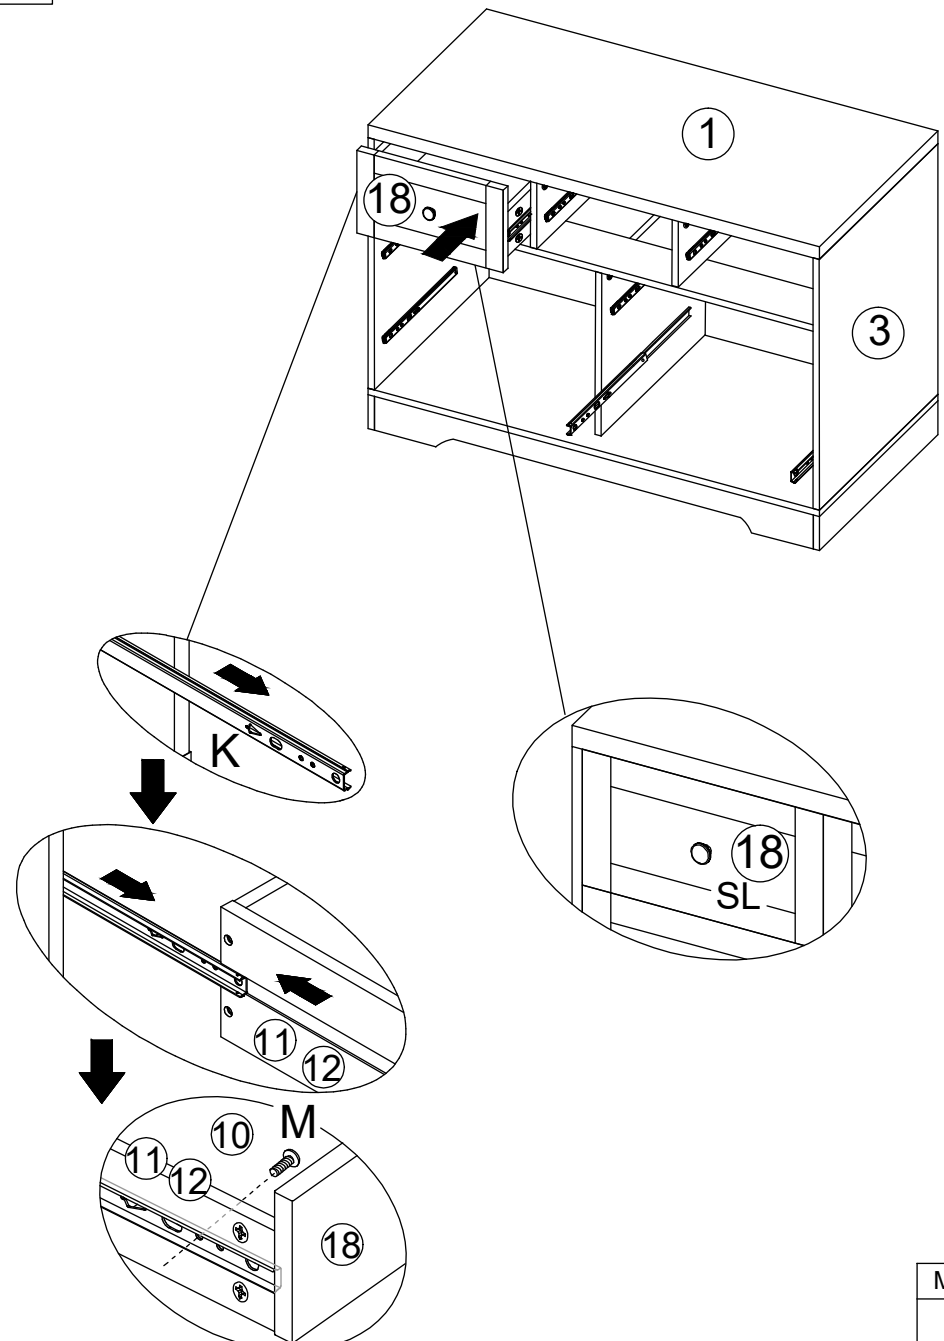


Screw from the inside of the drawers

M	x2
	
4x11mm	

24

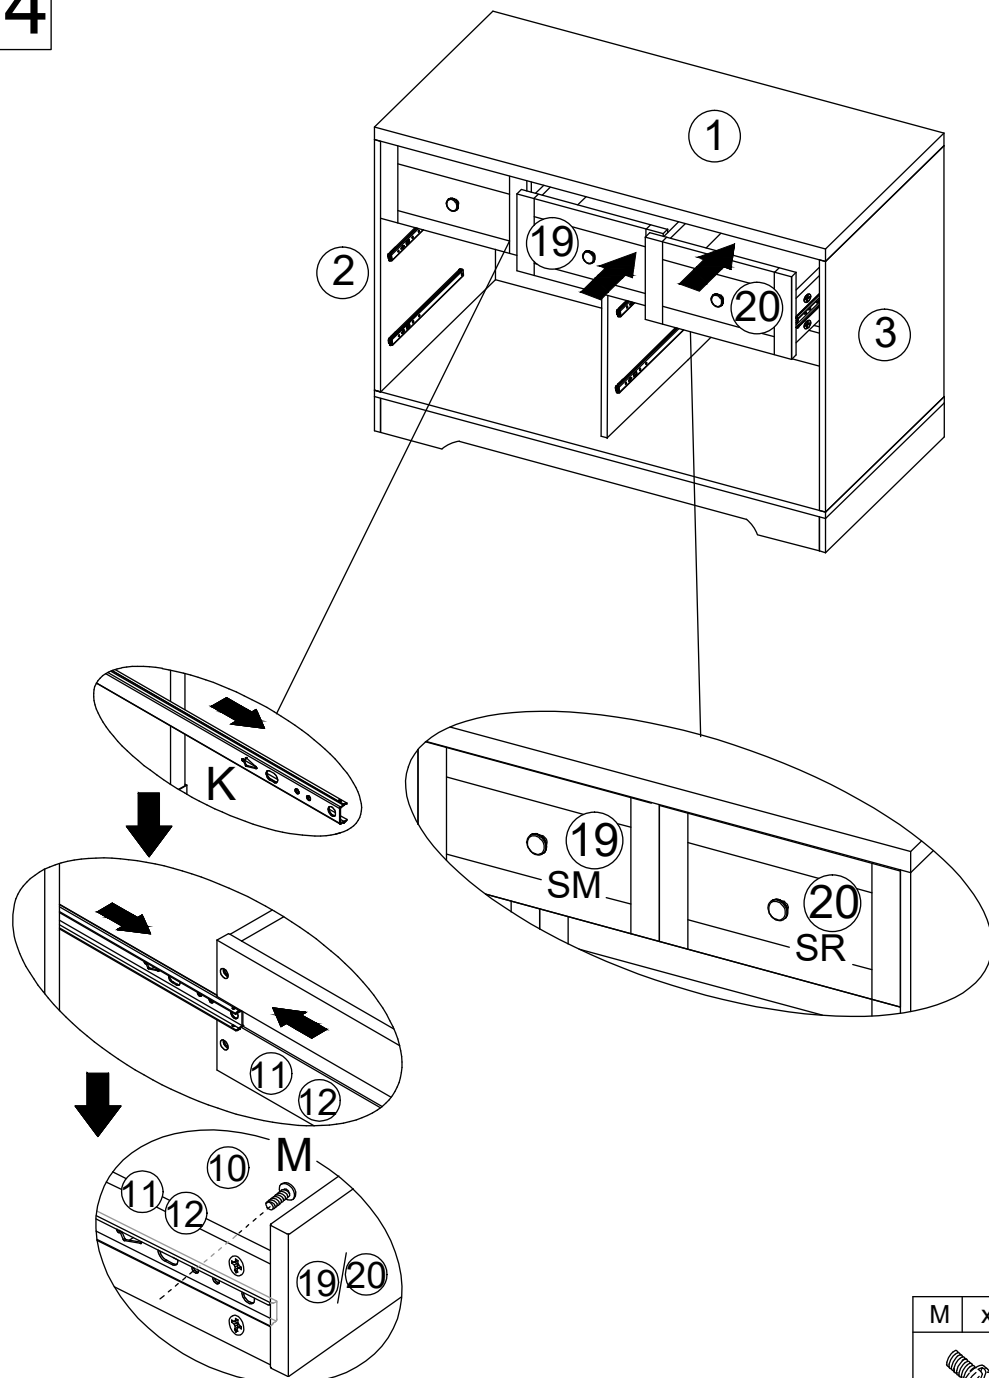


Screw from the inside of the drawers



25



pls pay more attention on the drawer front no.

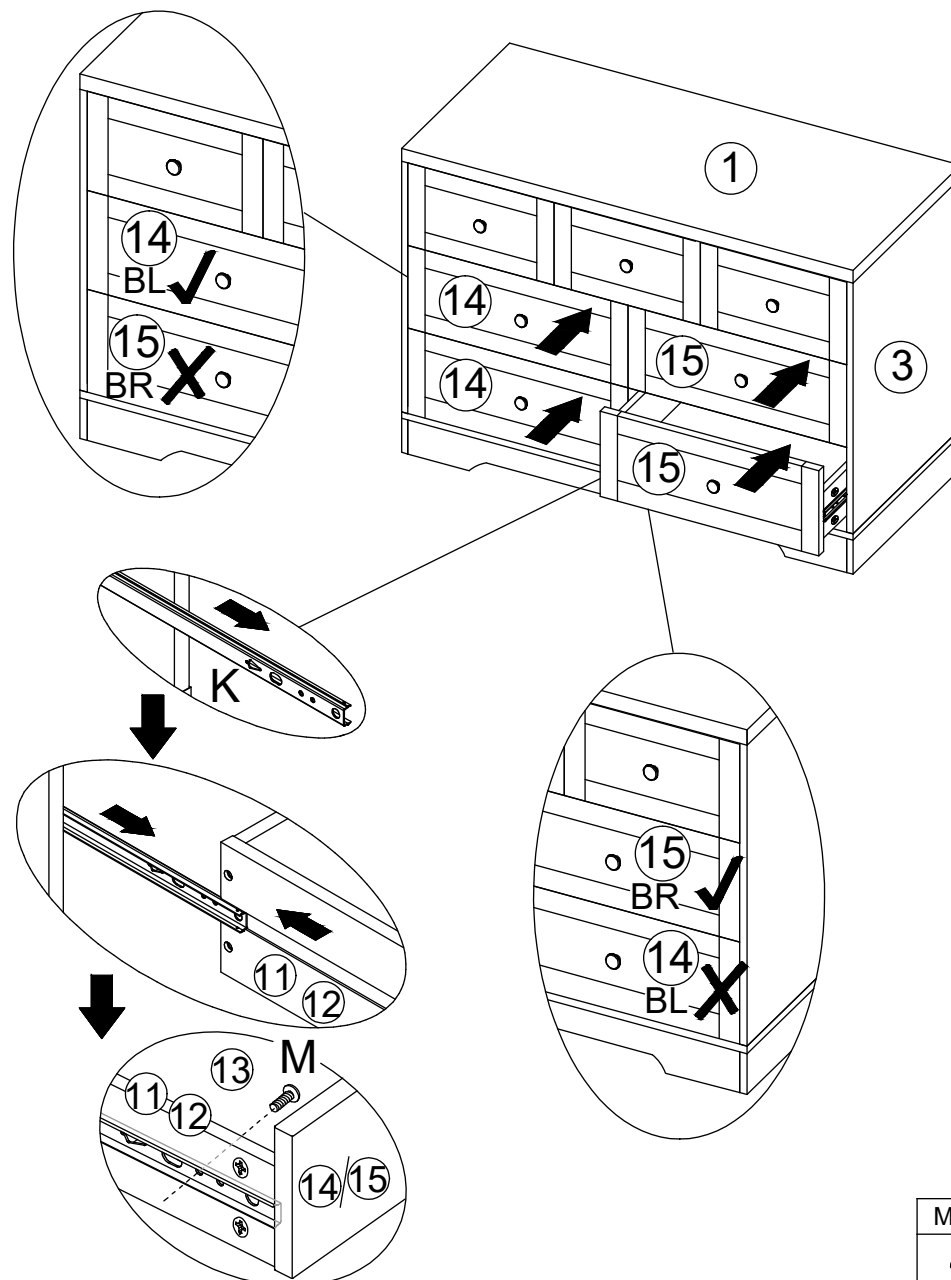

Screw from the inside of the drawers

