


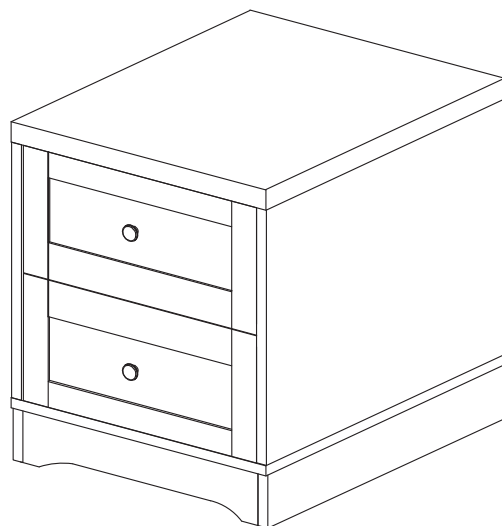
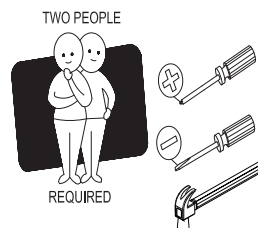







A	x18	B	x18	C	x8	D	x18	E	x6	F	x1
											
				Ø6x30mm		4x40mm				4x14mm	
G	x2	H	x12	I	x4	J	x6	K	x4	L	x2
											
		3x12mm		Ø6x50mm		4x10mm					
M	x1	N	x1	O	x1	P	x12	Q	x4		
											
		4x30mm				3x14mm					

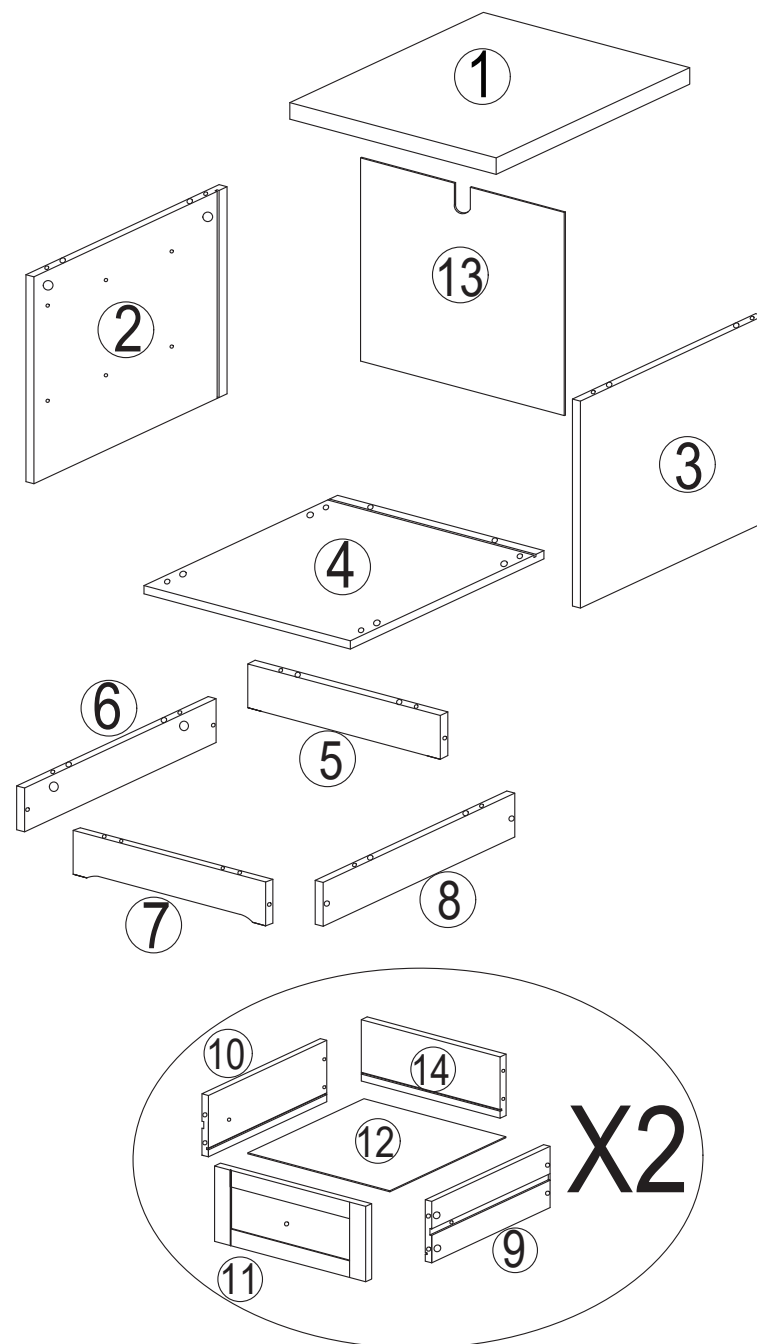


1

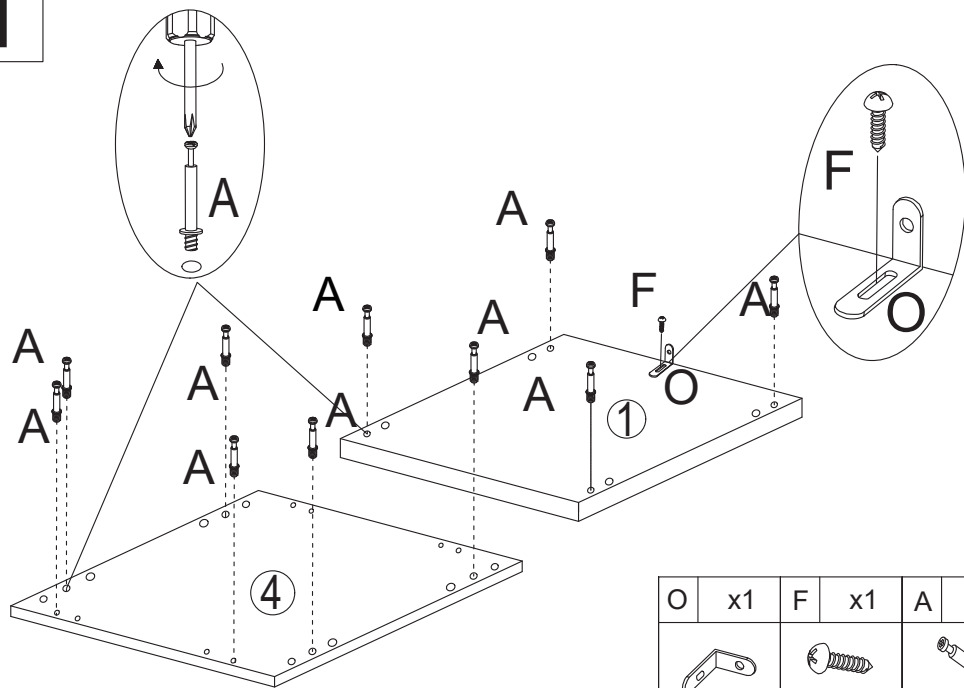

2

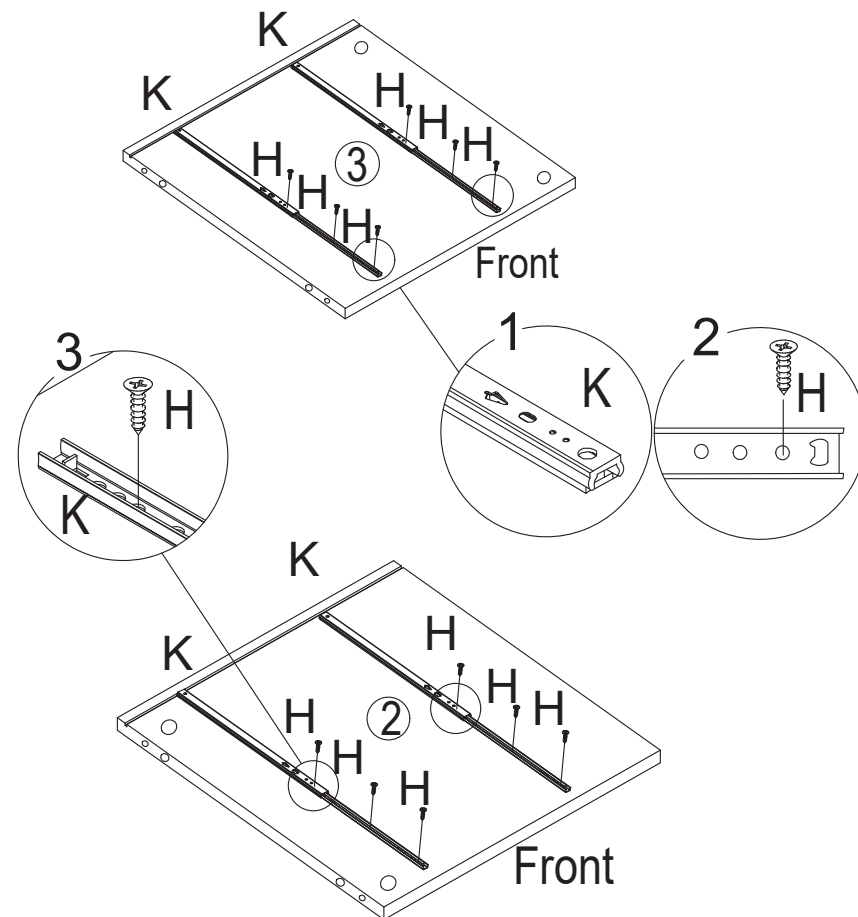


3

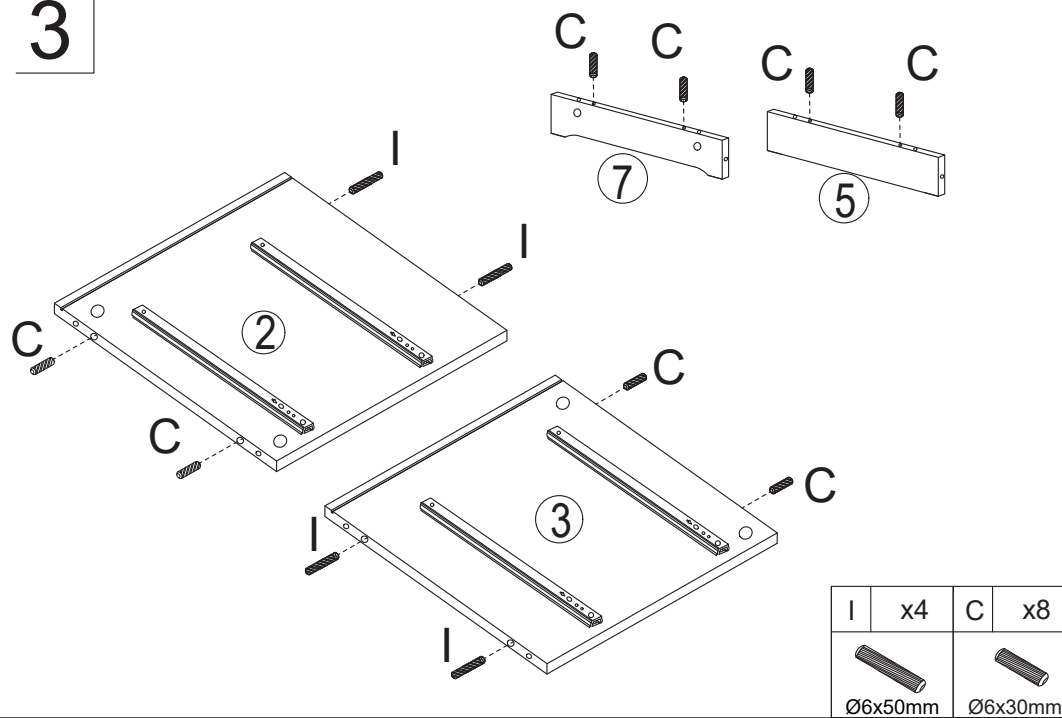


a.1



a.2




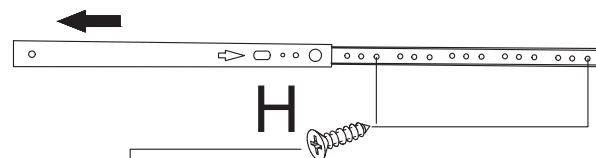


a.3



K	x4	H	x12
			3x12mm


4

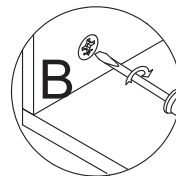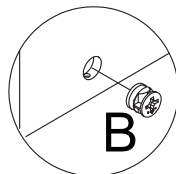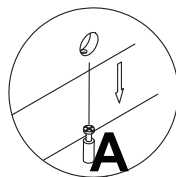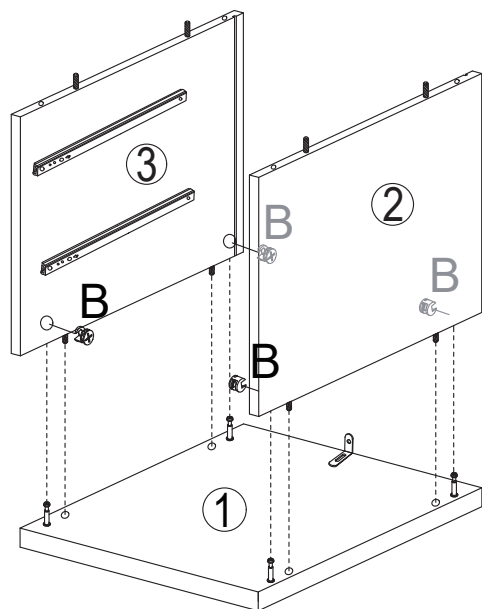





B x4



6

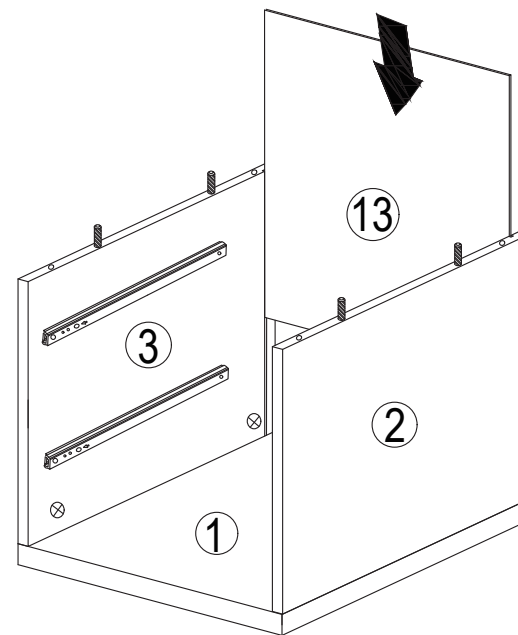

5

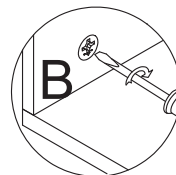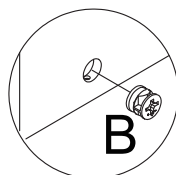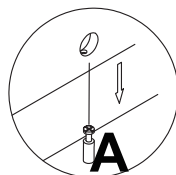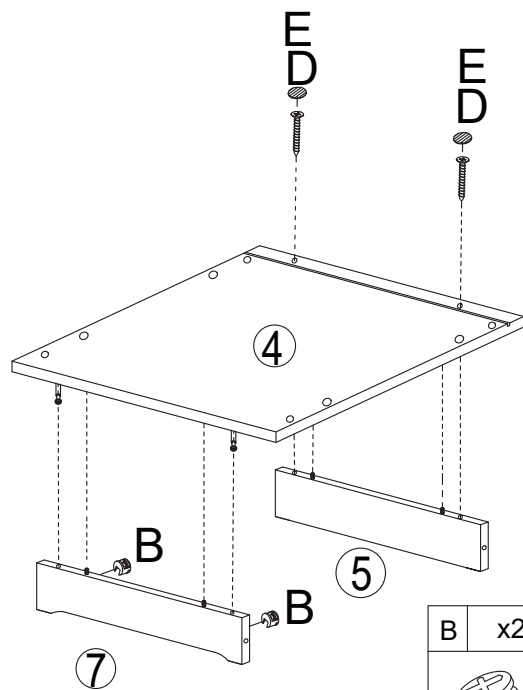



B x2 D x2 E x2



4x40mm



7




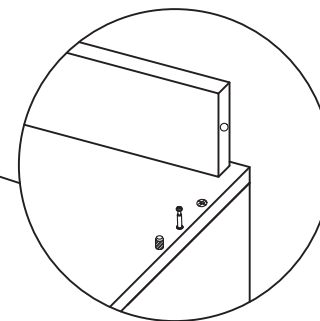
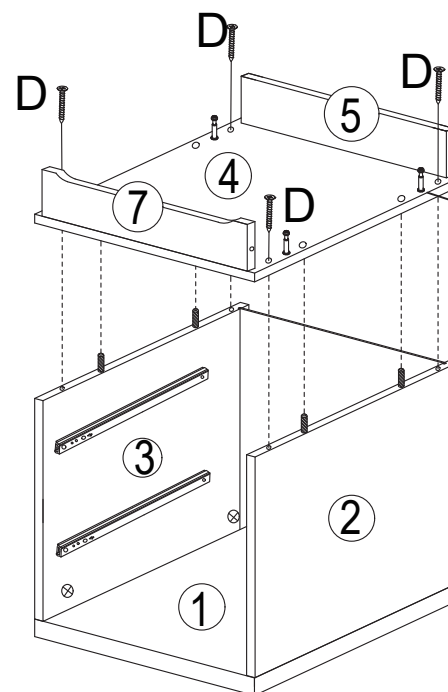


D x4









4x40mm

8

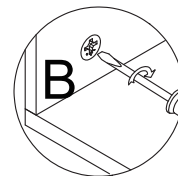
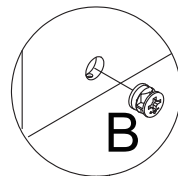
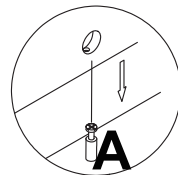
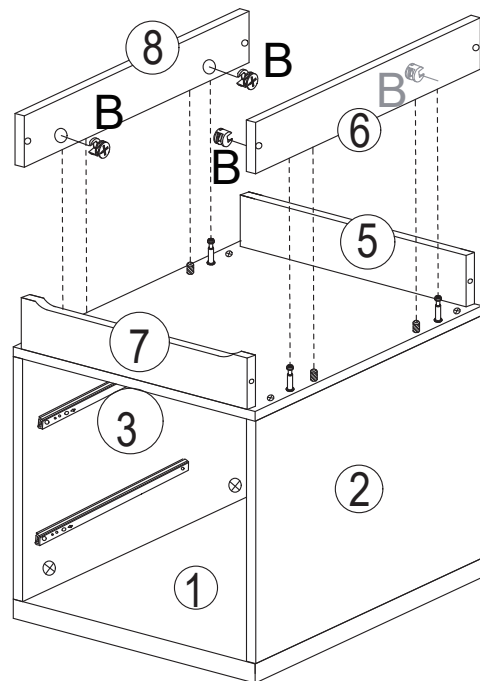


10

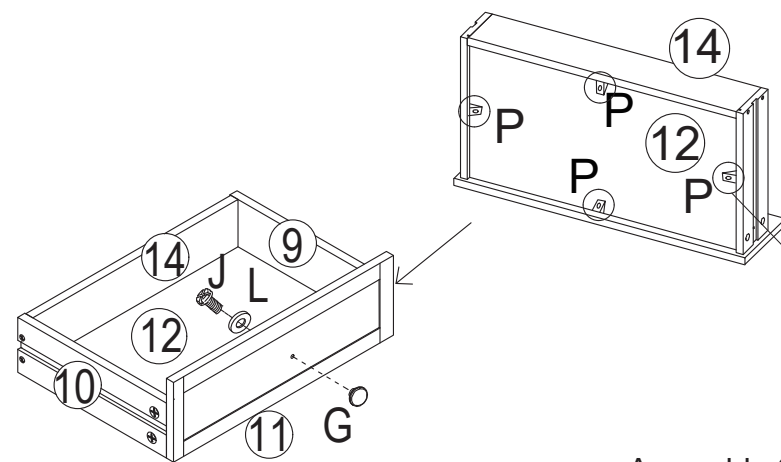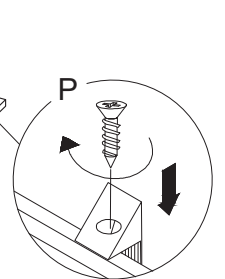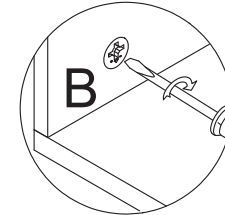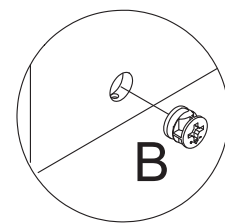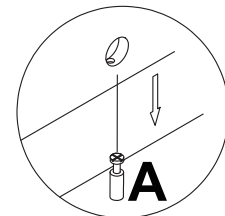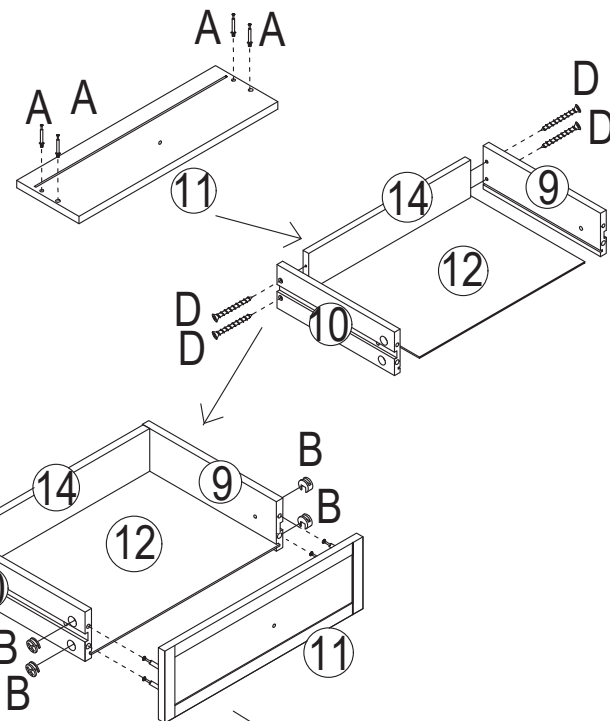


Assemble 2 drawers

9

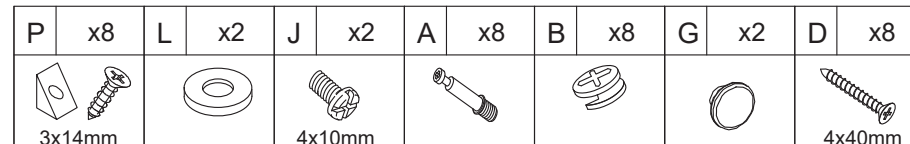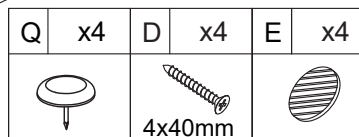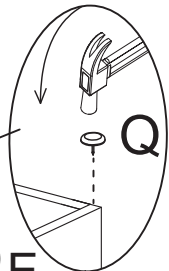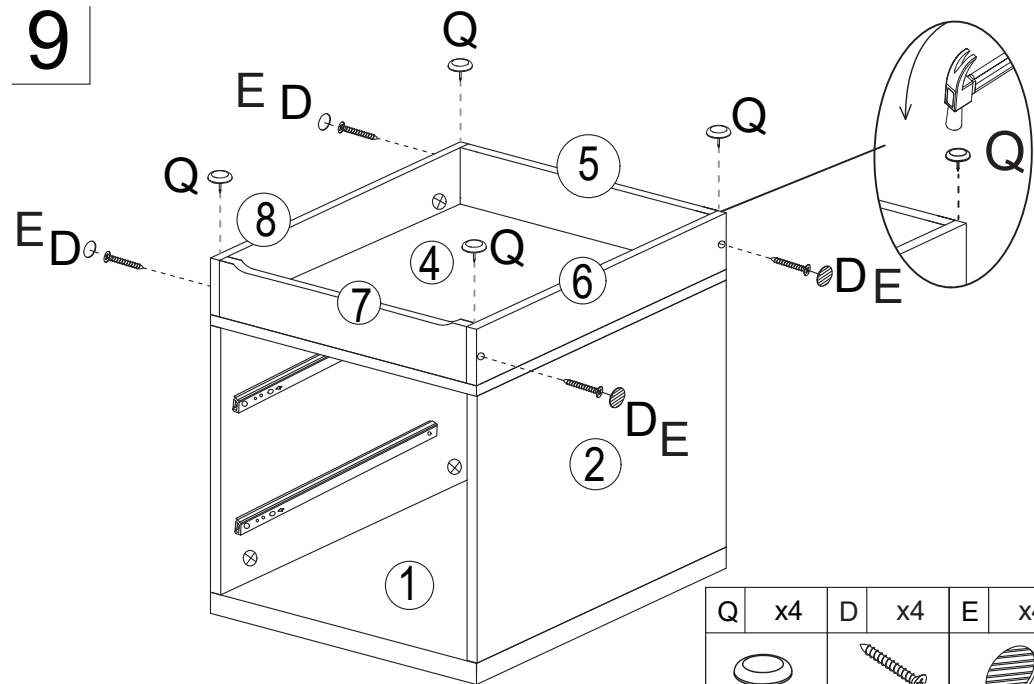


11

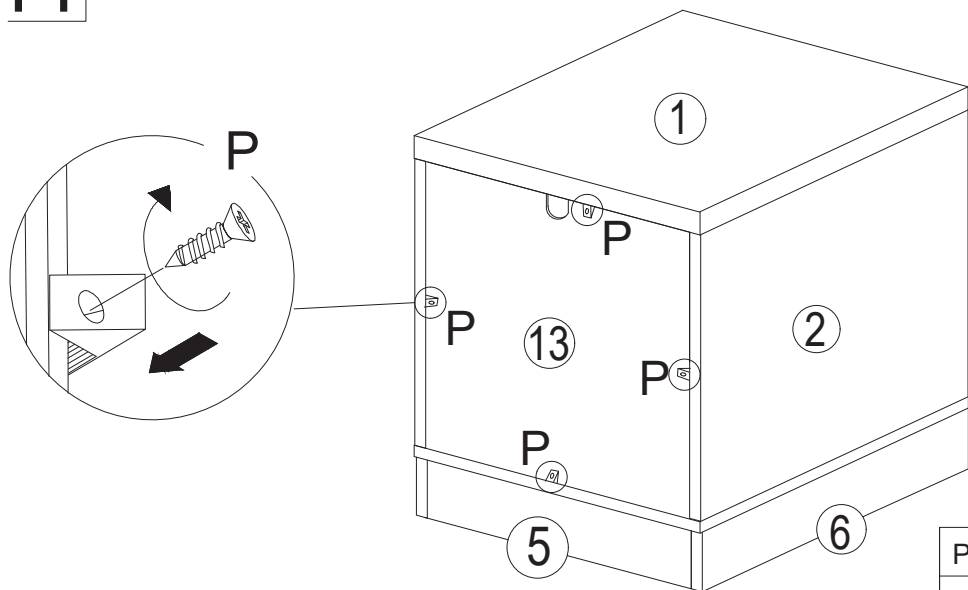

P	x4
	
3x14mm	


13

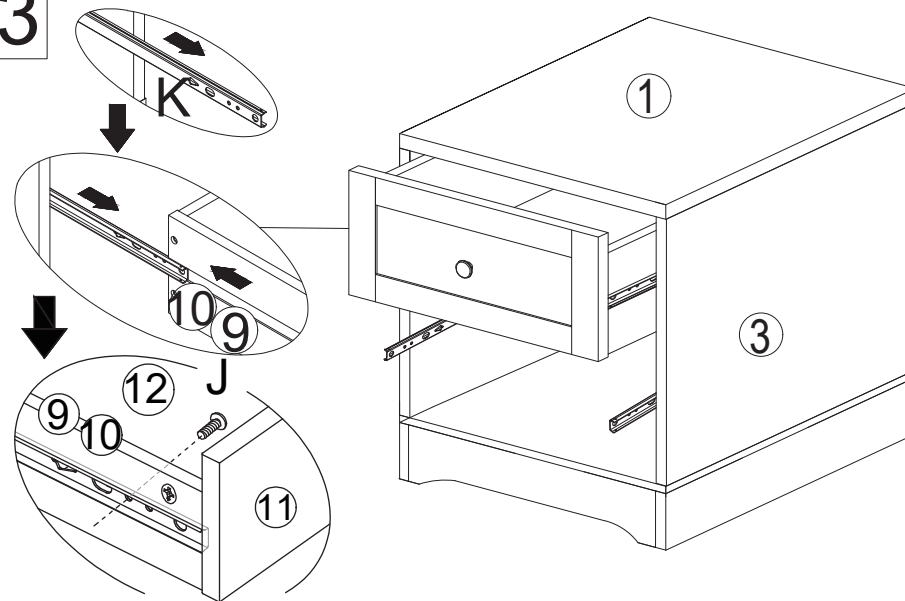

J	x2
	
4x10mm	


Screw from the inside of the drawers

12

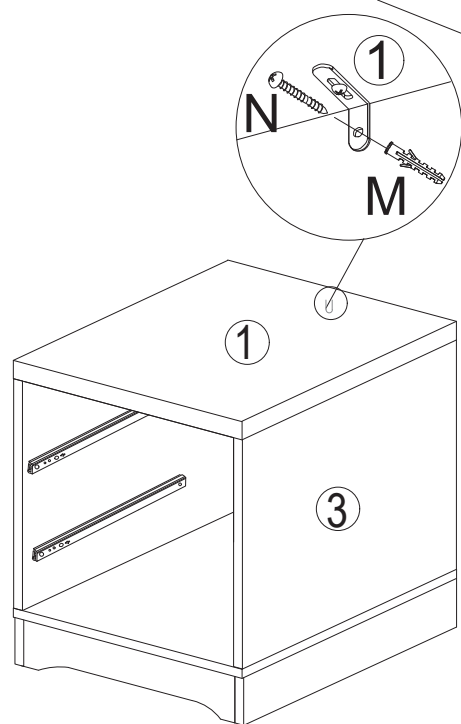


Pre-drilled hole at wall

WALL

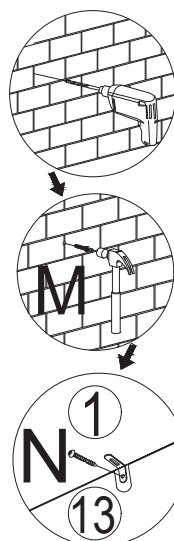

M	x1	N	x1
			
		4x30mm	

14

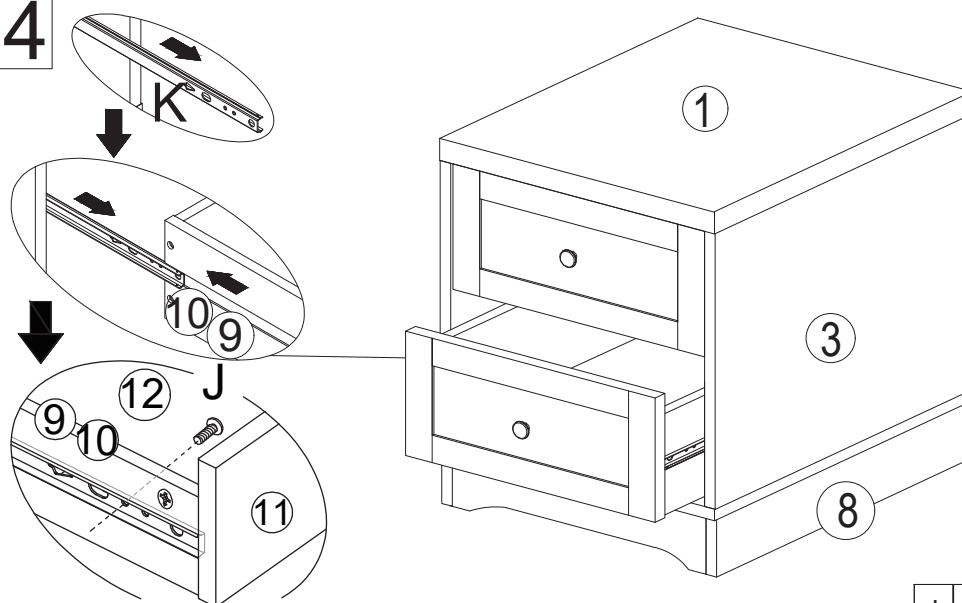

J	x2
	
4x10mm	

Screw from the inside of the drawers