





A	x24	B	x4	C	x16	D	x34	E	x18	F	x10
							4x40mm		3x12mm		
G	x6	H	x12	I	x2	J	x2	K	x2	L	x5
					4x14mm						
M	x3	N	x9	O	x2	P	x8	Q	x2	R	x4
	M6		4x11mm		4x18mm				4x30mm		
S	x24	T	x5	U	x12	V	x16				
	3x14mm						3.5x14mm				

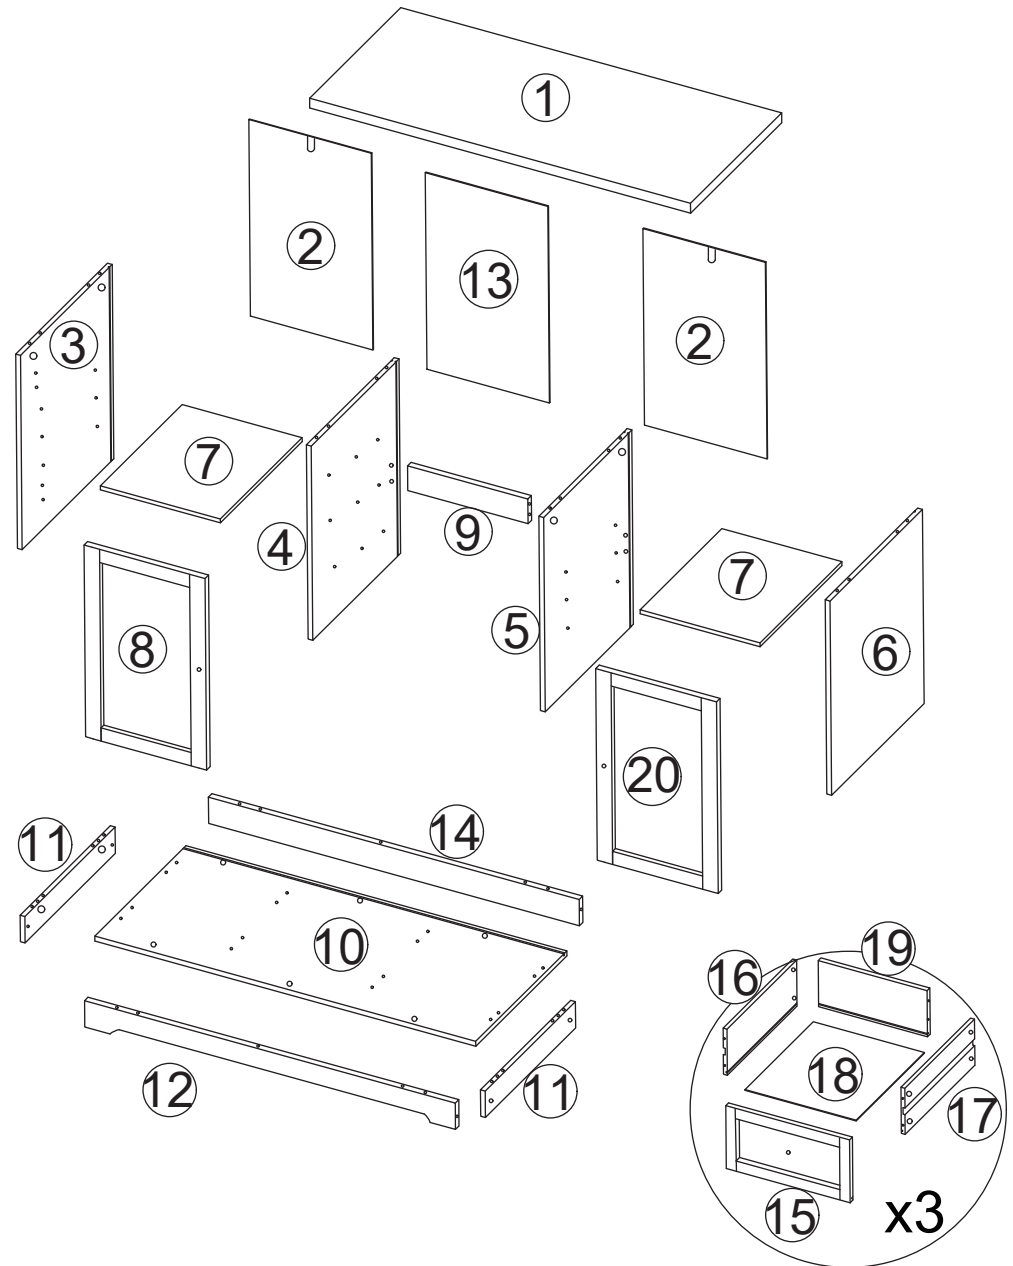

1

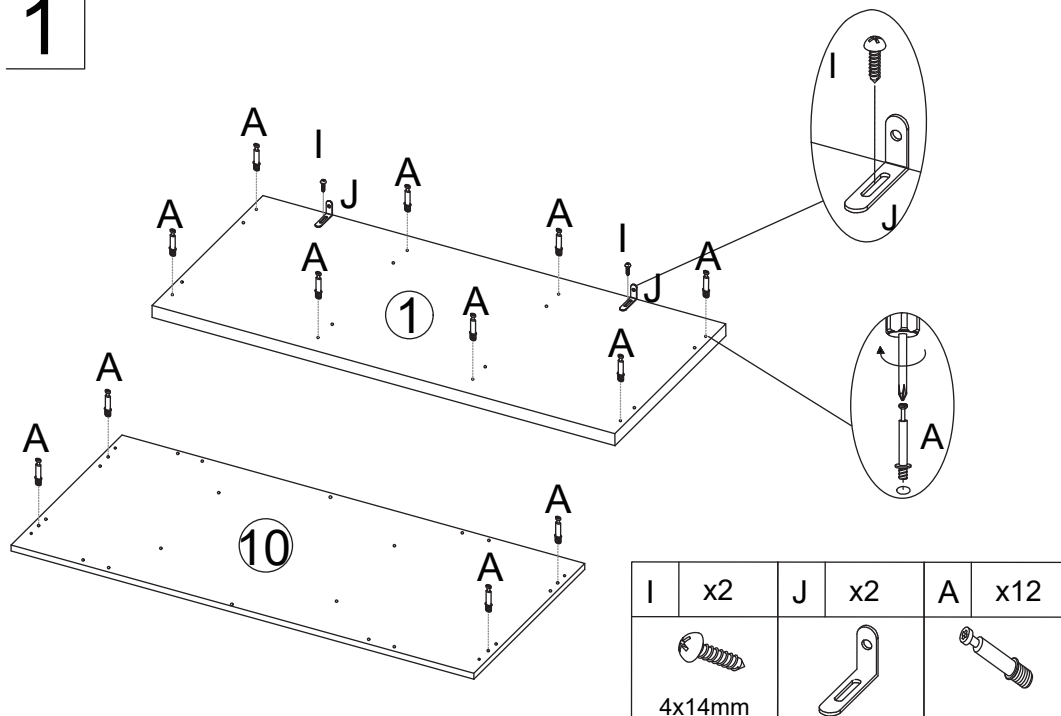


2

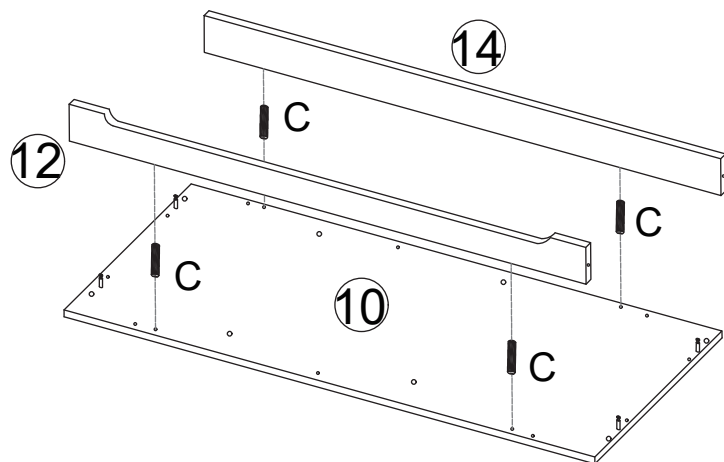

C	x4
---	----




3

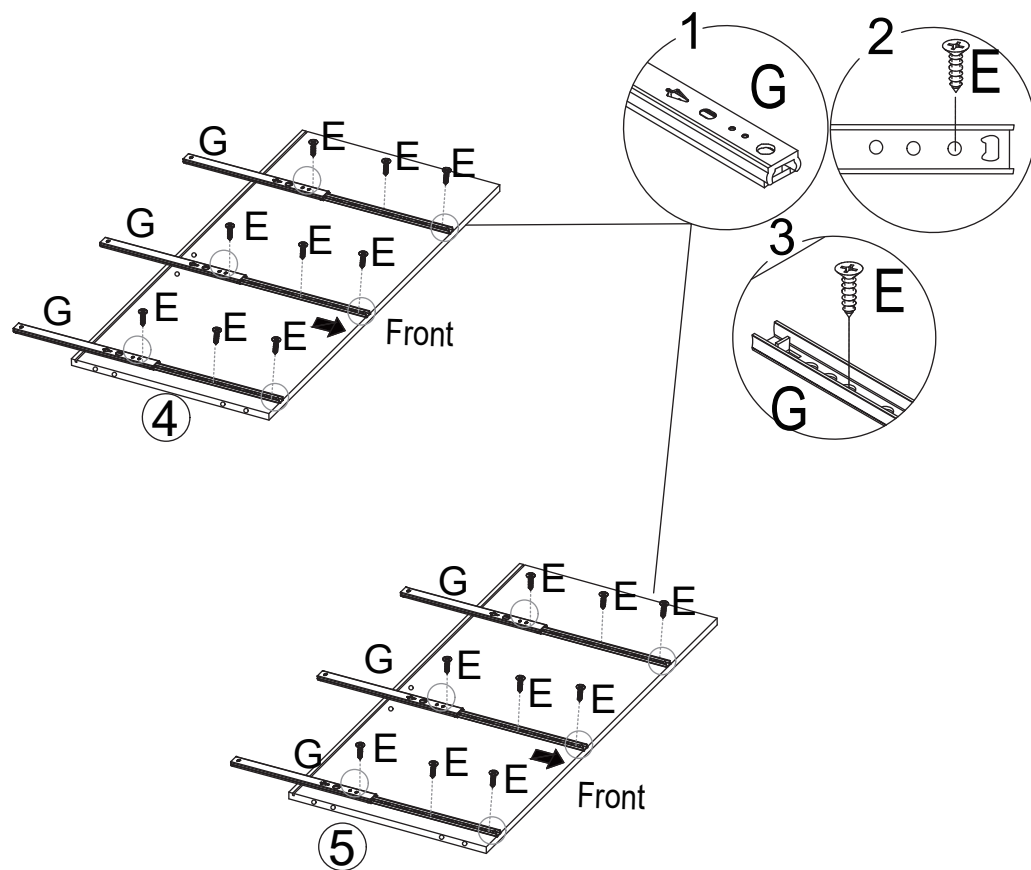


a.1



a.2

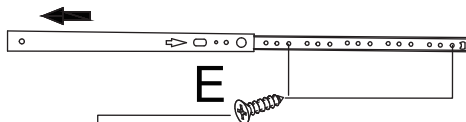

a.3




E	x18	G	x6
---	-----	---	----




3x12mm




4

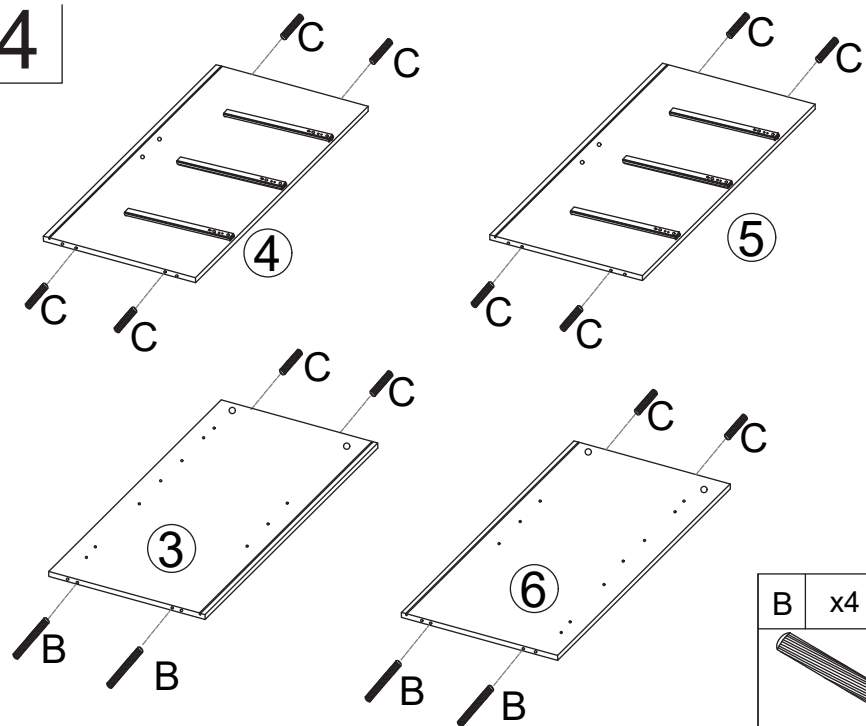


6

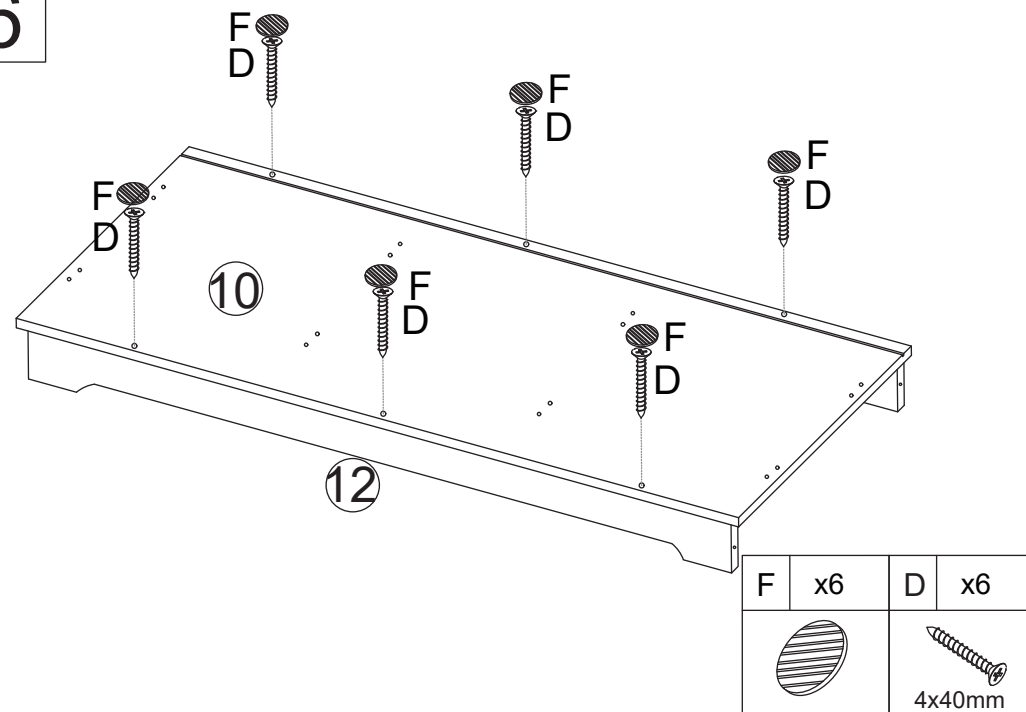


5

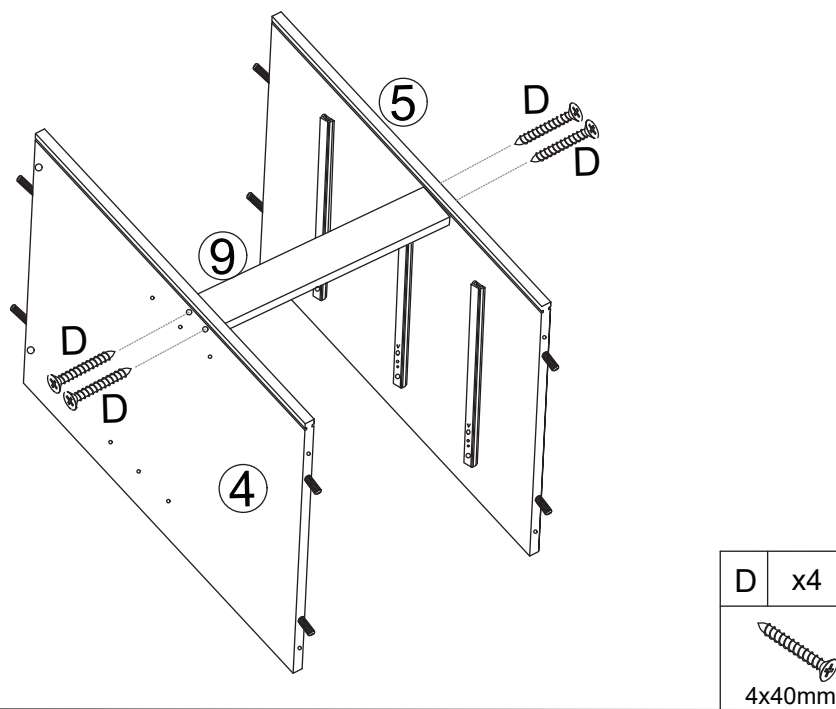


7

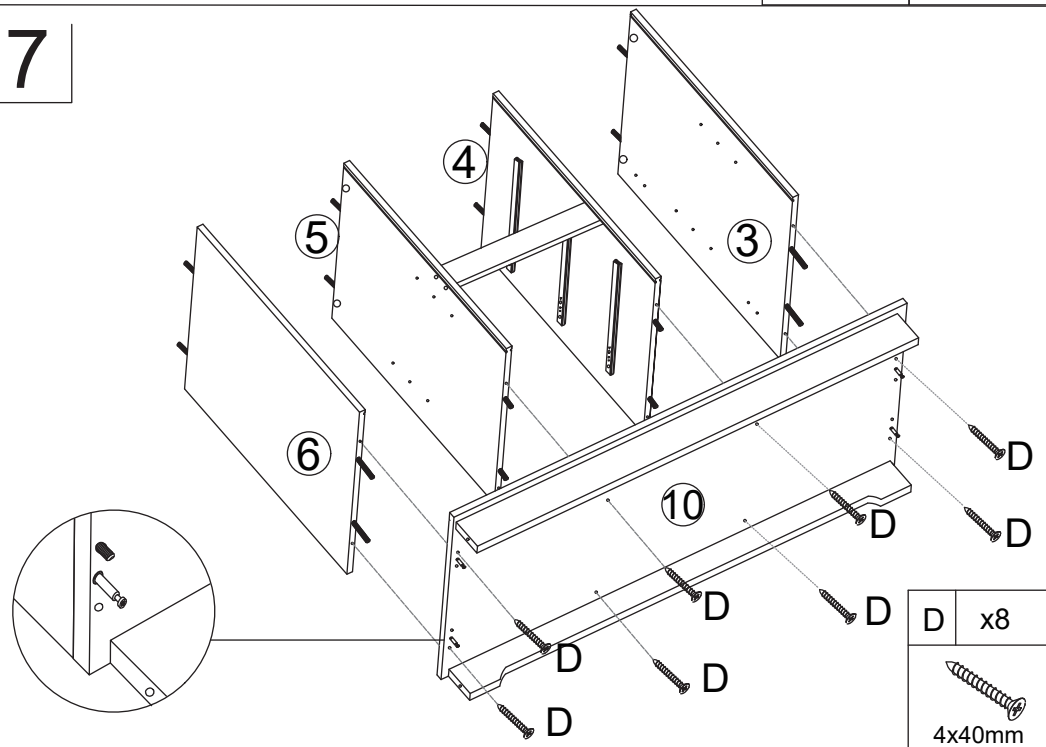


8

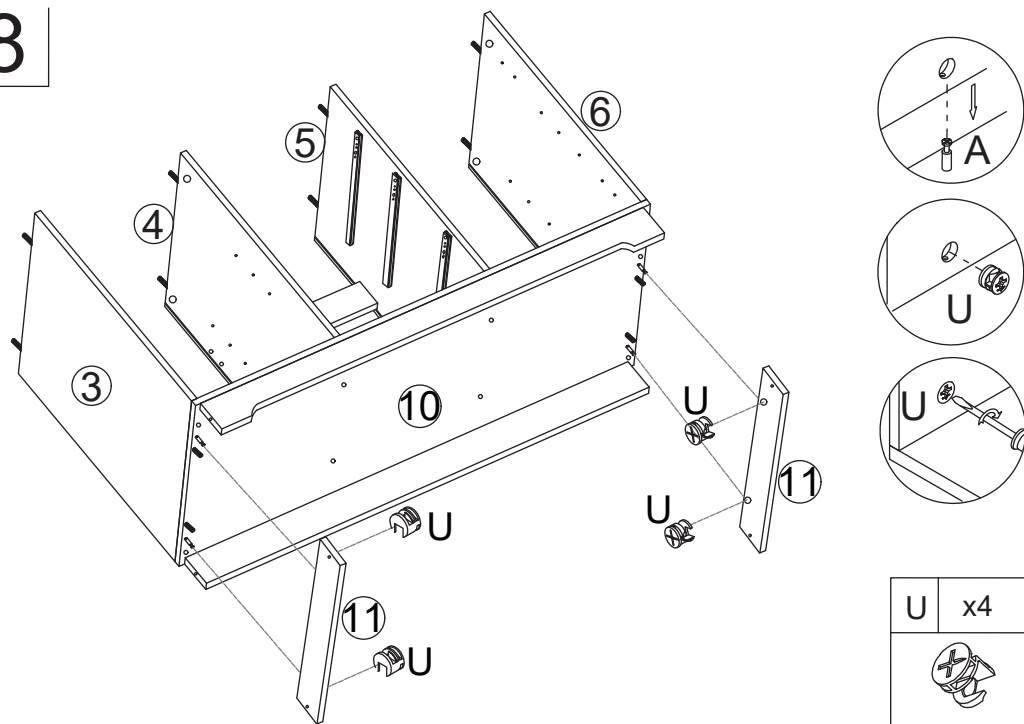


10

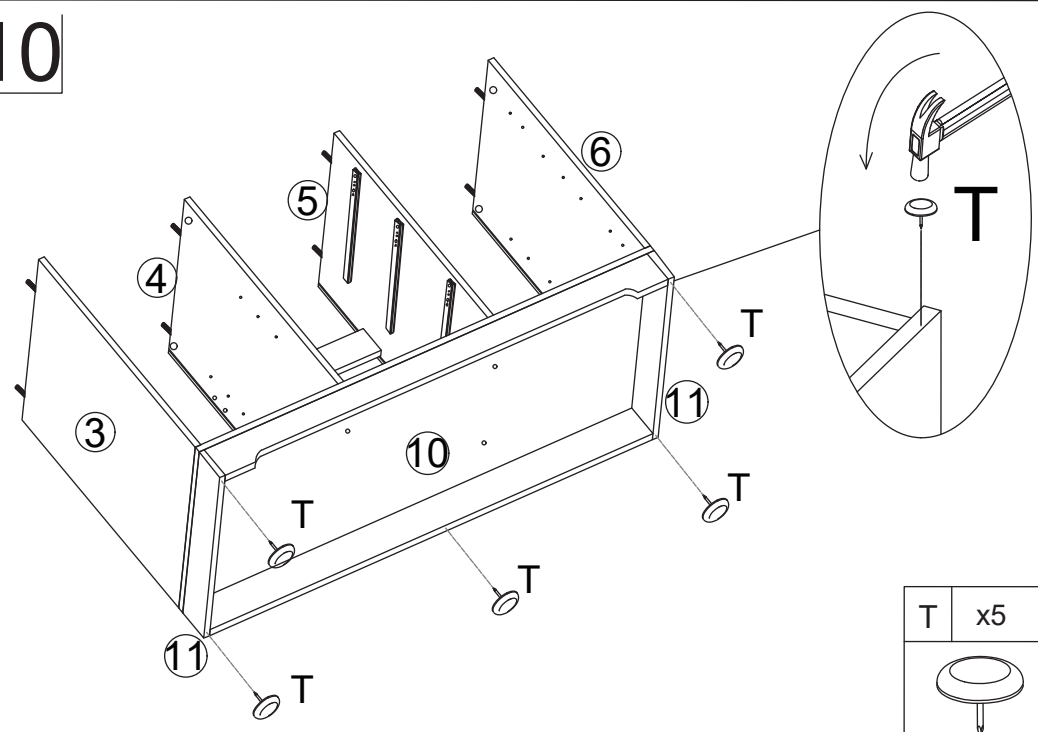



9

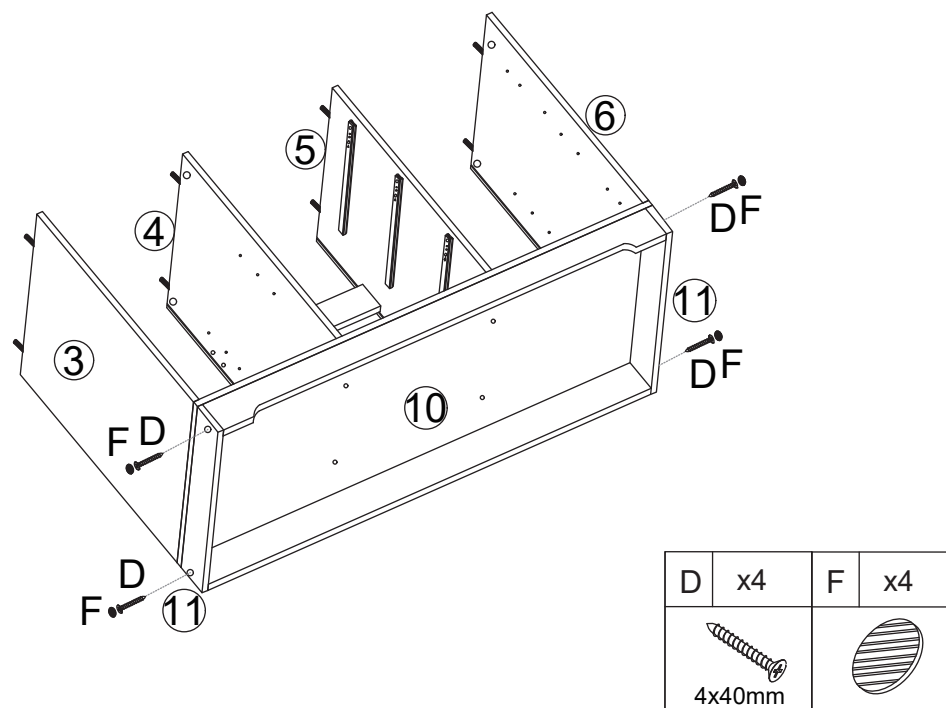


11

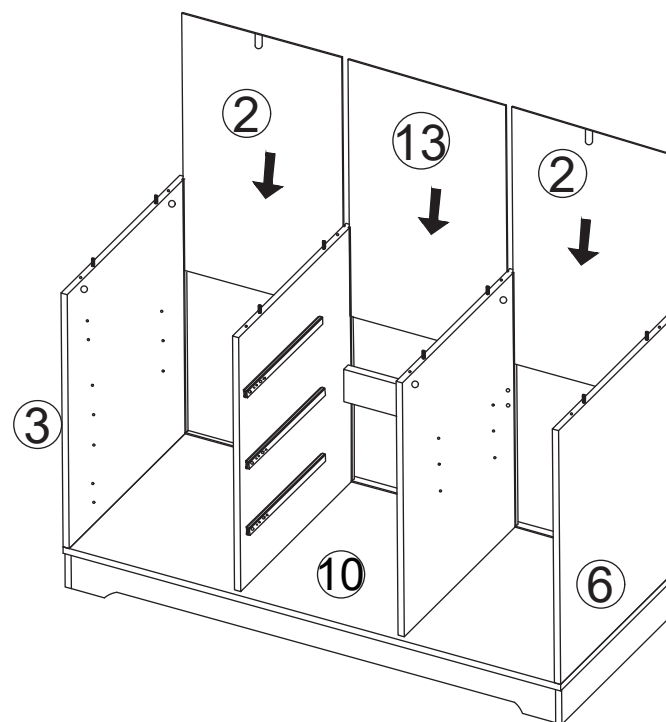

12

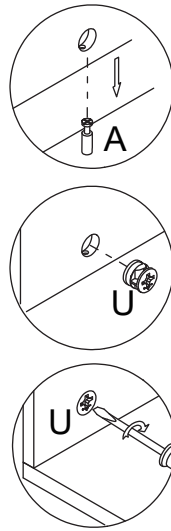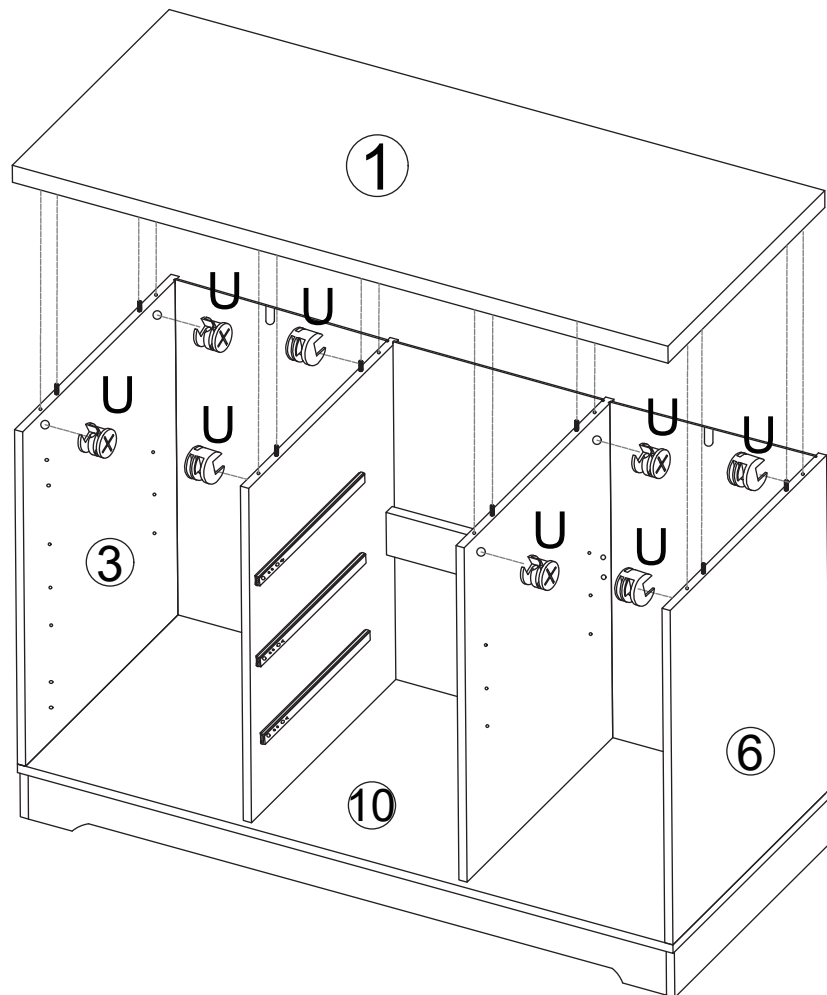

13

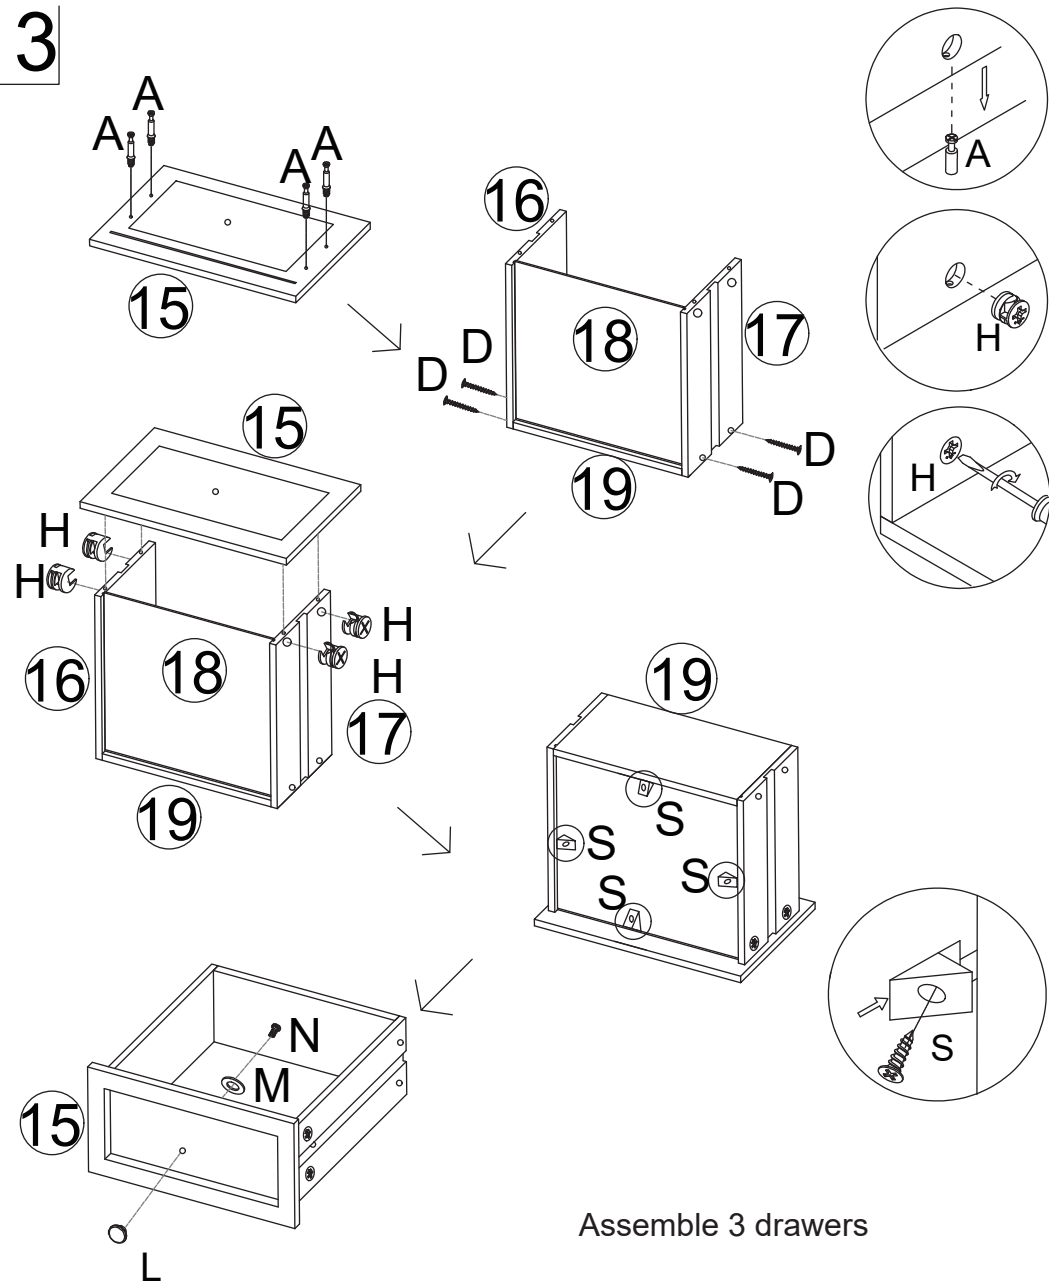


Assemble 3 drawers

U	x8
	

S	x12	N	x3	M	x3	L	x3	A	x12	H	X12	D	x12
 3x14mm		 4x11mm		 M6								 4x40mm	

14

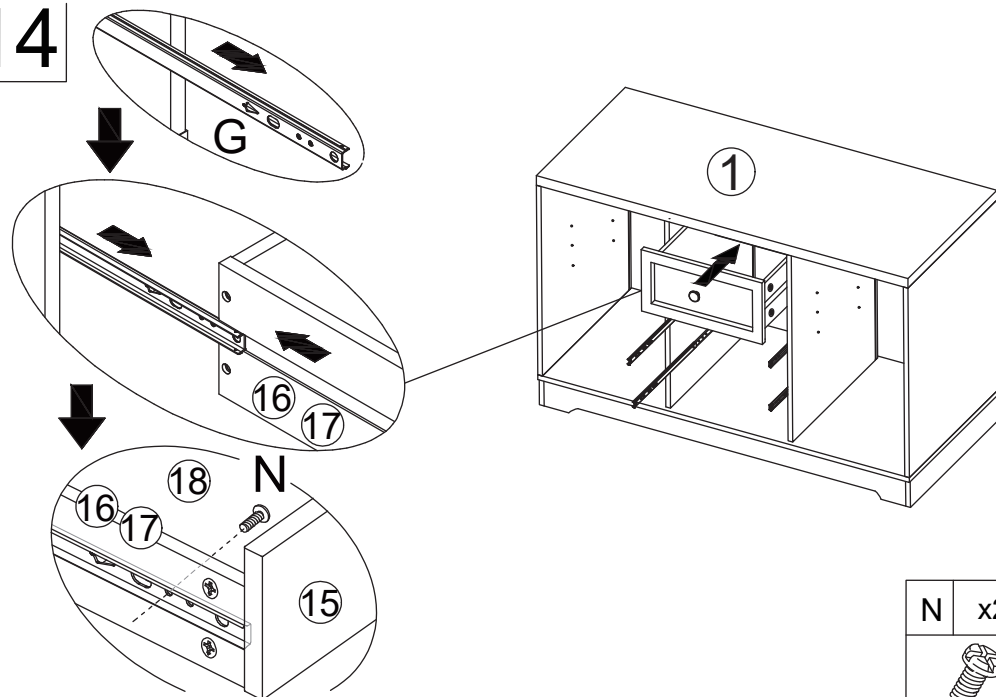


Screw from the inside of the drawers

N x2



4x11mm

16

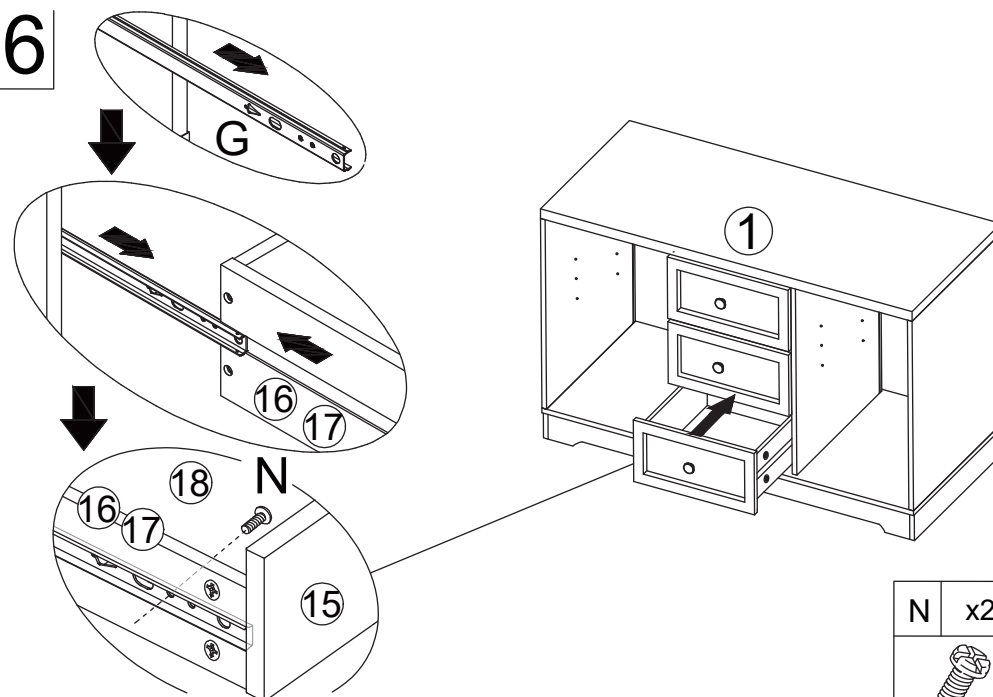


Screw from the inside of the drawers

N x2



4x11mm

15

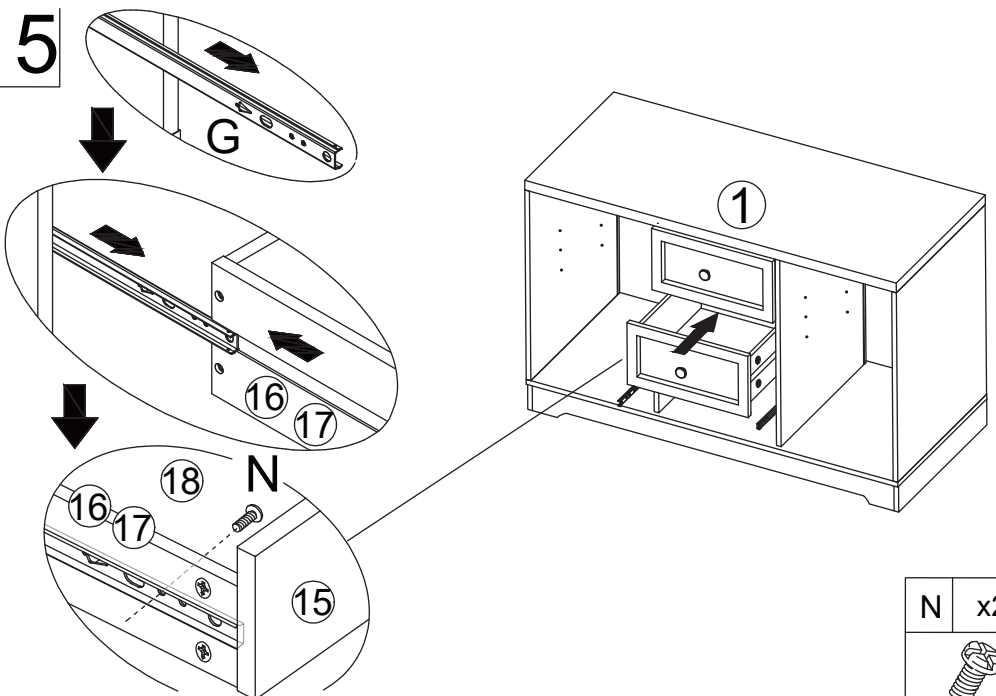


Screw from the inside of the drawers

N x2







4x11mm

17

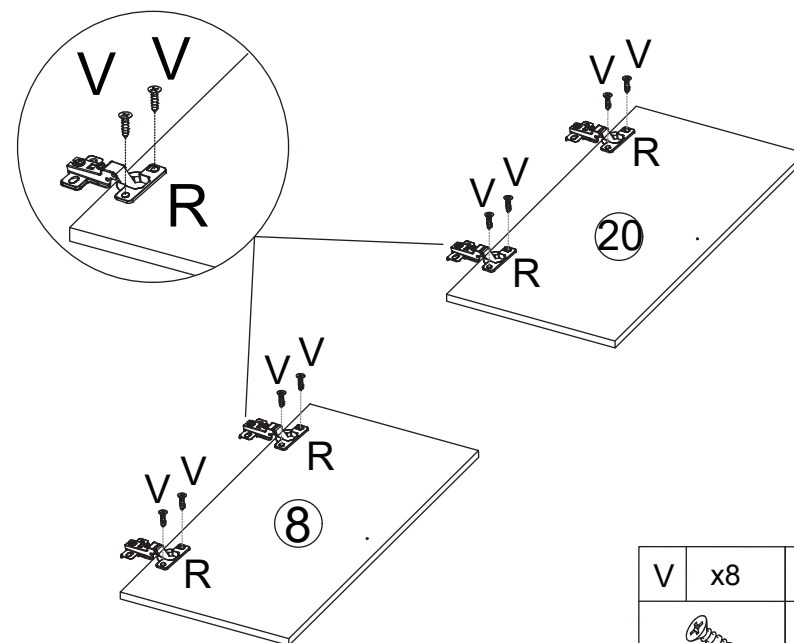



V	x8	R	x4
3.5x14mm			

18

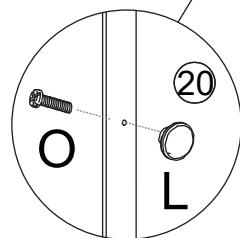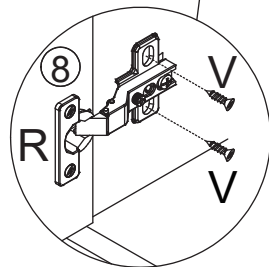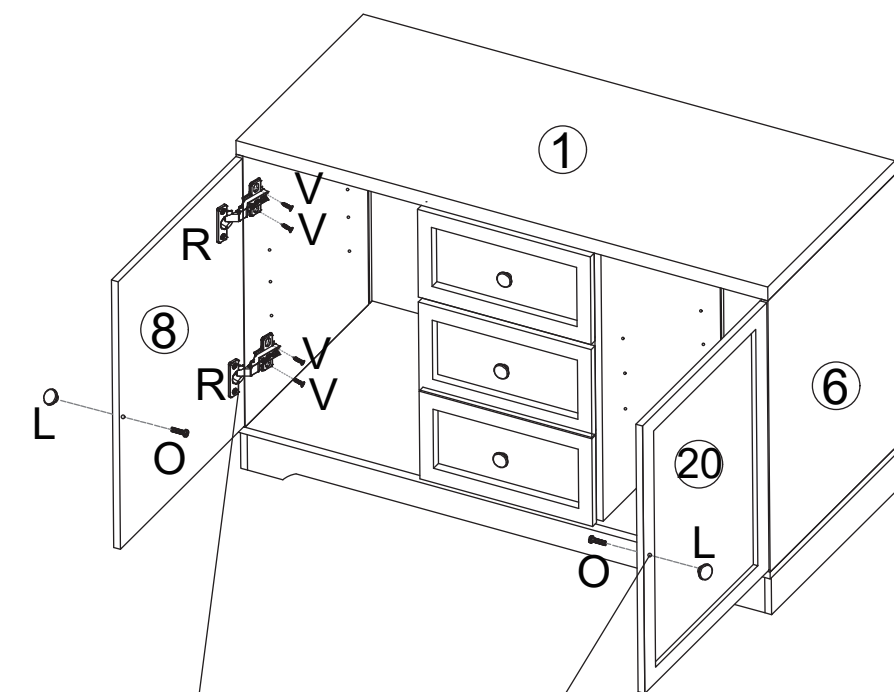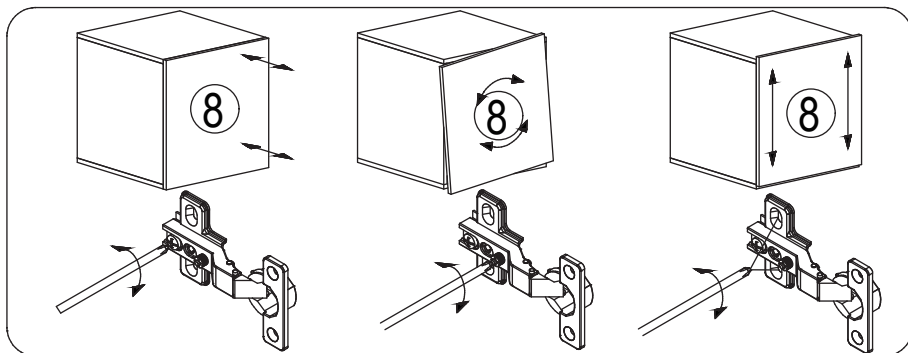



L	x2	V	x8	O	x2
		3.5x14mm		4x18mm	

19

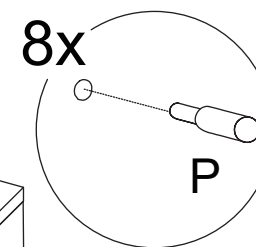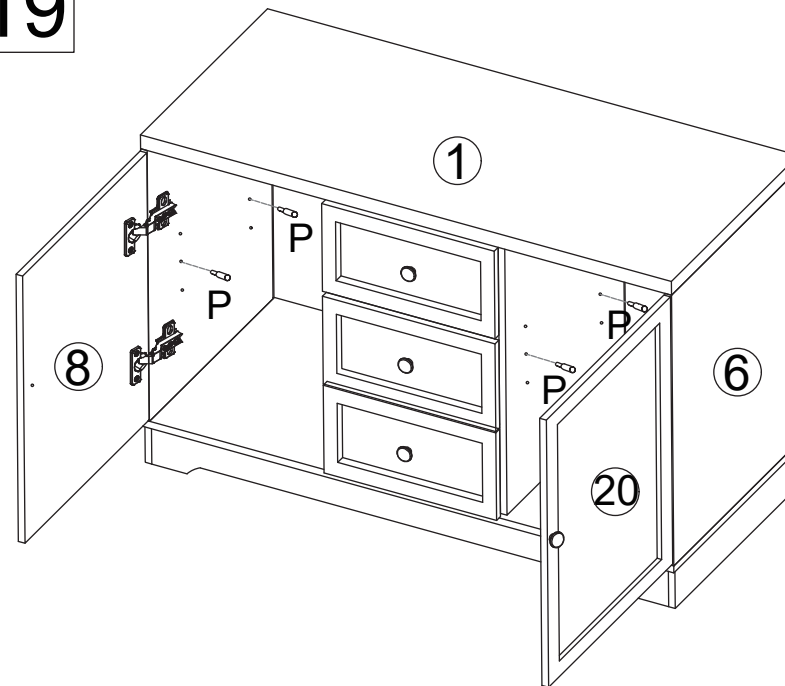


P	x8

20

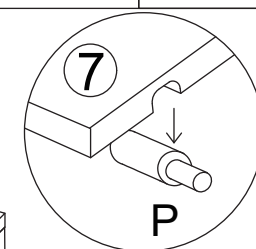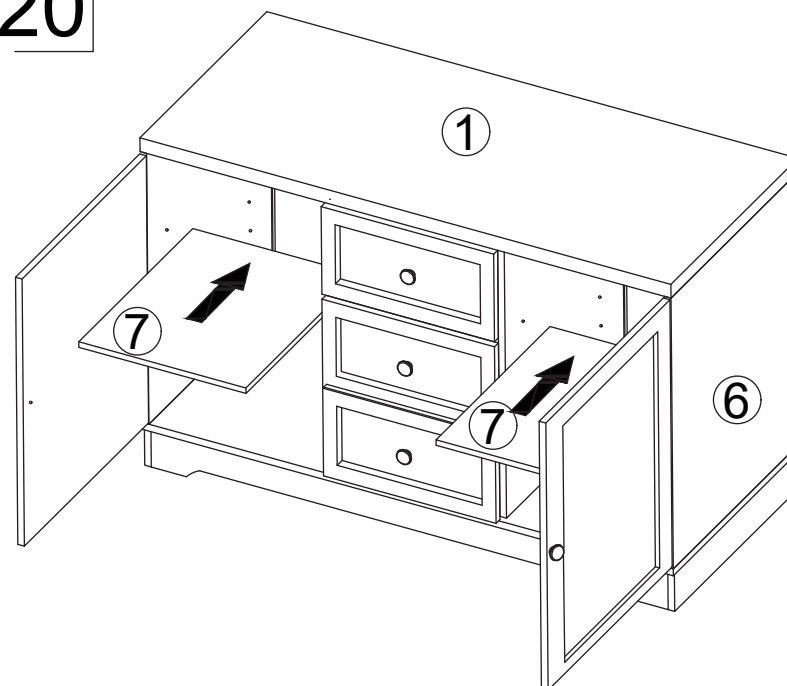


21

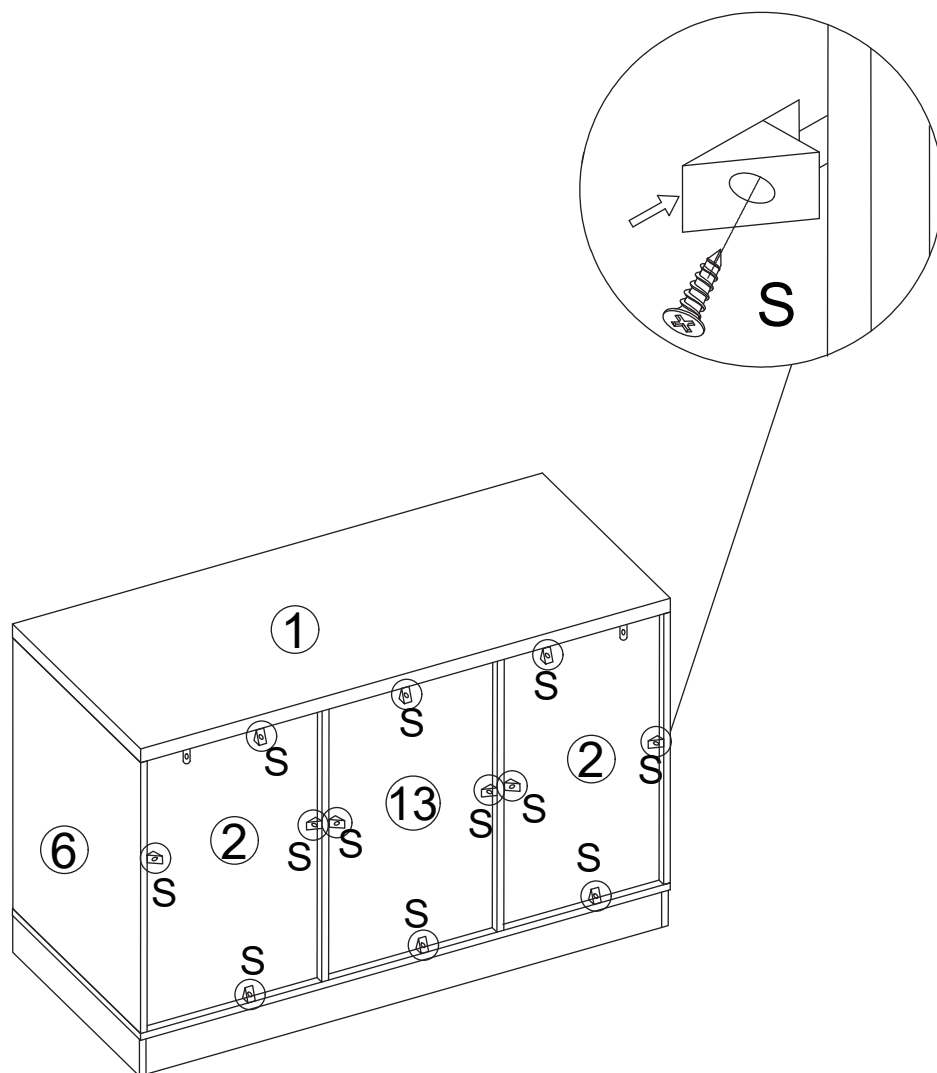

S	x12	Q	x2	K	x2
					
3x14mm		4x30mm			

22

Pre-drill hole in wall

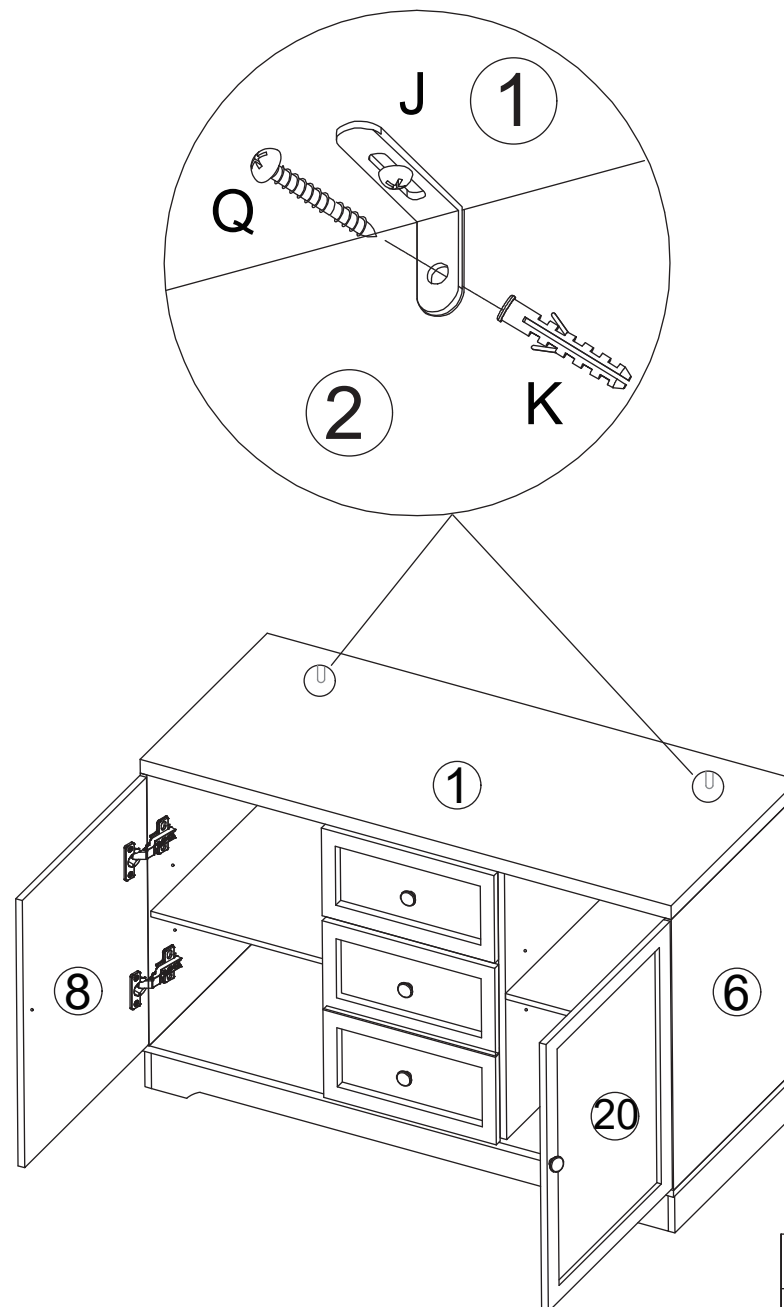

Q	x2	K	x2
			
4x30mm			