



HARROGATE OTTOMAN BED - DOUBLE

1380 x 1880mm







ASSEMBLY INSTRUCTIONS

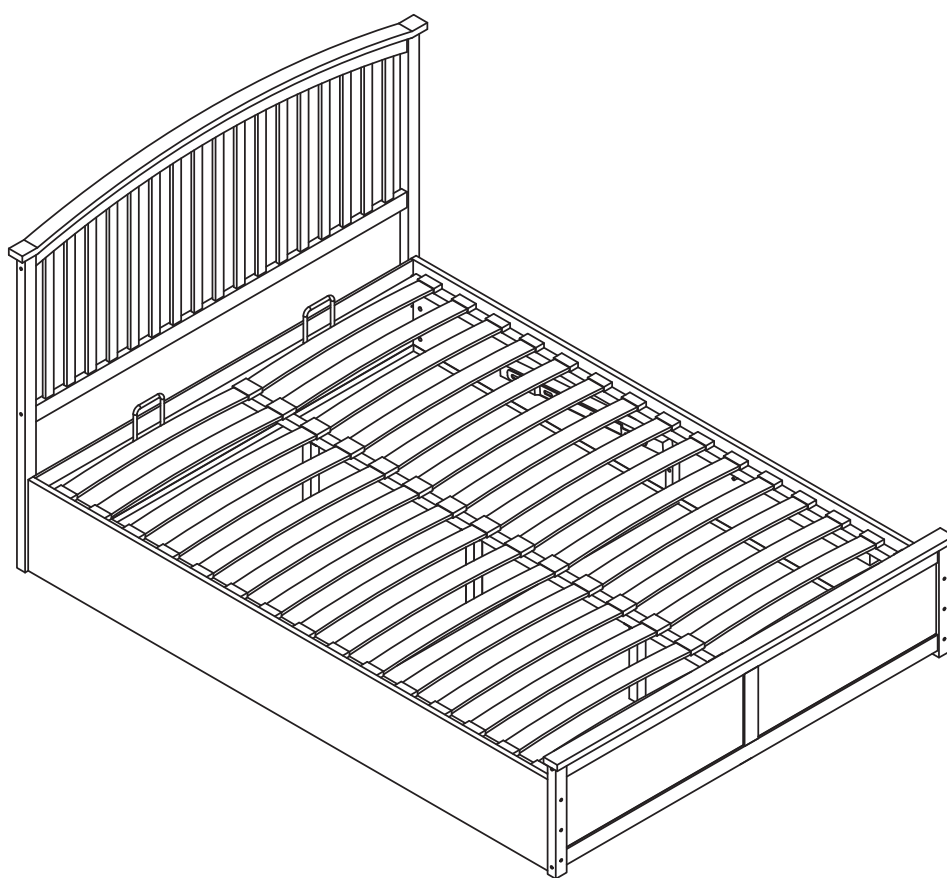

Components – Parts

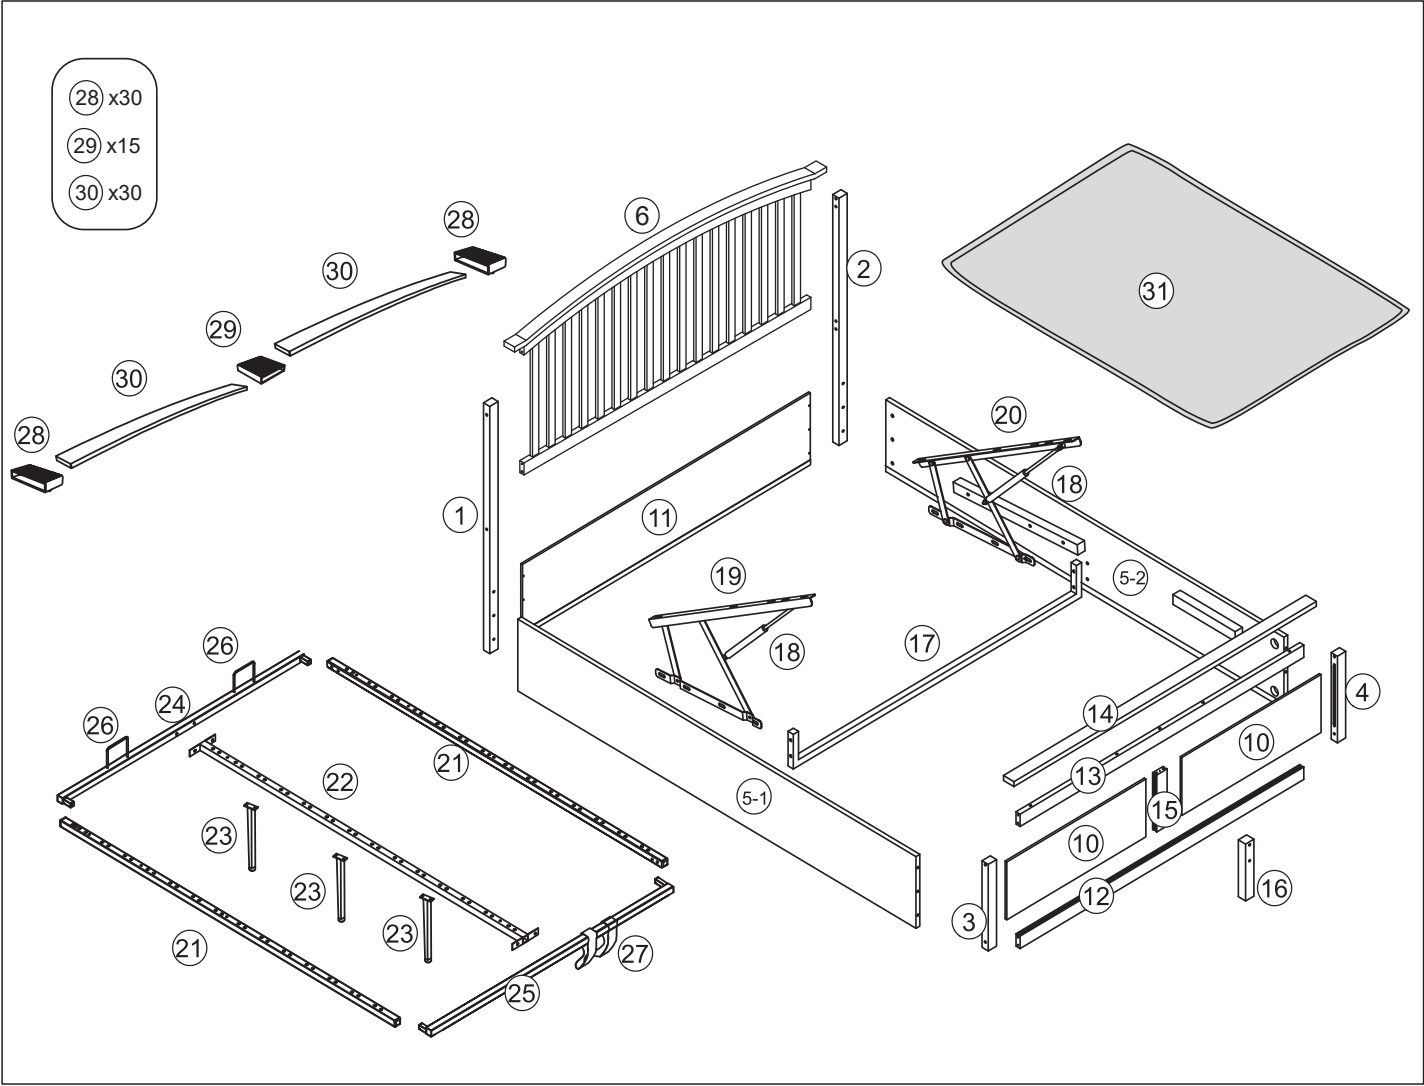


Components - Fixings

A x4  Wood Dowel $\Phi 8 \times 30 \text{mm}$	B x8  Wood Dowel $\Phi 6 \times 30 \text{mm}$	C x8  Bolt $\Phi 6 \times 70 \text{mm}$	D x6  Bolt $M6 \times 65 \text{mm}$	E x6  T-Nut
F x6  Bolt $M6 \times 50 \text{mm}$	G x4  Bolt $M6 \times 35 \text{mm}$	H x6  Stud $M6 \times 60 \text{mm}$	J x6  Nut $M6$	K x6  Half Moon Washer
L x1  Spanner $M6$	M x1  Allen Key $M4$	N x8  Bolt & Washer $\Phi 8 \times 20 \text{mm}$	O x24  Bolt $\Phi 8 \times 15 \text{mm}$	P x4  Nut $M8$
Q x1  Spanner $M10$	R x1  Allen Key $M5$	S x2  Screw $\Phi 4 \times 50 \text{mm}$	T x1  Wood Glue	U x6  Screw $\Phi 4 \times 20 \text{mm}$
I x1  Screw driver (not provided)				

Assembly Instructions


Step 01

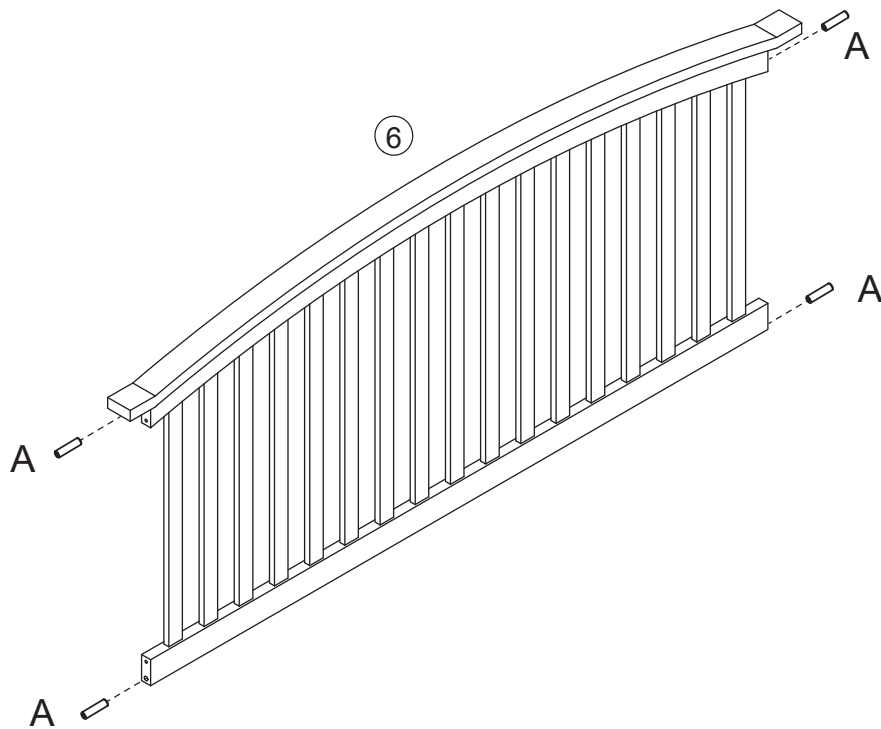

A x4

Wood Dowel
Φ8x30mm

Step 02

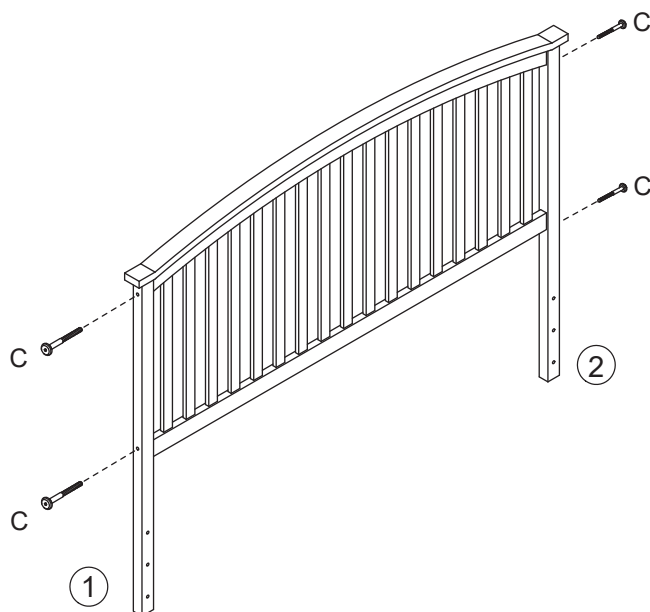

C x4

Bolt
Φ6x70mm


Step 03

B x4

Wood Dowel
Φ6x30mm


S x1

Screw
Φ4x50mm

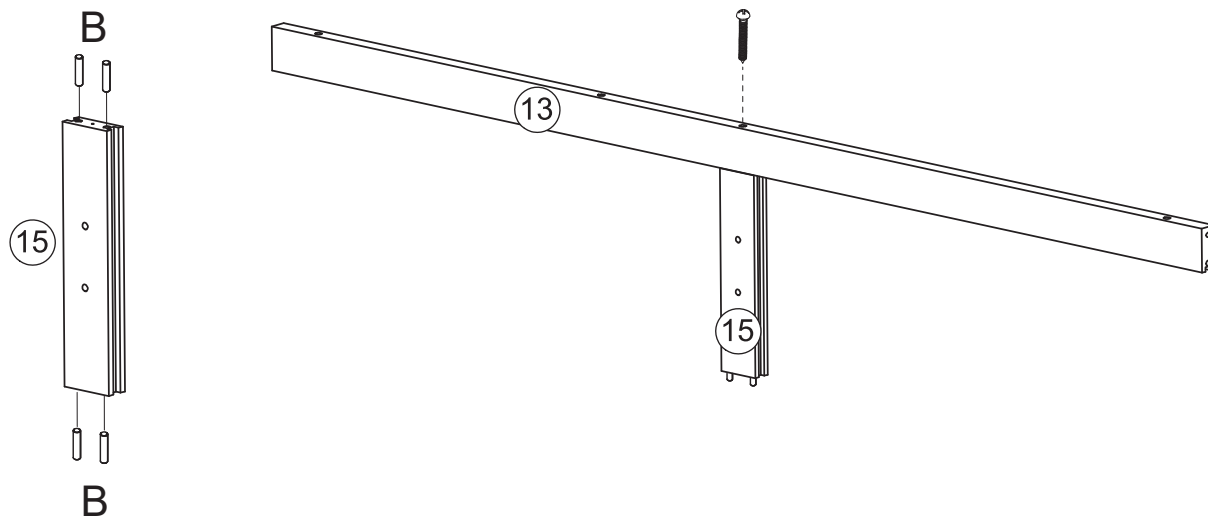

Step 04


Please ensure to use "F" bolt to attach the cross rail "13" to Top crown "14" as wrong size of bolt will protrude the top crown

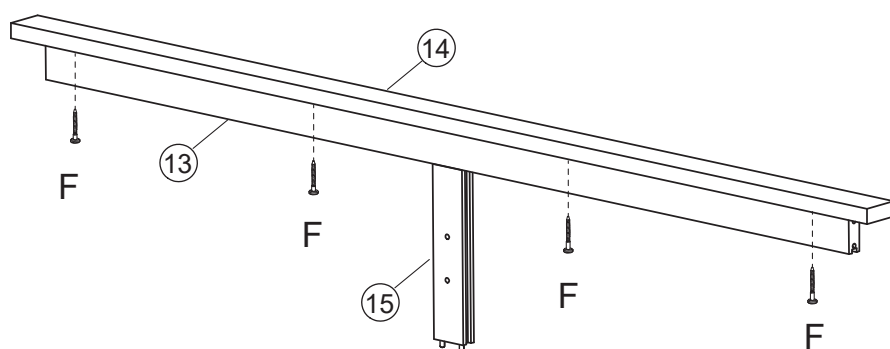

F x4



Bolt
M6x50mm

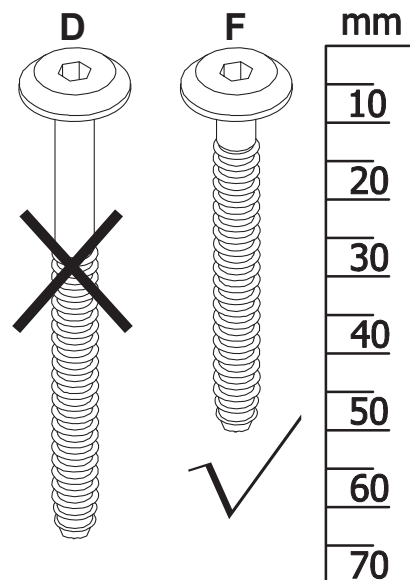

Step 05

B x4




Wood Dowel
Φ6x30mm

S x1





Screw
Φ4x50mm


T x1




Wood Glue

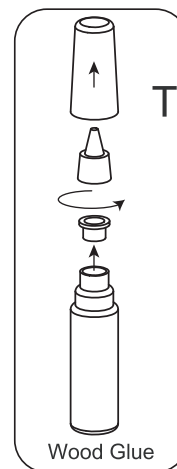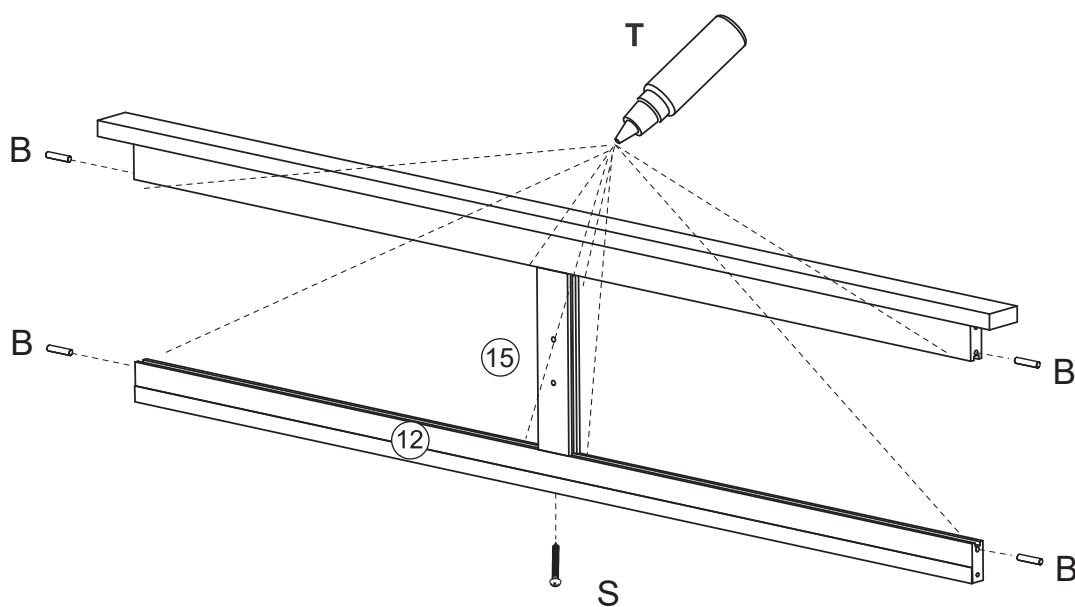

Step 06

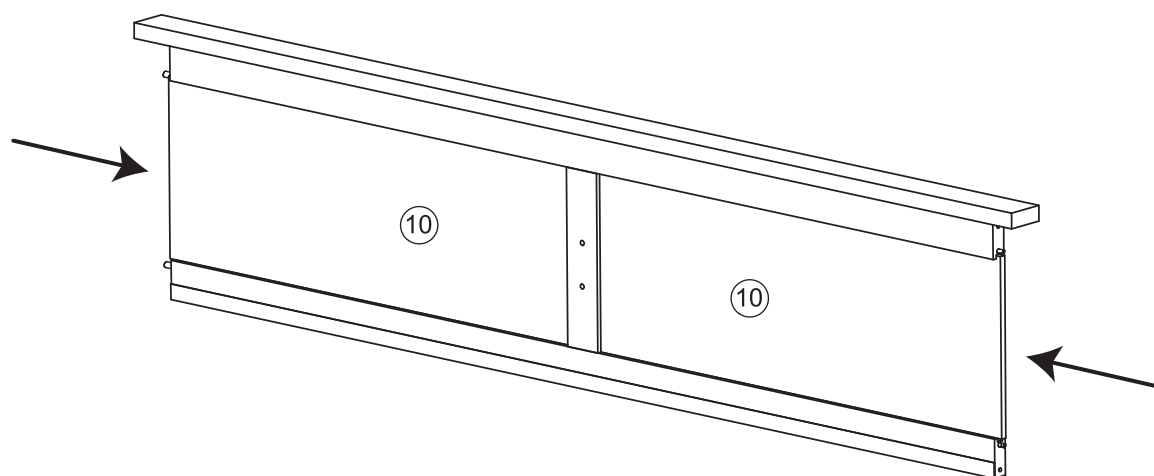

Step 07

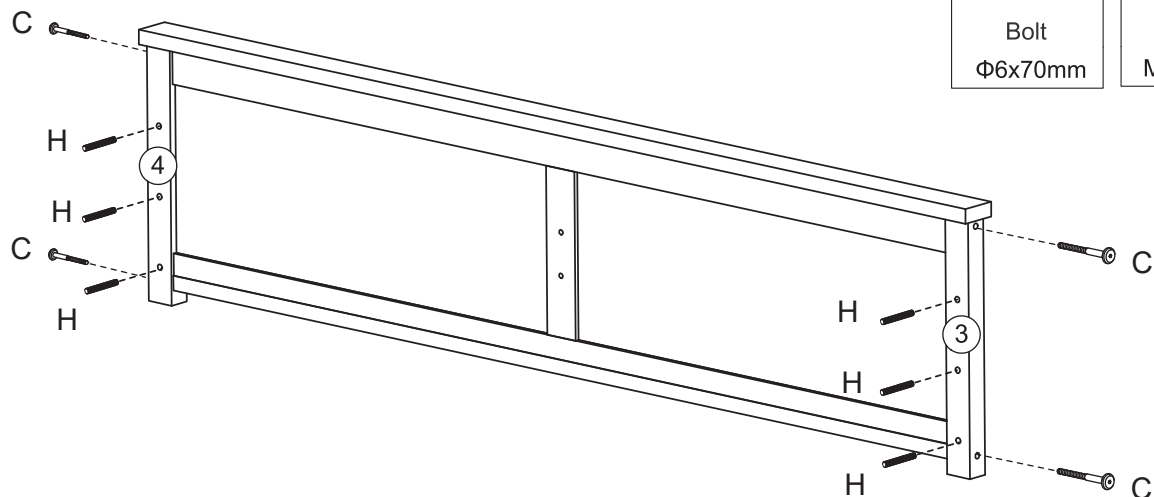

C x4


Bolt
Φ6x70mm

H x6

Stud
M6x60mm

Step 08

Do Not Over Tighten
The Nut "P"

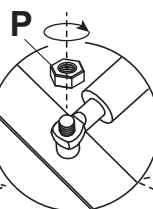


P x4

But
M8

Q x1


Spanner
M10

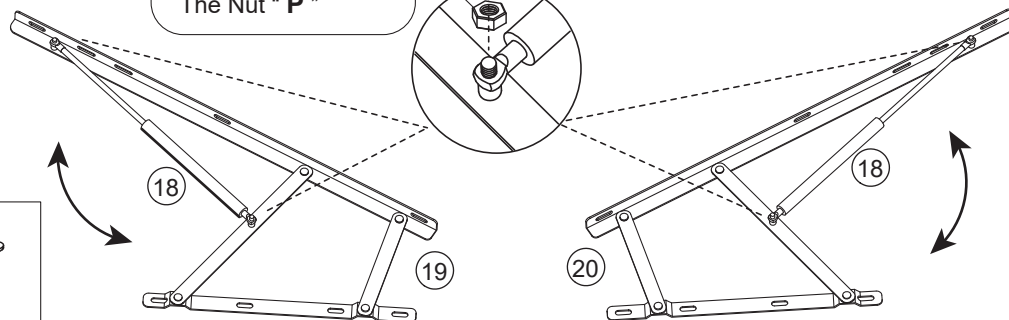

Step 09


N x8

Bolt & Washer
Φ8x20mm

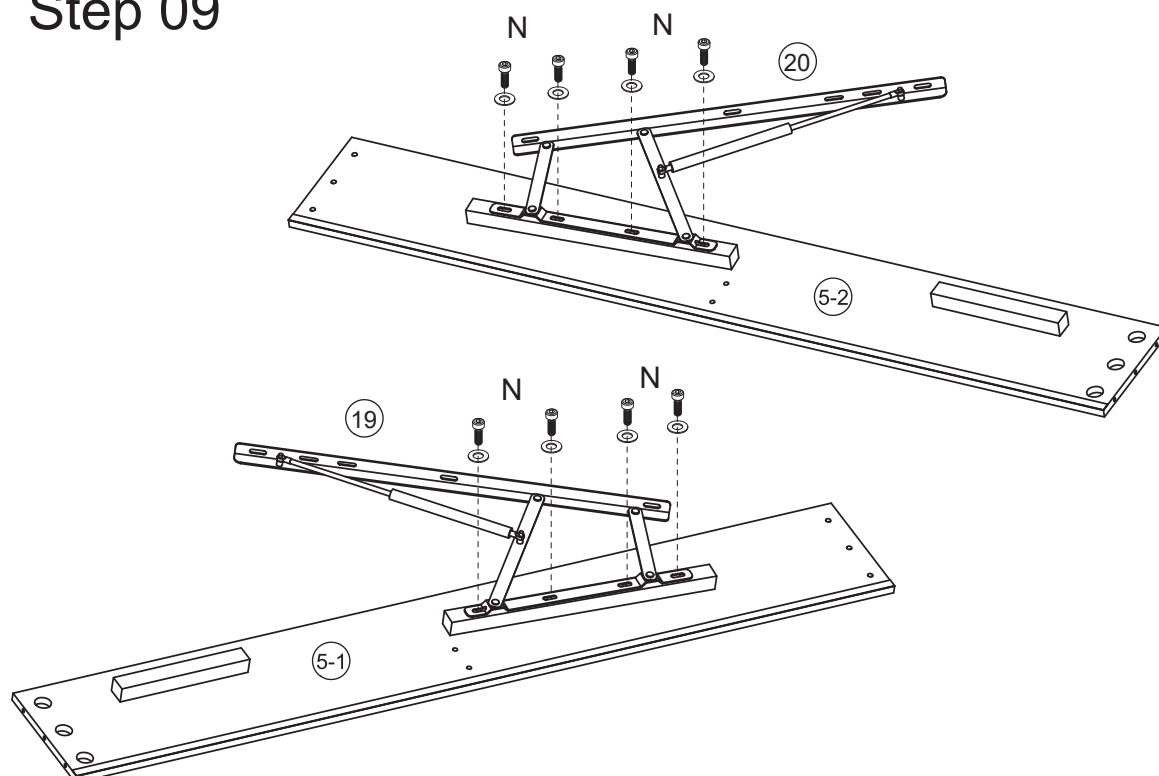




Step 10

D x6	E x6
	
Bolt M6x65mm	T-Nut

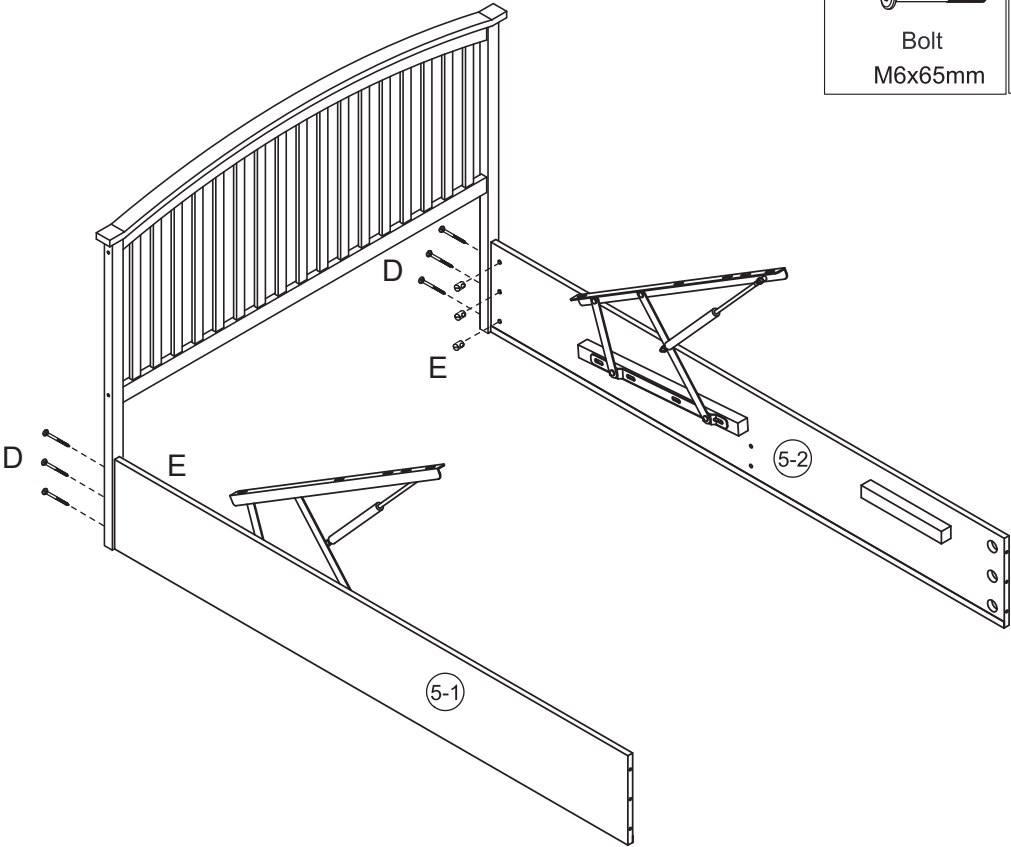


Step 11


J x6	K x6	L x1
		
Nut M6	Half Moon Washer	Spanner M6

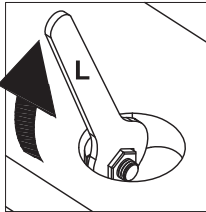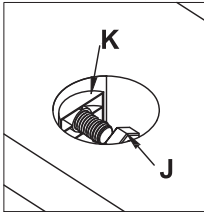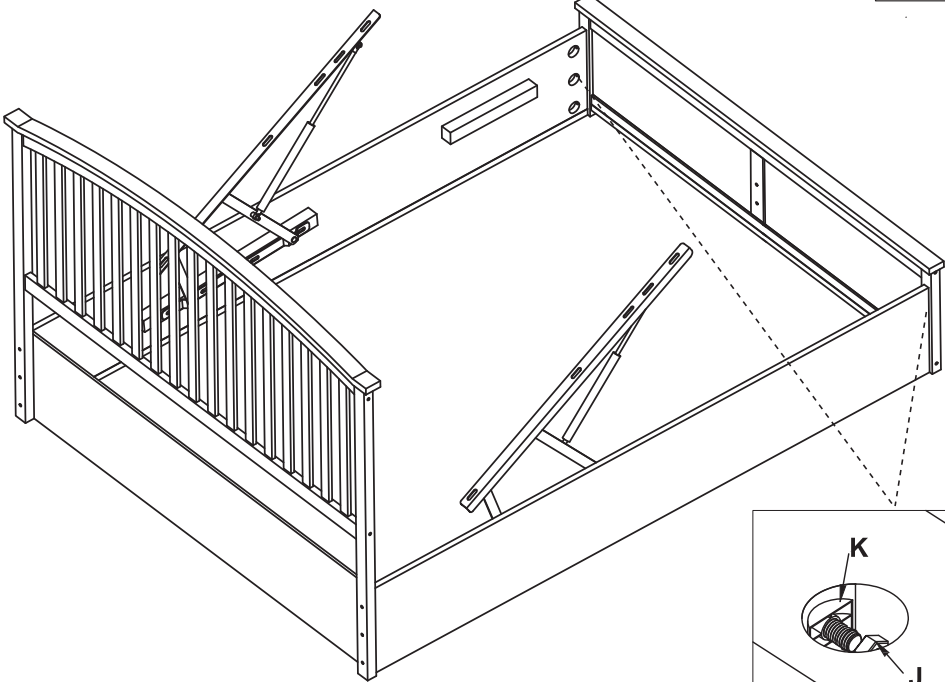

Step 12

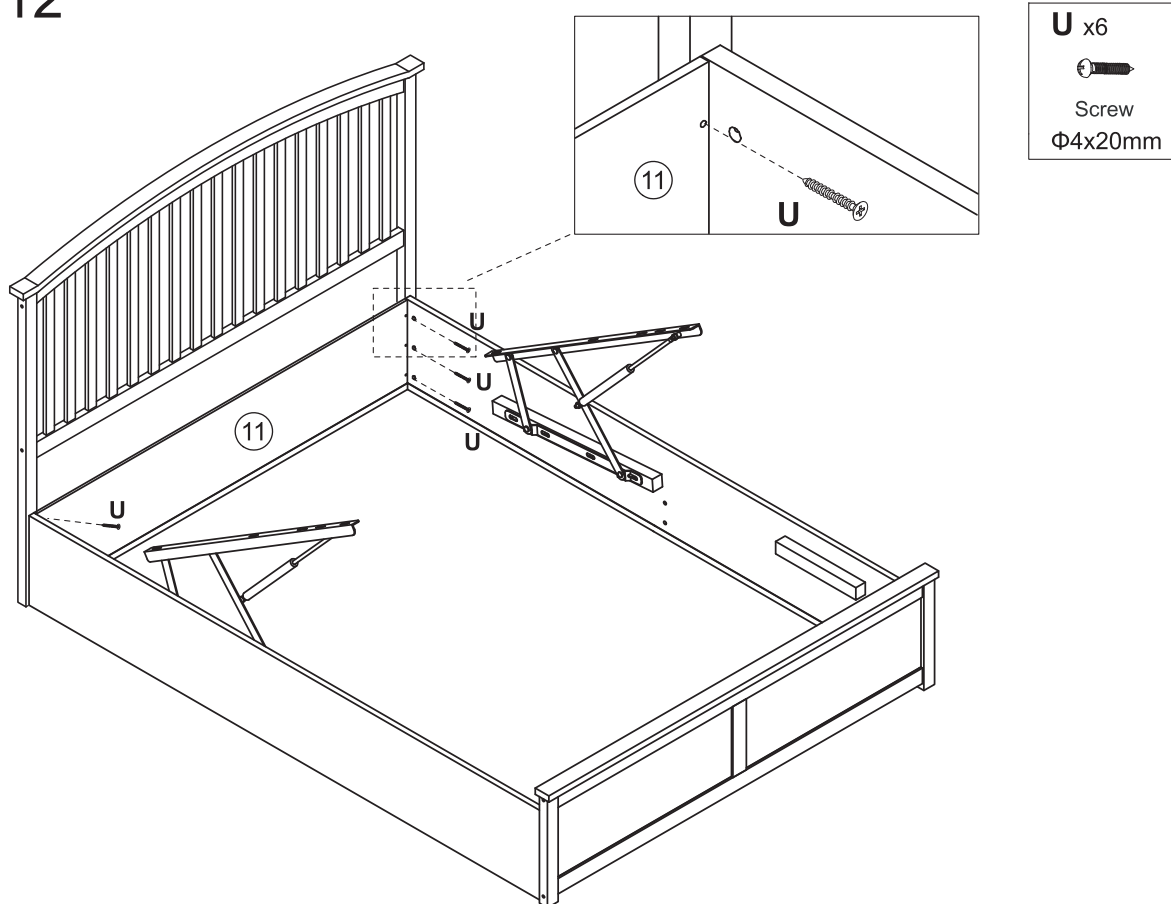

Step 13

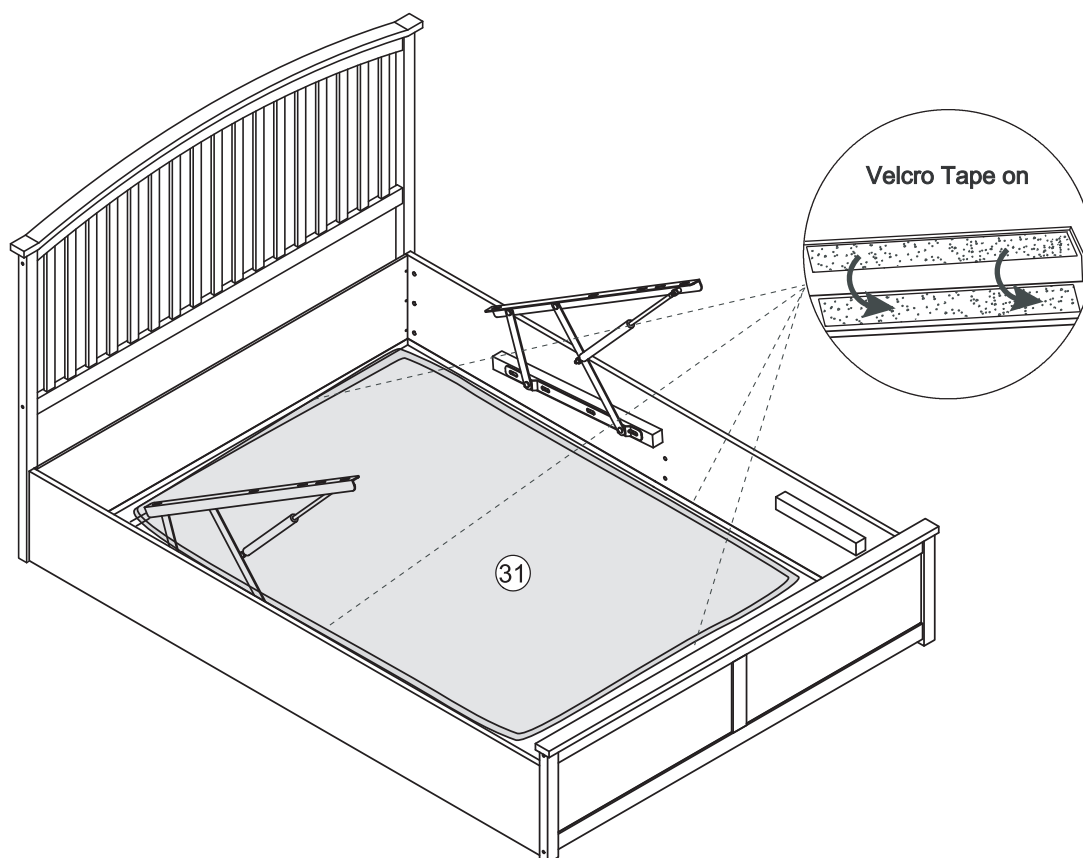

Step 14

G x4




Bolt
M6x35mm

F x2



Bolt
M6x50mm

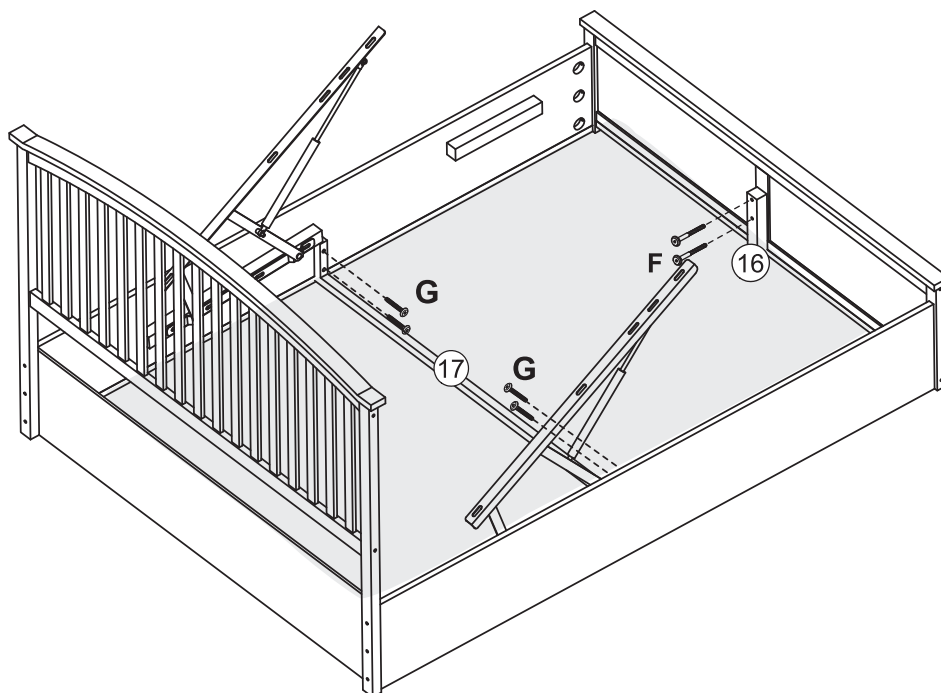


Step 15


O x12




Bolt
Φ8x15mm

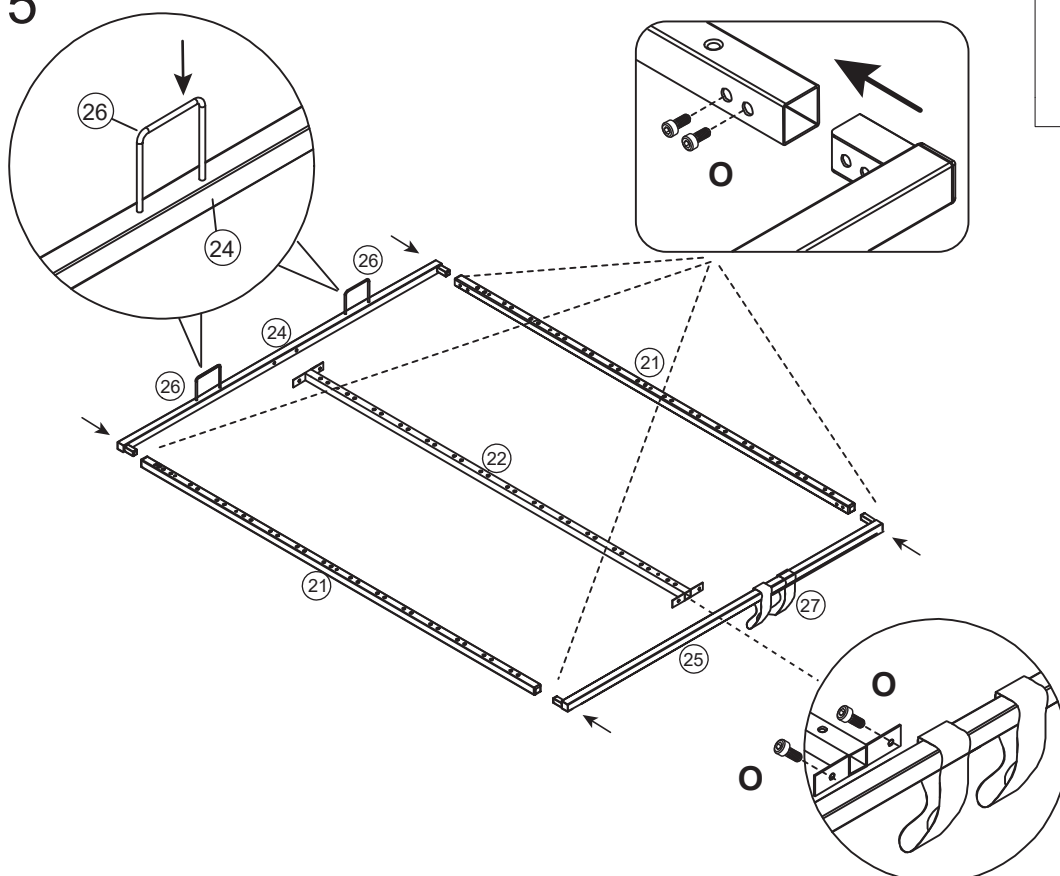



Step 16

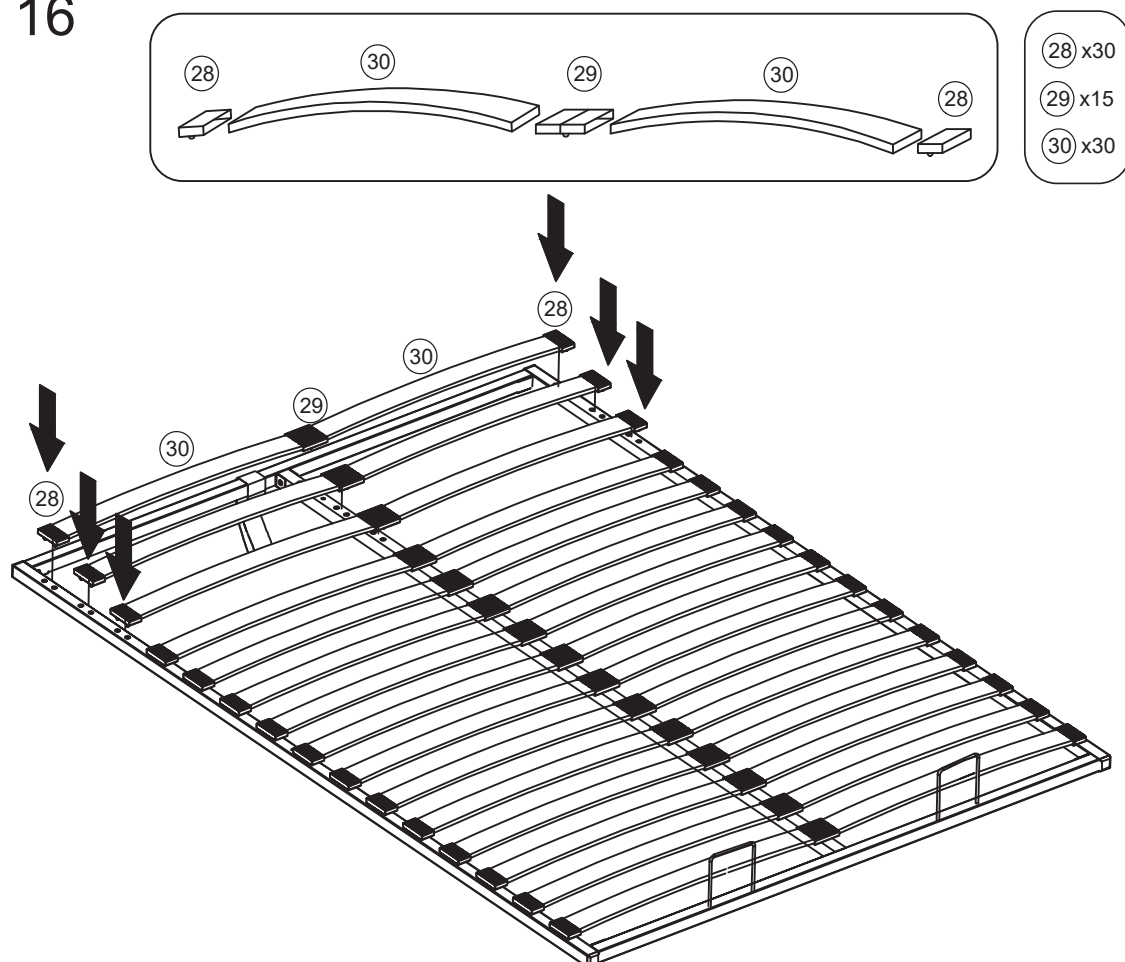

Step 17

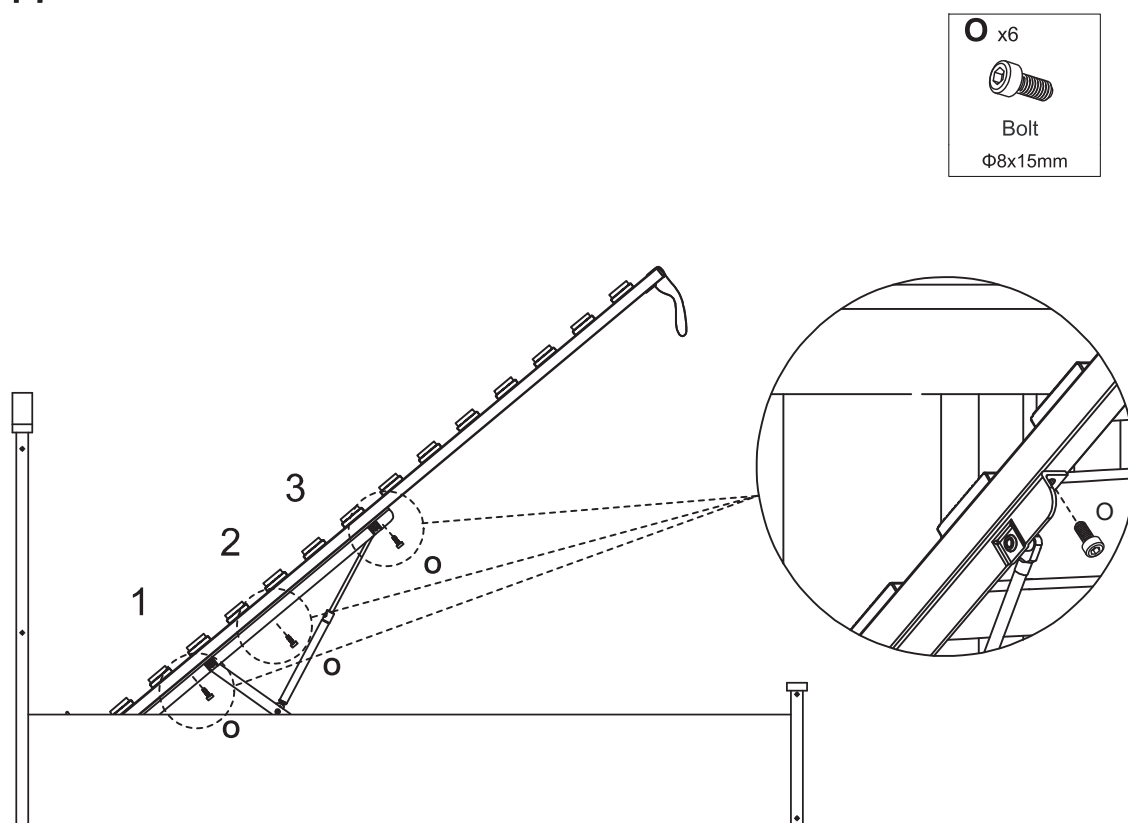

Step 18

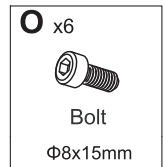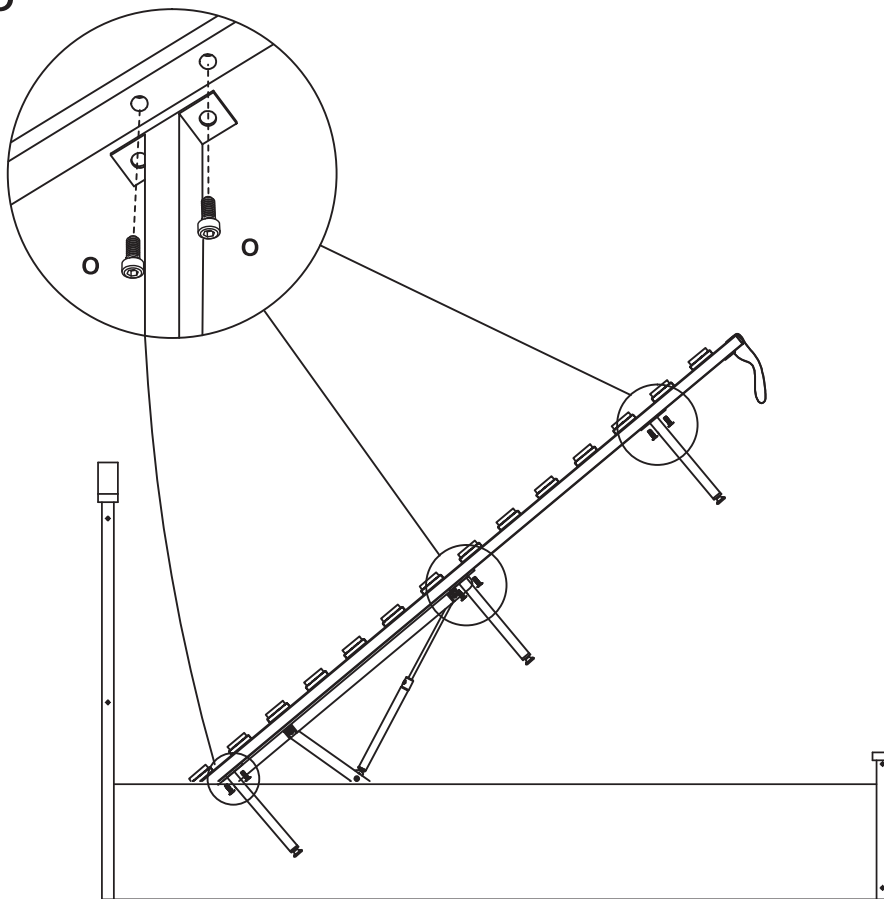

Step 19

Assembly Complete

