


# ASSEMBLY INSTRUCTION

















## *81 Series Bed Frame* *Queen Size*

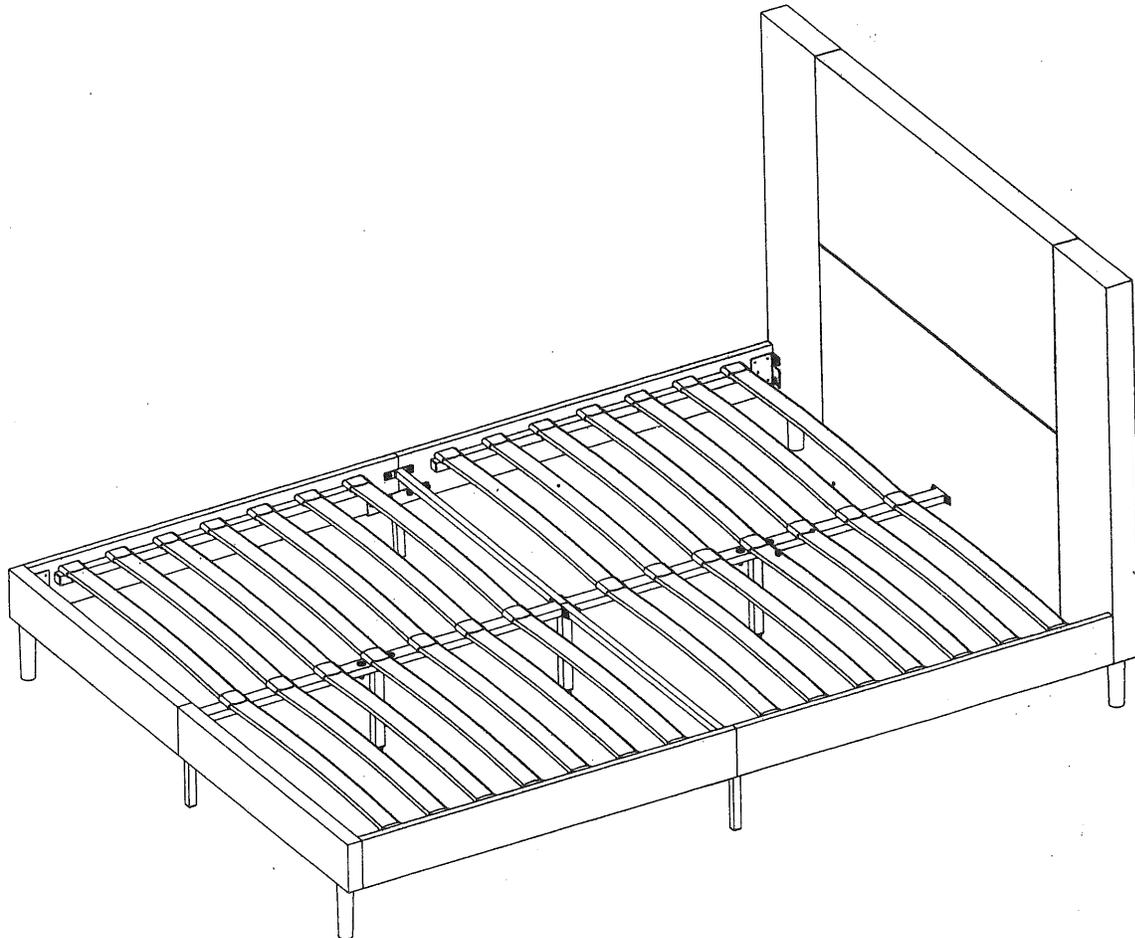

If any missing parts or defective parts, please contact us.


E-mail: [MC-AFTERSALE@outlook.com](mailto:MC-AFTERSALE@outlook.com)

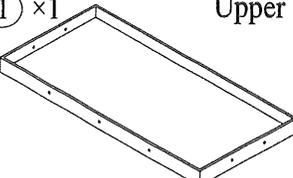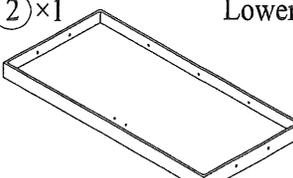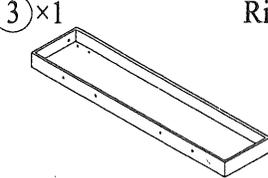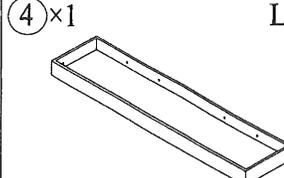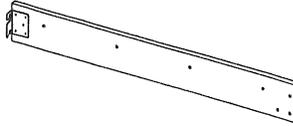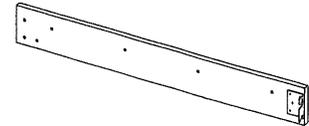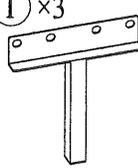① ×1 Upper 		② ×1 Lower 		③ ×1 Right 		④ ×1 Left 	
⑤ ×1 Footboard 		⑥ ×1 Footboard 		⑦ ×2 Side board 		⑧ ×2 Side board 	
⑦ ×2 Cross bars 		⑧ ×2 Center rail 		⑨ ×3 Triangular foot 		⑩ ×4 Foot 	
⑨ ×4 Side rails 				⑪ ×1 U-foot 		⑫ ×2 T-foot 	
⑬ ×20 M8×20 		⑭ ×8 M8×35 		⑮ ×33 M8×40 		⑯ ×14 Double bracket 	
		⑰ ×28 Bracket 		⑱ ×28 Slats 		⑲ ×1 	
				⑳ ×6 Nut 		㉑ ×1 	
㉒ ×11 							

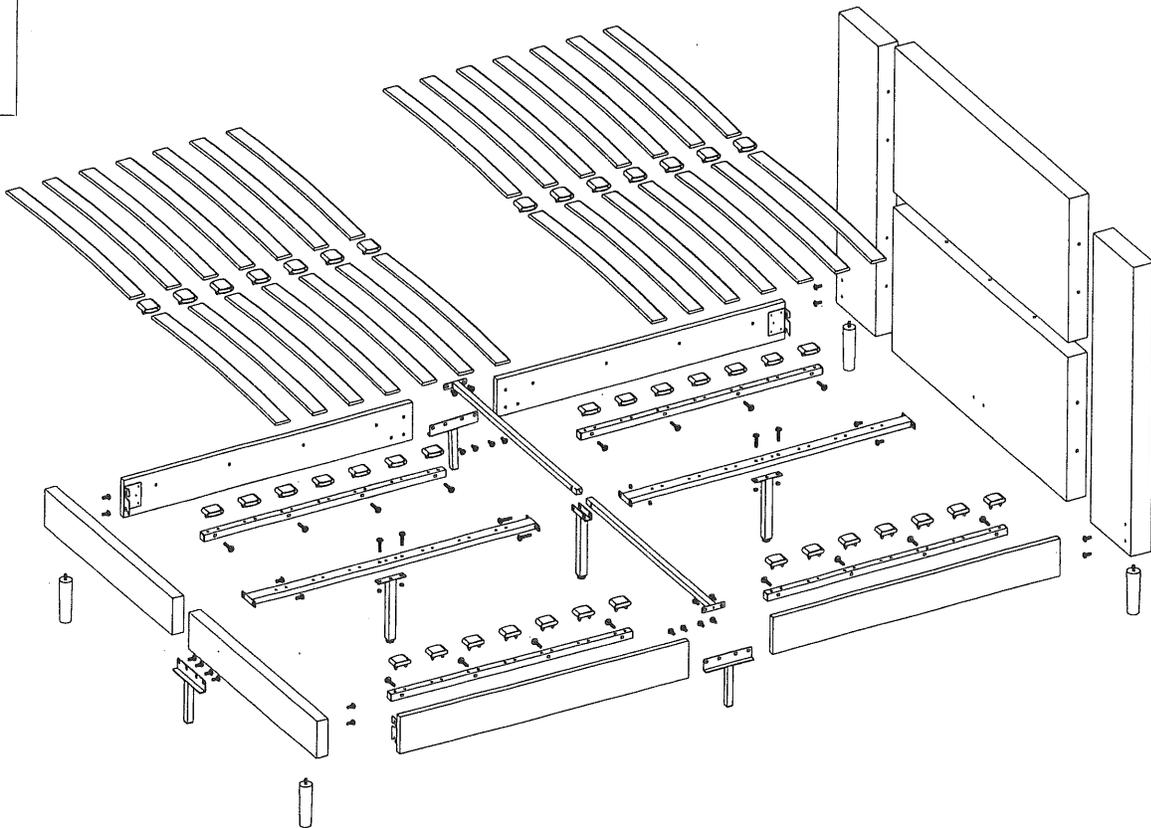



Clean the floor, next we need to install this bed frame on the floor. Before you start, find a blanket and lay it flat on the floor.

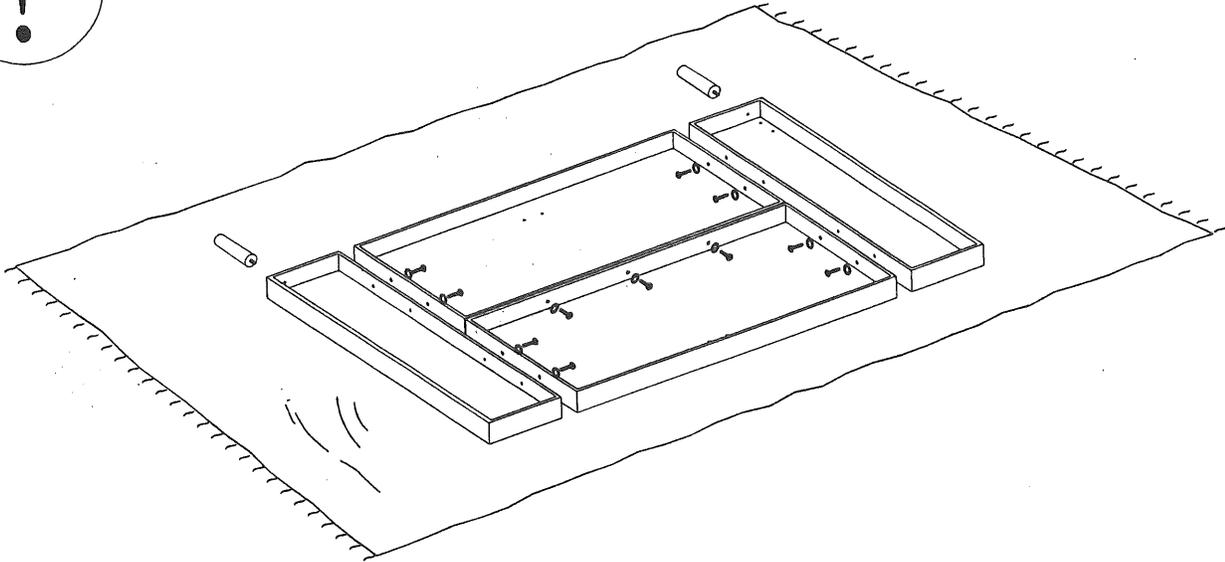

Place the accessories to be installed in each step flat on the blanket, take inventory and clean anti-rust oil on tools before start assembling. Complete one of the assemblies and lean against the wall to make room for the next step.





Step 1-1: Assemble Headboard

According to the following picture, check all accessories, preferably pre-positioned in position. Install all 11 screws, as well as the two bed feet.

Be careful to use the correct screws. Attention the details of the three "hand icon" instructions and do not place them incorrectly.



- ⊙ ×11
- ⓐ ×2
- ⓔ ×11

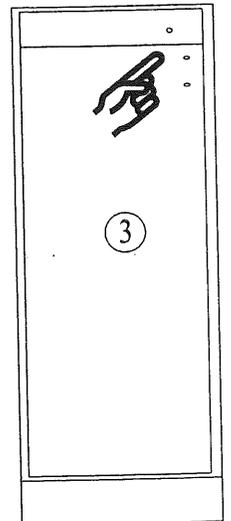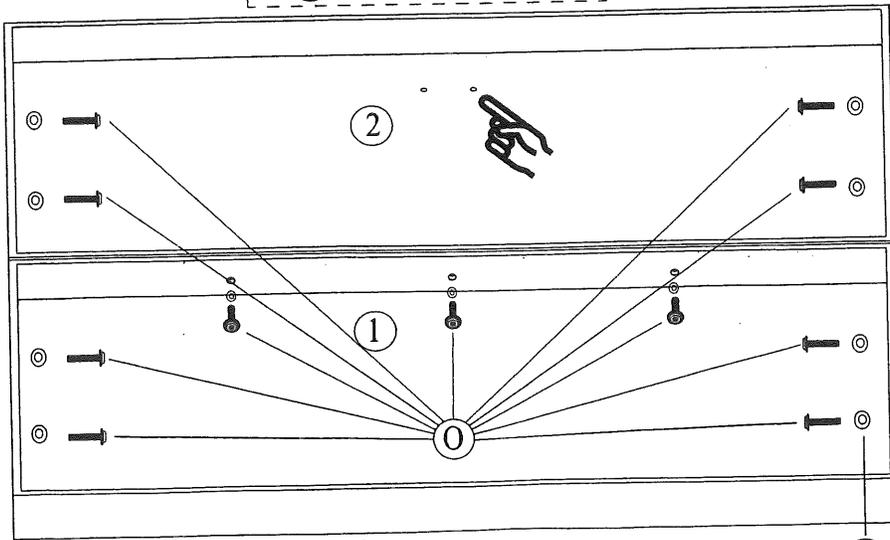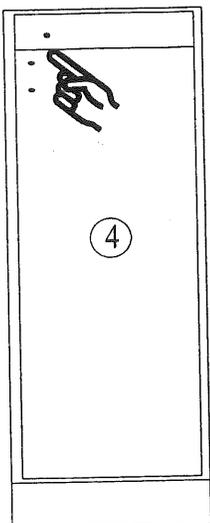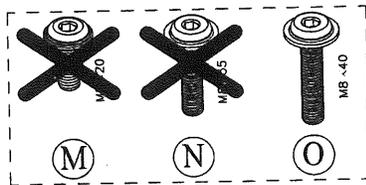


## Step 1-2: Assemble Headboard

Stand the headboard up and install 4 screws of "N"





It does not need to be fully locked.

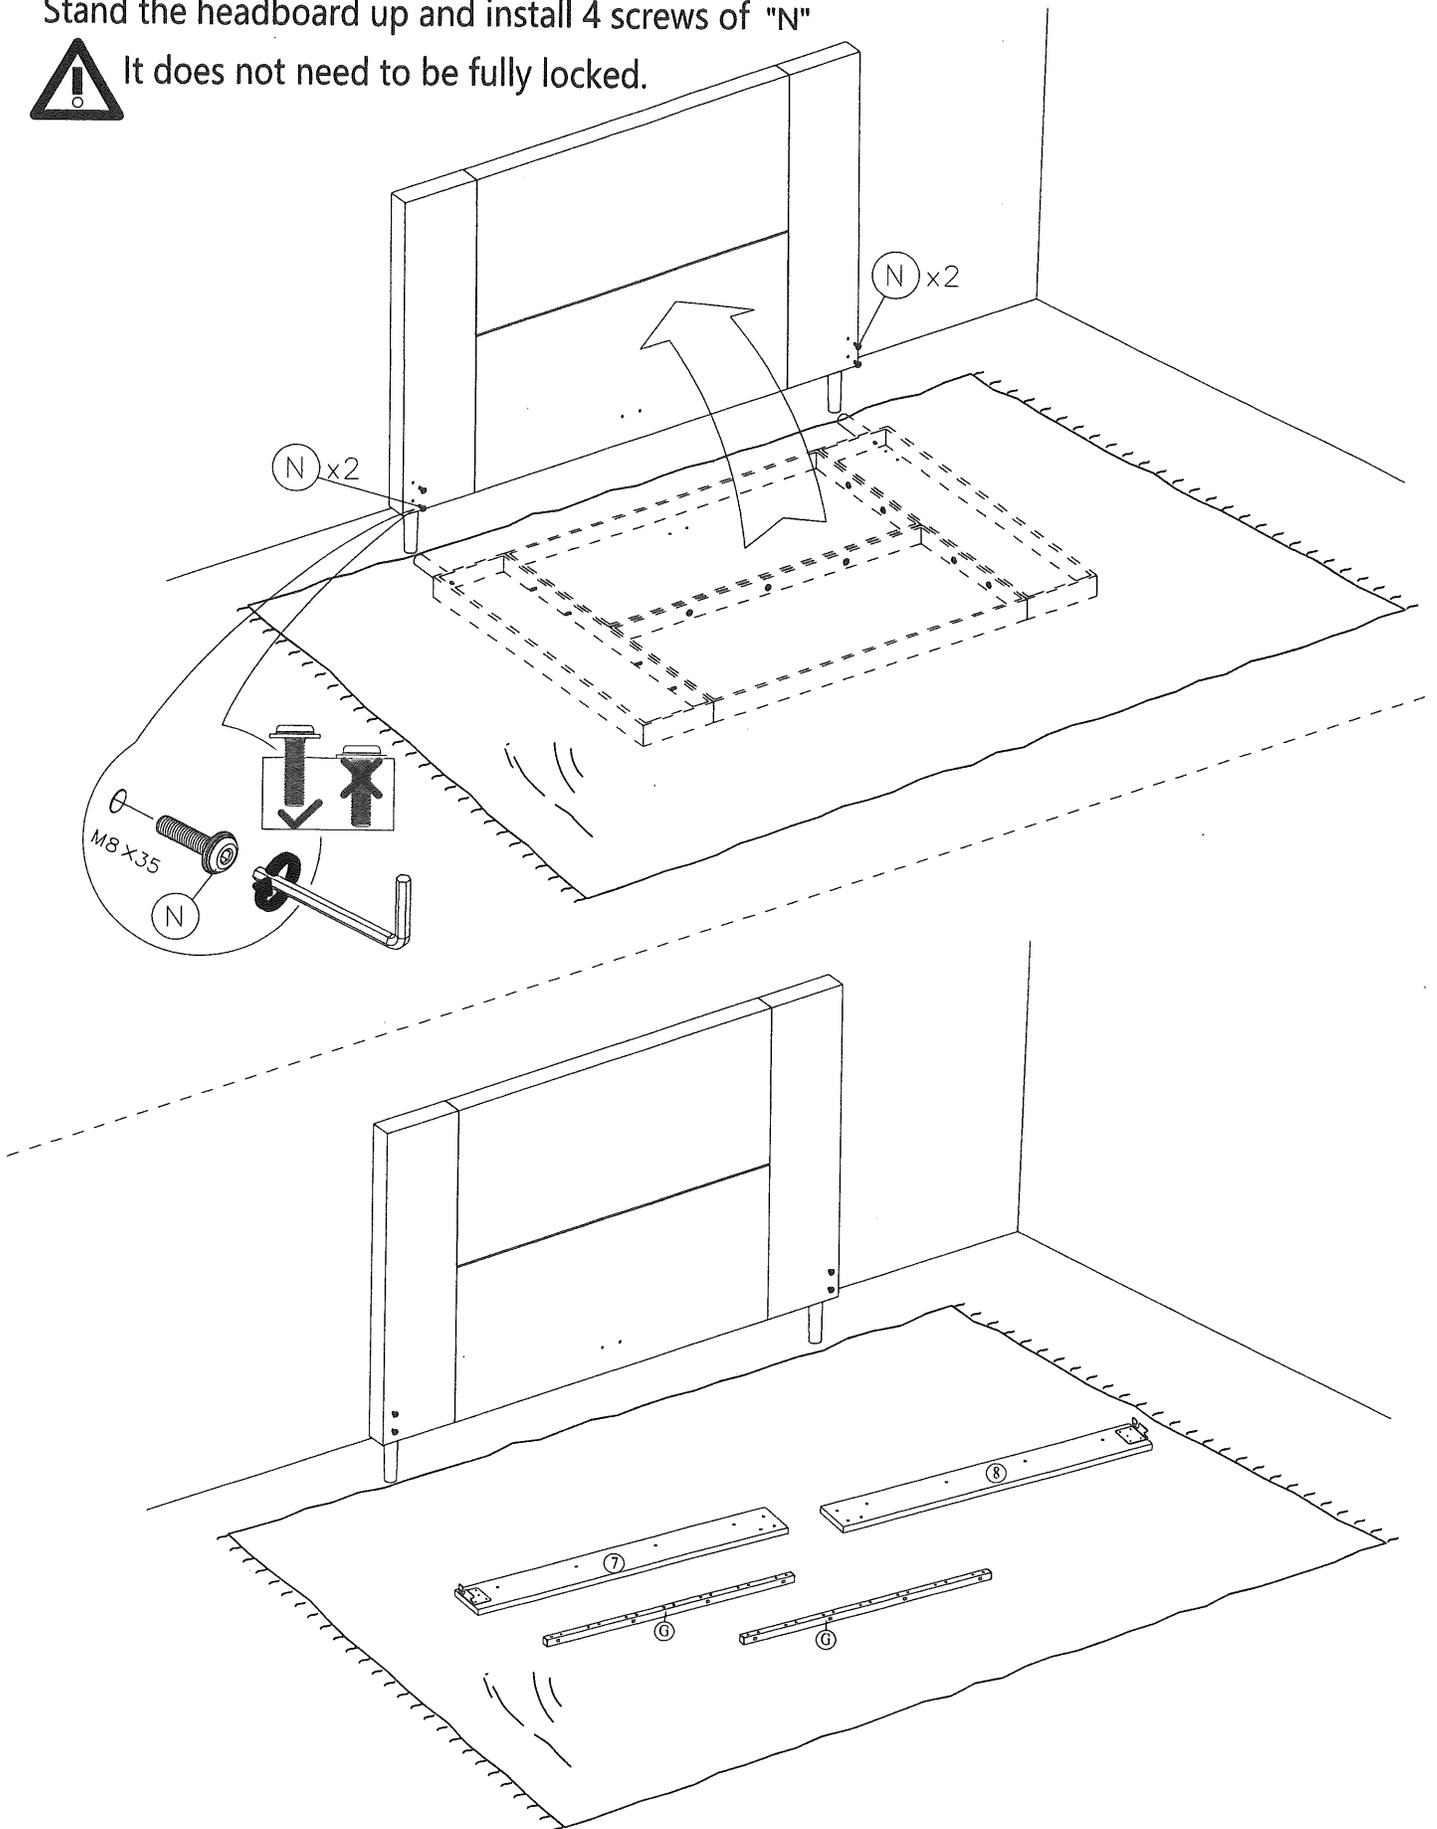



### Step 2-1: Assembly of bed side rails

As shown in the figure below, bed side board "7" is installed with side rail "G", Complete two pieces. use 4 screws of "O" each side board.

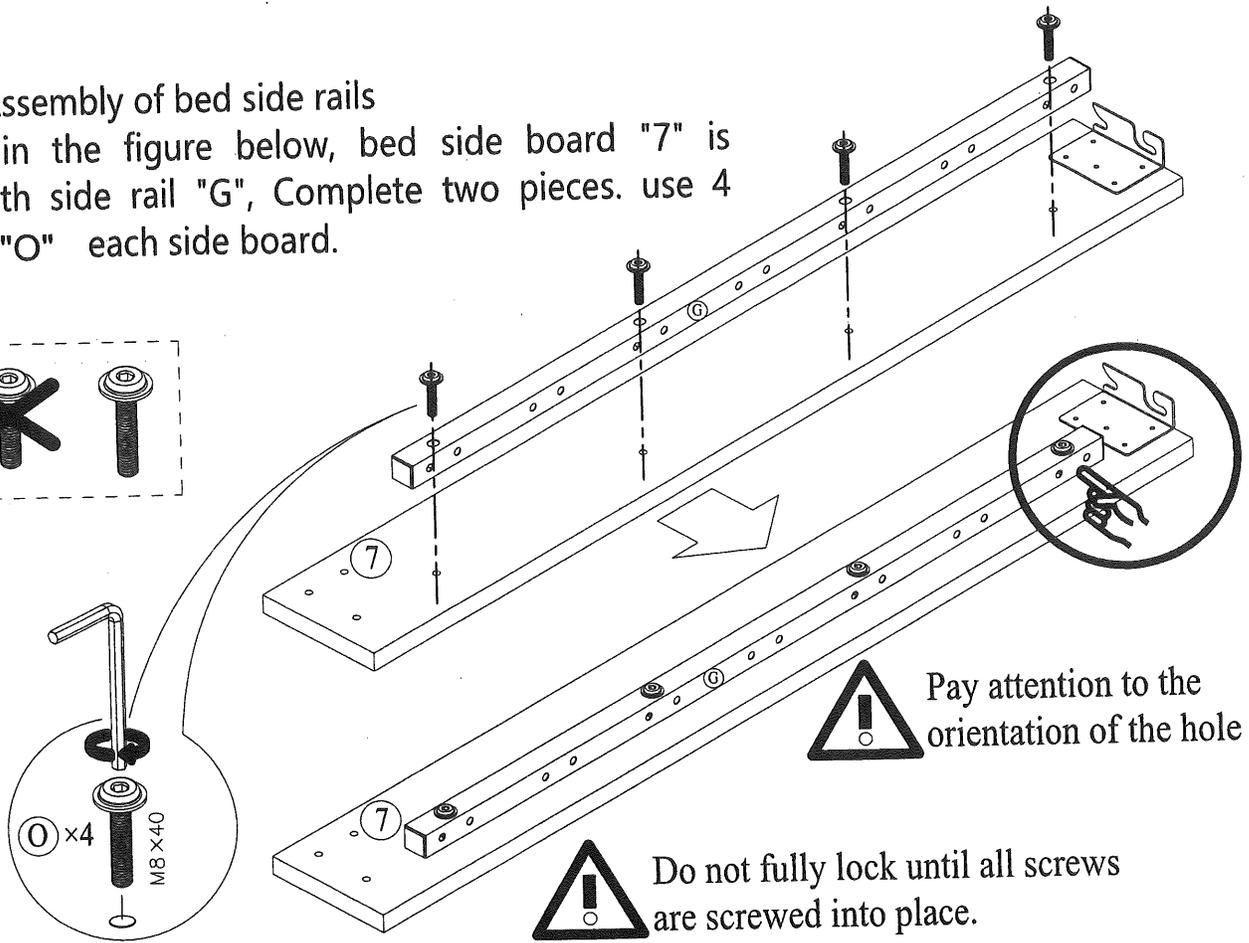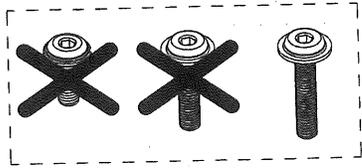


### Step 2-2: Assembly of bed side rails

As shown in the figure below, bed side board "8" is installed with side rail "G", Complete two pieces. use 4 screws of "O" each side board.

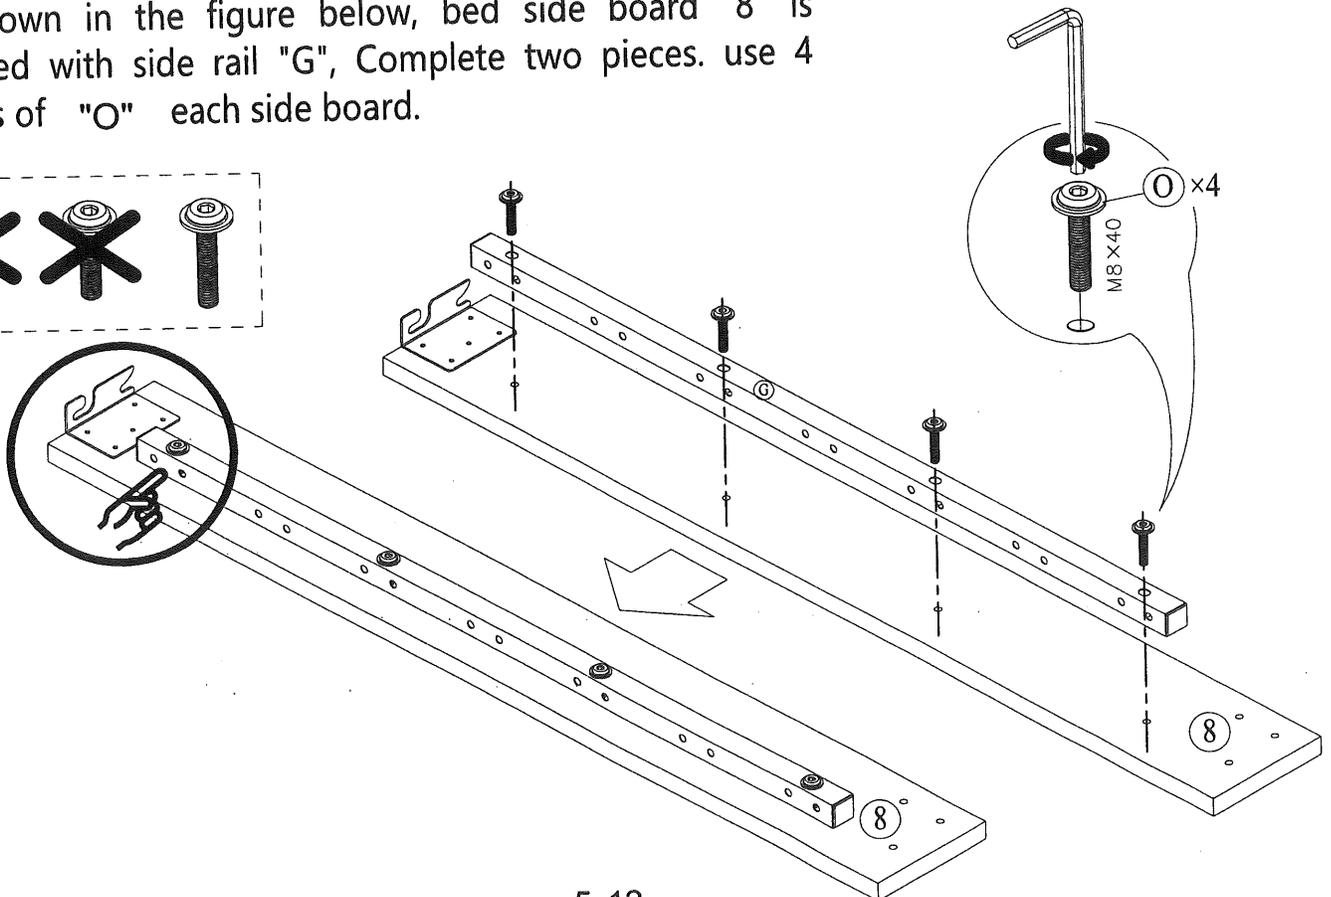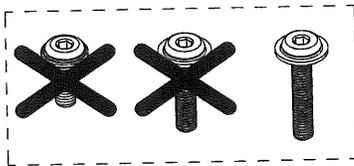


### Step 2-3: Assembly of bed side rails

As shown in the figure below, a piece bed side board "7" and a piece bed side board "8" can be locked together. use 4 screws of "M" locked with "I".

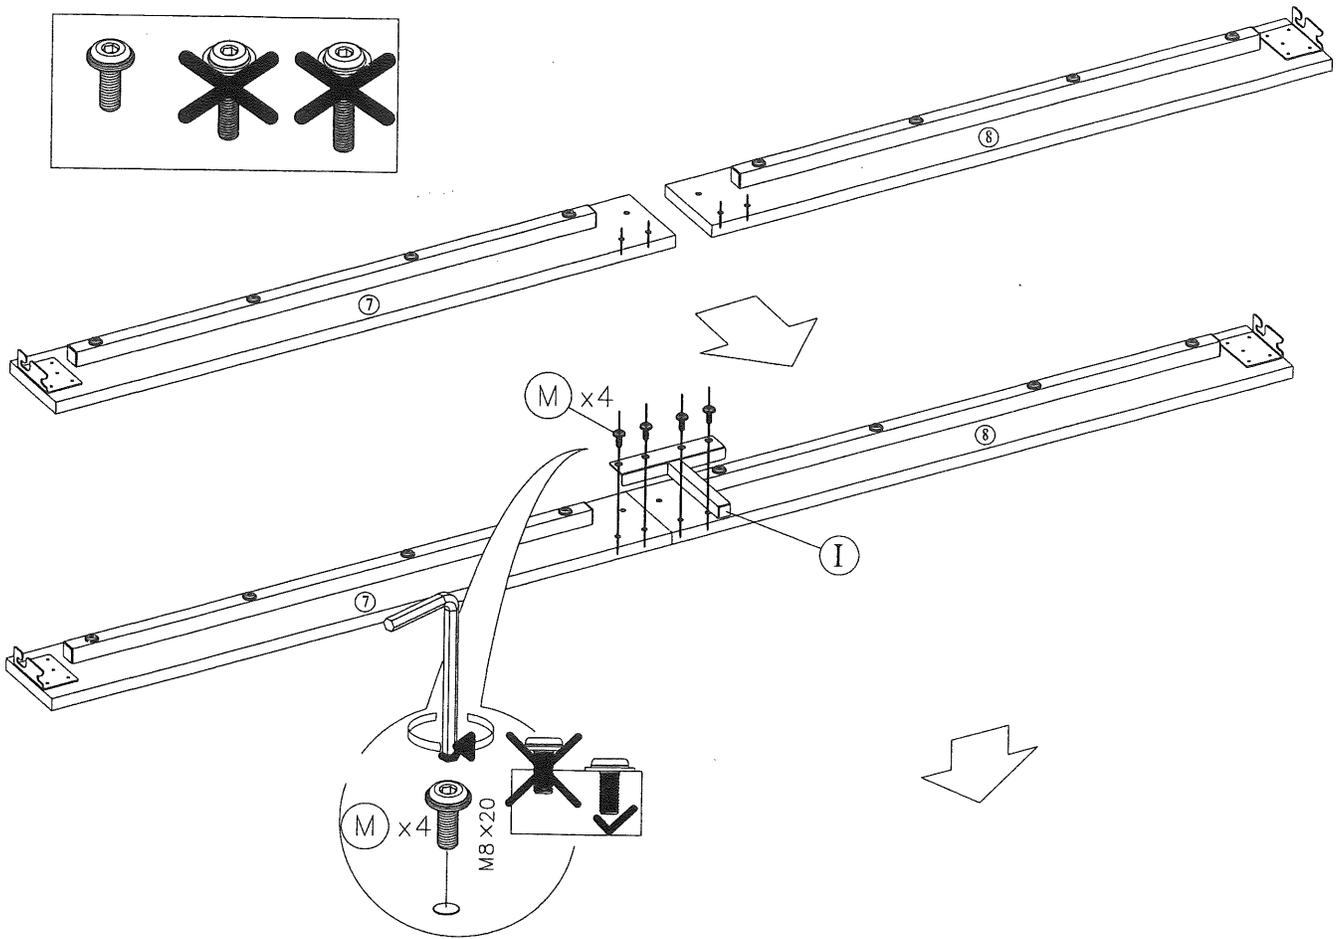

Repeat the above steps to complete the other one.

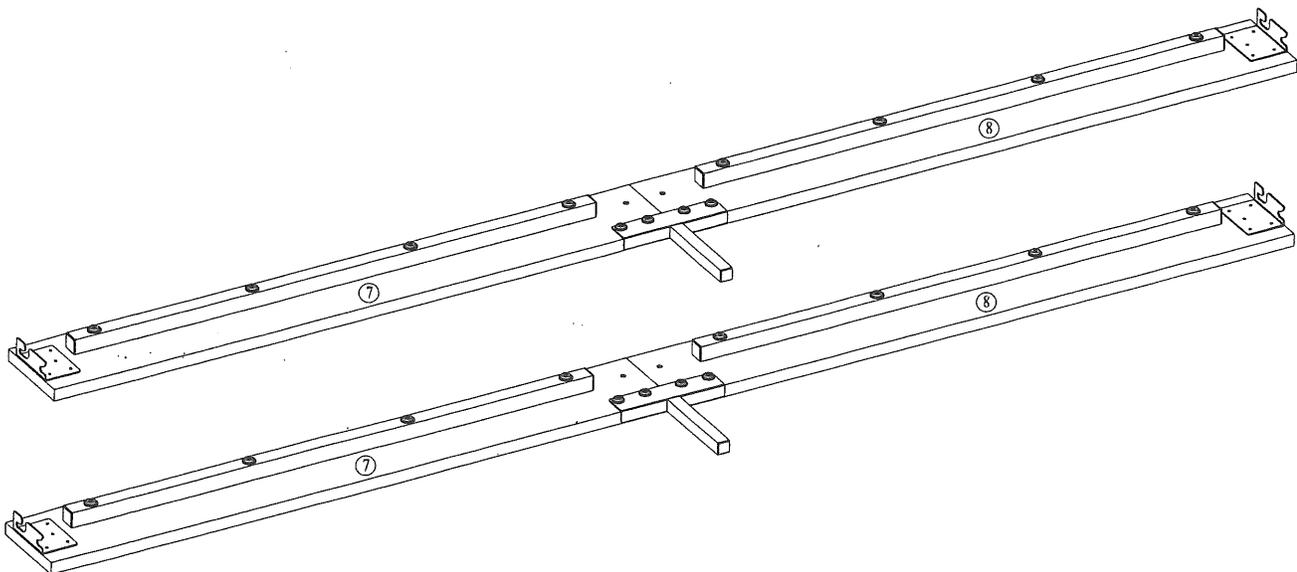


### Step 3: Assembly of bed footboard

As shown in the figure below, a piece footboard "5" and a piece footboard "6" can be locked together. use 4 screws of "M" locked with "I". And install 4 screws of "N"


(M) x4

(N) x4


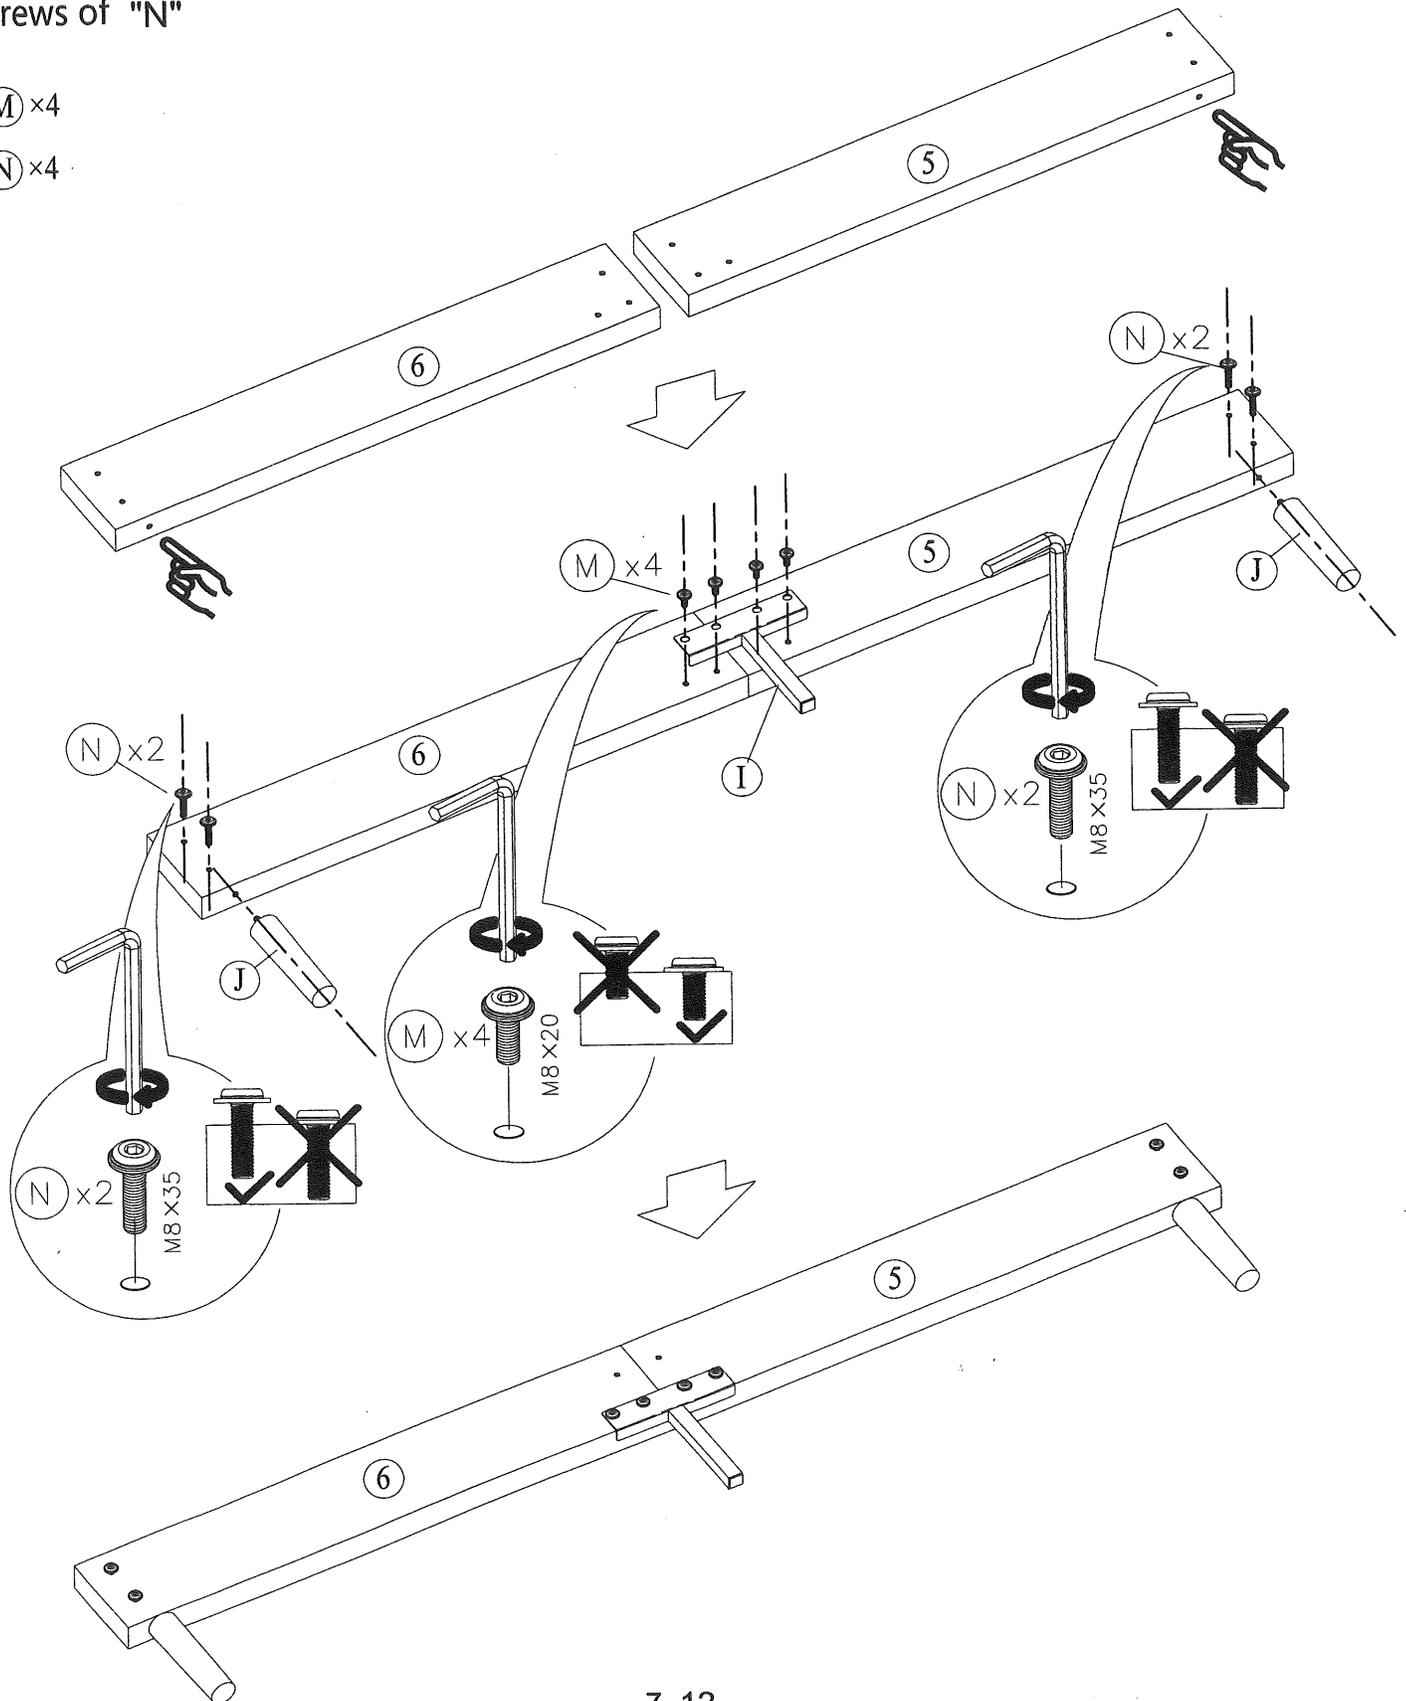


**Step 4: Assembling bed side boards and footboard**

As shown in the figure below, two pieces side boards and a piece footboard can be locked together. Simply align the snap position, snap in and lock in place with a wrench.

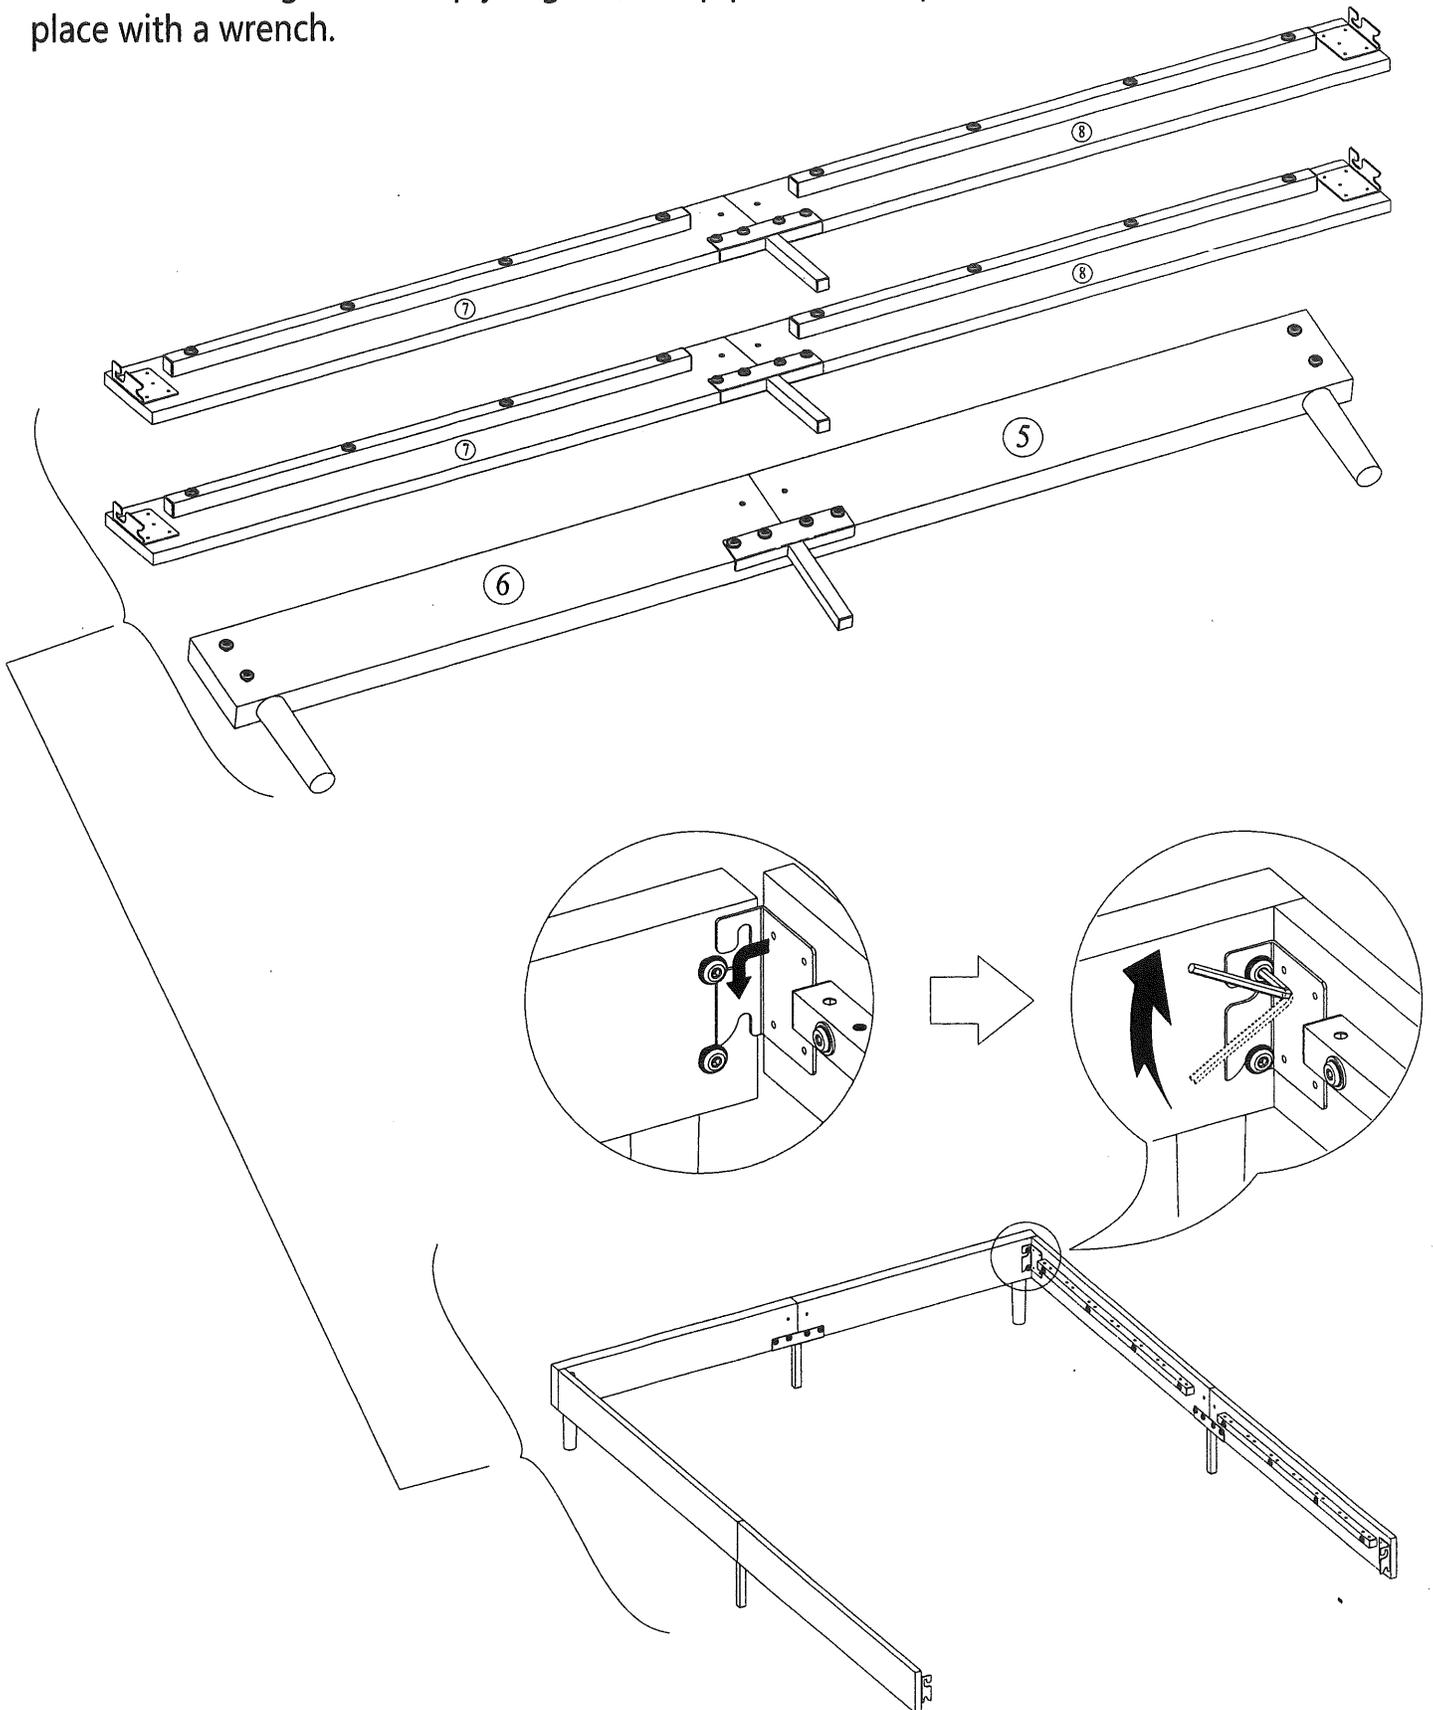

Step 5: Assembled bed frame

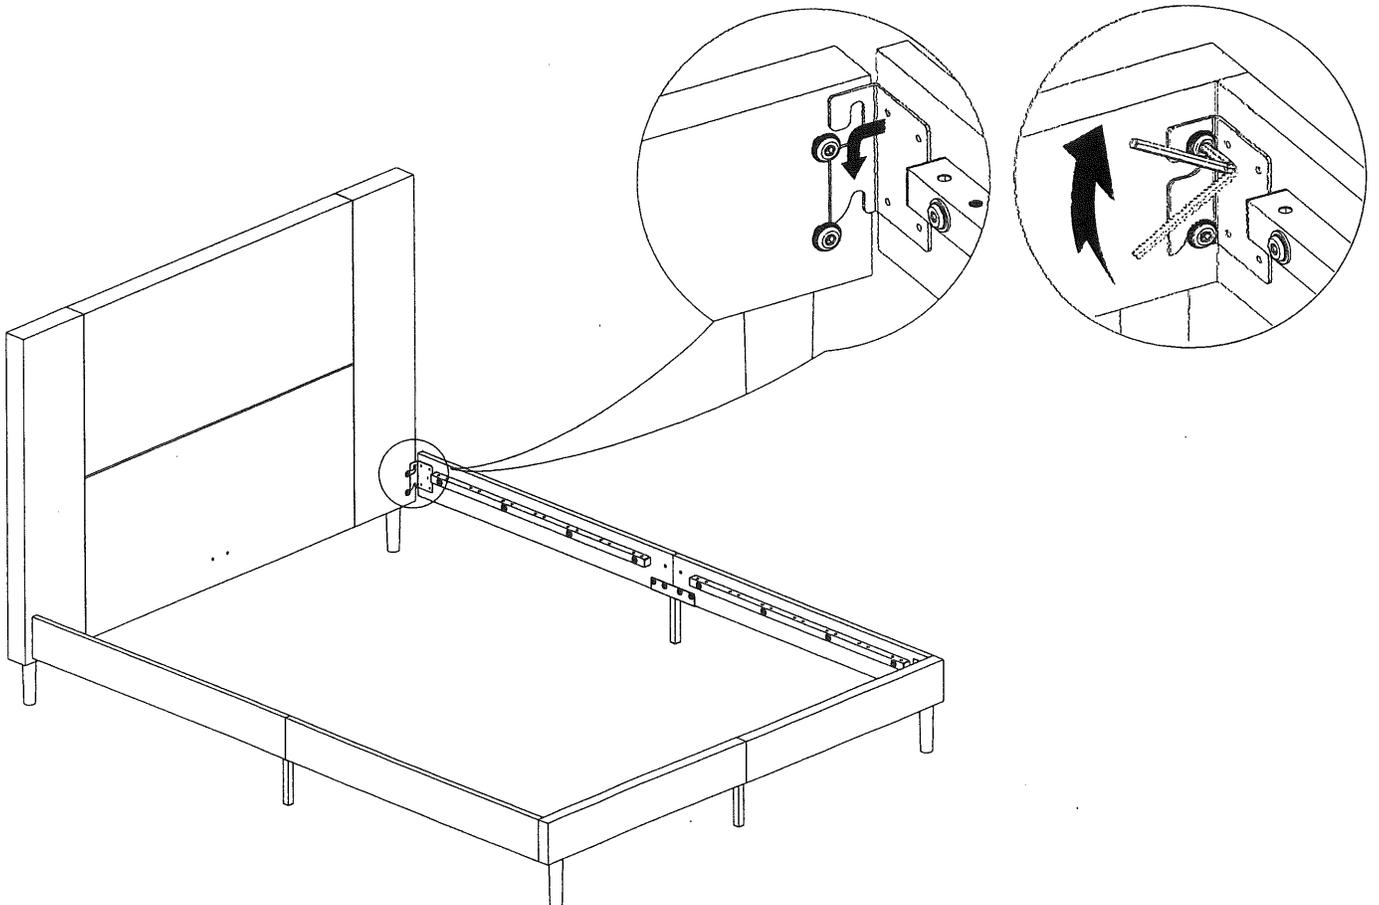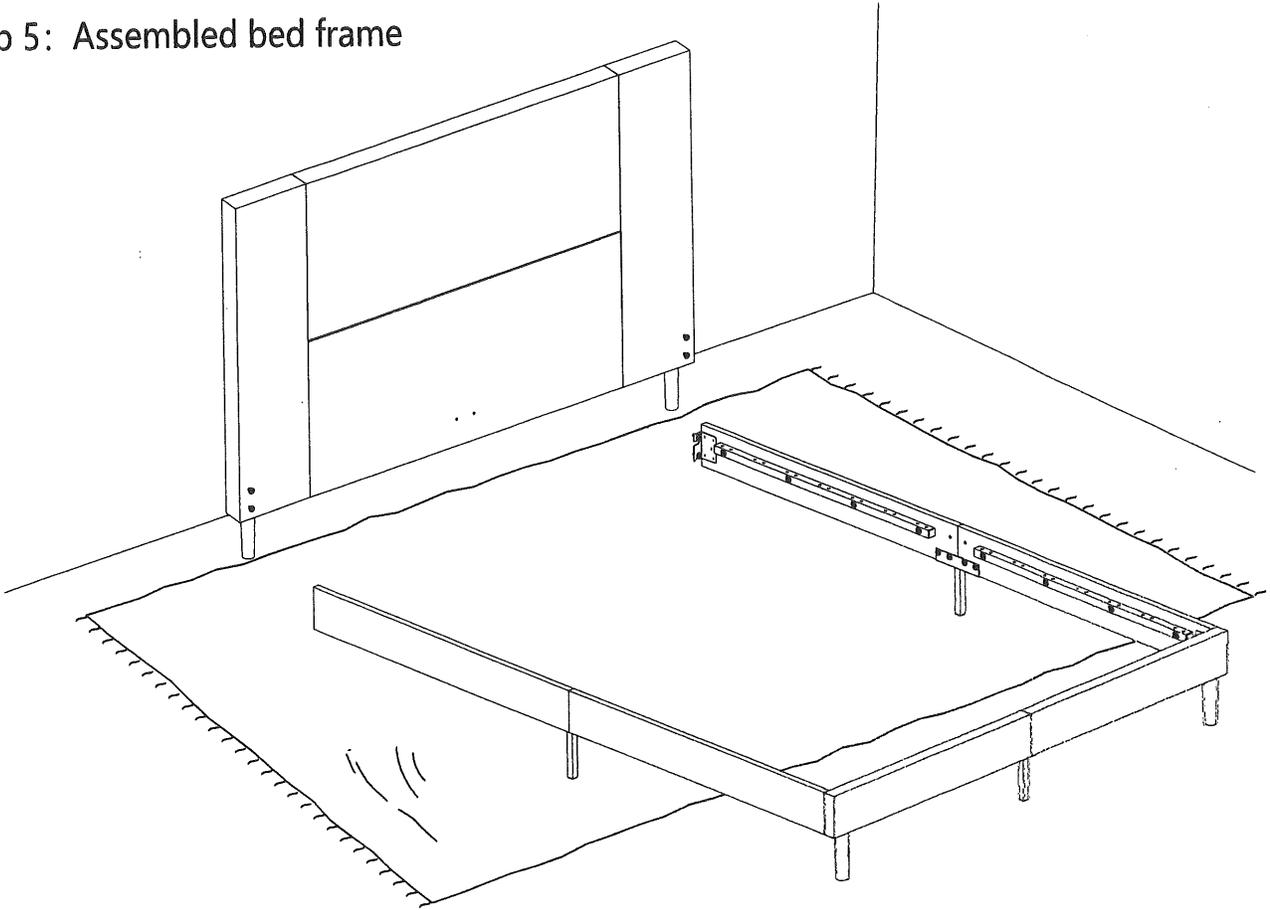




### Step 7: Assembled Brackets and Slats

Connect a slat with a "P" and a "Q". Tap the "Q" into the "side rail (G)", and tap the "P" into the "center rail (H)".


Ⓚ × 28

Ⓟ × 14

Ⓡ × 28

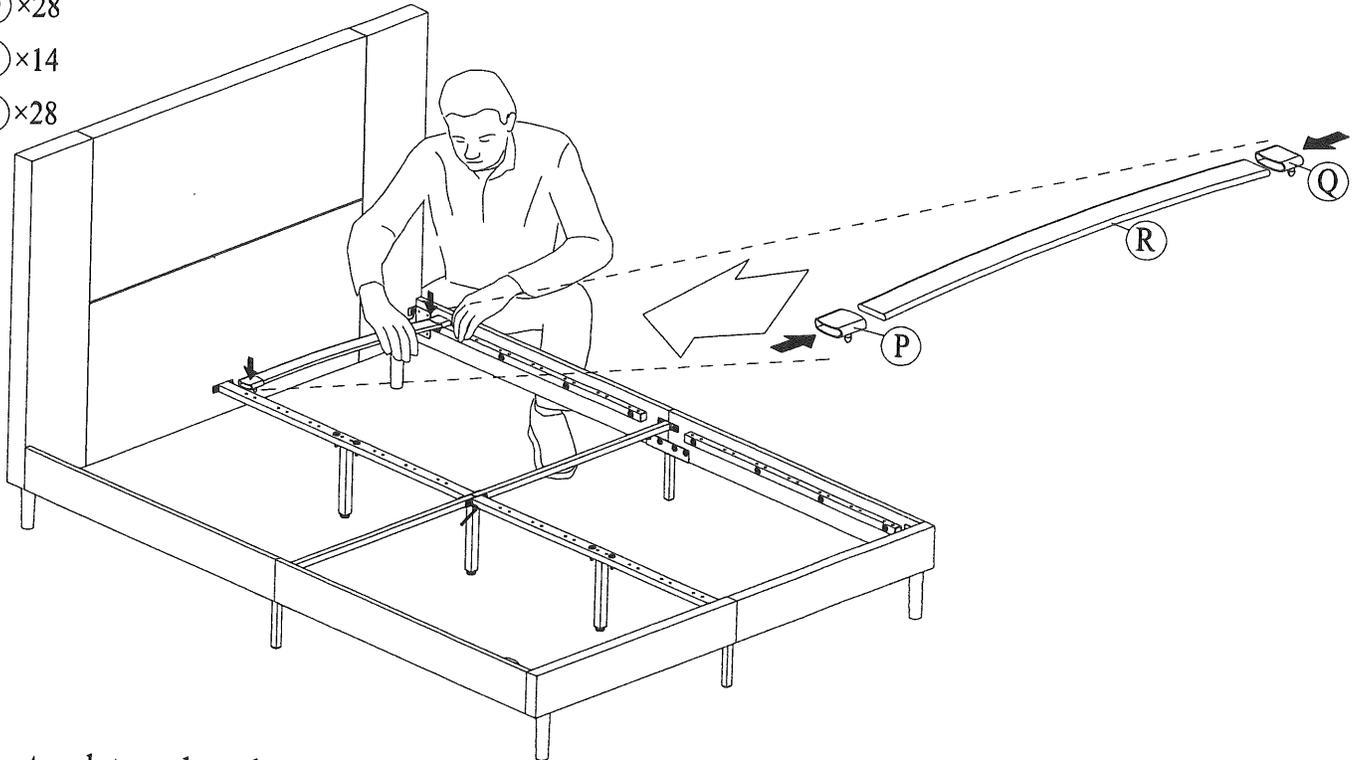

Insert a slat on the other side of the double bracket, the other end of the slat is fitted with a bracket, tap the bracket into the side rail.

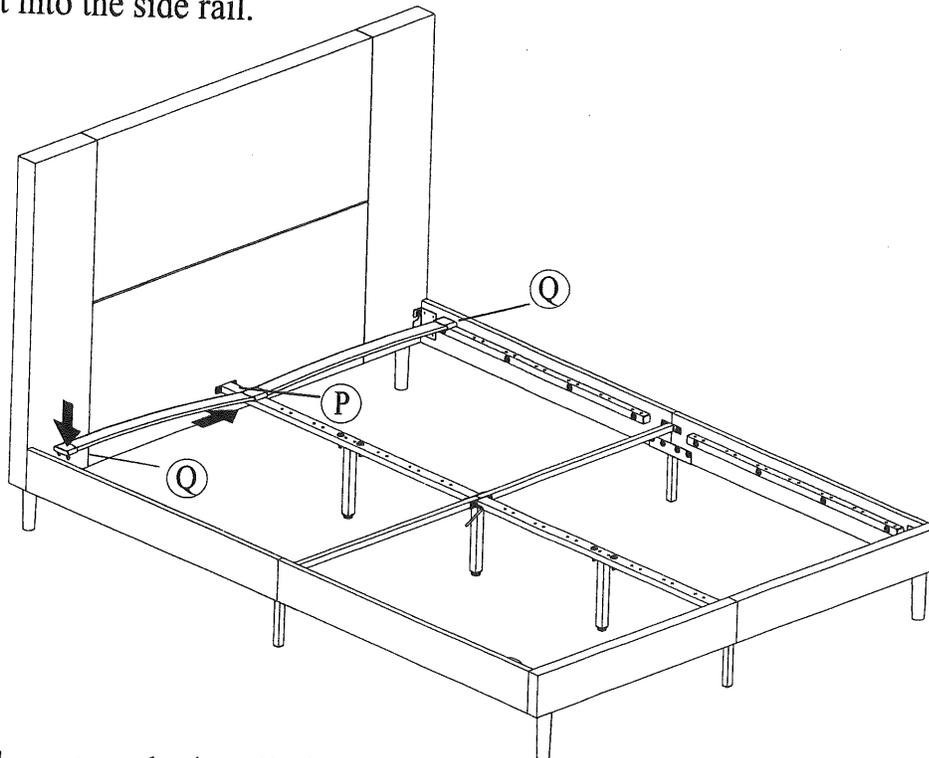

Repeat the above two slat installation steps to finish installing all the slats from headboard to footboard direction.

