

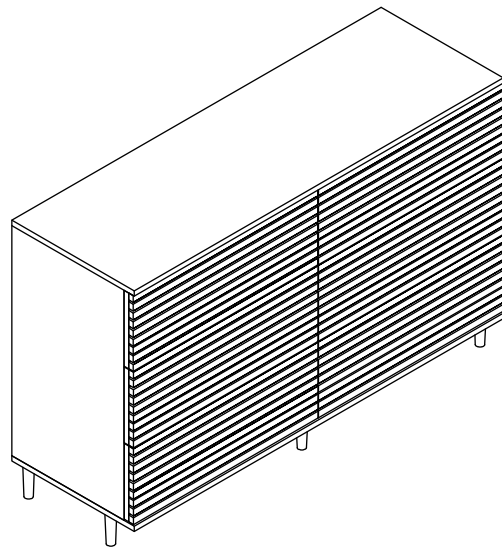










A	x36	B	x12	C	x12	D	x52	E	x8	F	x2
				 Ø6x30mm		 4x40mm					
G	x18	H	x36	I	x2	J	x28	K	x12	L	x4
 4x14mm		 3x12mm		 4x30mm							
M	x12	N	x4	O	x2	P	x24	Q	x1	R	x4
 4x10mm											
S	x12										
 3x14mm											

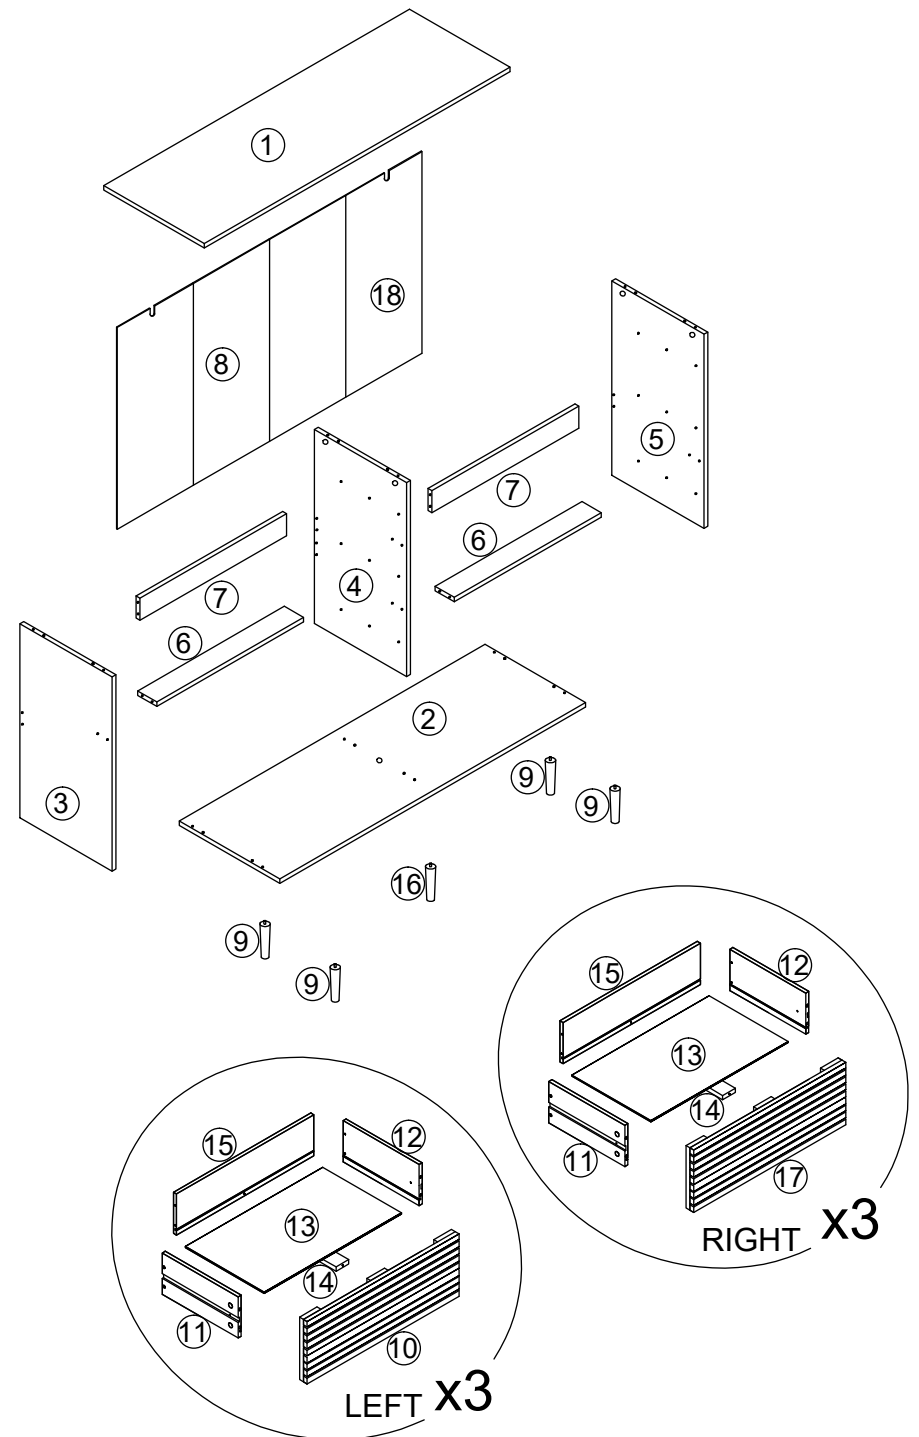

1

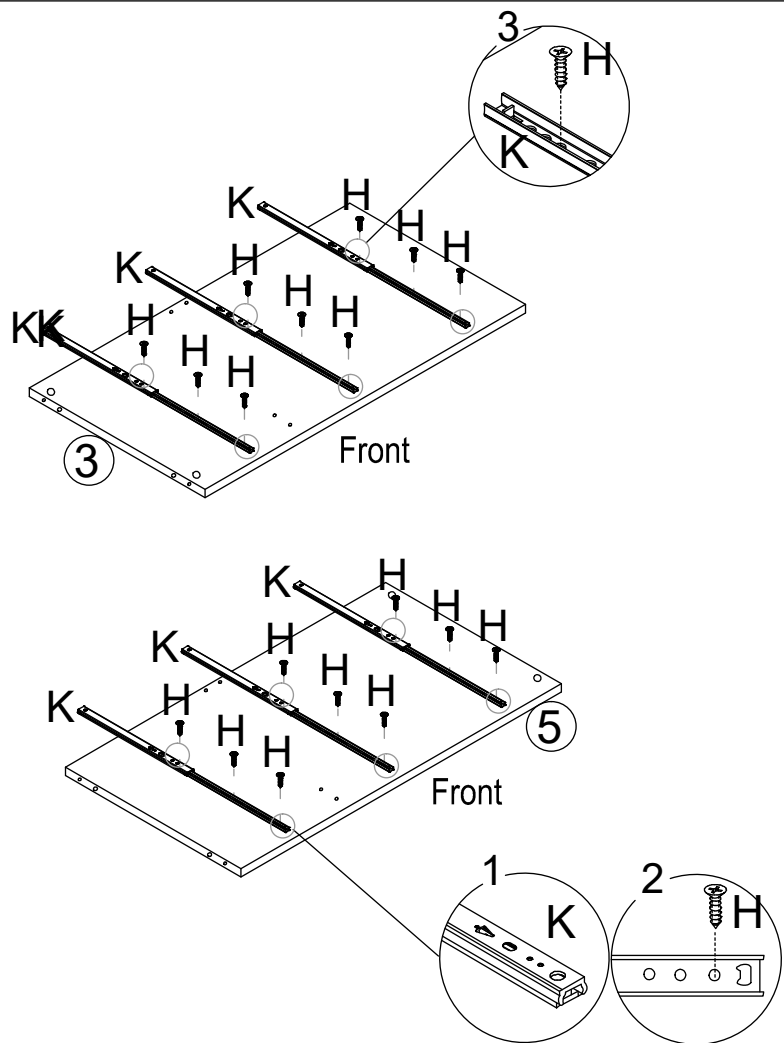

2

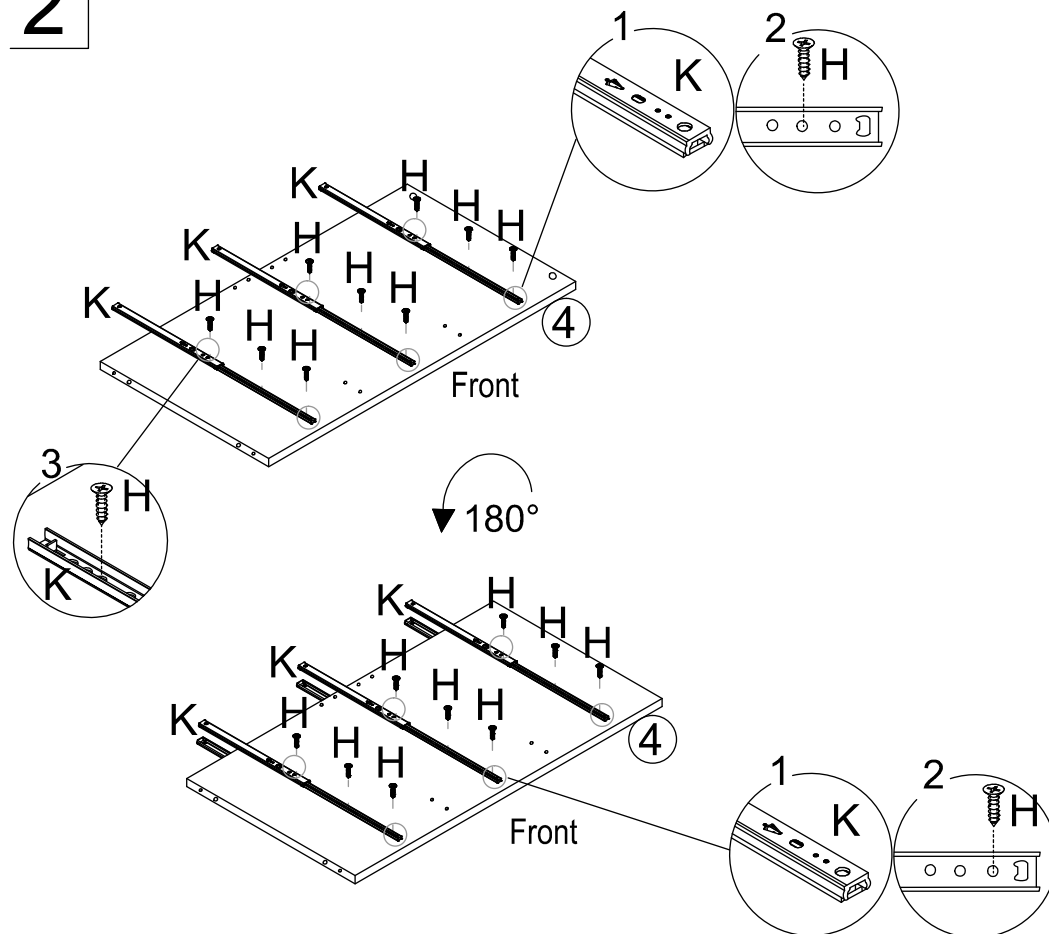

a.1 K Front

a.2 H

a.3

K	x6	H	x18
			3x12mm


a.1 K Front

a.2 H

a.3


K	x6	H	x18
			3x12mm

3

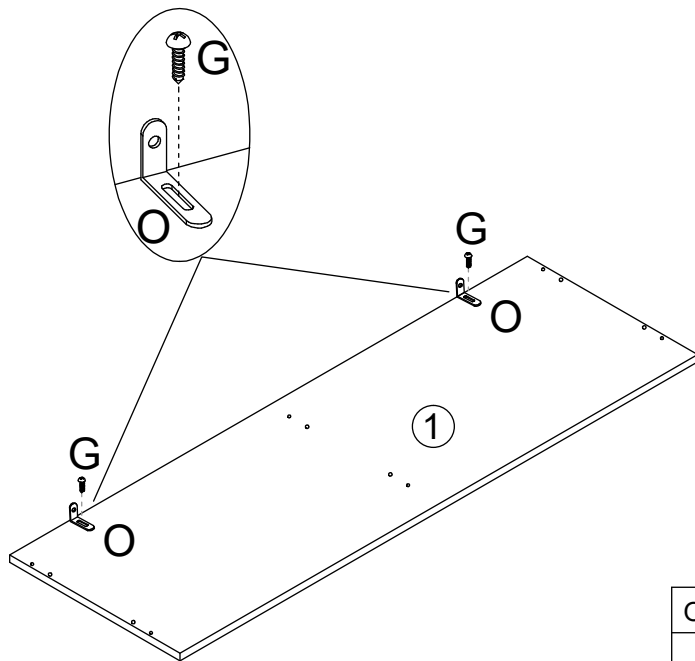


O	x2	G	x2
			
4x14mm			


5

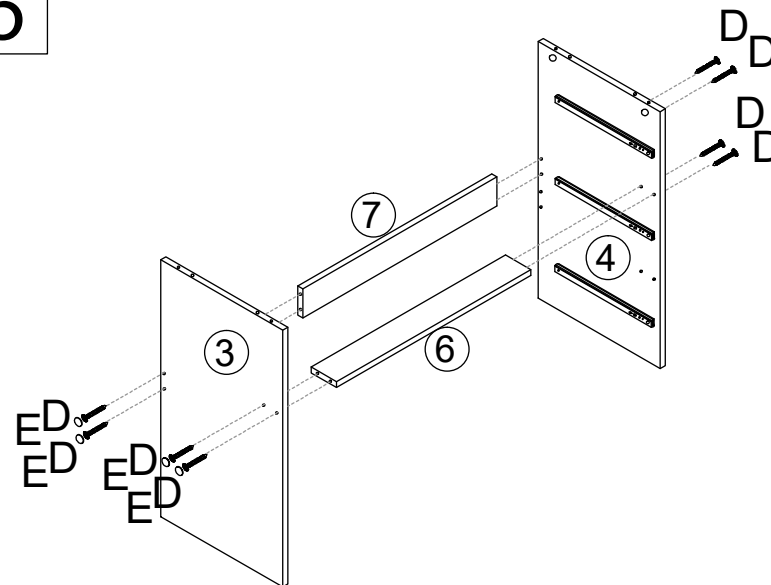

E	x4	D	x8
			
4x40mm			

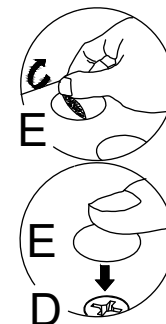


4

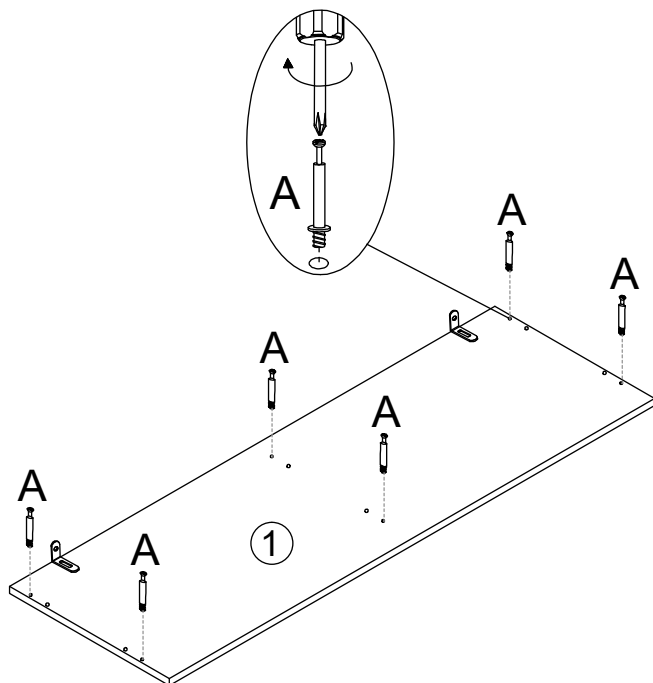


A	x6
	


6

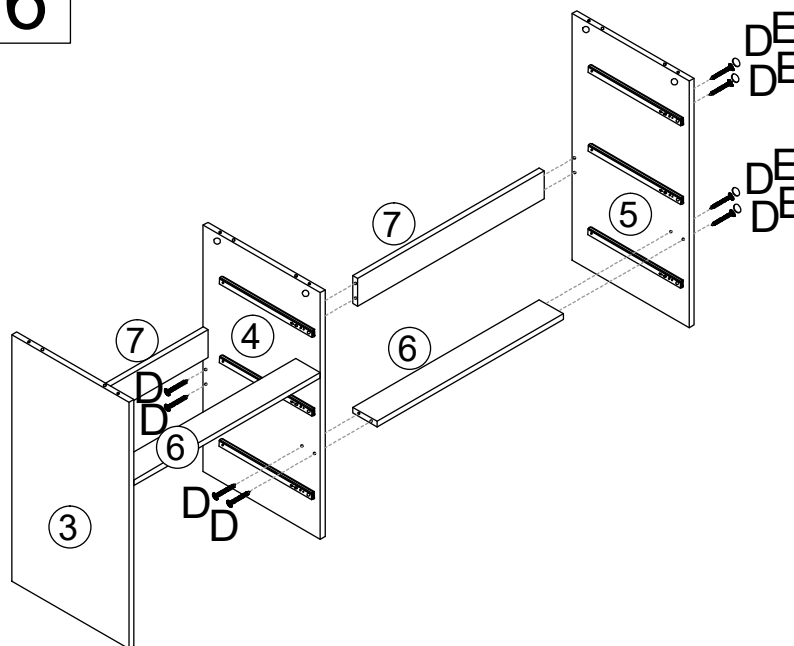

E	x4	D	x8
			
4x40mm			

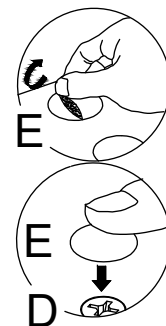


7

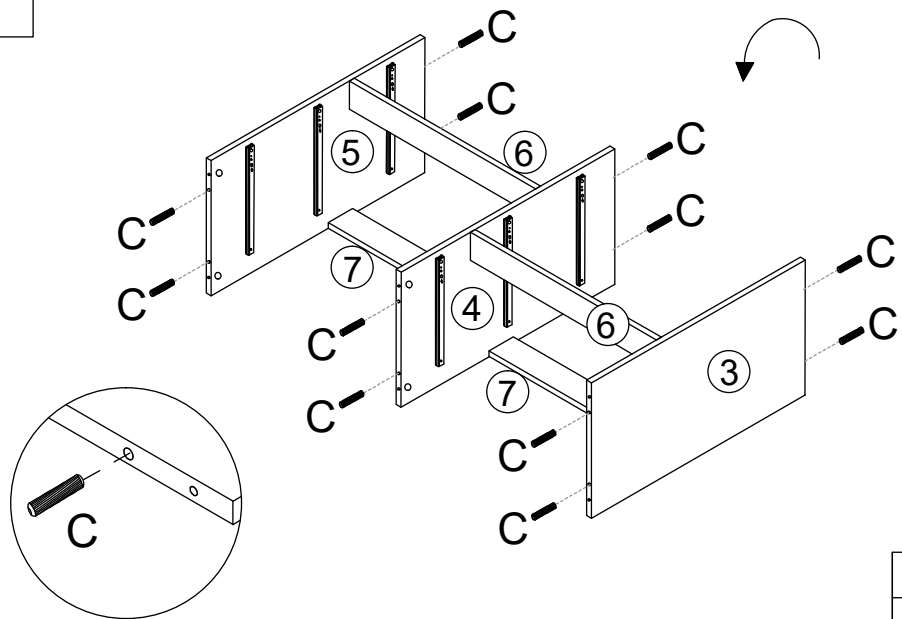



C	x12
	
Ø6x30mm	

9

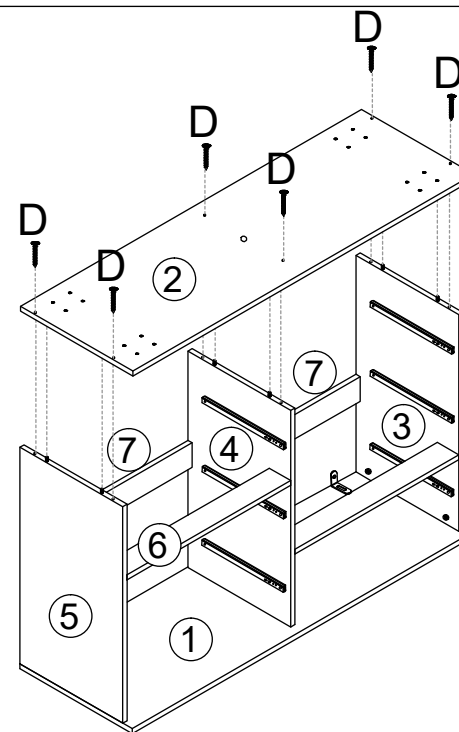


D	x6
	
4x40mm	

8

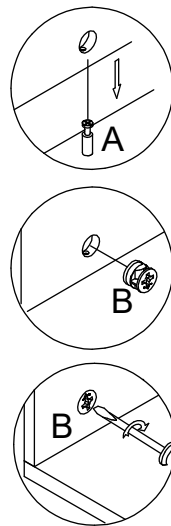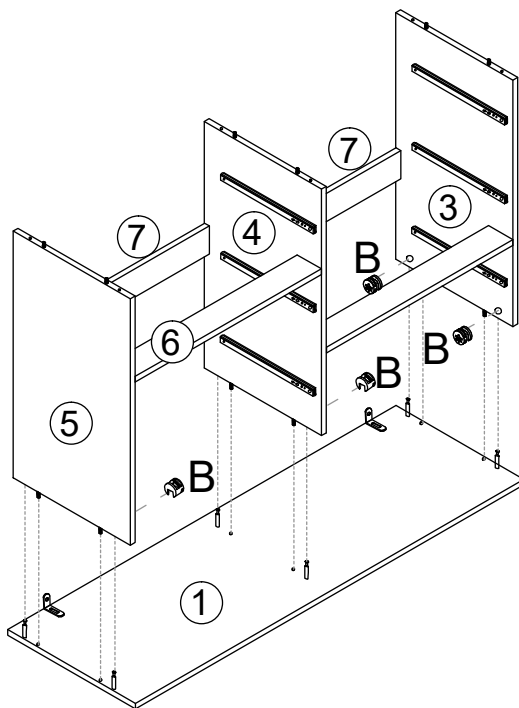


B	x6
	

10

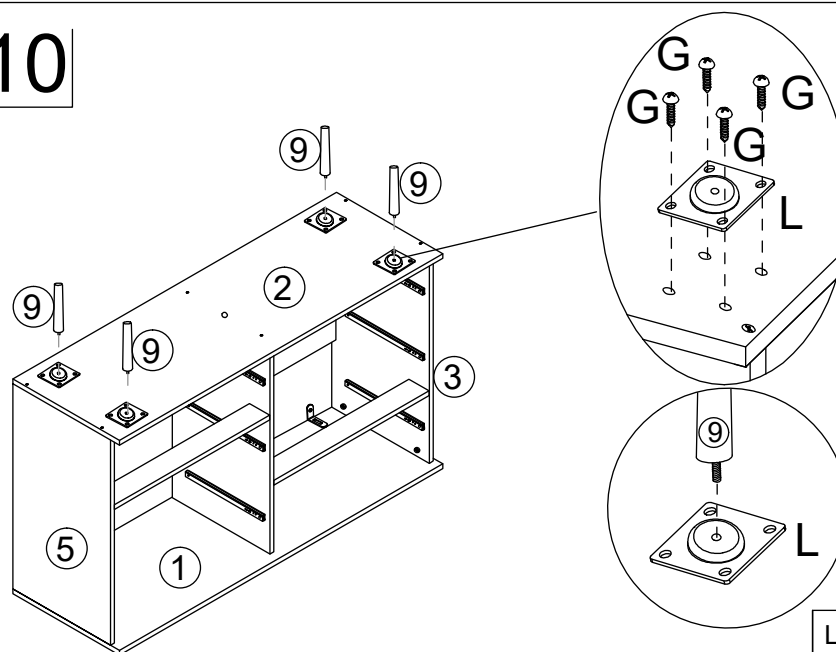


L	x4	G	x16
			
		4x14mm	

11

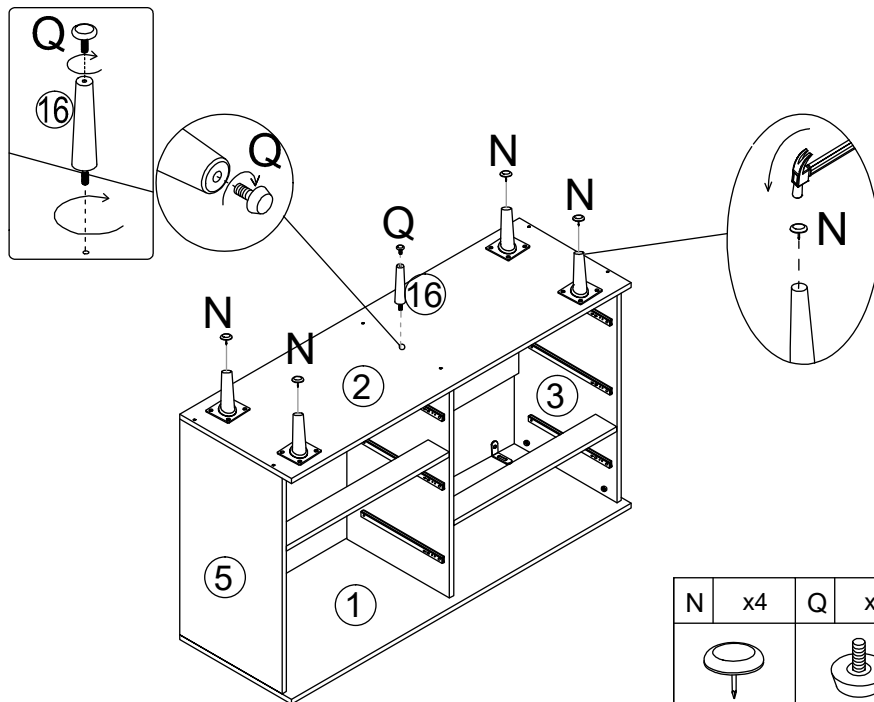


12





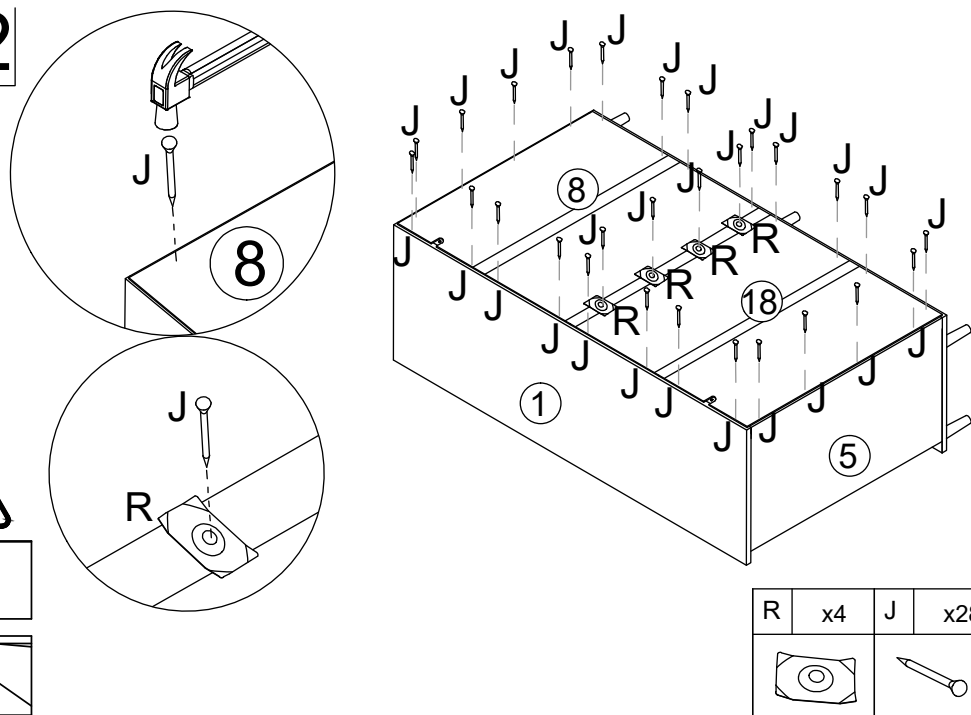


13

Pre-drilled hole at wall

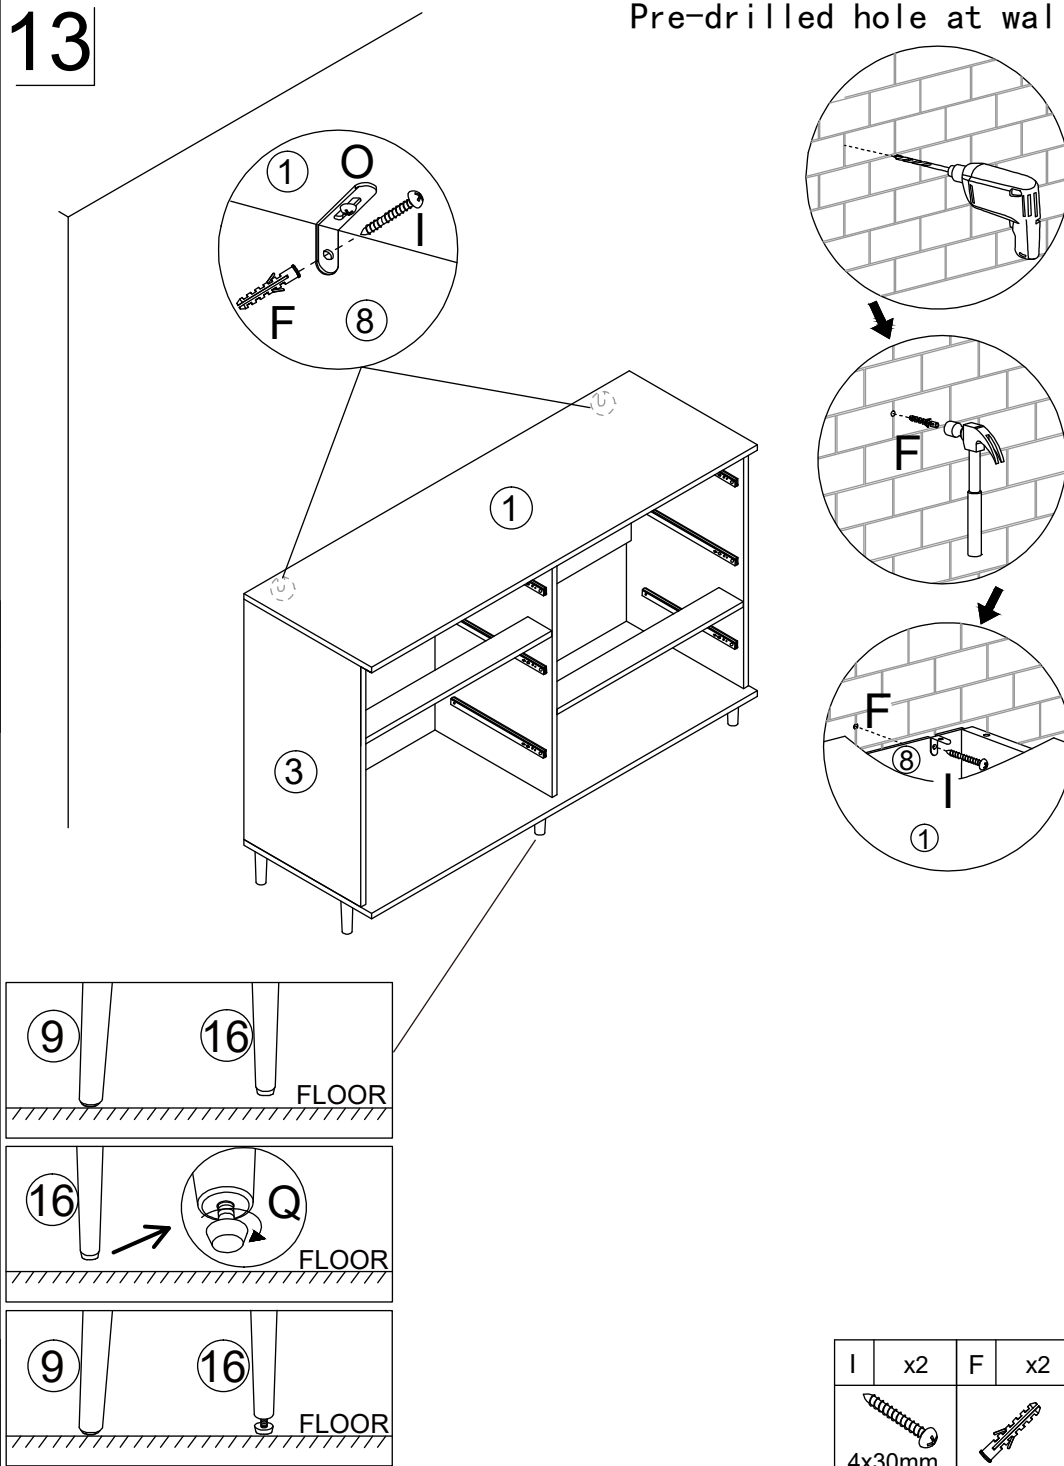

14

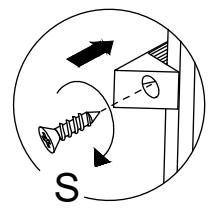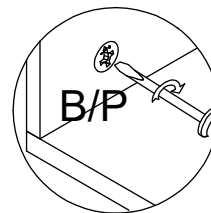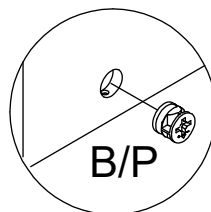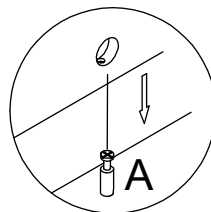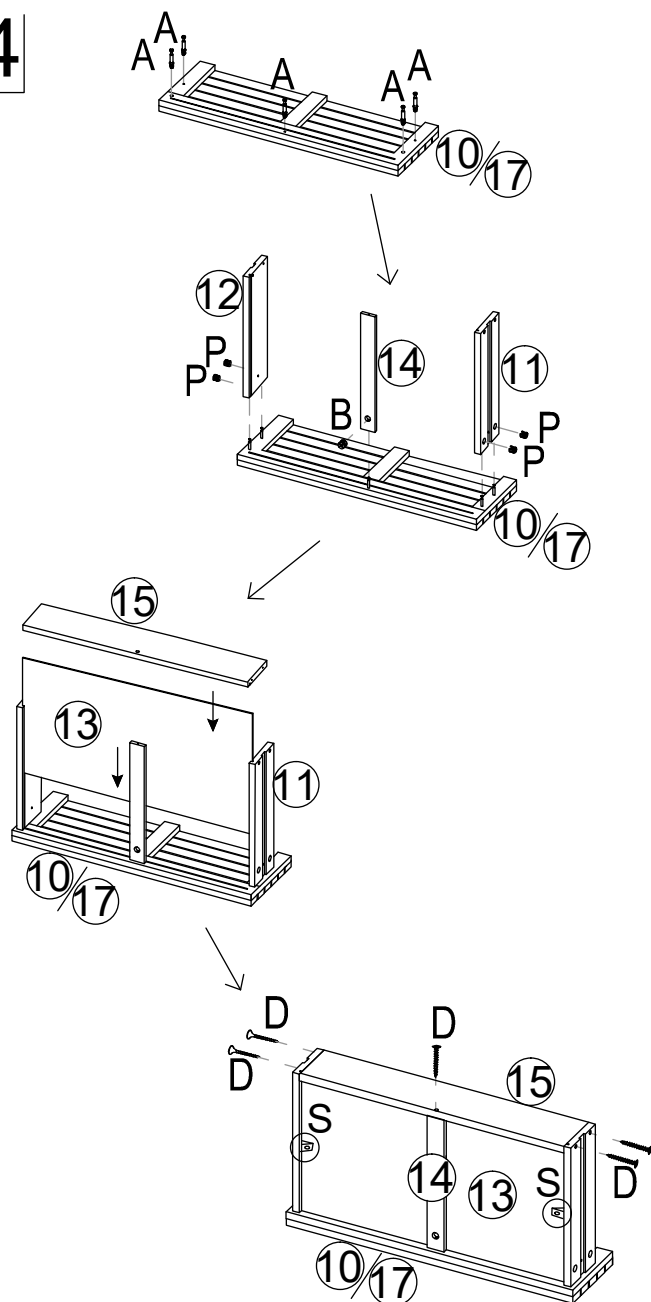


x6

S	x12	B	x6	A	x30	P	x24	D	x30
3x14mm								4x40mm	

15

Insert the LEFT drawers into the corresponding compartments as shown.

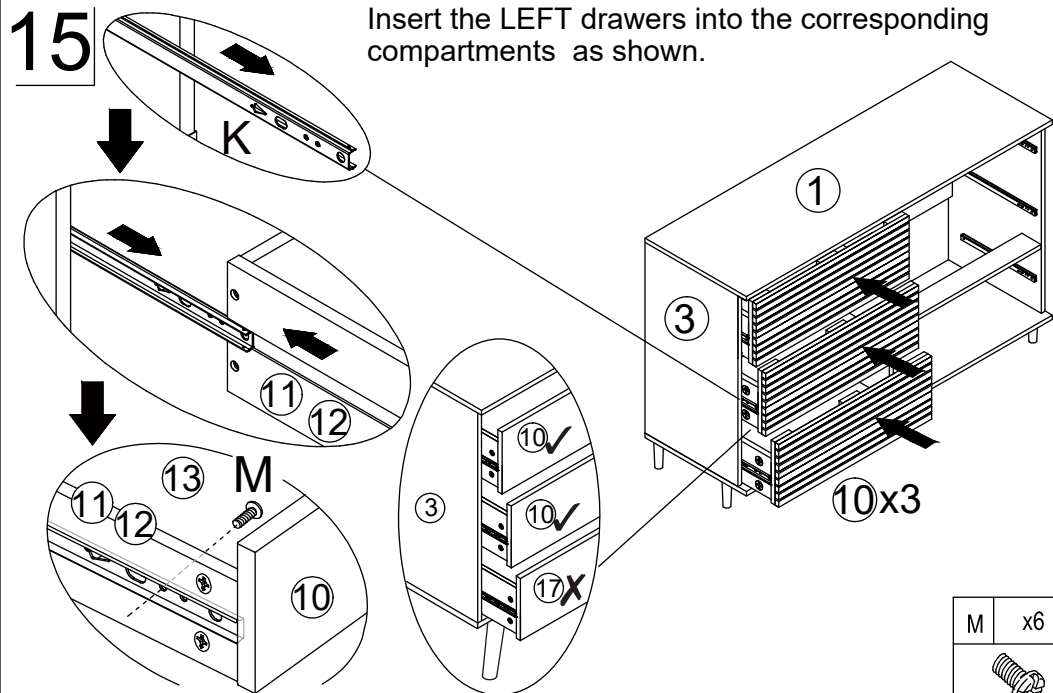


Screw from the inside of the drawers

M	x6
4x10mm	

16

Insert the RIGHT drawers into the corresponding compartments as shown.

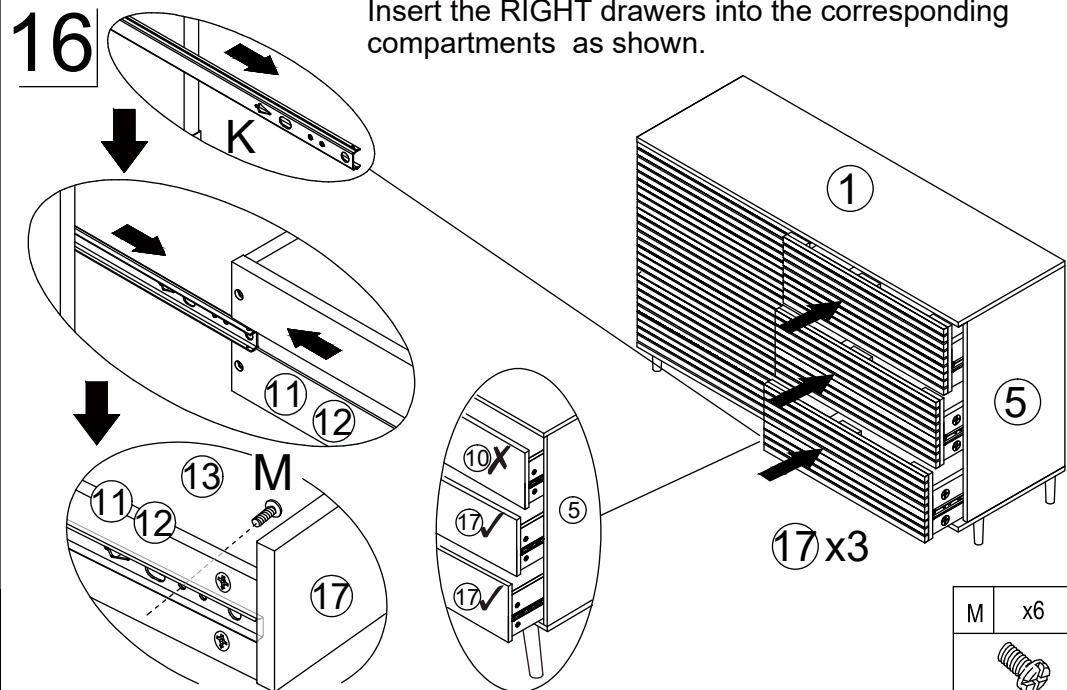

Screw from the inside of the drawers

M	x6
4x10mm	