

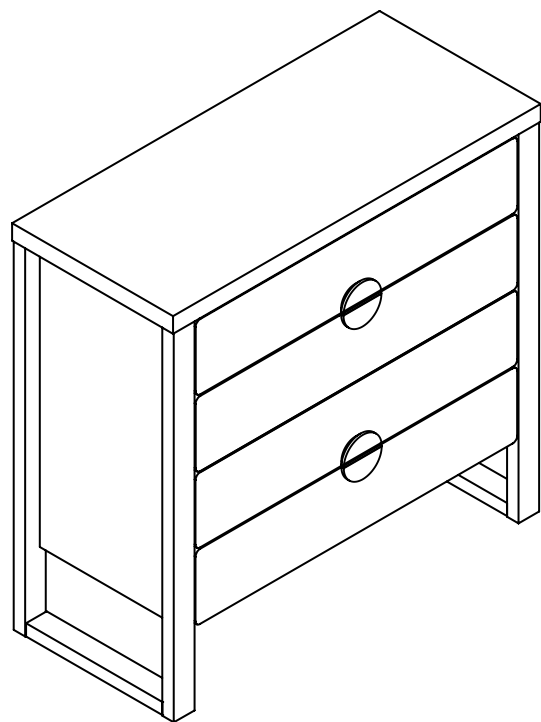
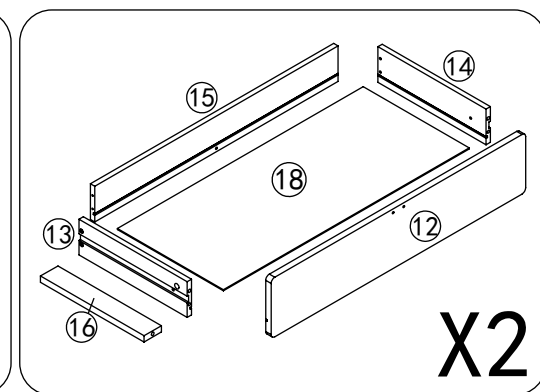
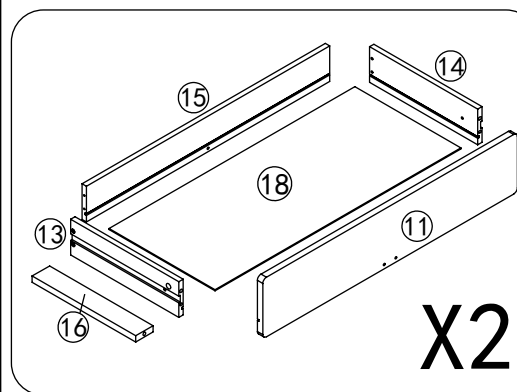


A	x44	B	x36	C	x28	D	x20	E	x8	F	x4	G	x24
													
		15x12mm				4x40mm		12x10mm				3x12mm	
H	x8	I	x8	J	x4	K	x16	L	x8	M	x2	N	x2
													
4x11mm		4x20mm						3x14mm					
O	x2	P	x8	Q	X2								
													
4x14mm				4x30mm									

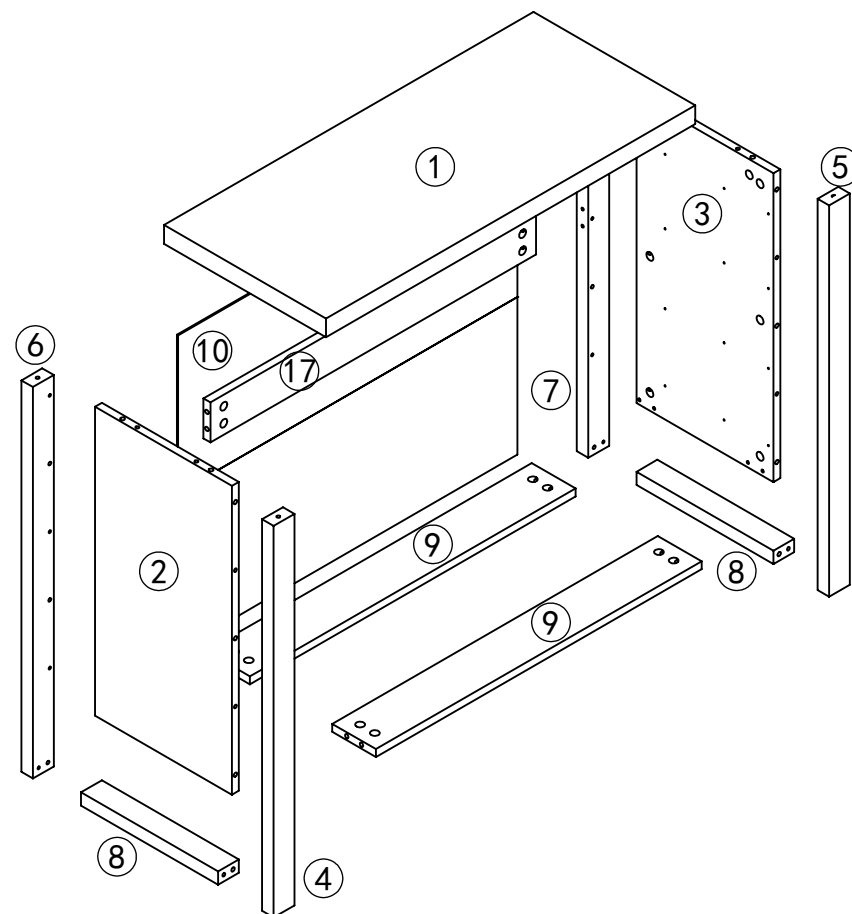


1

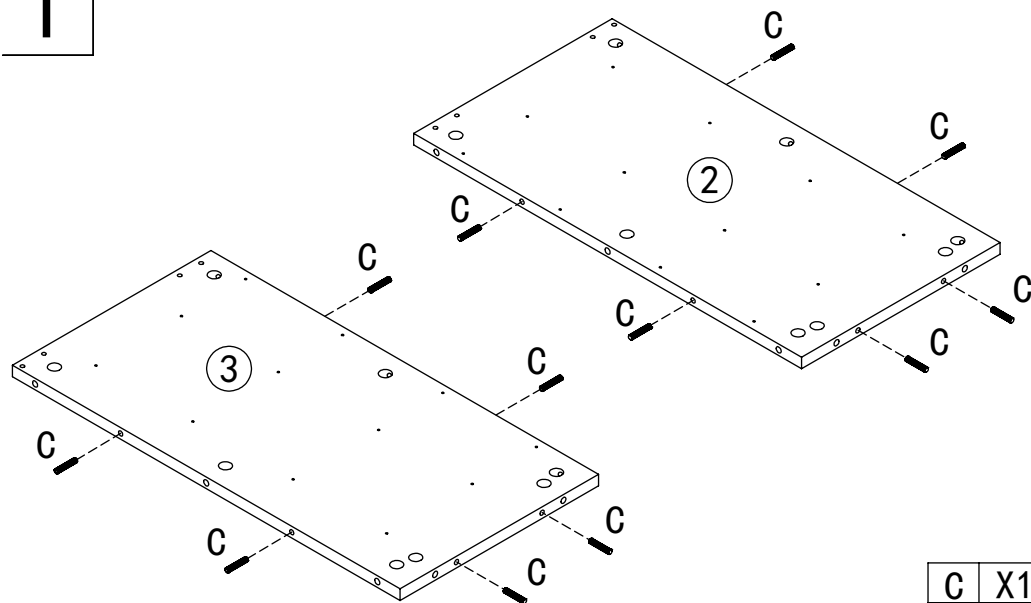

C X12




2

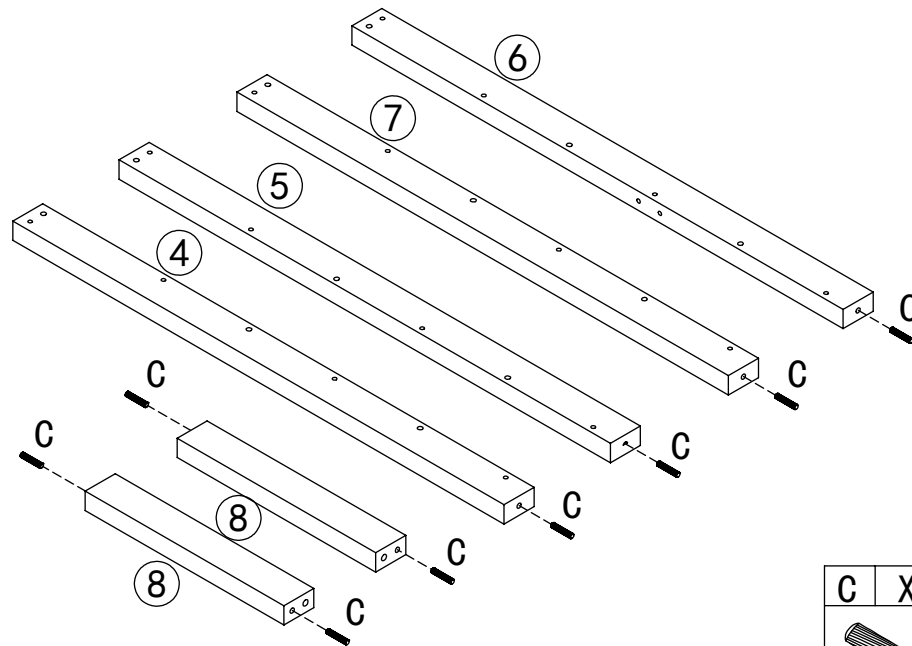

C X8




3

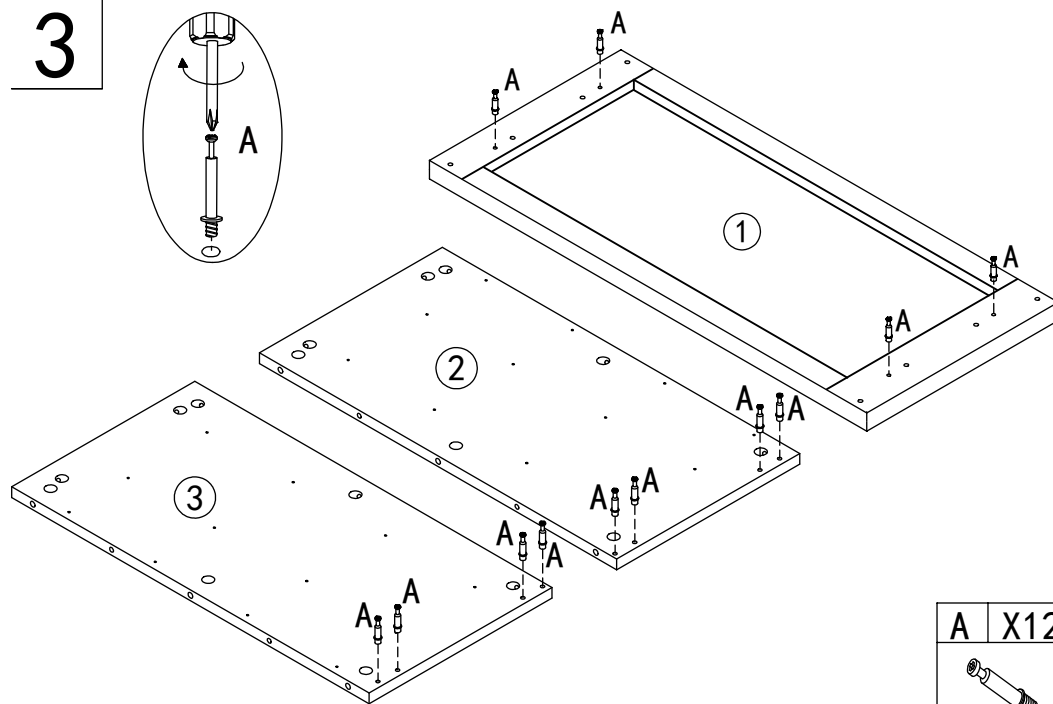

A X12




4

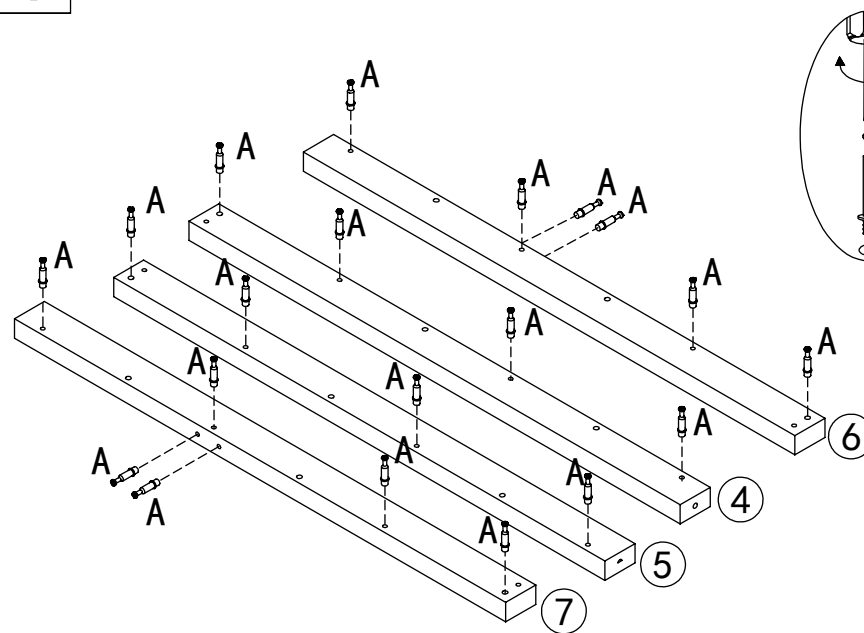

A X20







5

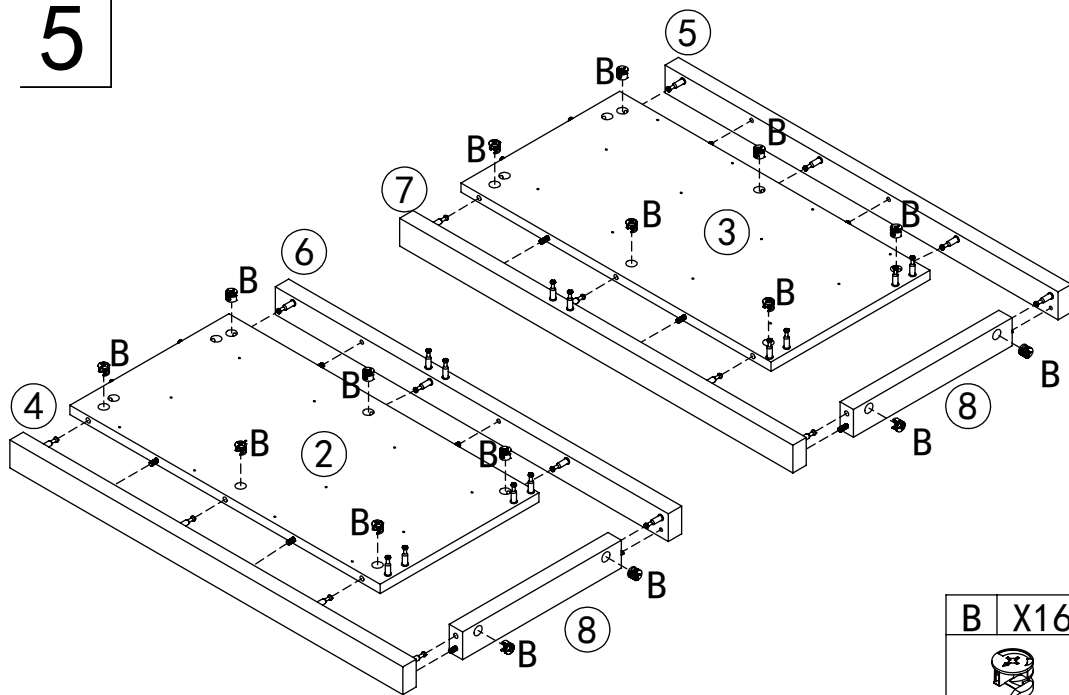



B	X16
15x12mm	

7

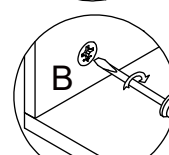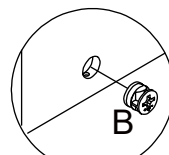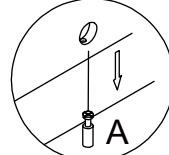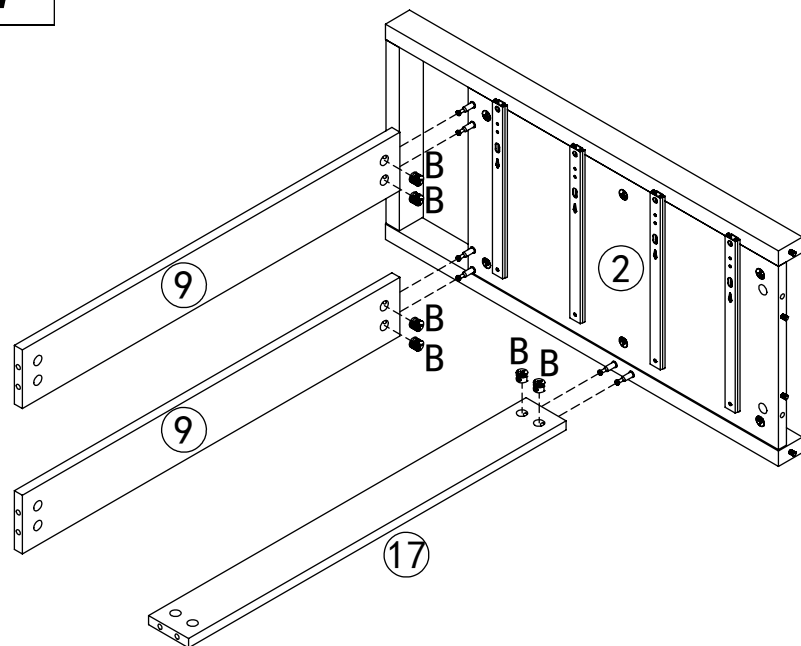


B	X6
15x12mm	

6

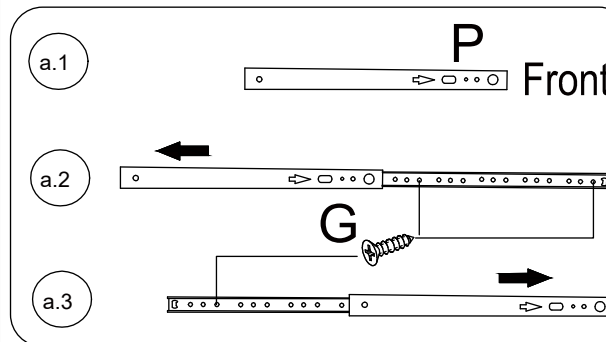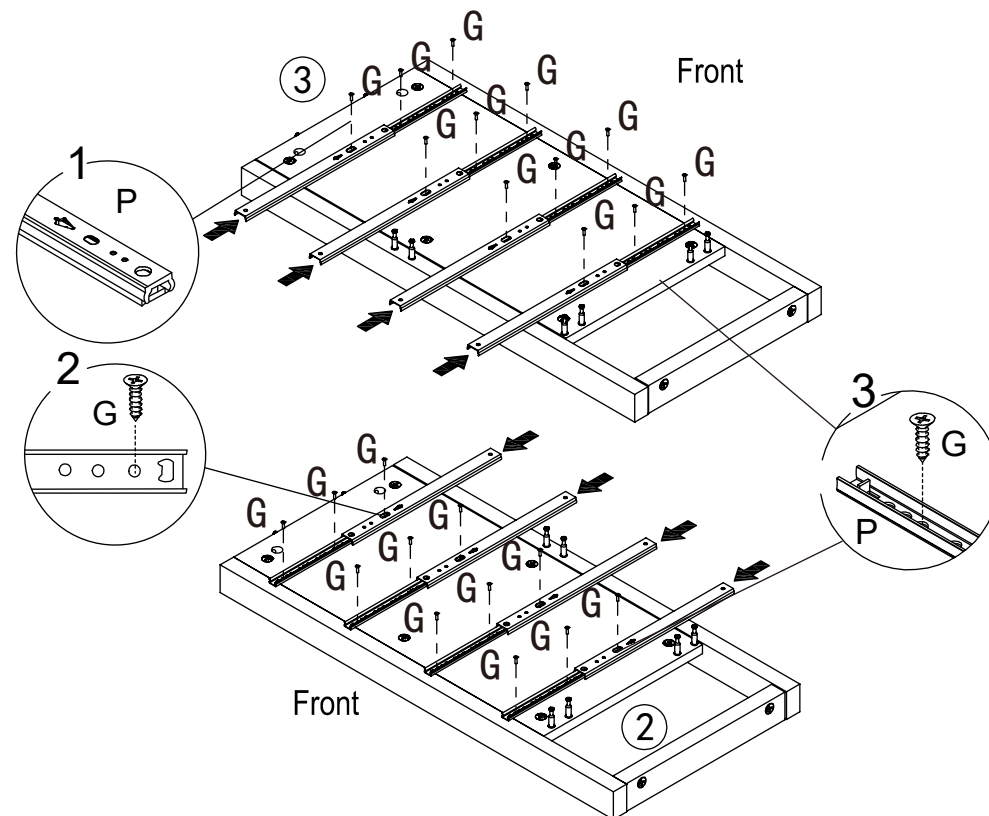


P	X8	G	X24
		3x12mm	


8

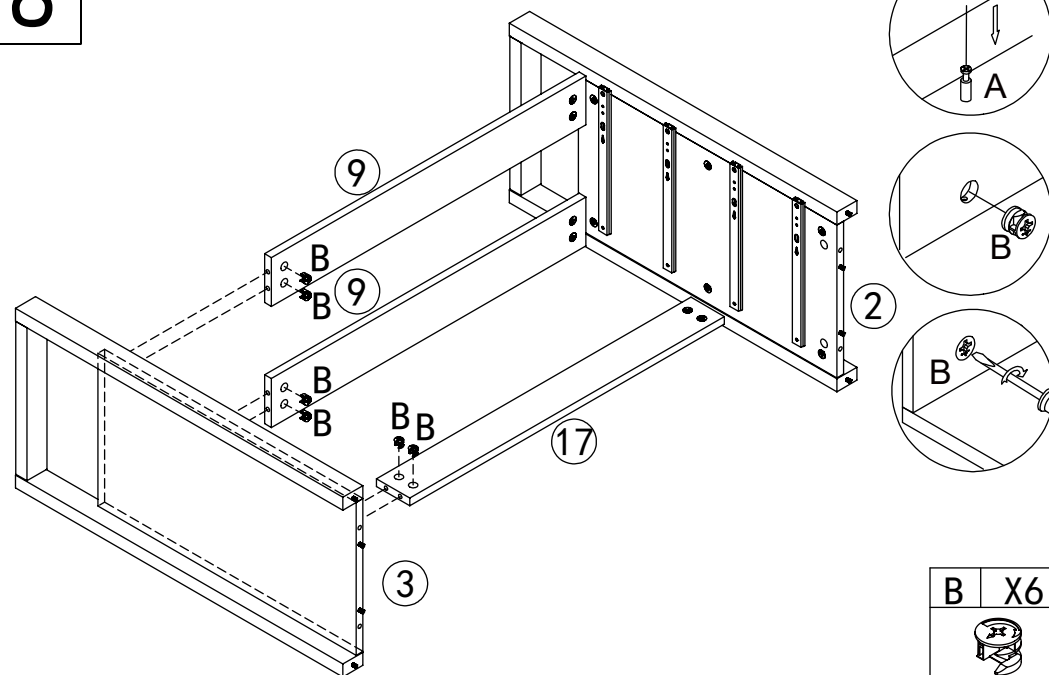


9

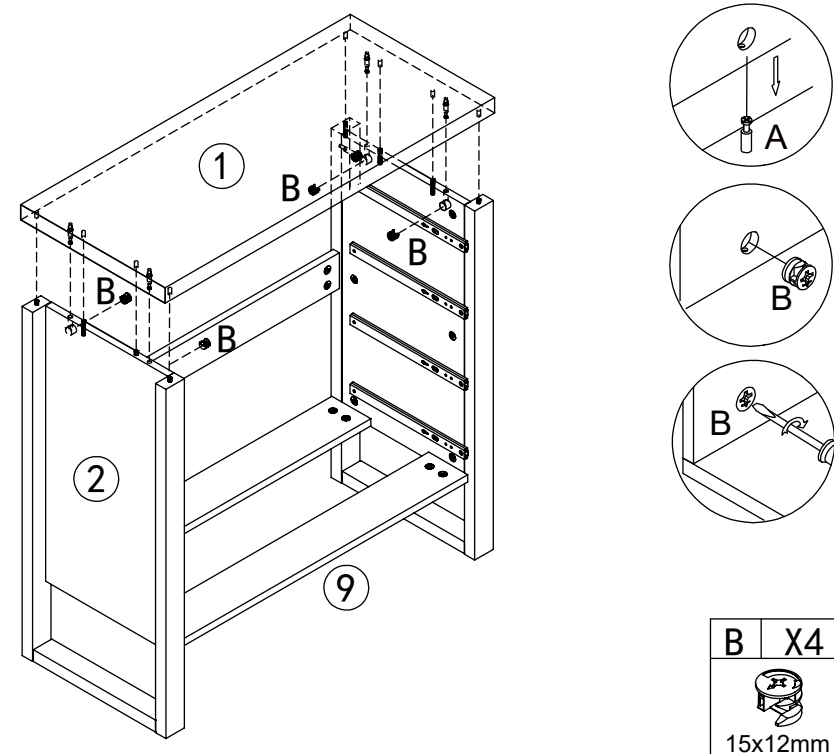


10

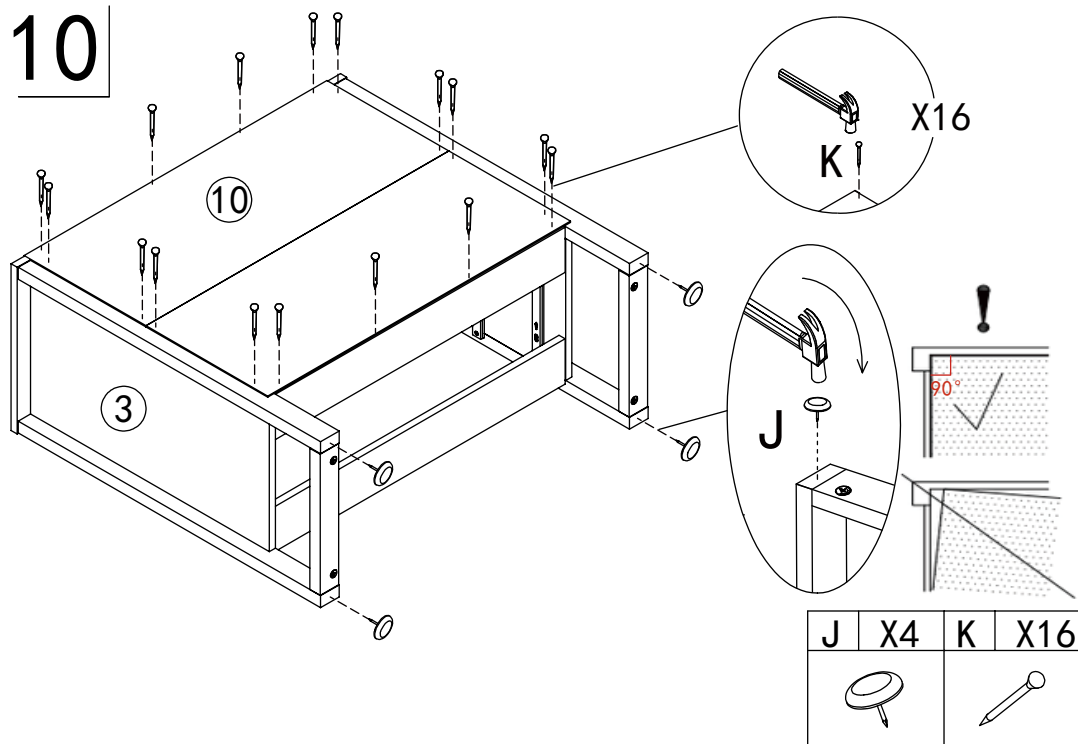


11

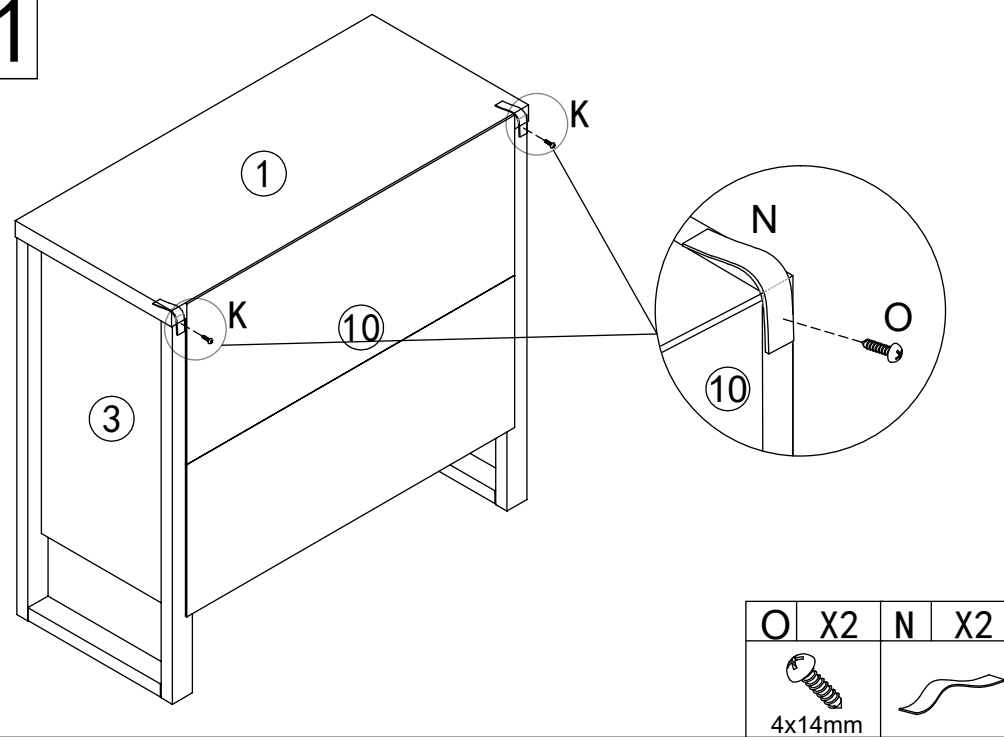


12

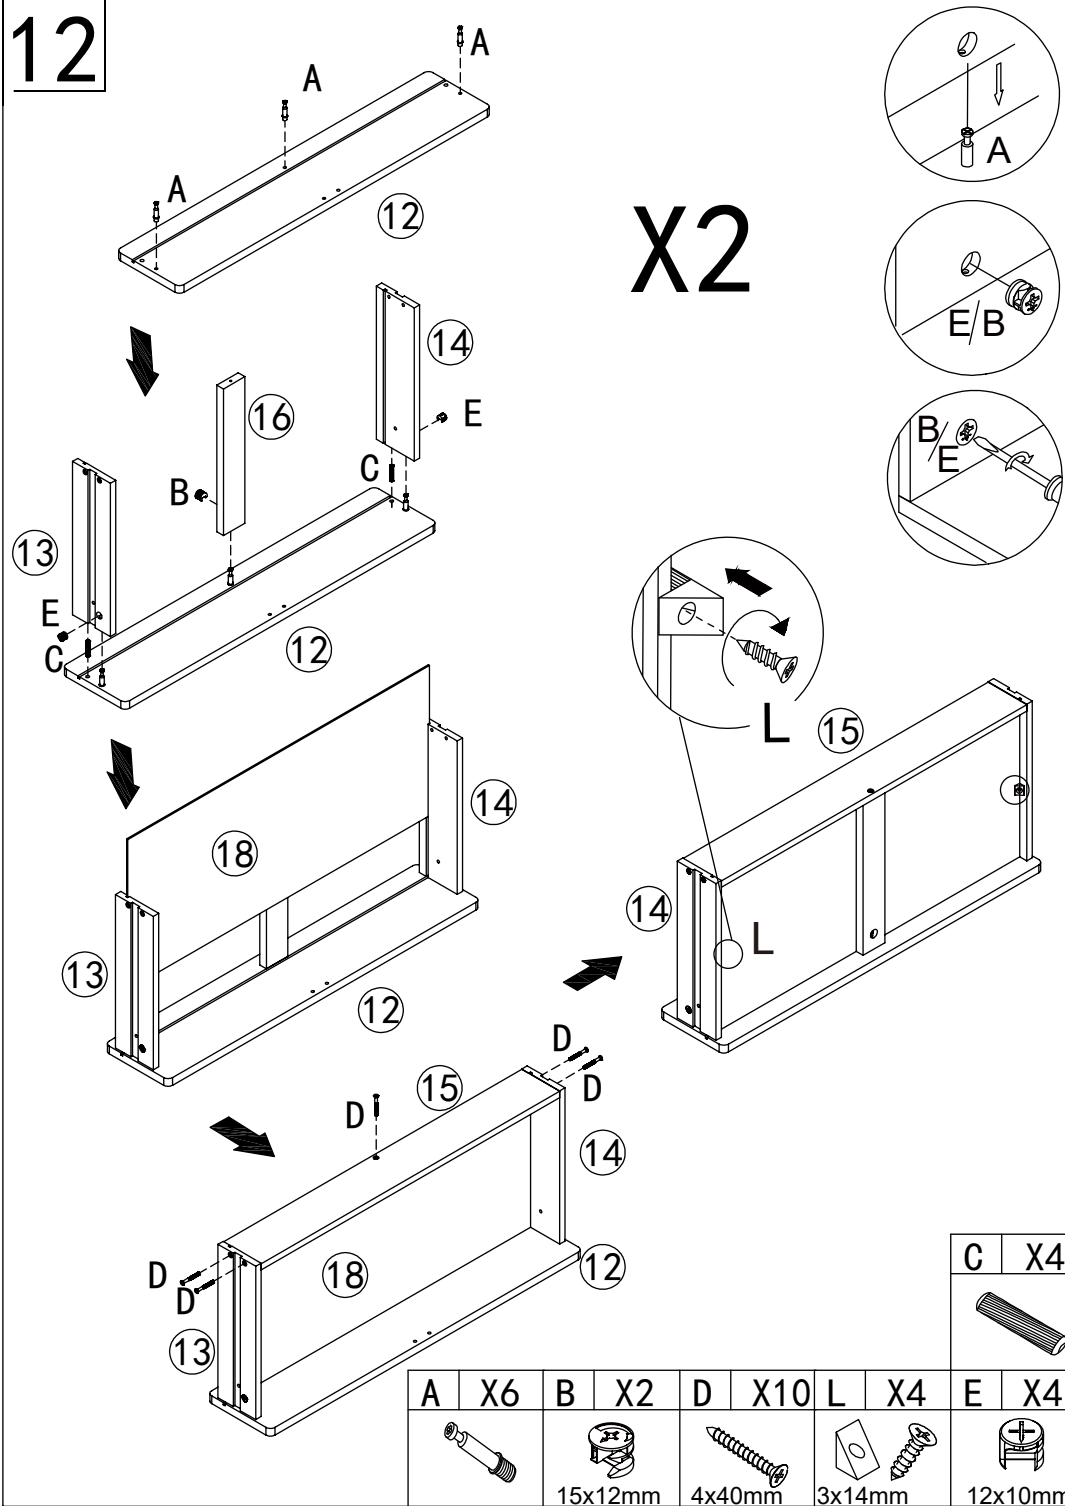

13

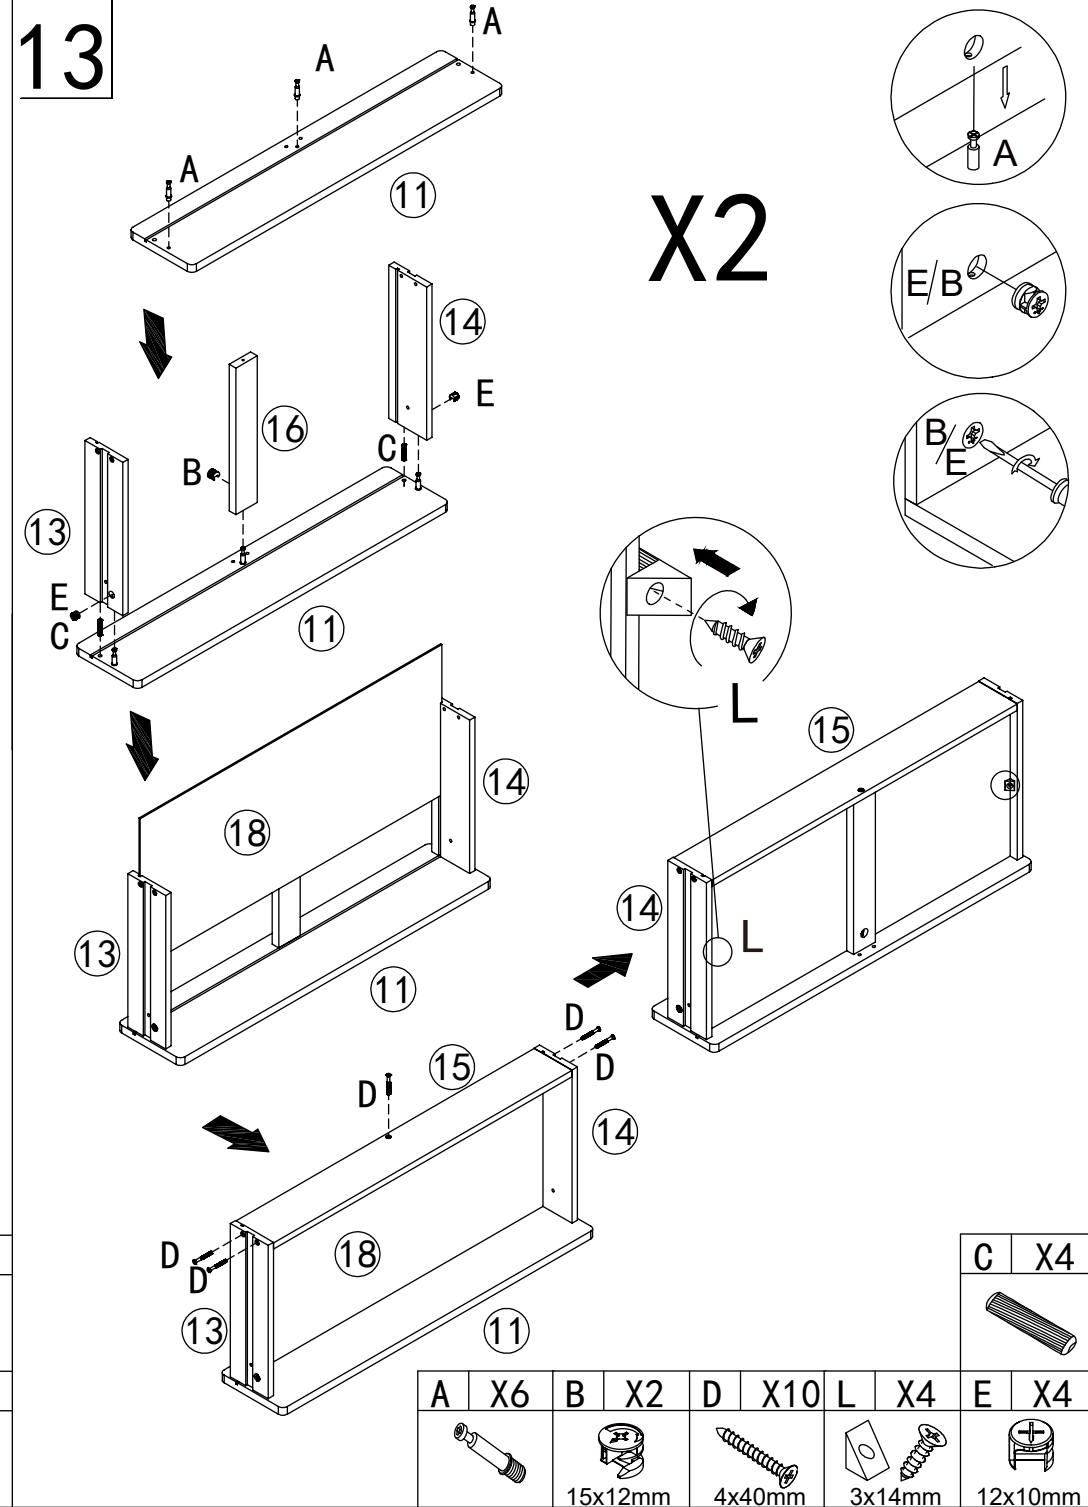



14

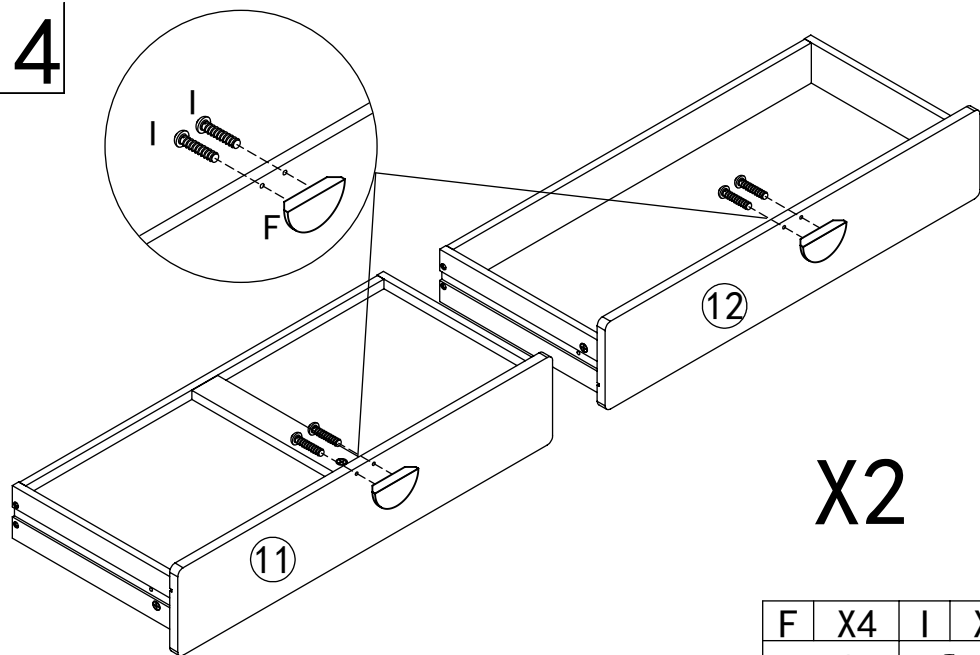

X2

F	X4	I	X8
			
		4x20mm	

15

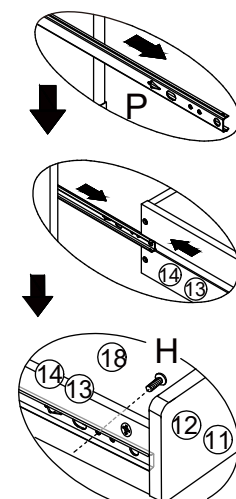
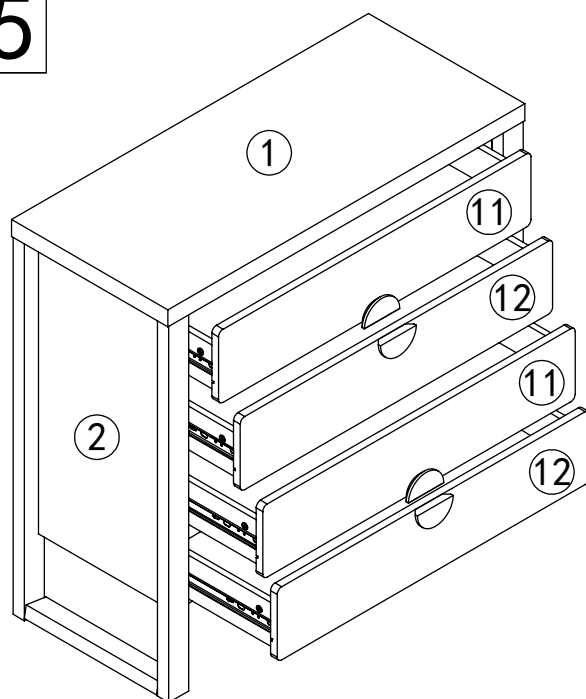


Screw from the inside of the drawers

H	X8
	
4x11mm	

16

Pre-drilled hole at wall

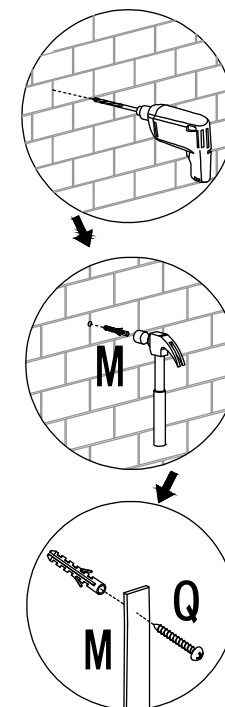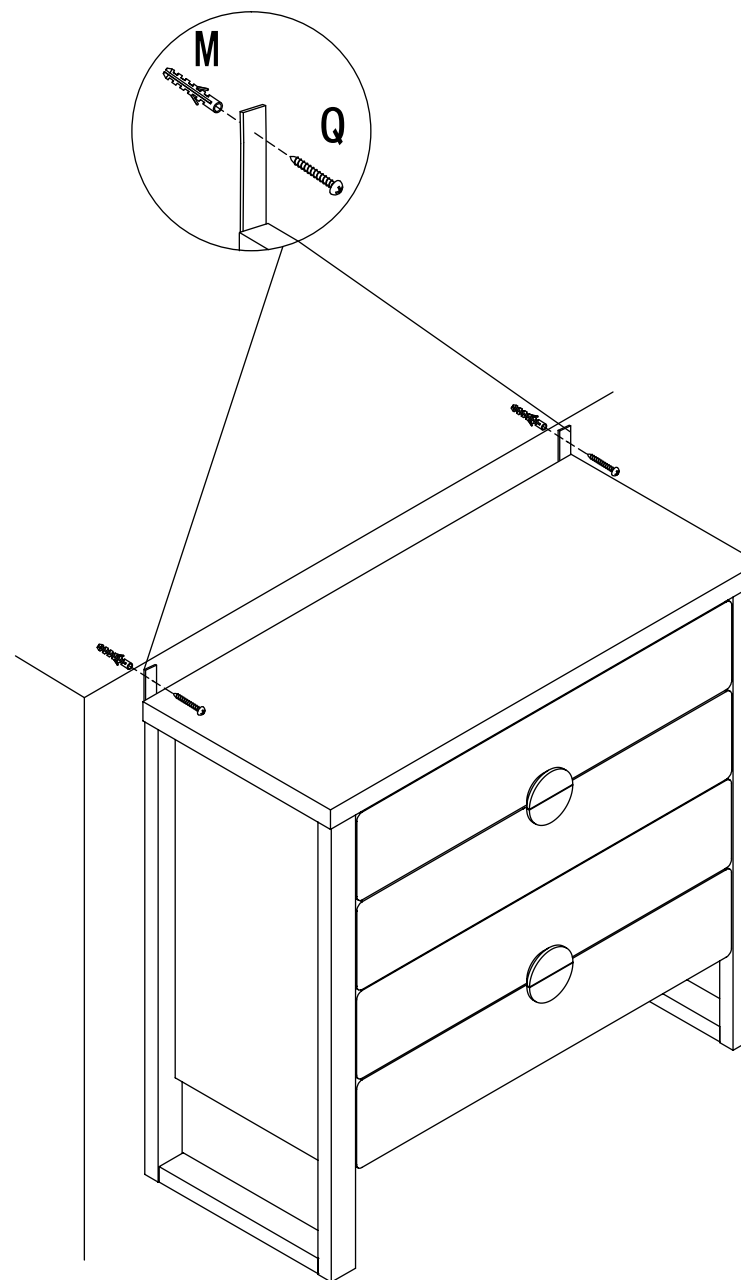

M	X2	Q	X2
			
		4x30mm	