

























A	x60	B	x36	C	x28	D	x34	E	x24	F	x4	G	x36
	7x35mm		15x12mm		Ø6x30mm		4x40mm		12x10mm				3x12mm
H	x12	I	x12	J	x1	K	x20	L	x12	M	x2	N	x2
	4x11mm		4x20mm						3x14mm				
O	x2	P	x12	Q	x2	R	x2	S	x4				
	4x14mm		278mm		4x30mm								





1

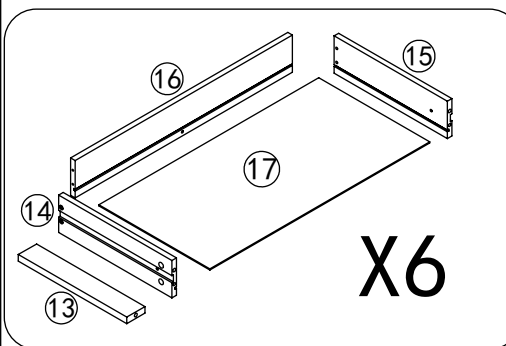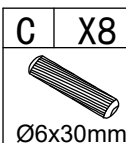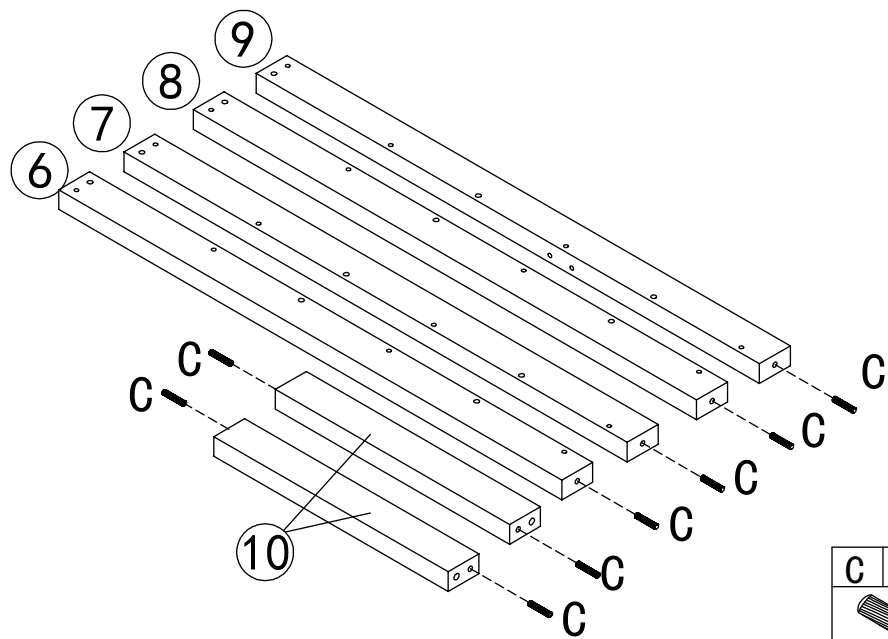


2

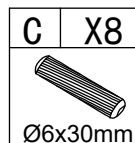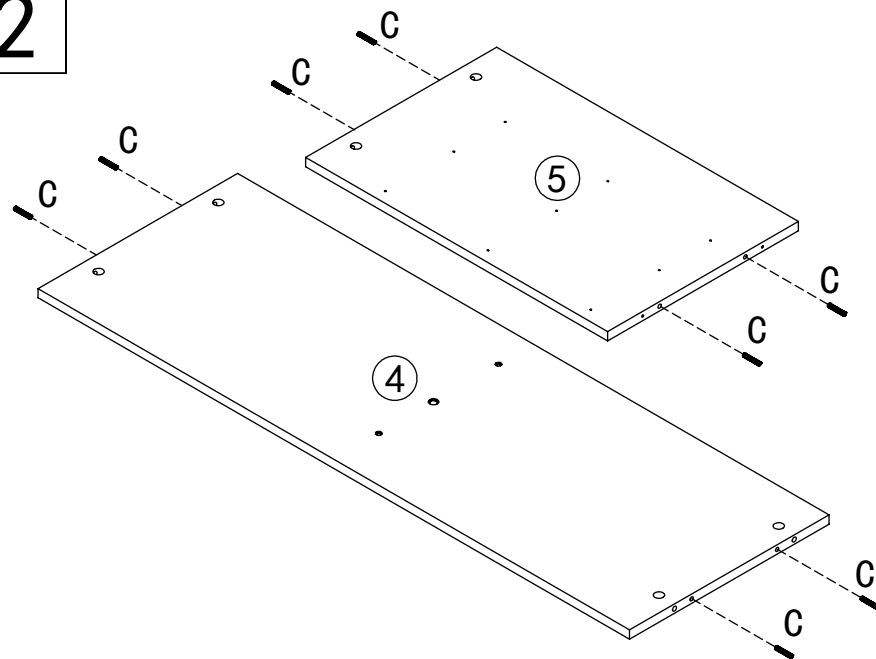


3

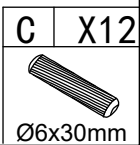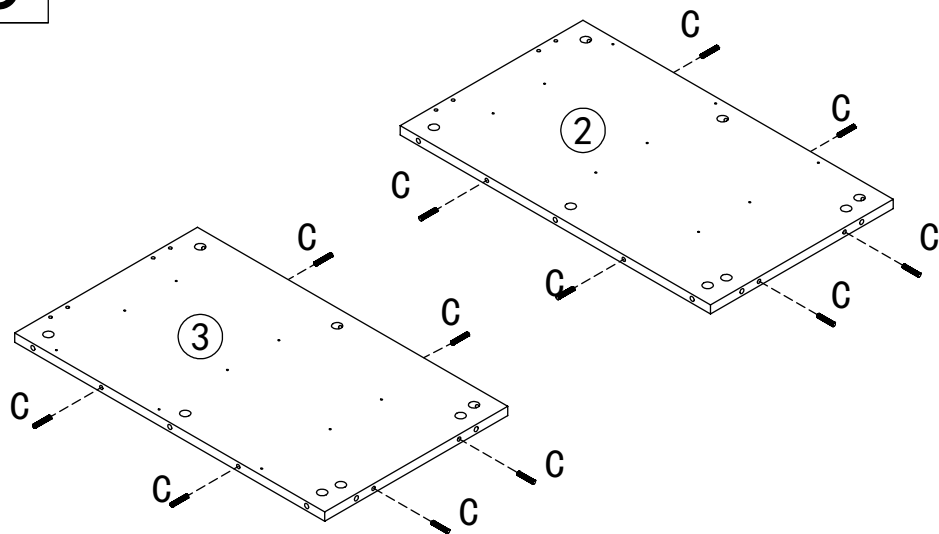


4

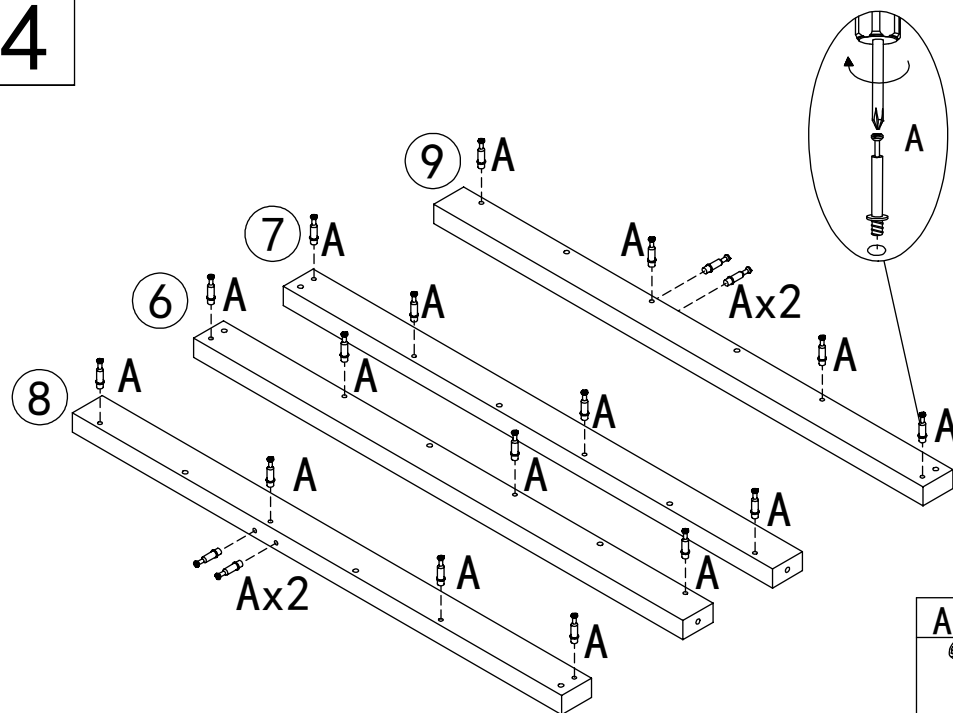


5

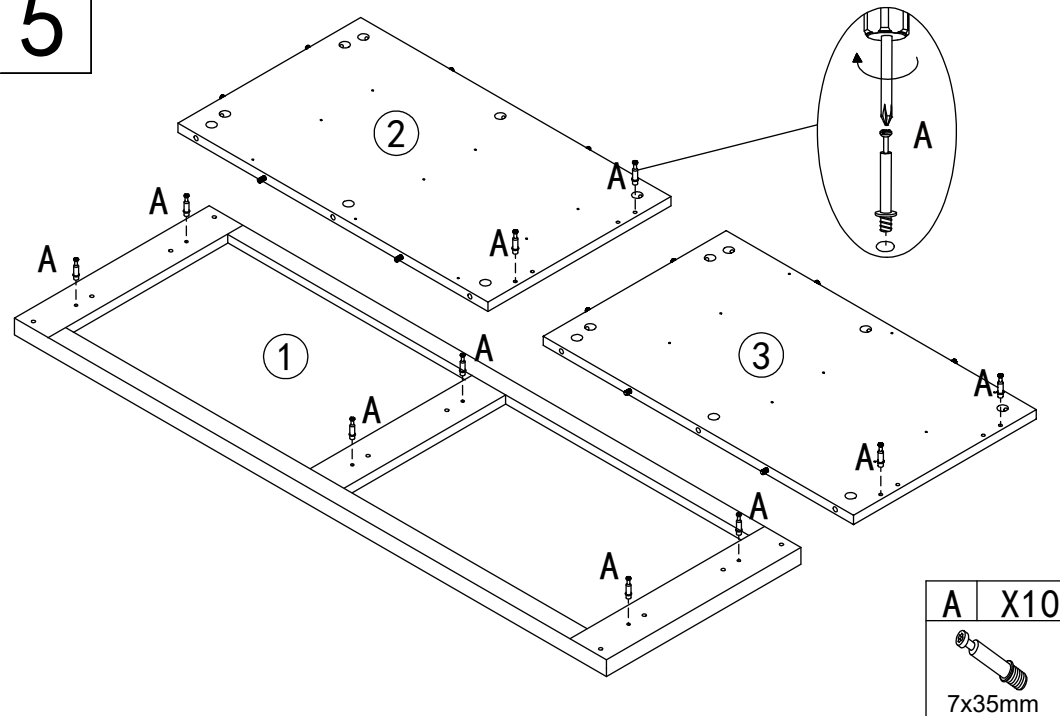



6

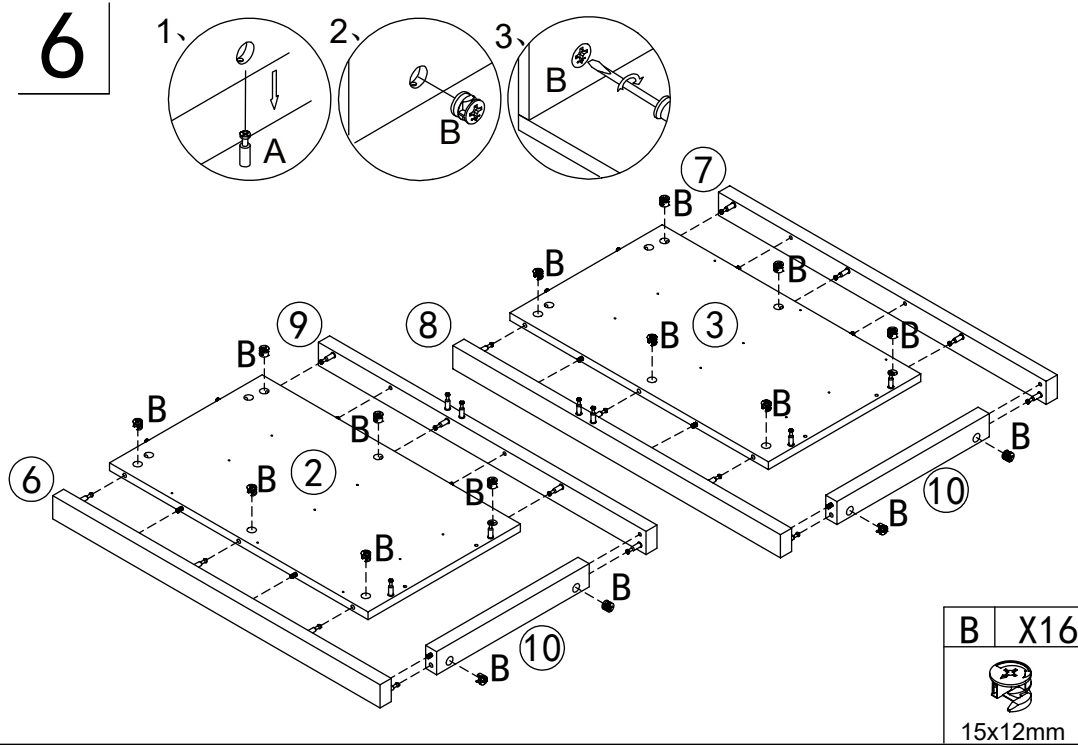

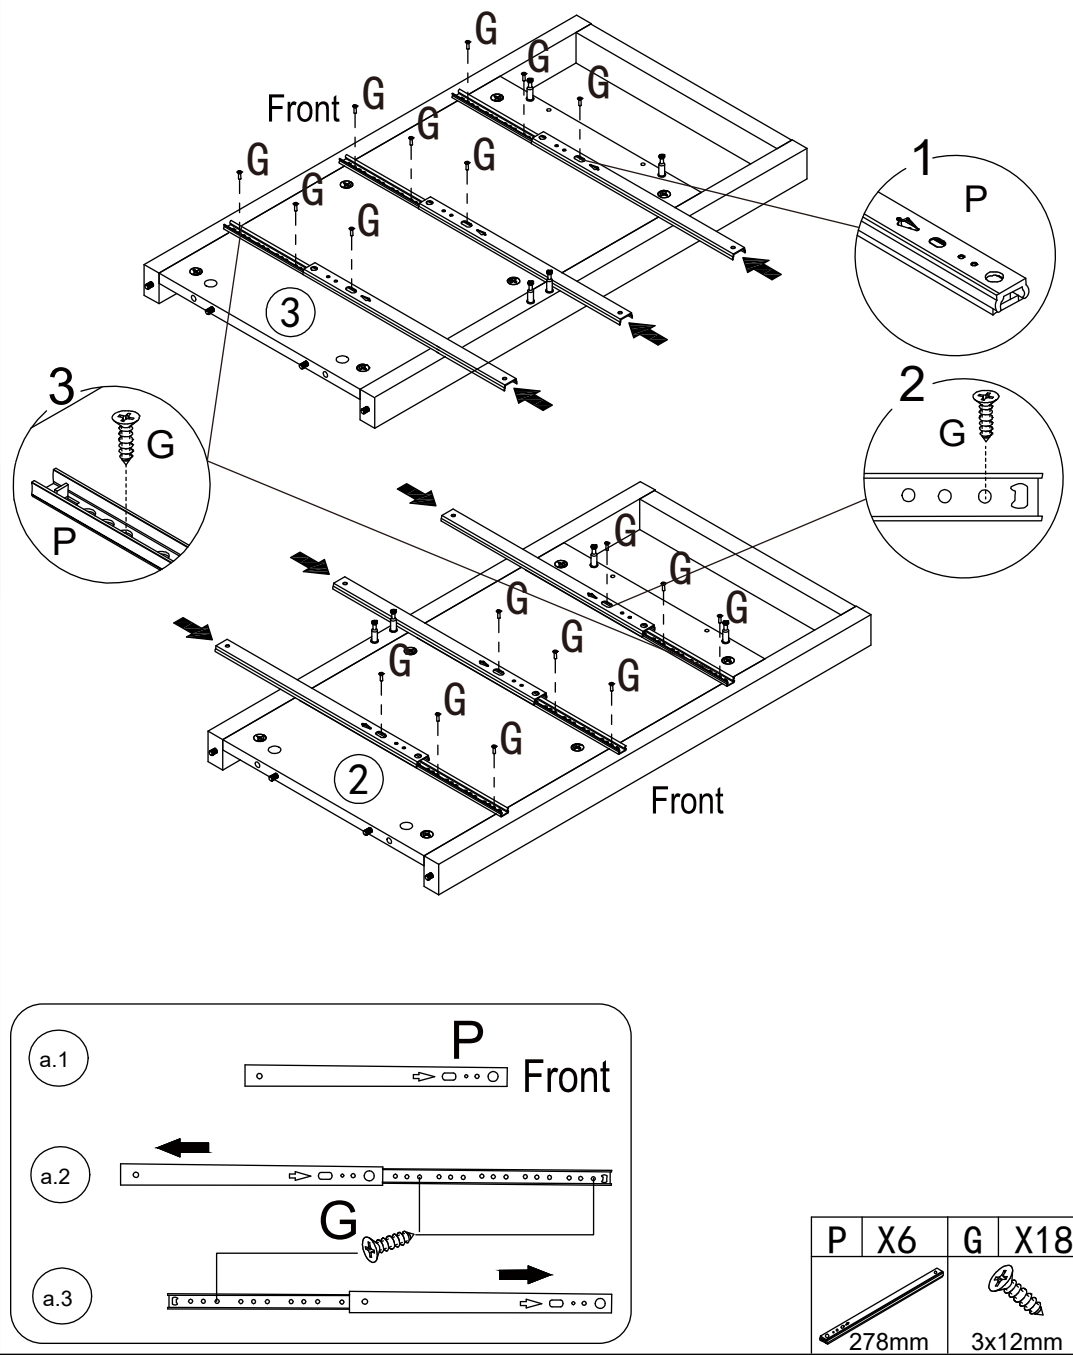

7

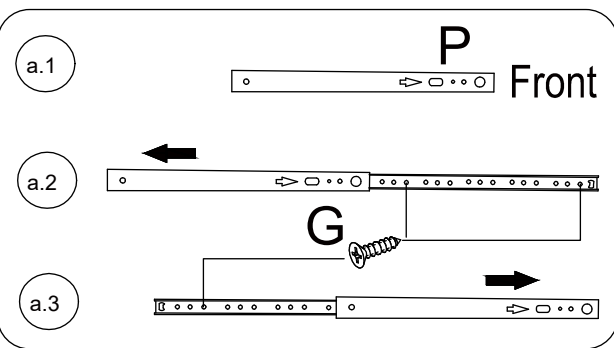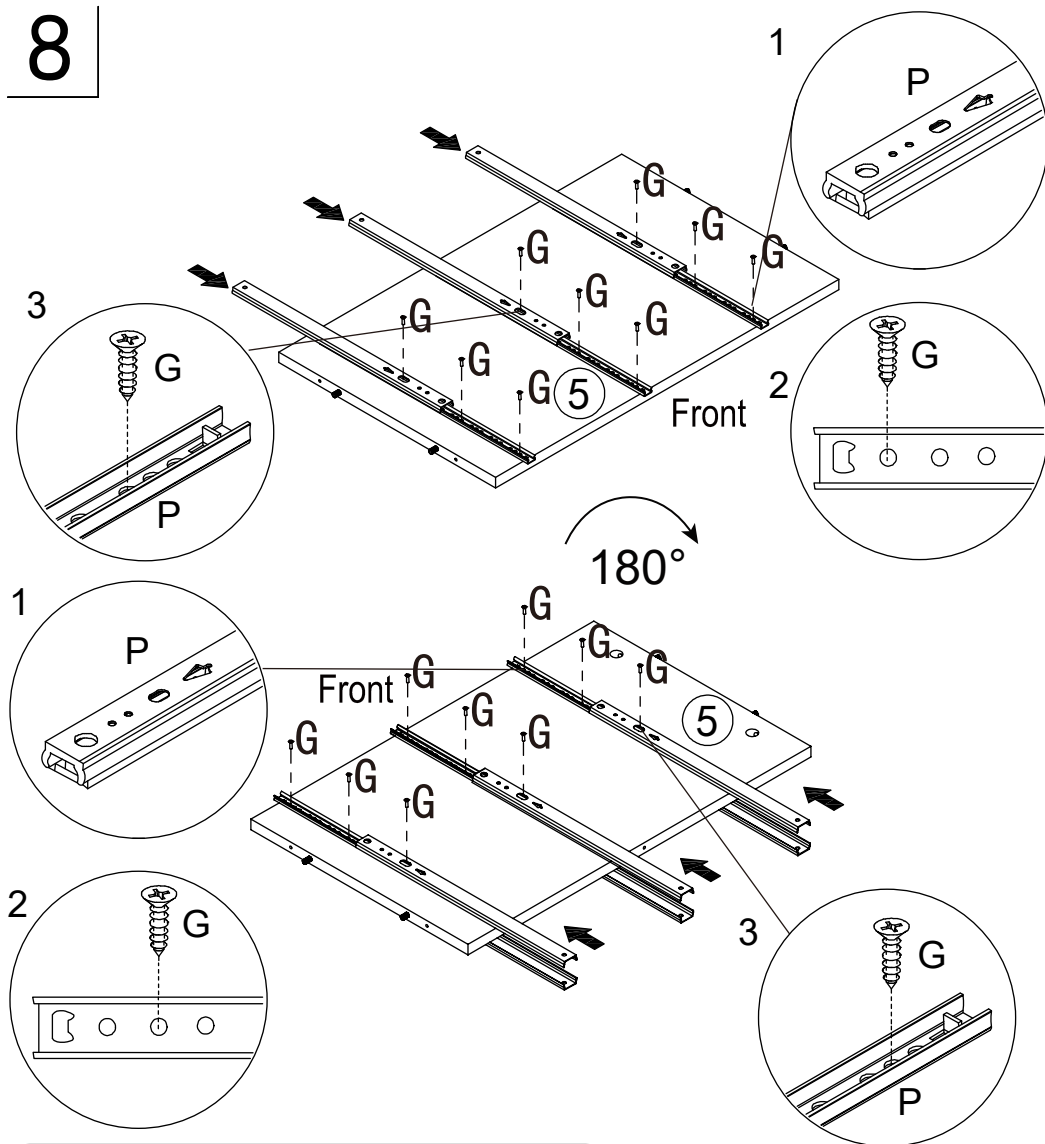



8




P	X6	G	X18
	278mm		3x12mm


9

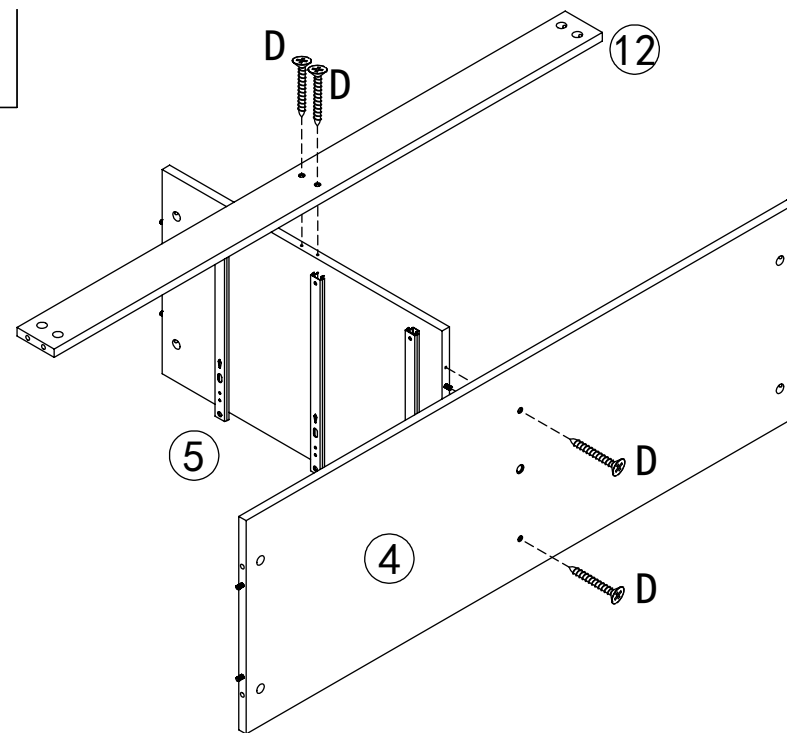


D	X4
	4x40mm

10

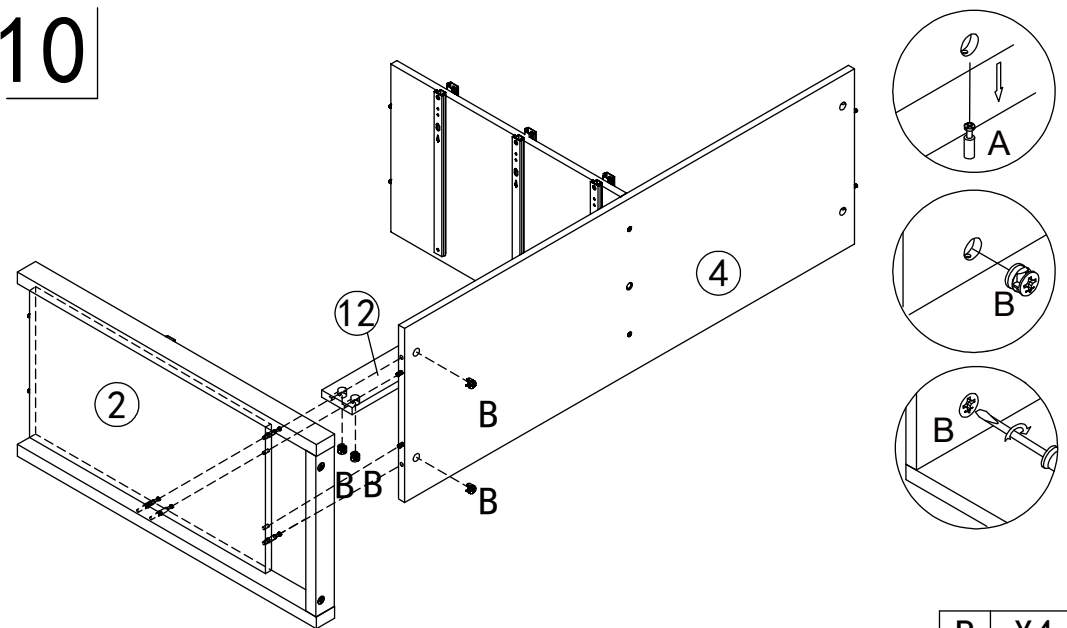

B	X4
	15x12mm


11

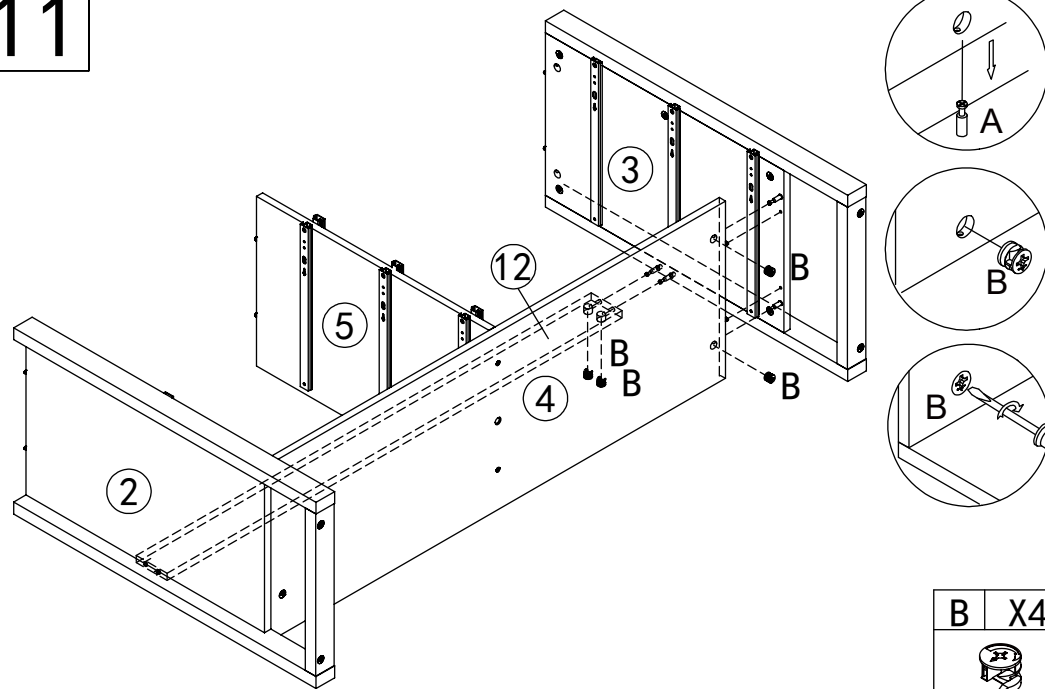

B X4




12

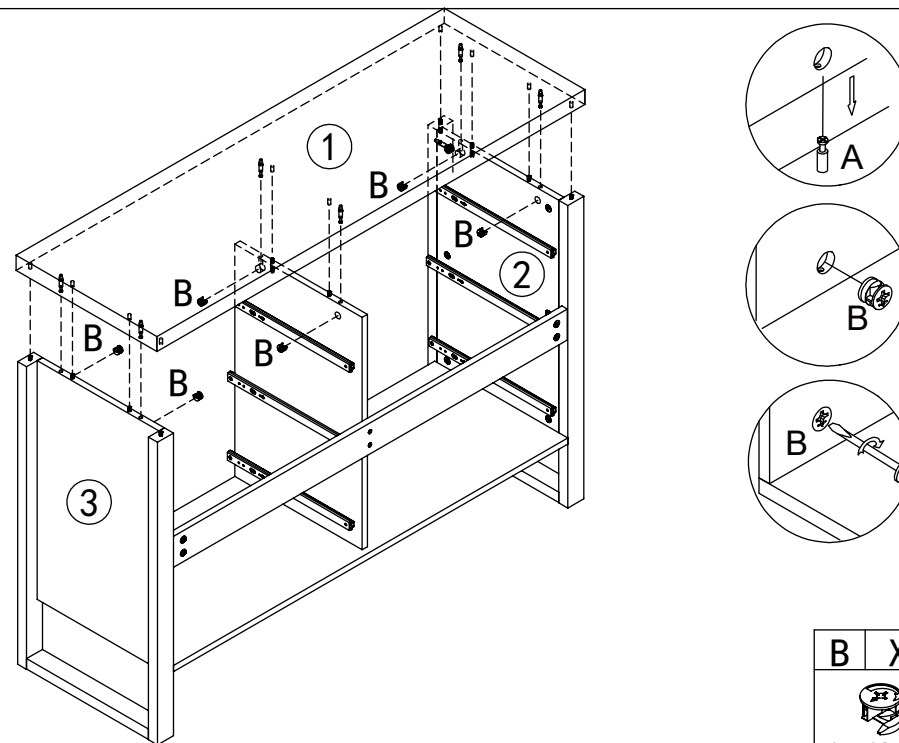


B X6




13

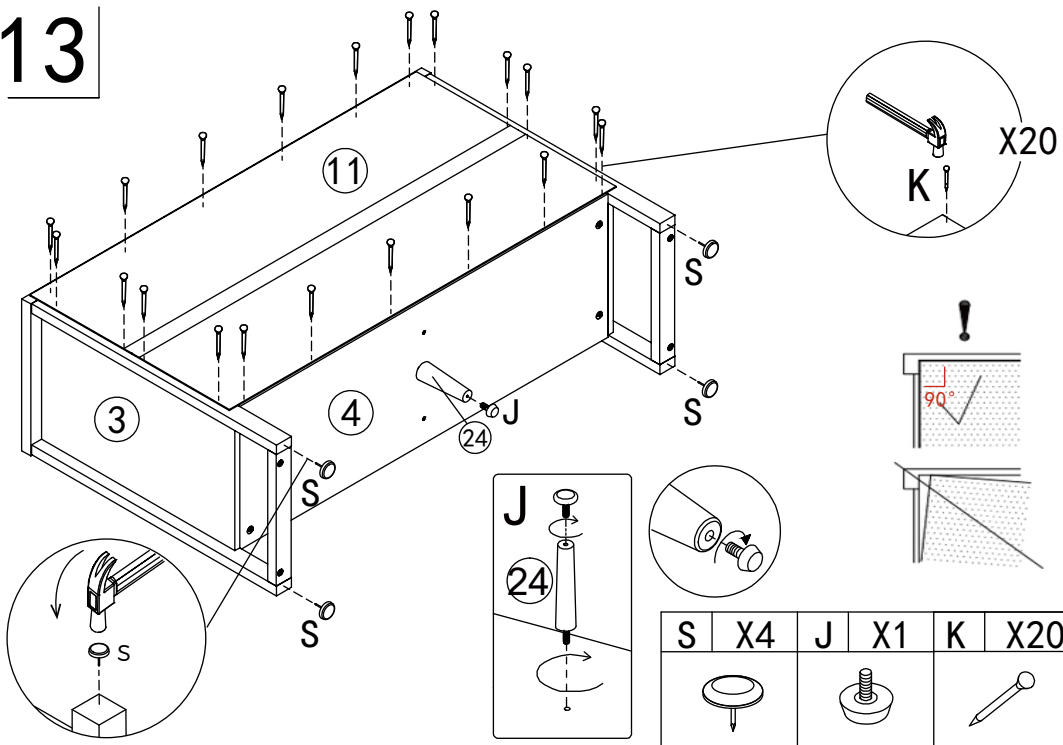

S X4 J X1 K X20




14

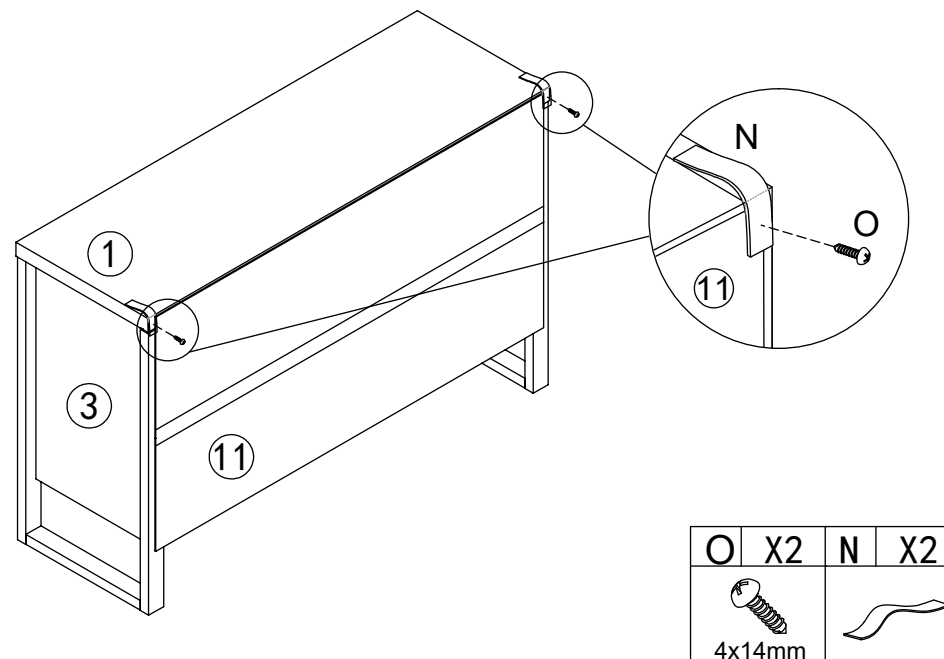






O X2 N X2




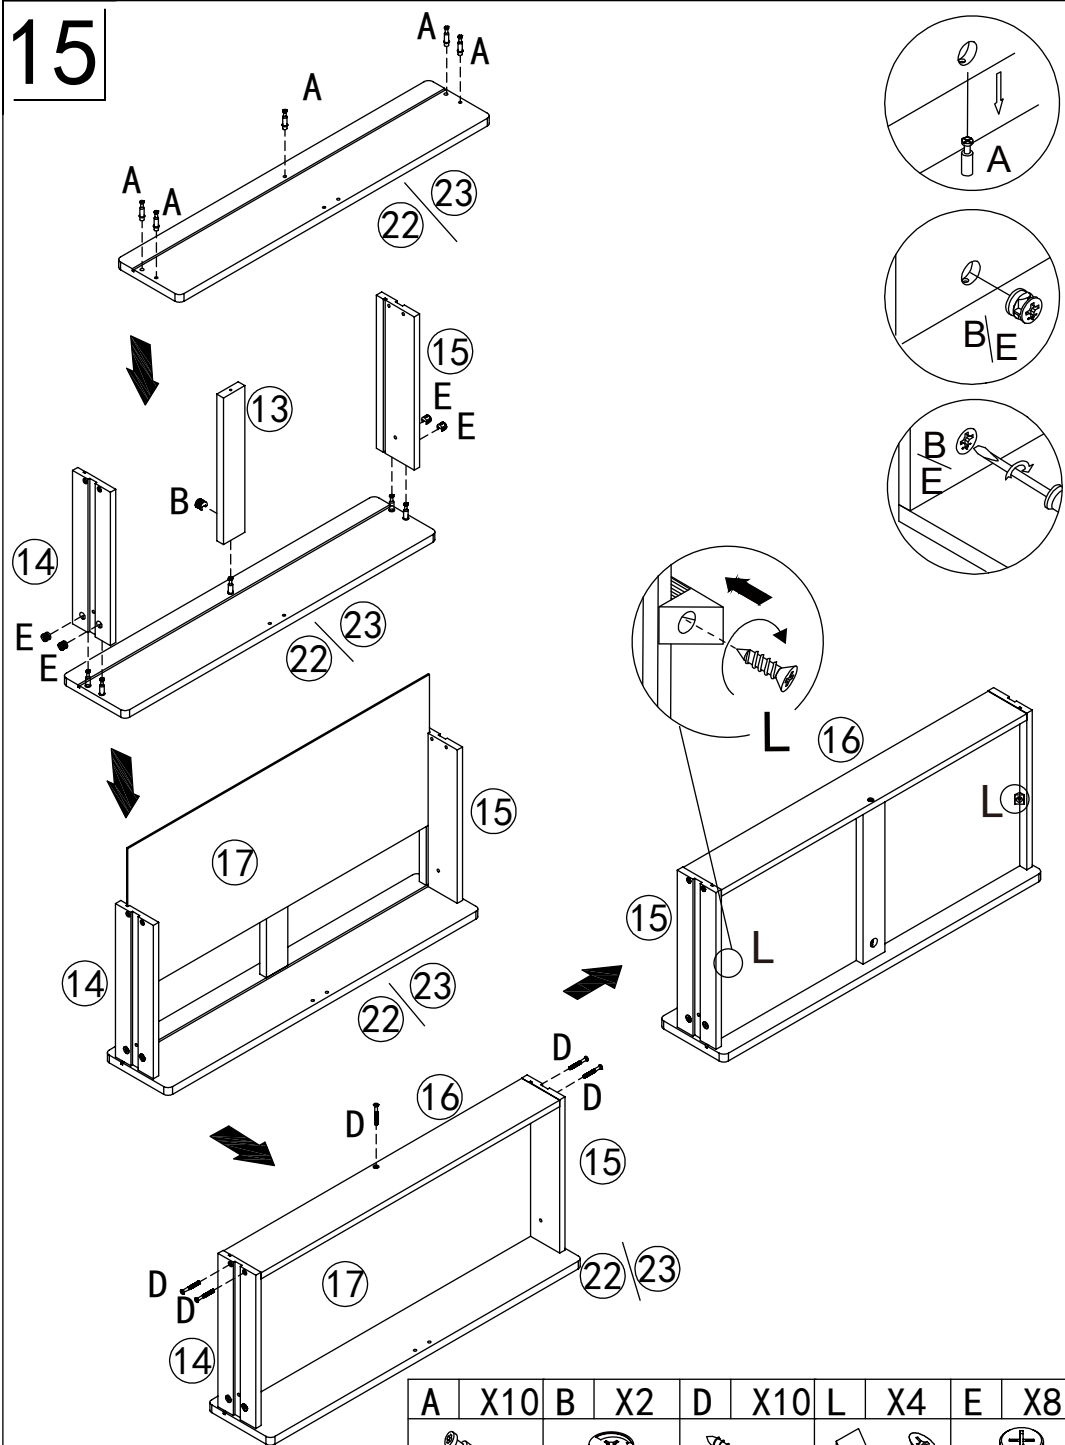




15




A	X10	B	X2	D	X10	L	X4	E	X8
									
7x35mm		15x12mm		4x40mm		3x14mm		12x10mm	

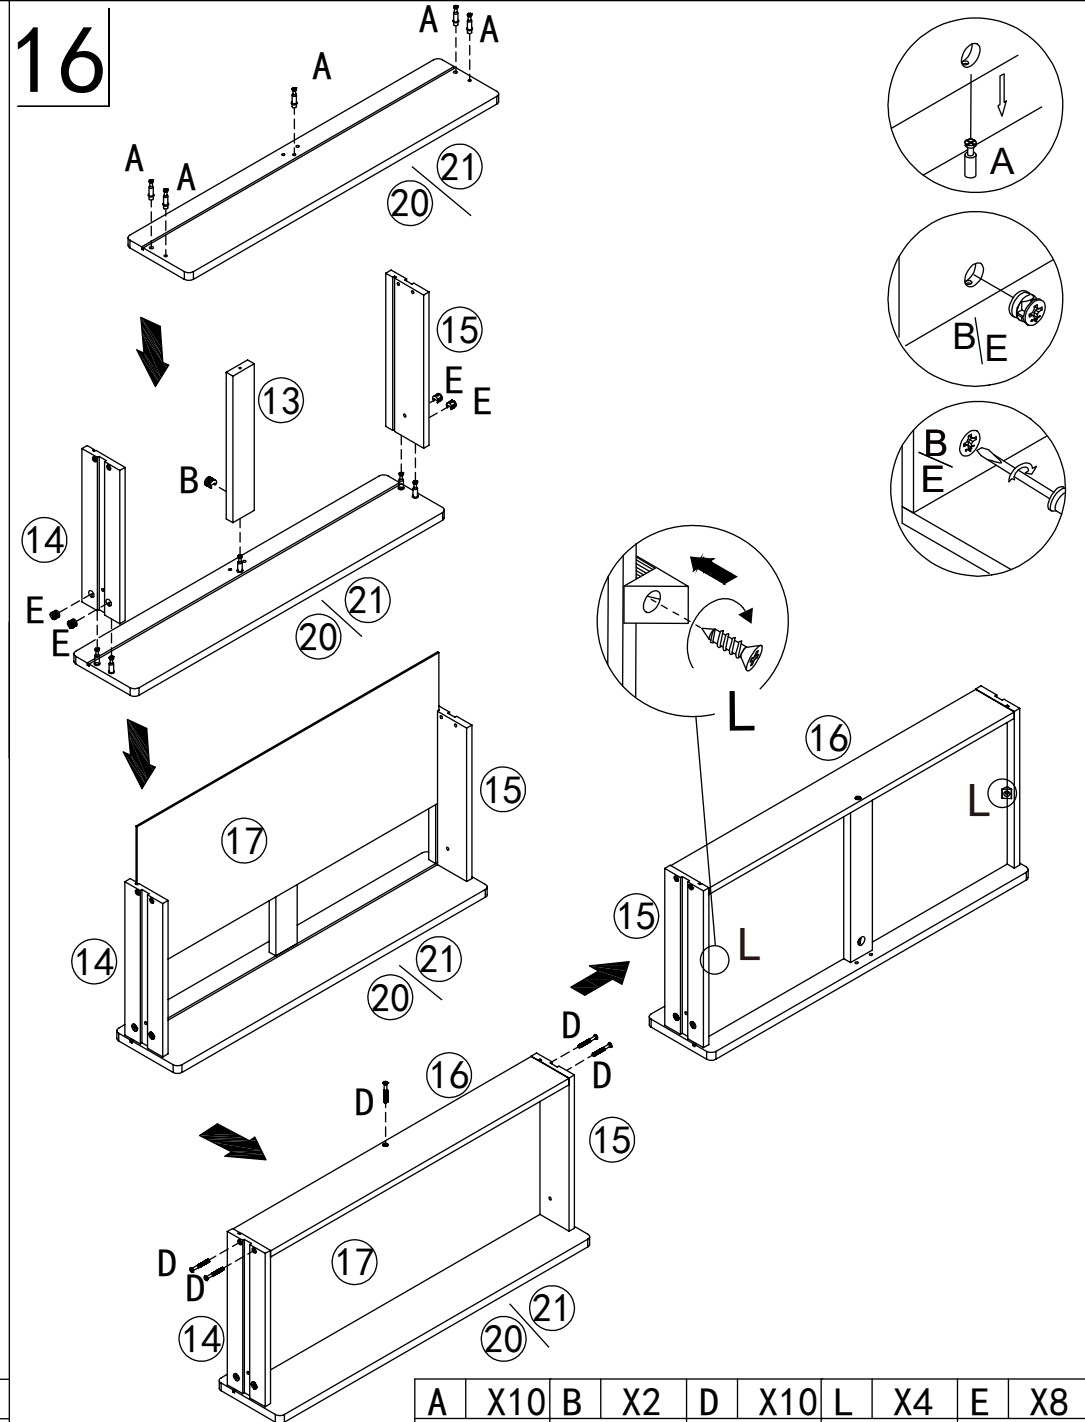16




A	X10	B	X2	D	X10	L	X4	E	X8
									
7x35mm		15x12mm		4x40mm		3x14mm		12x10mm	


17

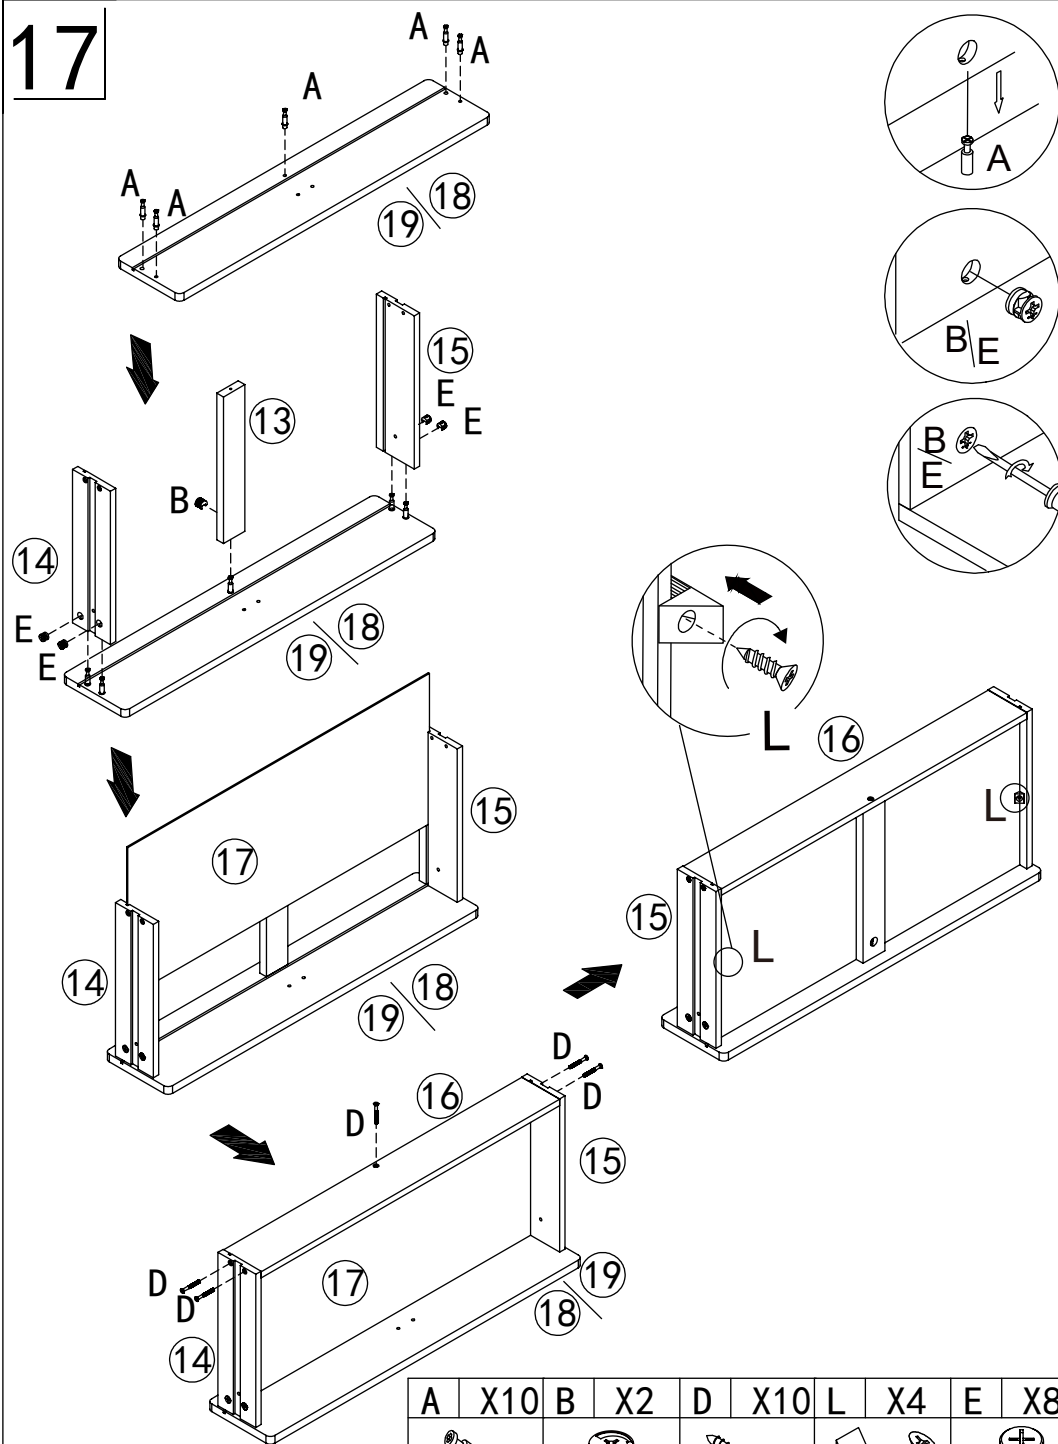


18

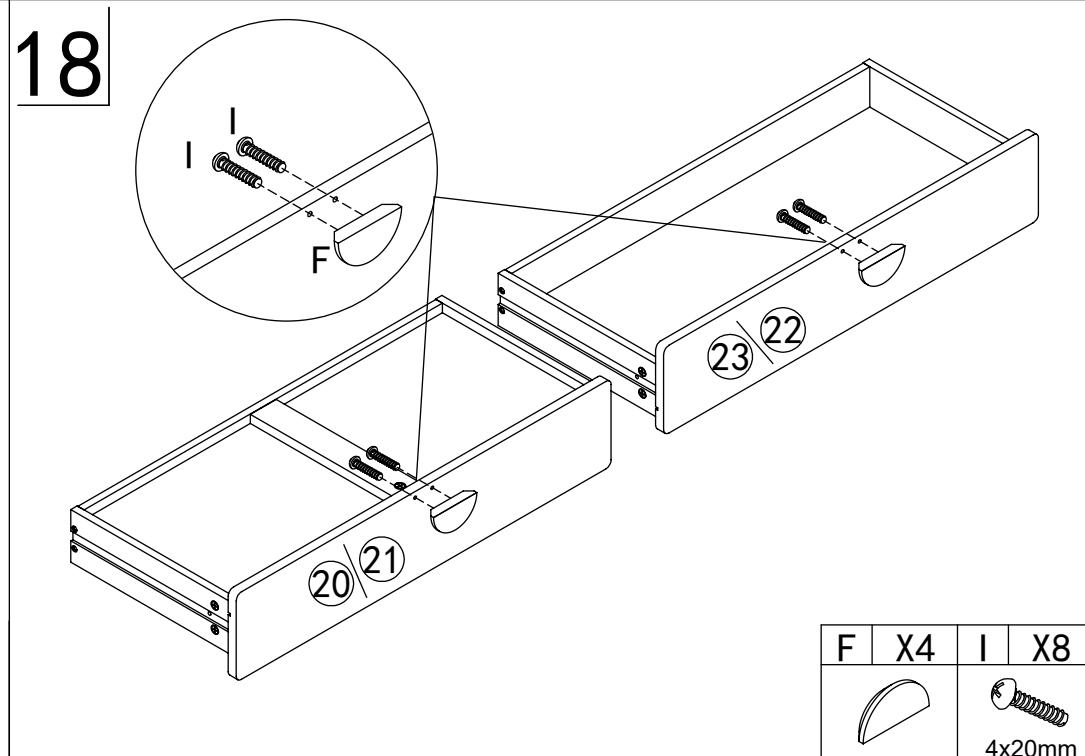


19

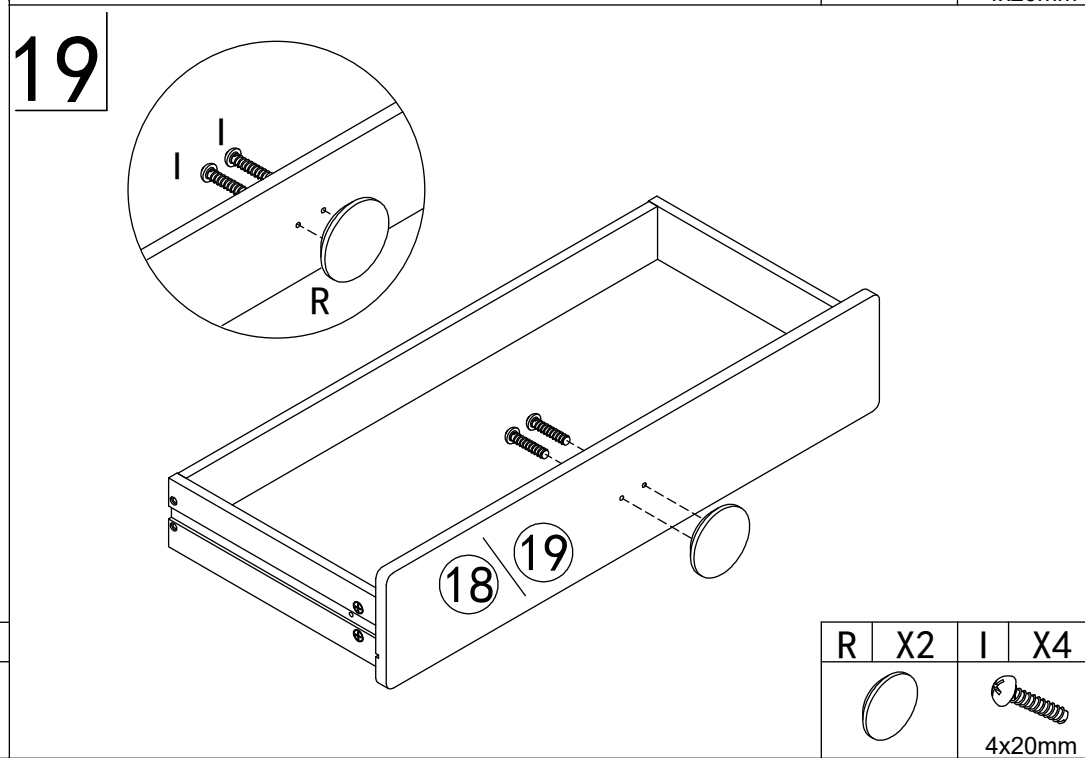


20

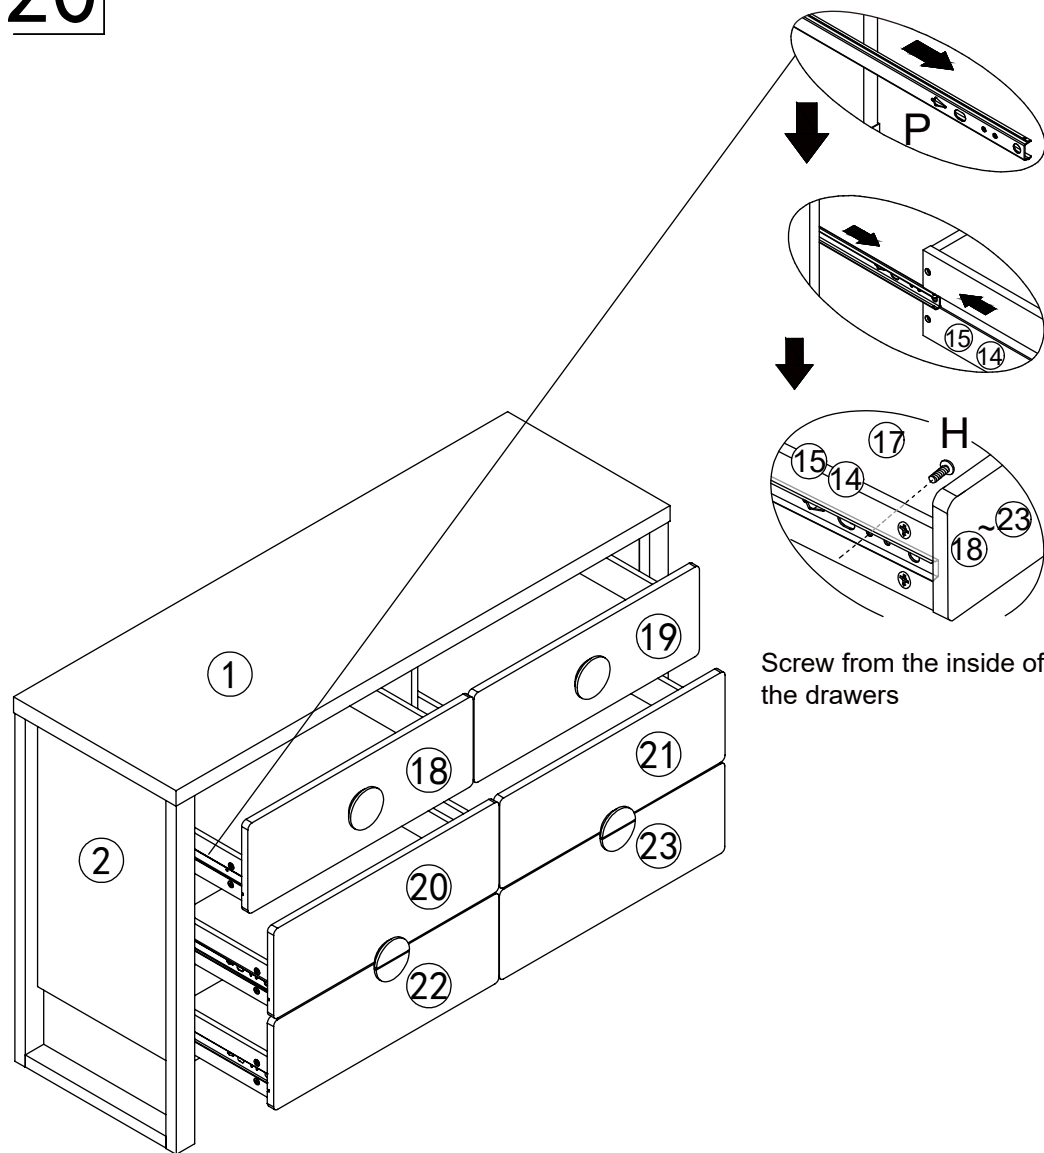




Screw from the inside of the drawers

H	X12
	
4x11mm	


21

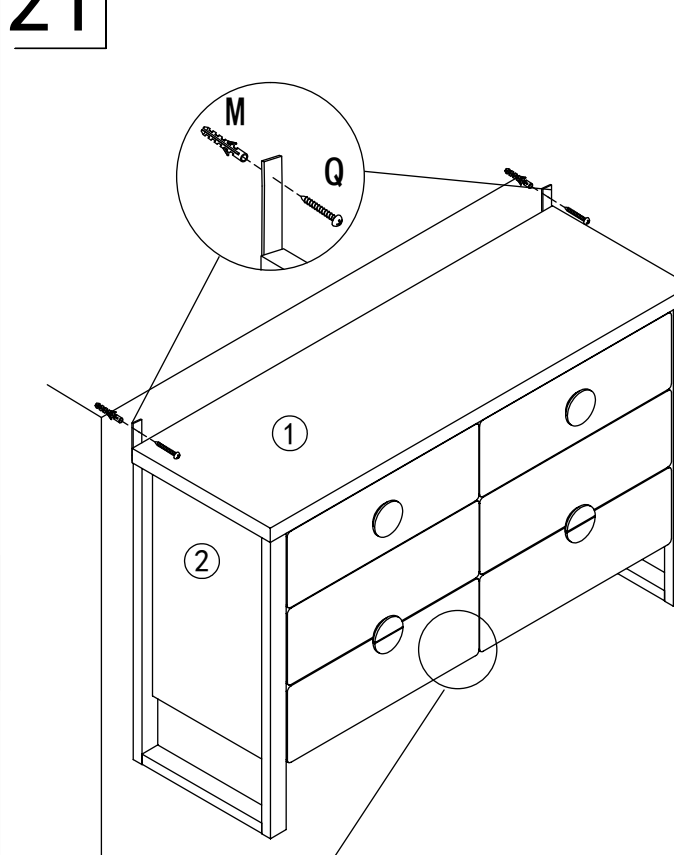

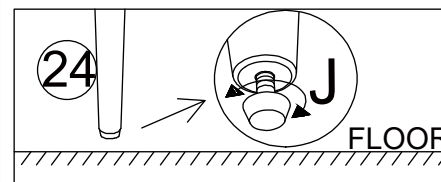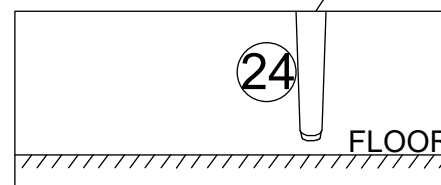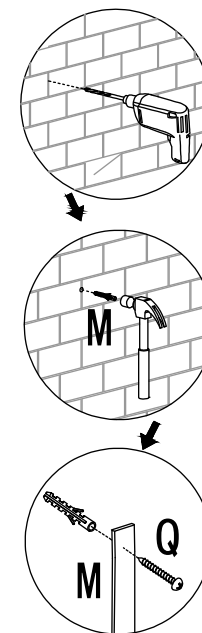

Pre-drilled hole at wall

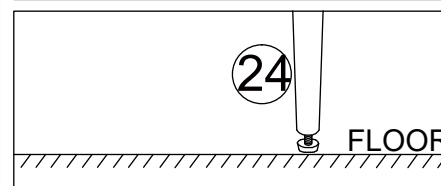

Please adjust foot insert attached to floor.



M	X2	Q	X2
			
		4x30mm	