



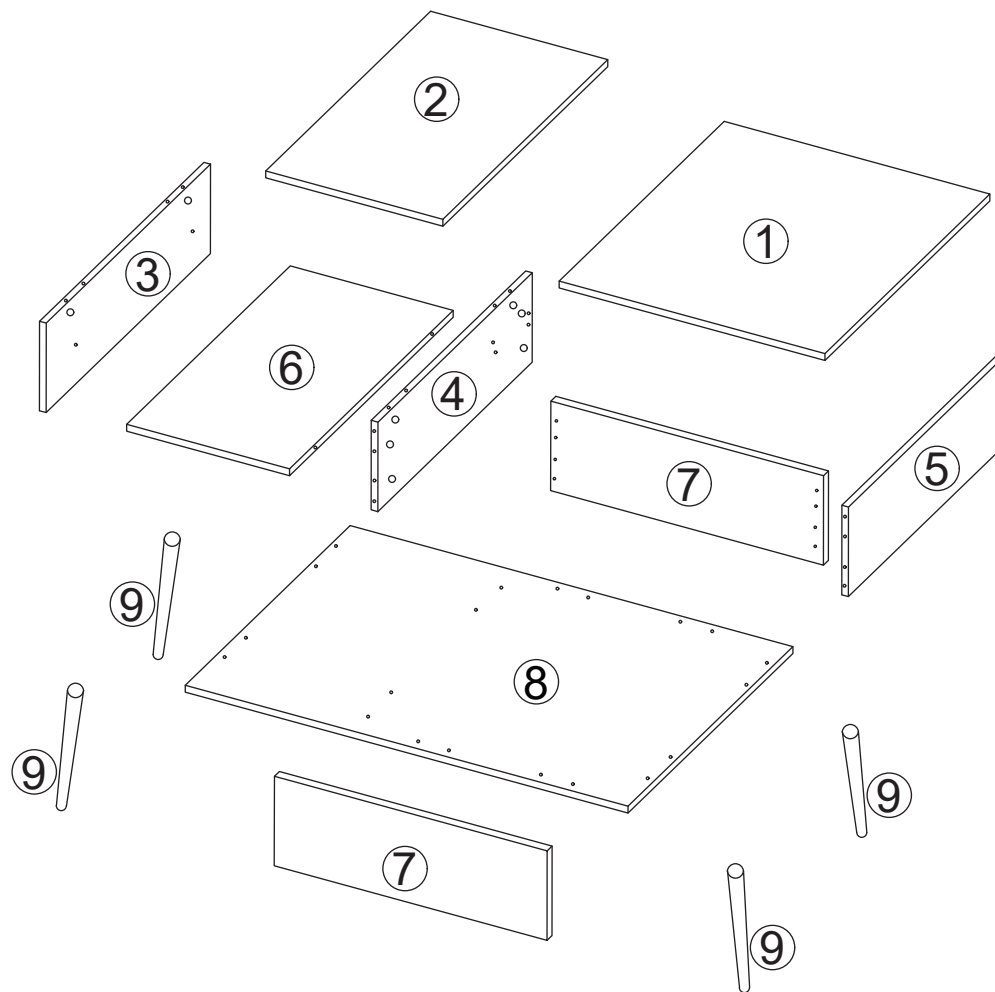


A	x12	B	x12	C	x26	D	x10	E	x36	F	x4
						4x40mm		4x14mm			
G	x4	H	x1	I	x1						




1

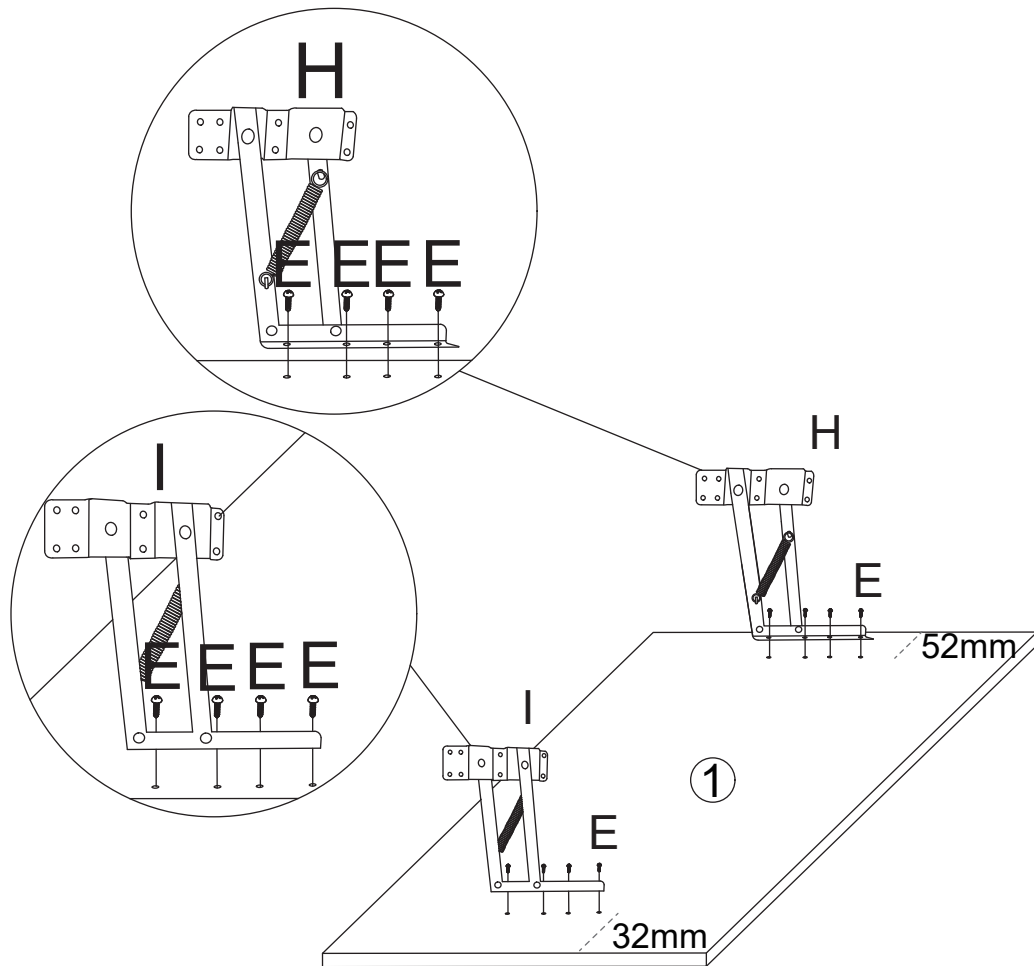


E	x8	H	x1	I	x1
					
M4x14mm					


2

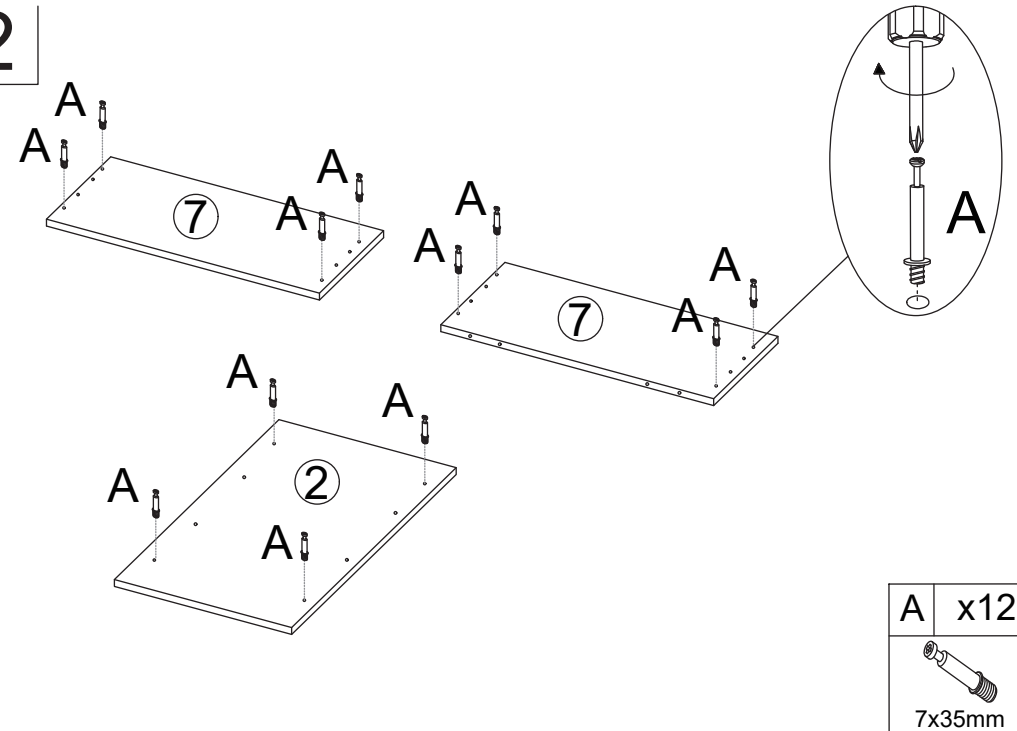





A	x12
	
7x35mm	

3

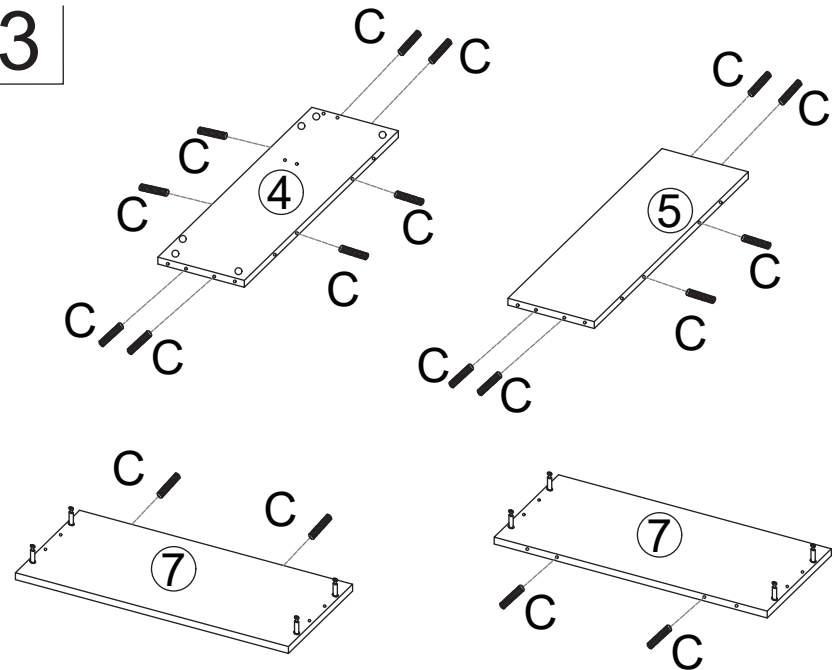

C	x18
	
Ø6x30mm	


4

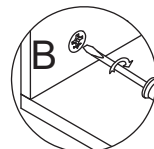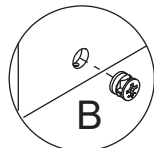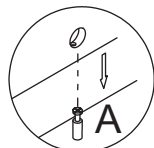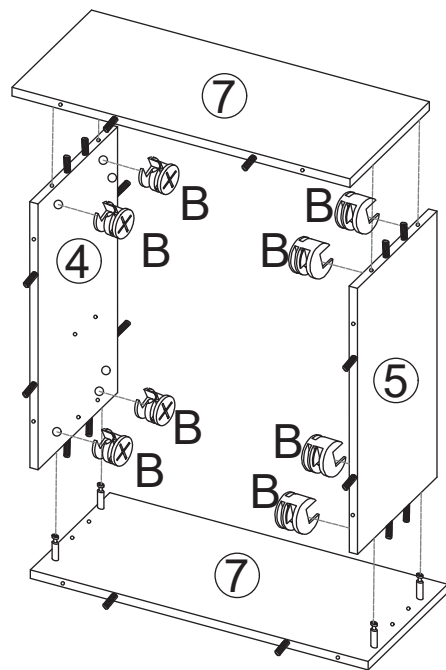


B x8



6

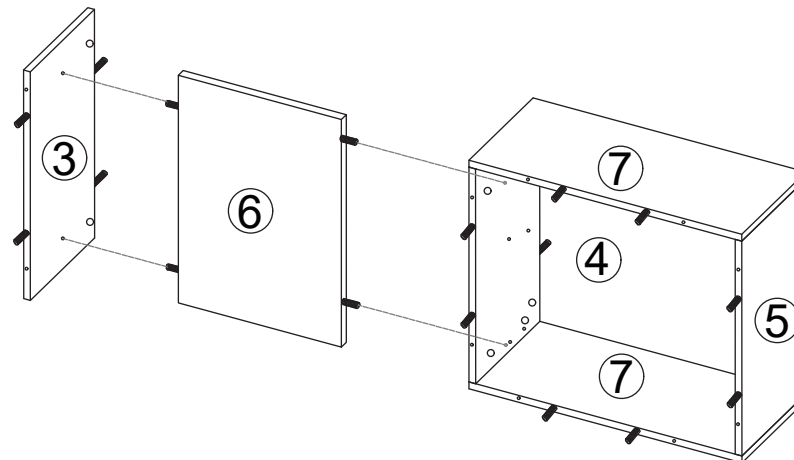


5

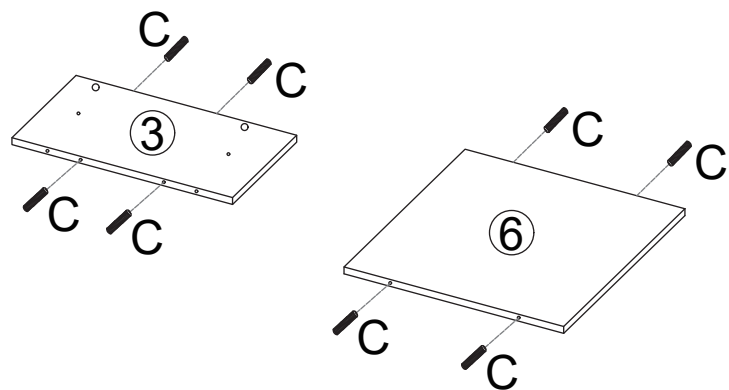


C x8



7




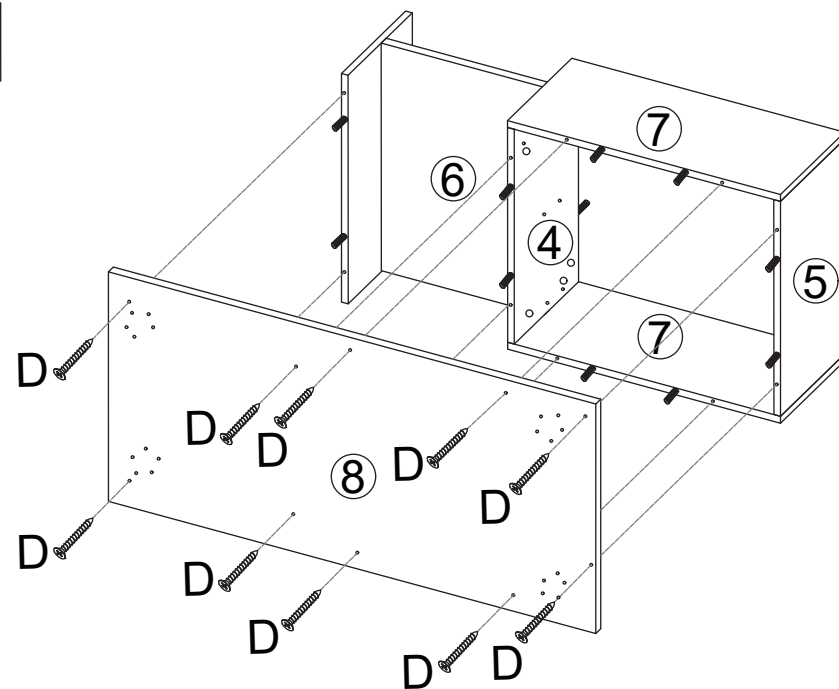


D x10



4x40mm



8

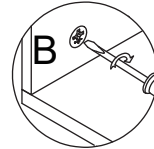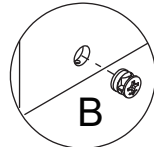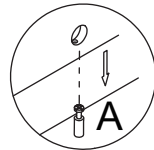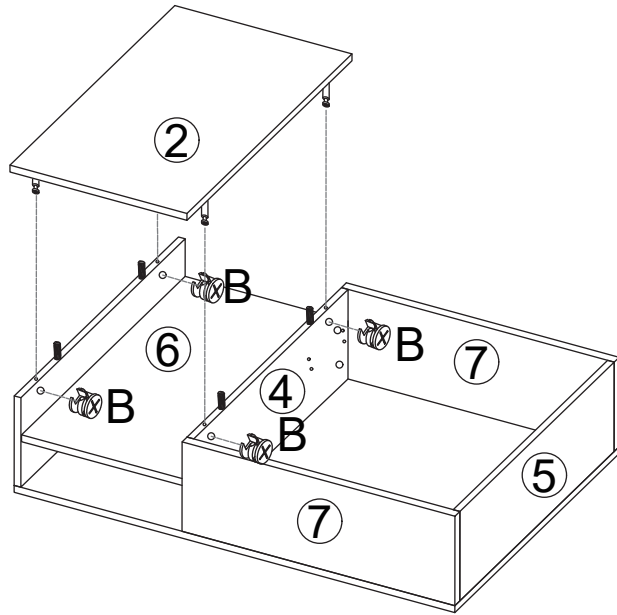

B x4



10


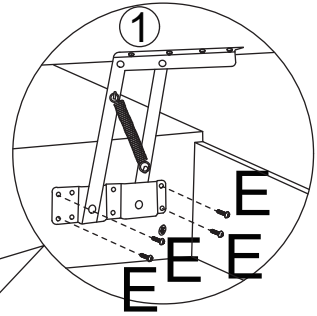
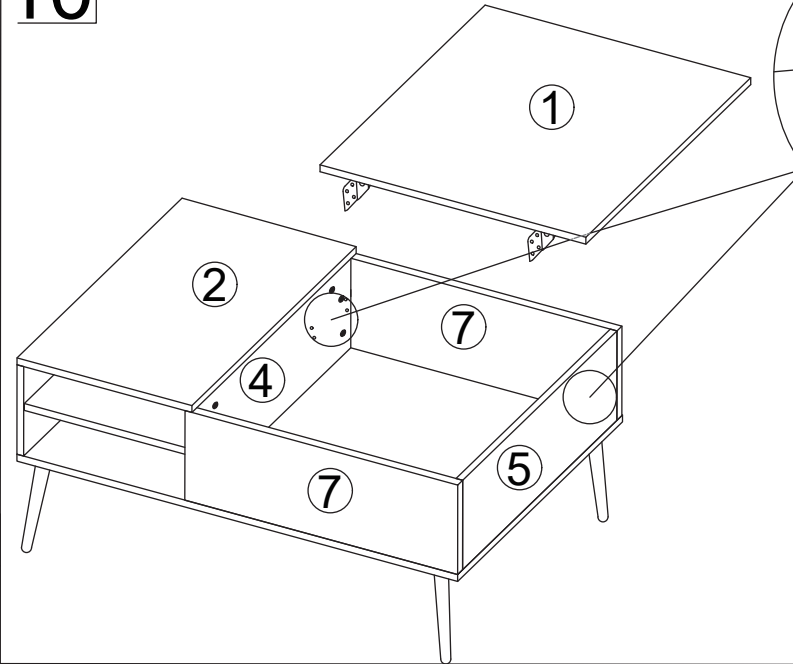


E x8



4x14mm

9

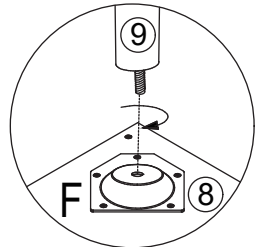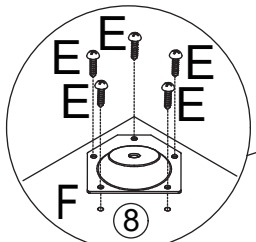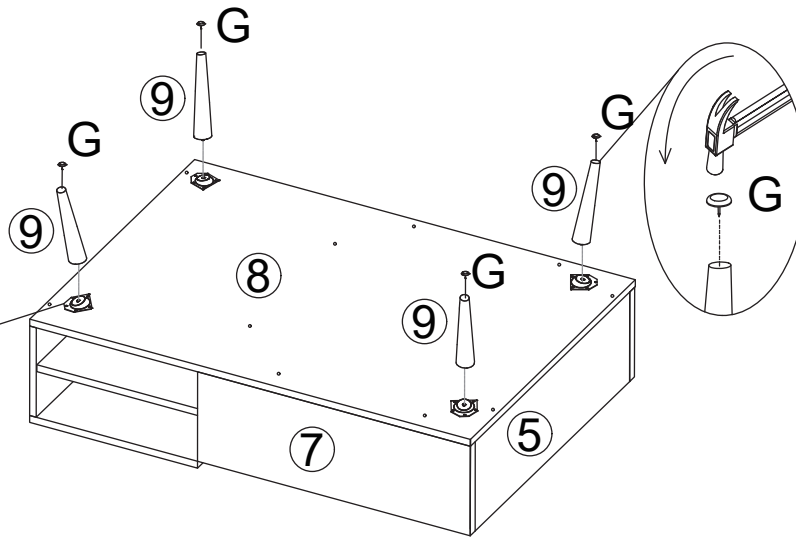


E x20 F x4 G x4




4x14mm





11

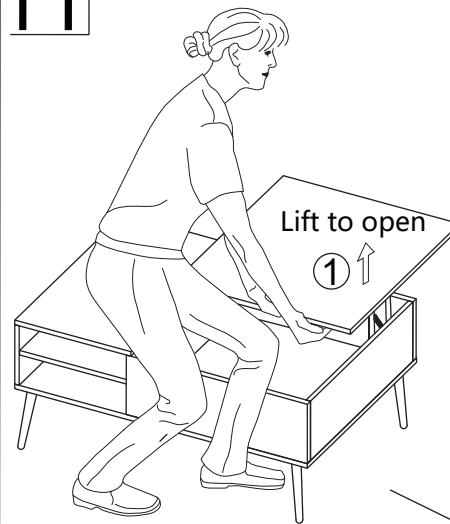

Attention!
For your safety, do not put
anything on the top during lifting.

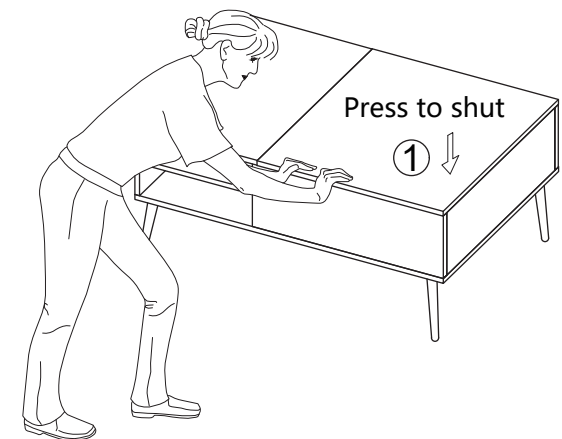

1

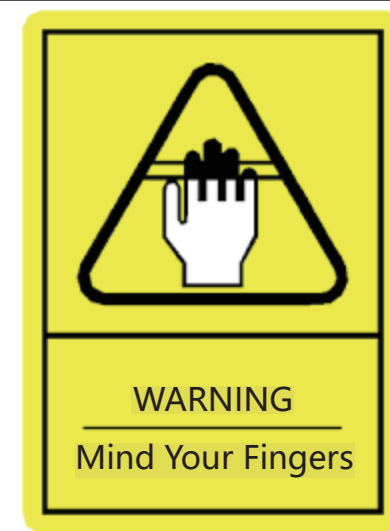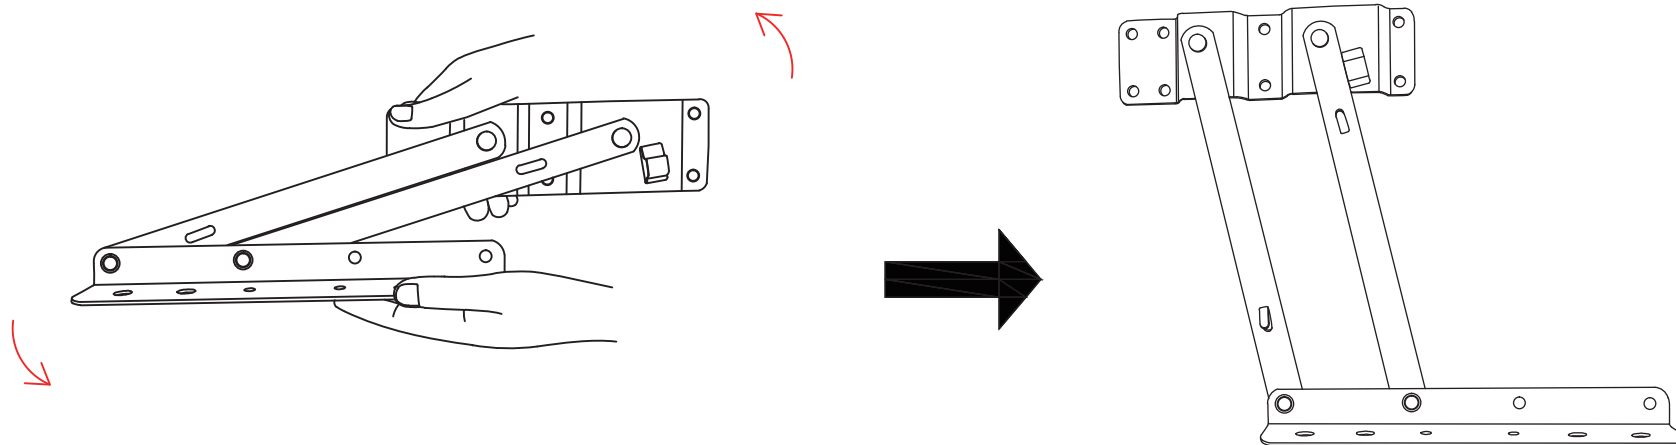

Please mind your fingers during installation

2

