



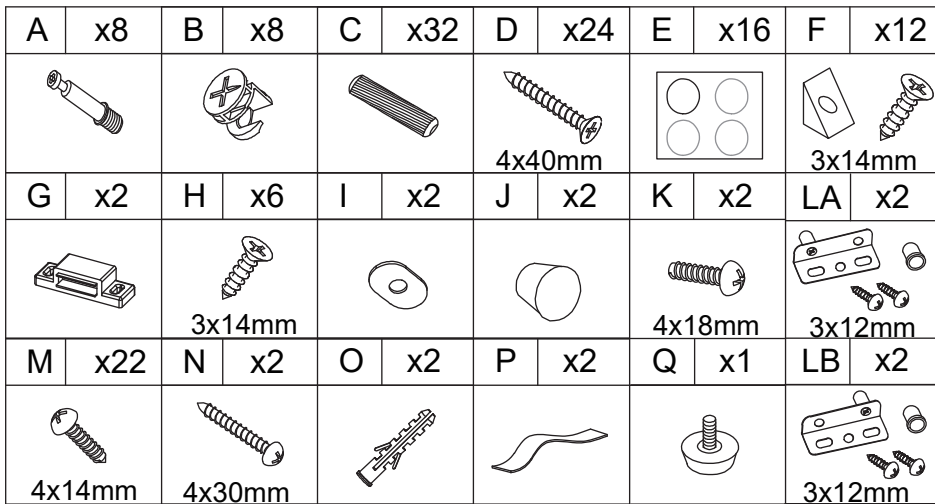


1

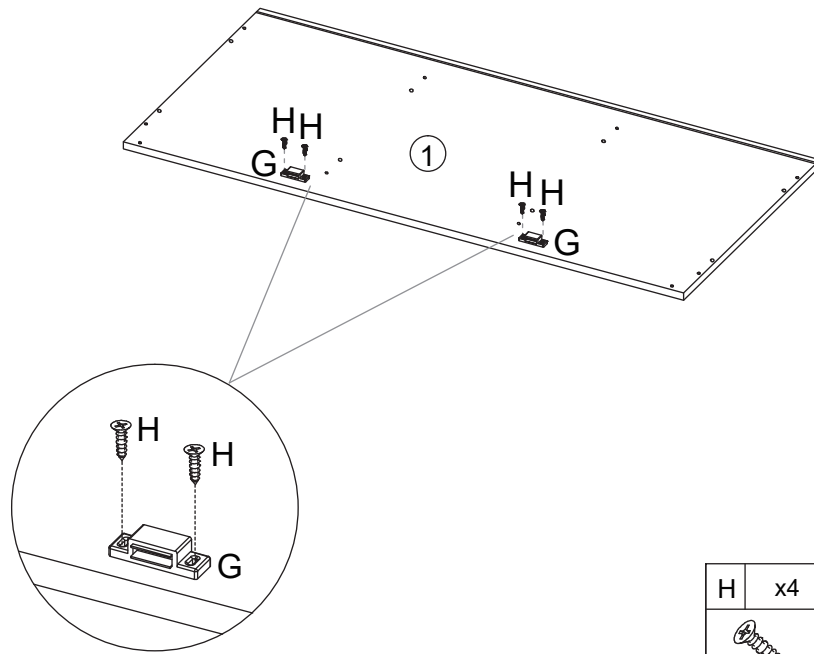

H	x4	G	x2
			
3x14mm			


3

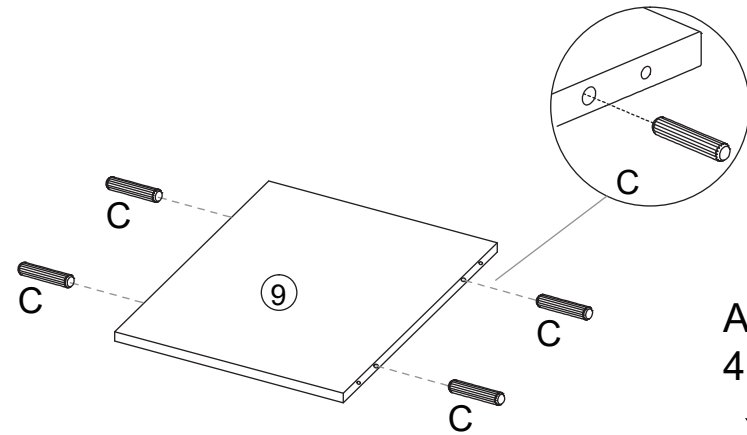

Assemble
4 sets
x4



C	x16
	

2

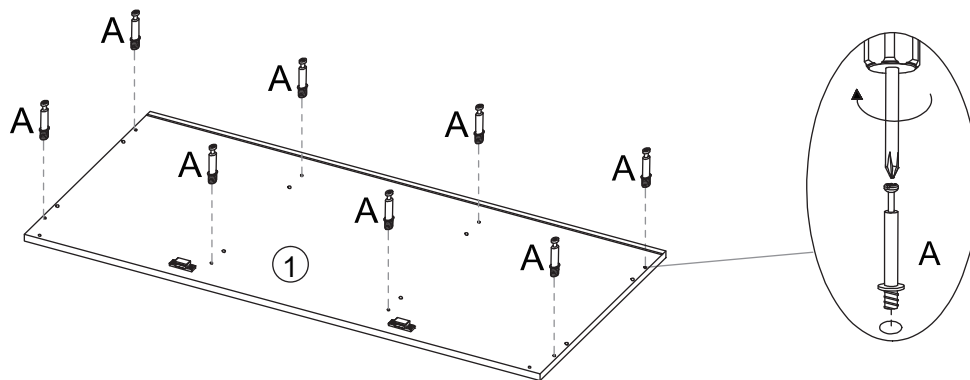

A	x8
	


4

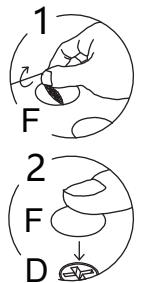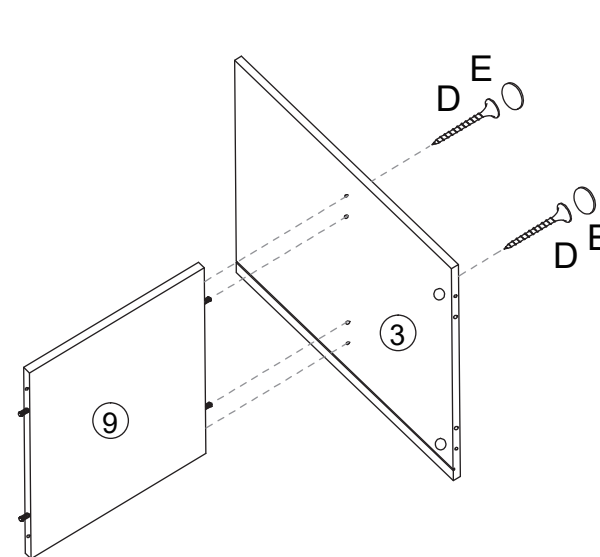

Peel off the
cover from F
and place it
over D


D	x2	E	x2
			
4x40mm			

5

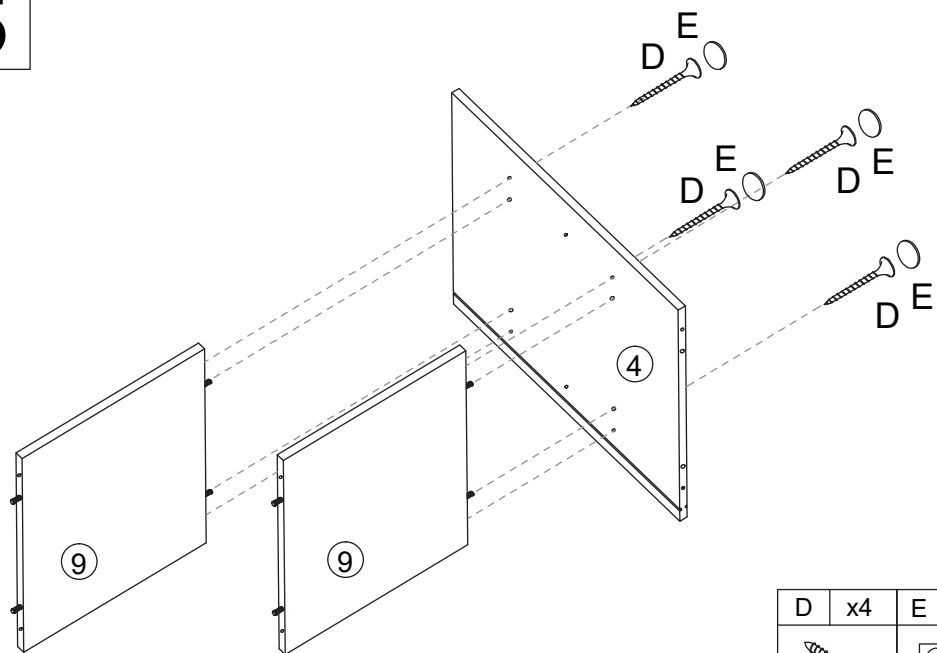



D	x4	E	x4
			
4x40mm			

7

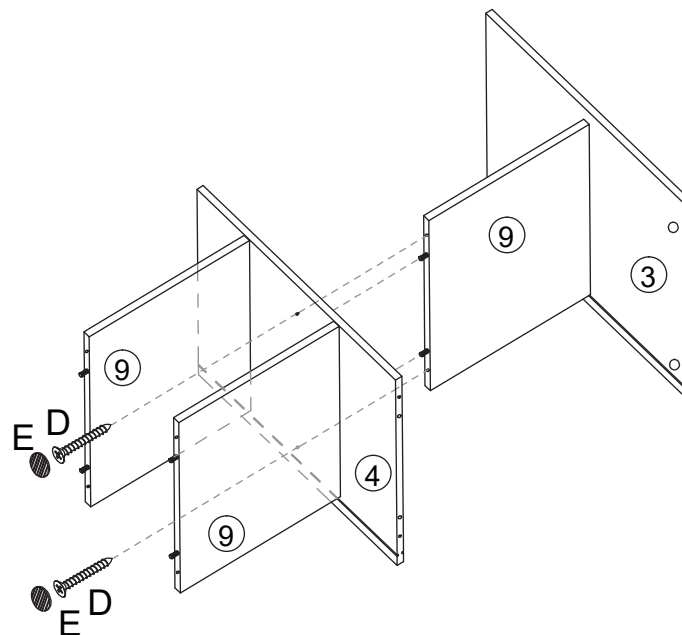

D	x2	E	x2
			
4x40mm			


6

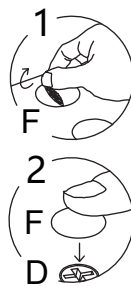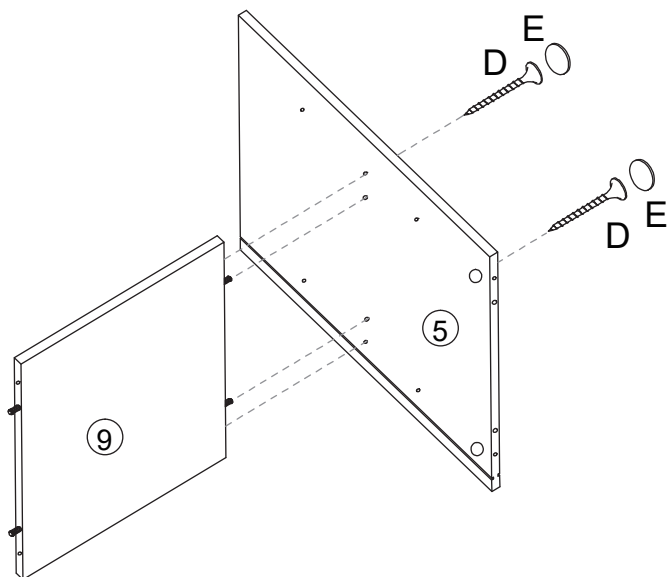

Peel off the cover from F and place it over D


D	x2	E	x2
			
4x40mm			

8

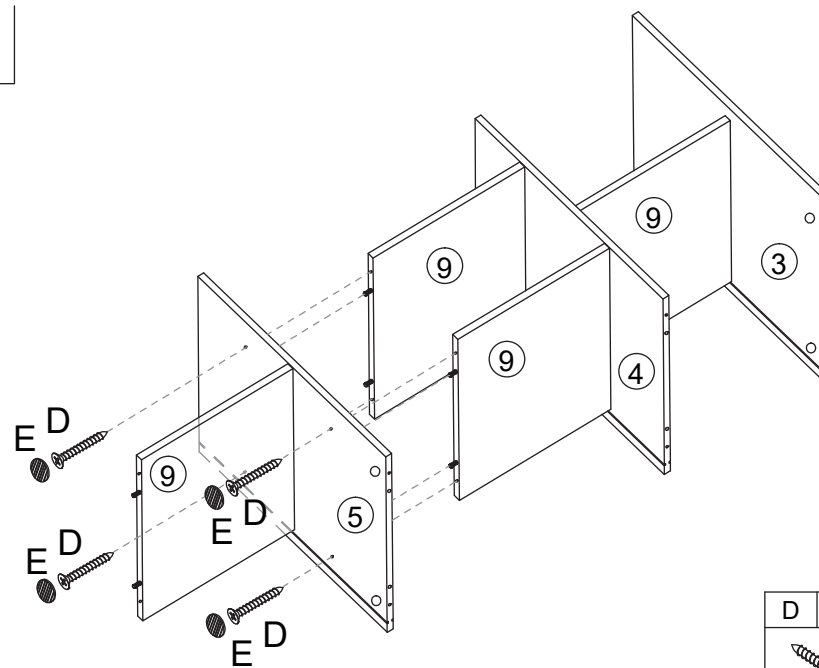


D	x4	E	x4
			
4x40mm			

9

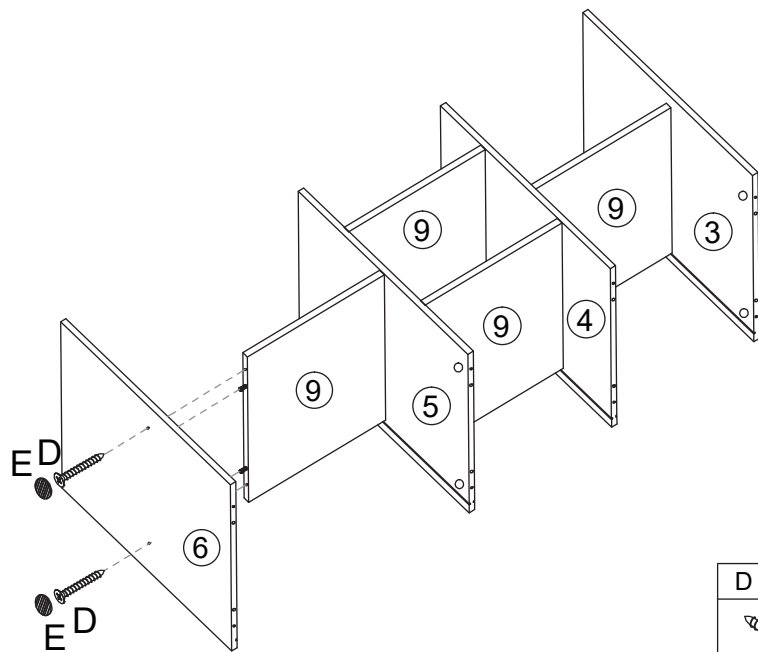


D	x2	E	x2
 4x40mm			

11

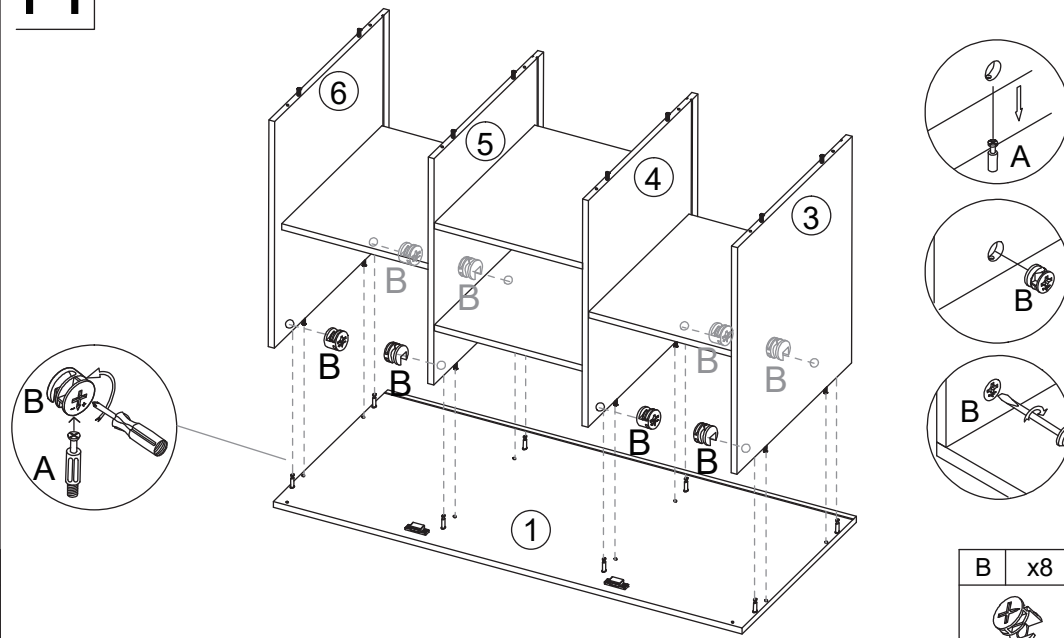


B	x8

10

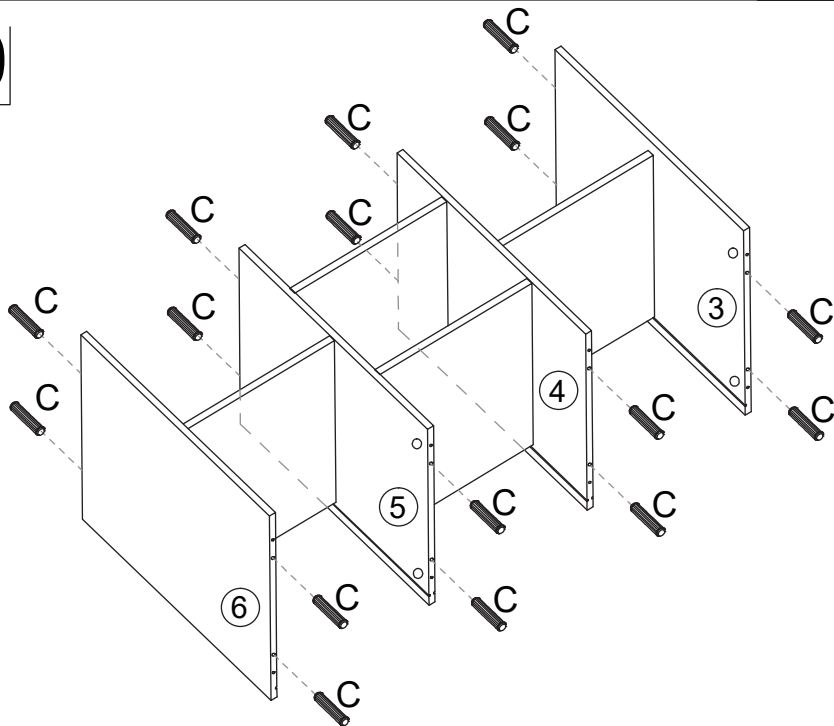


C	x16

12

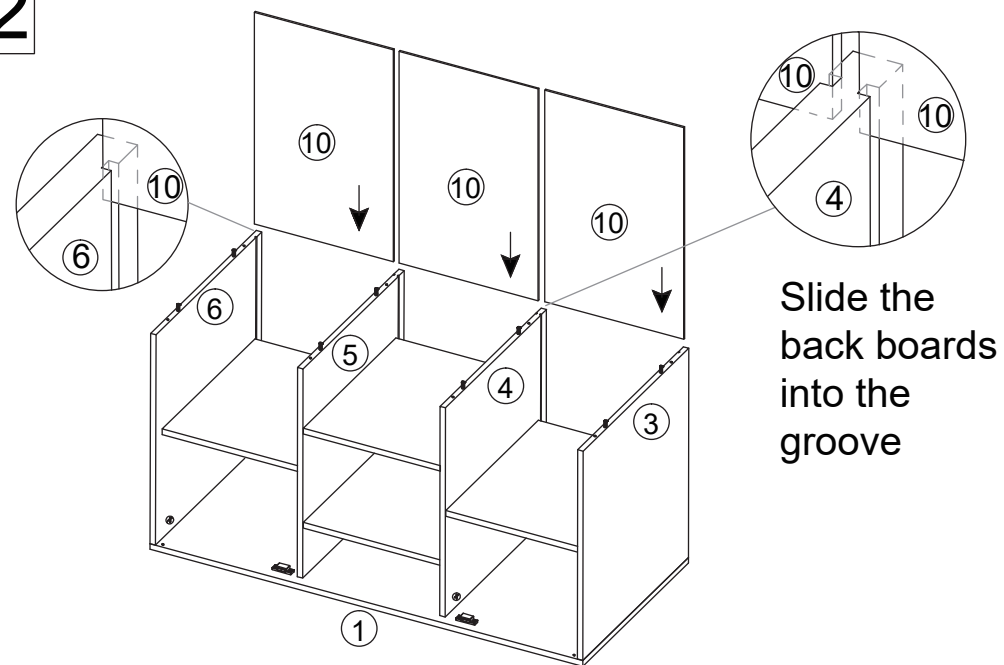


13

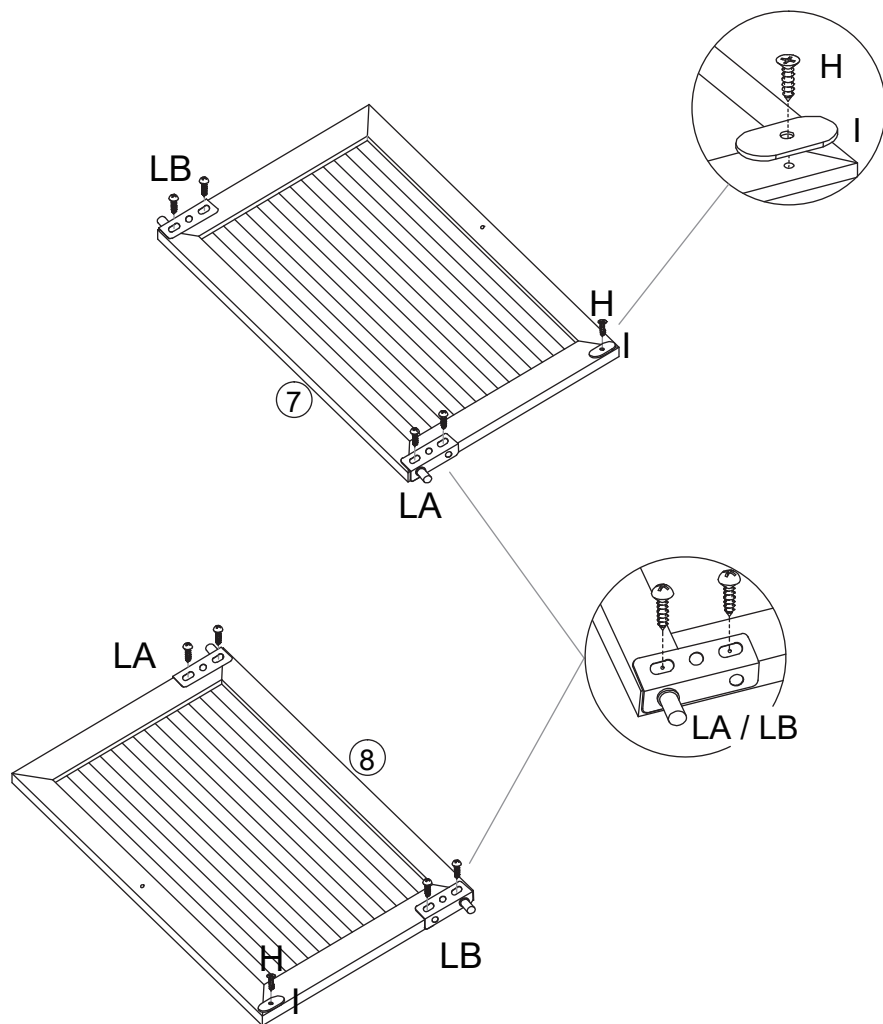


LA	x2	LB	x2	H	x2	I	x2
3x12mm		3x12mm		3x14mm			

14

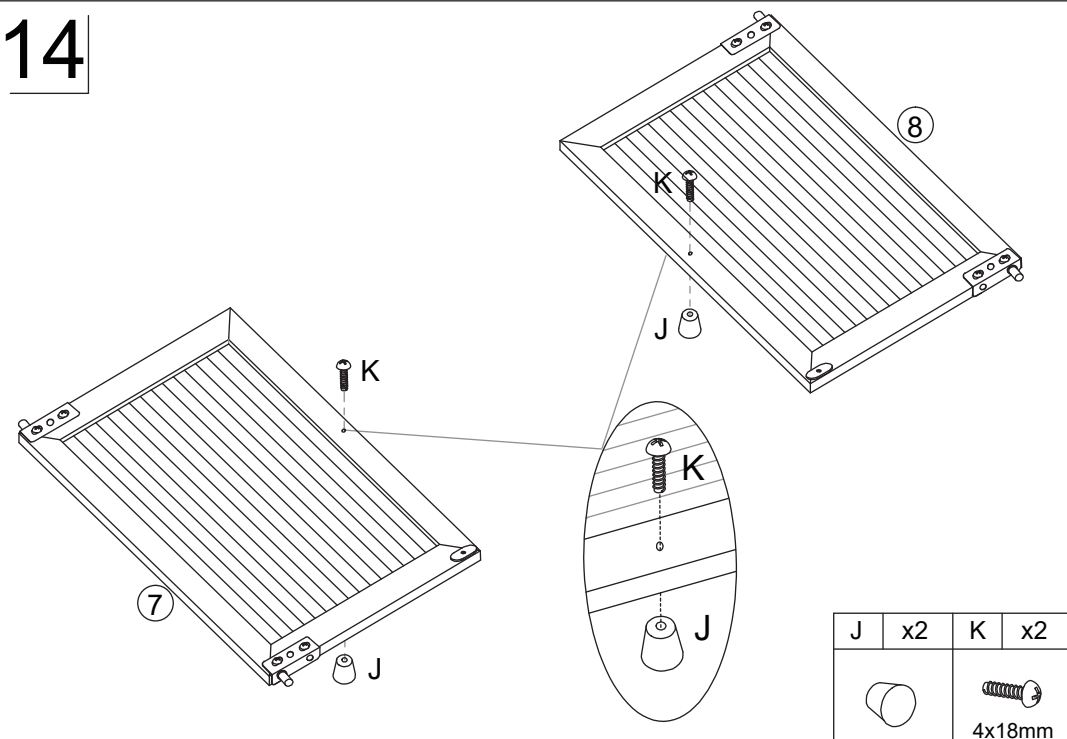


J	x2	K	x2
		4x18mm	


15

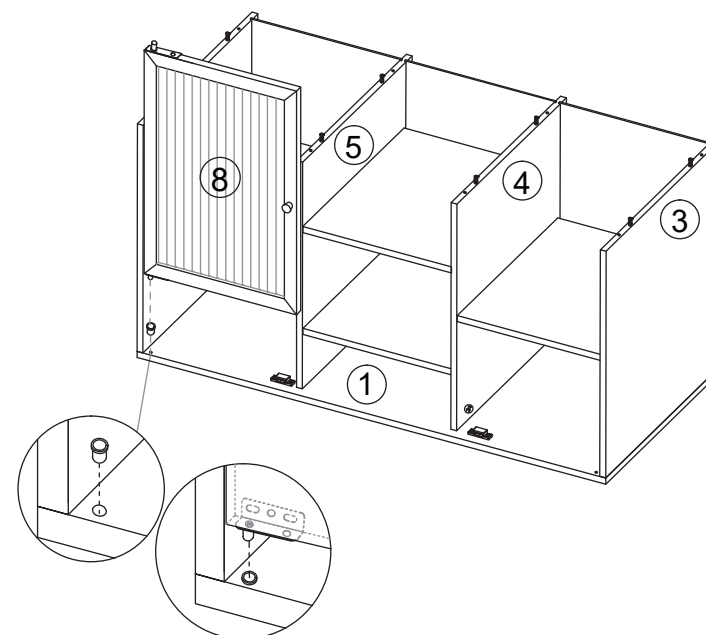

16

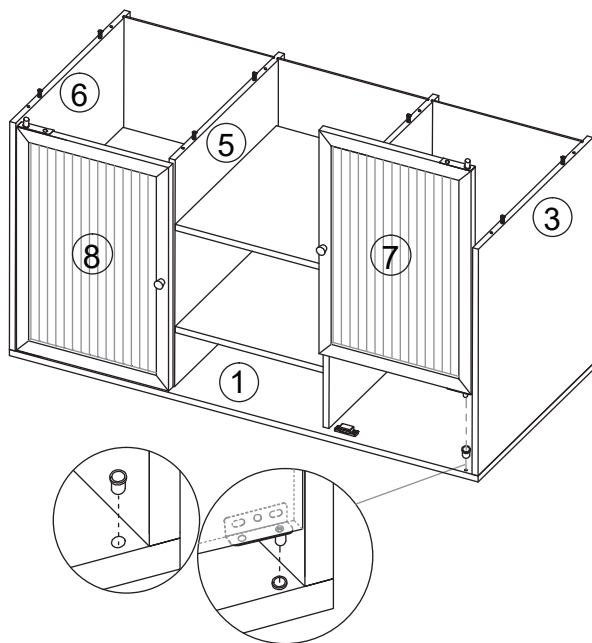


18

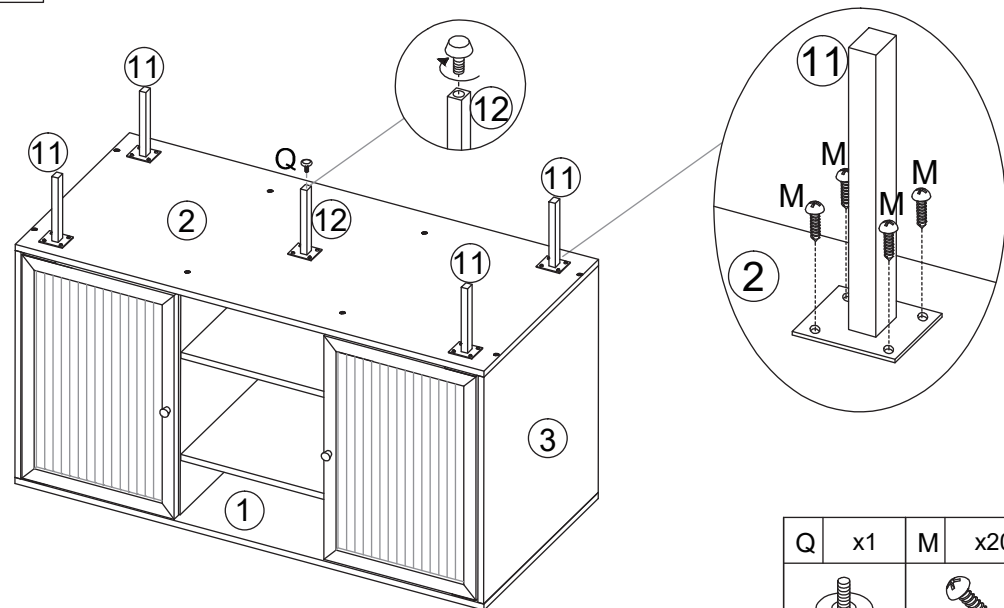


Q	x1	M	x20
			
			4x14mm

17

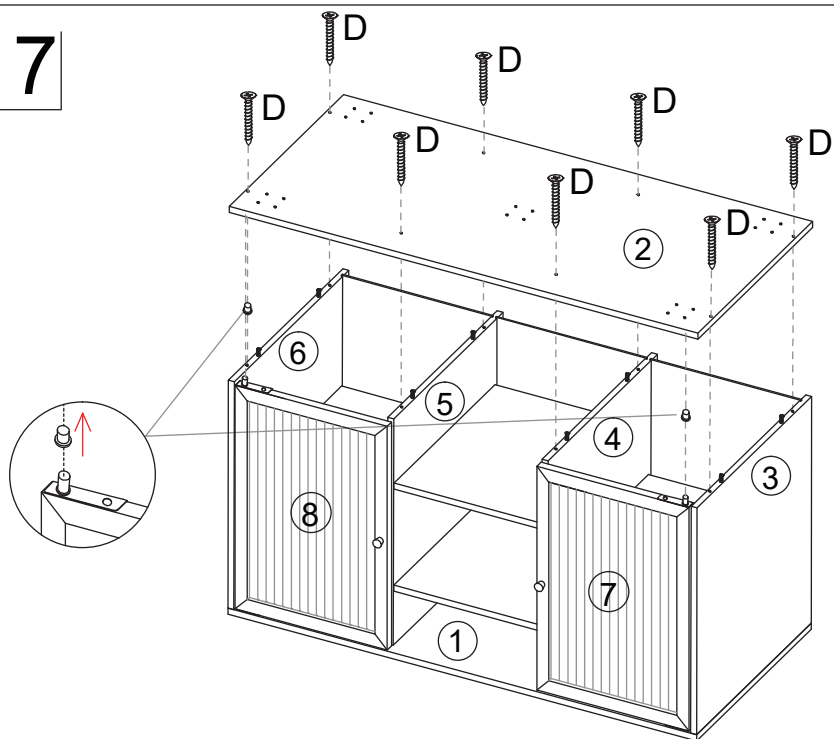



D	x8
	
	4x40mm

19

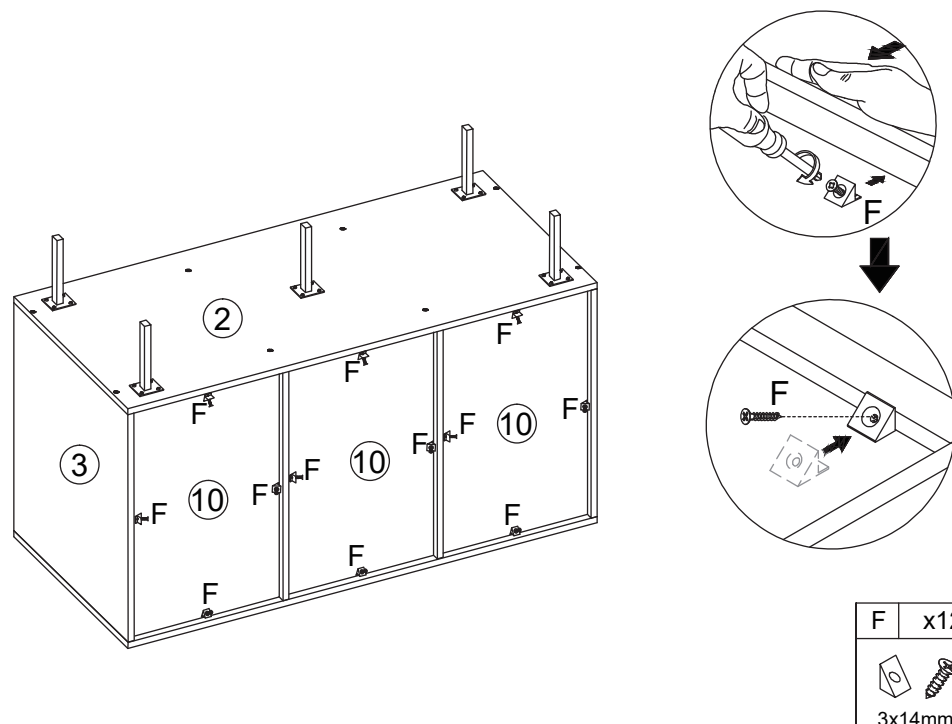



F	x12
	
	3x14mm

20

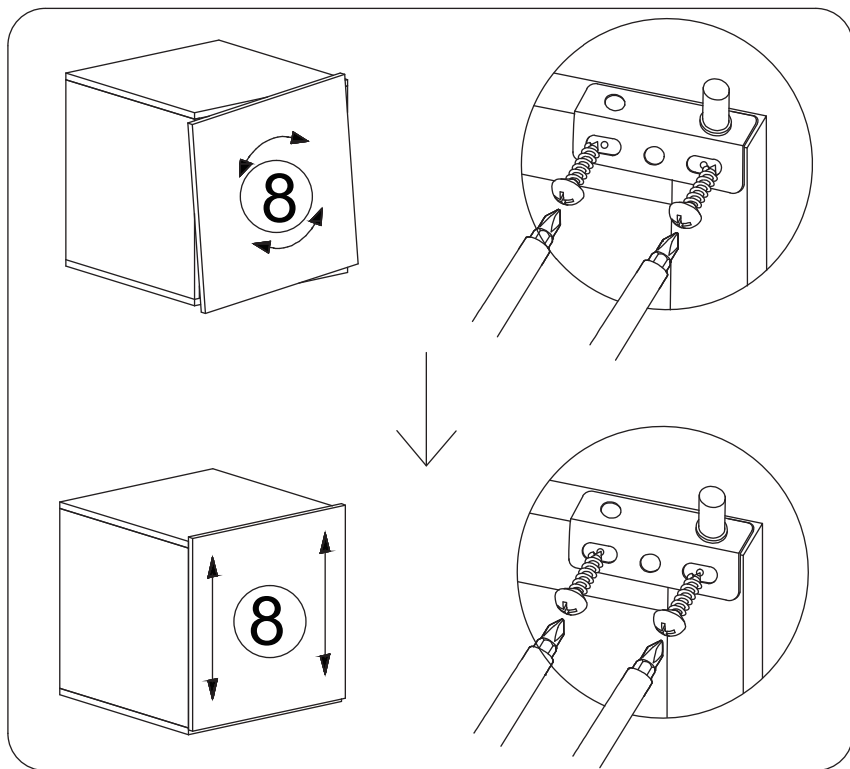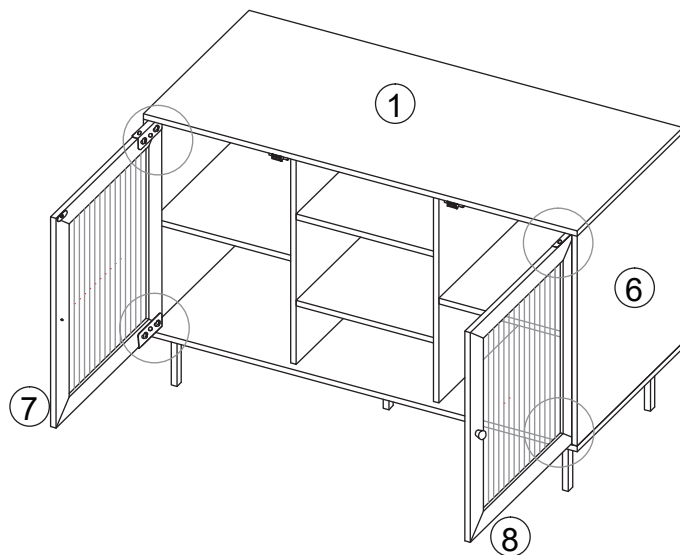

21

Pre-drilled hole at wall

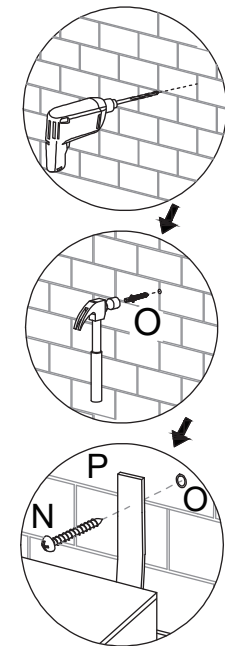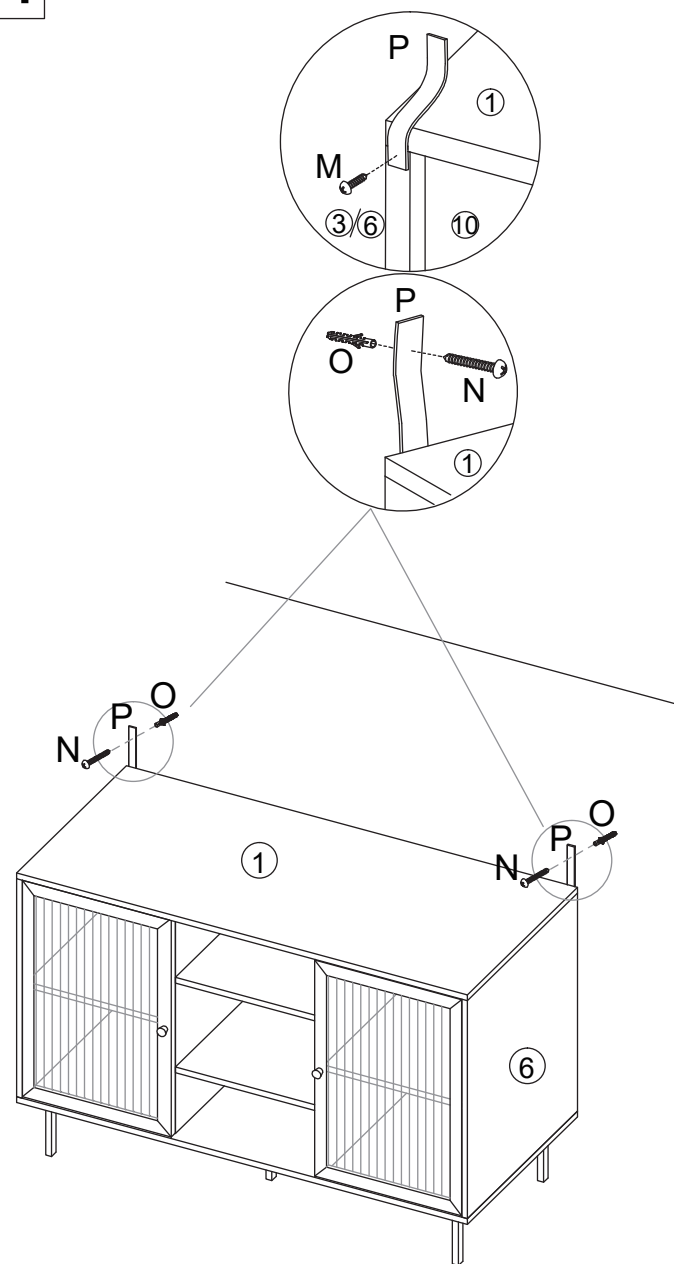

M	x2	N	x2	O	x2	P	x2
							
4x14mm		4x30mm					