


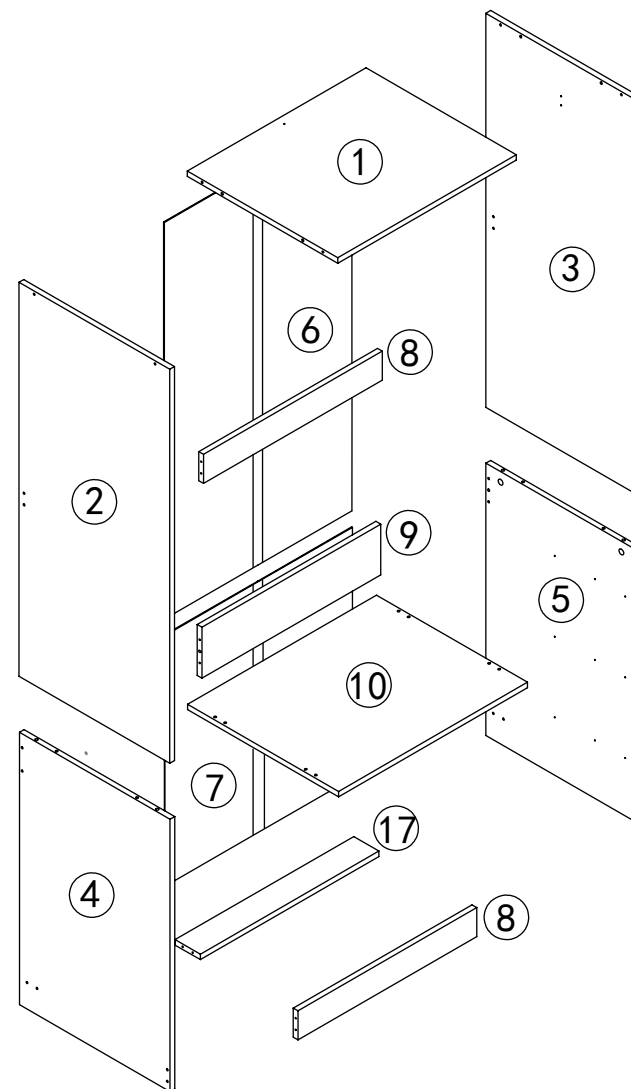
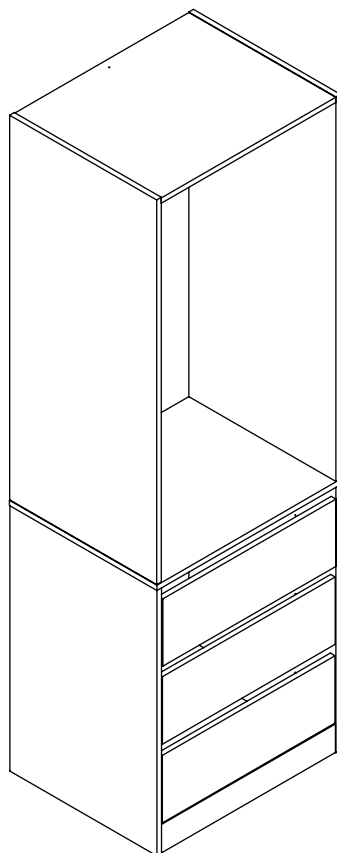


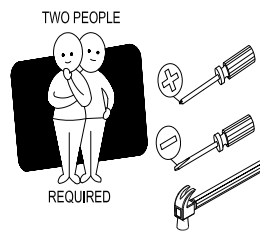


A	x19	B	x19	C	x6	D	x39	E	x20	F	x6	T	x6
	7x35mm		15x12mm		Ø6x30mm		4x40mm				3x14mm		
H	x22	I	x6	J	x1	K	x4	L	x4	M	x3	N	x27
	3x12mm		4x14mm				Ø6x50mm						
O	x2	P	x1	Q	x1	R	x1	S	x1				
					4x30mm		4x14mm						

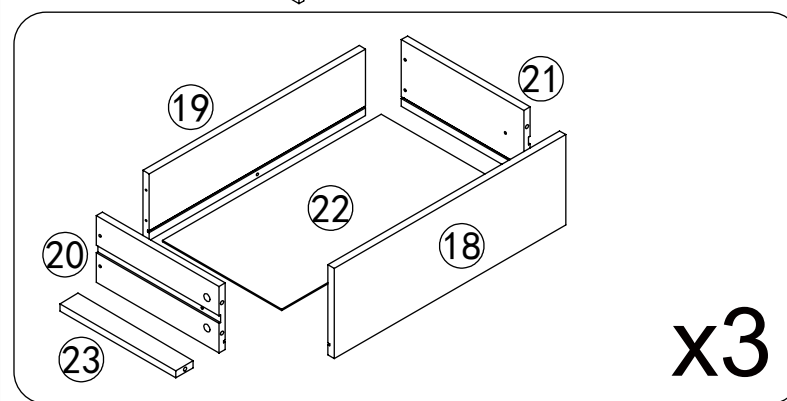


1

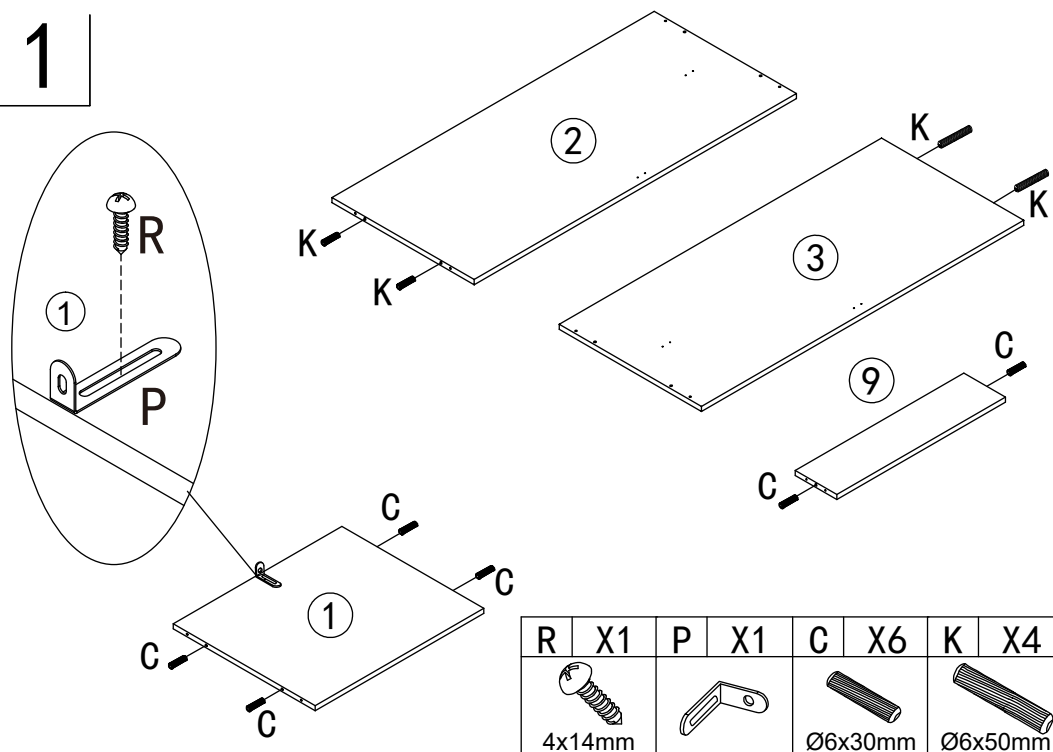


2

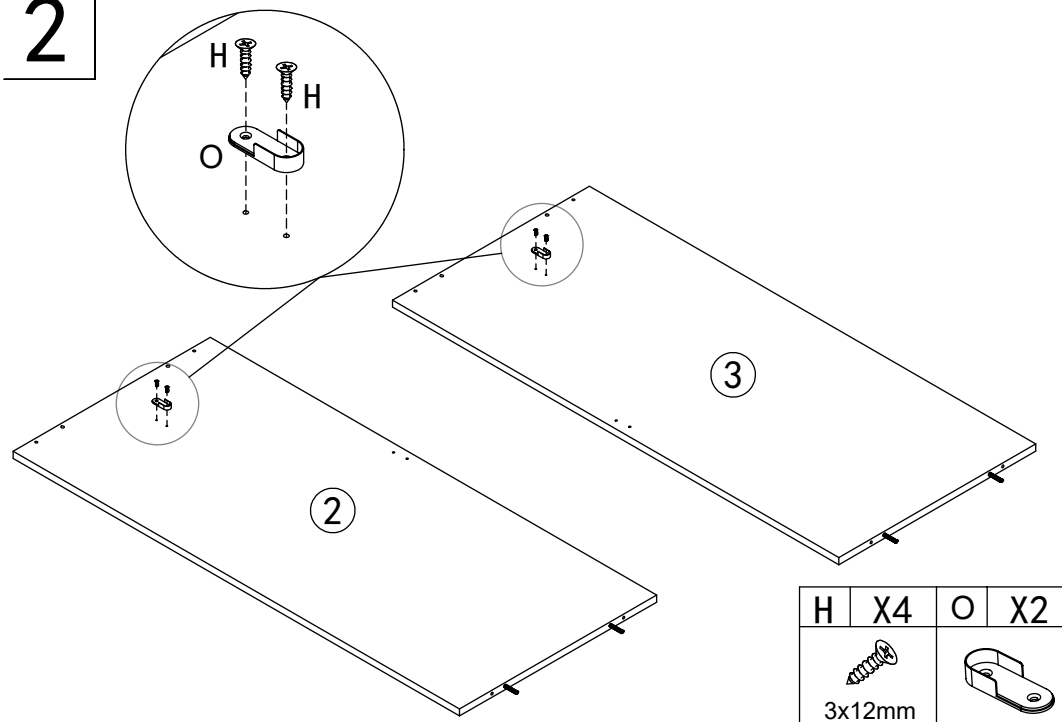


3

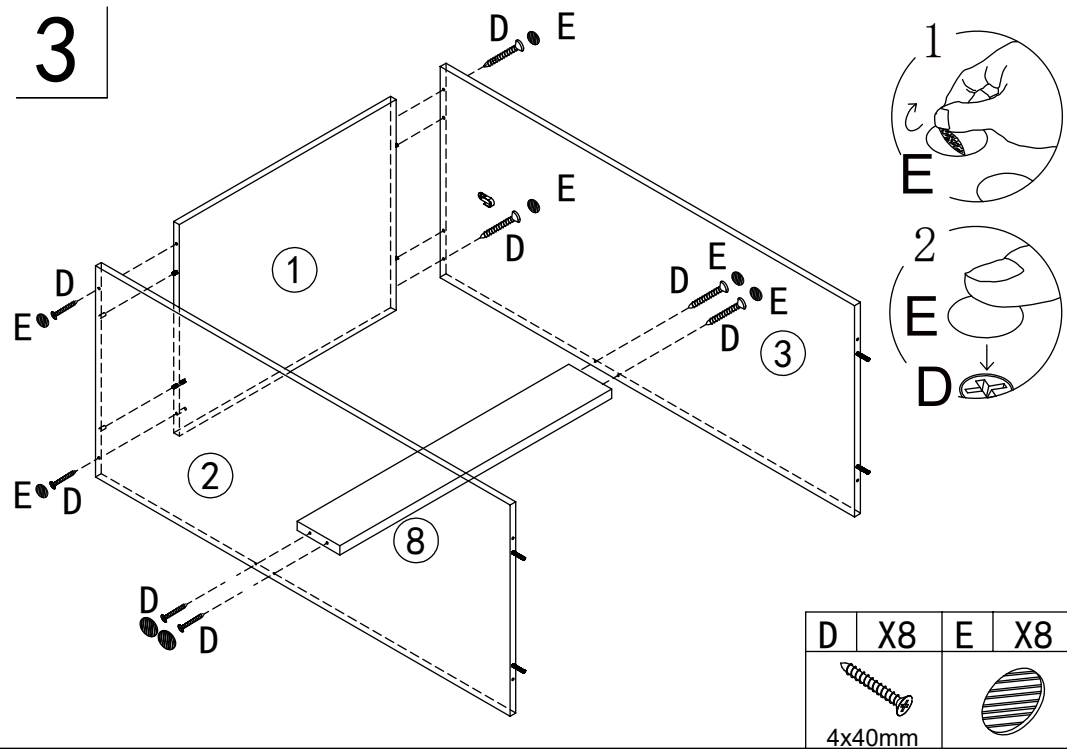

4

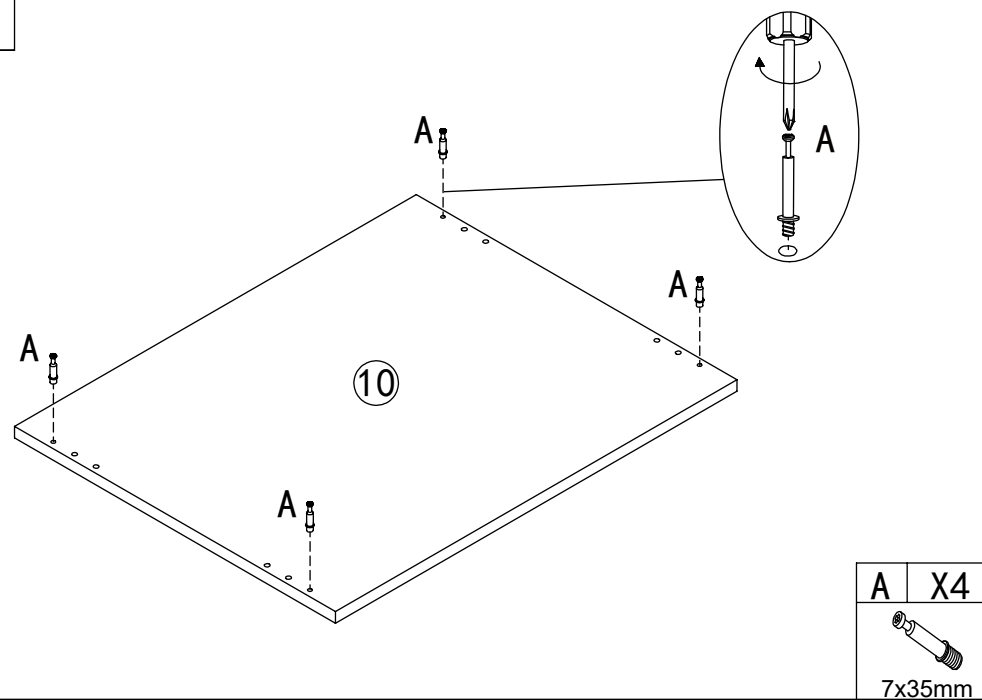


5

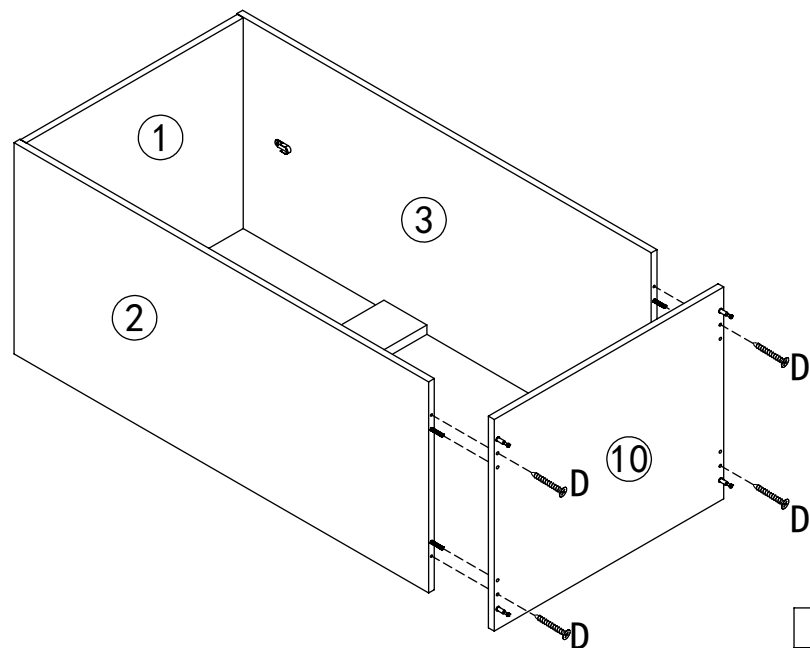


D	X4


6

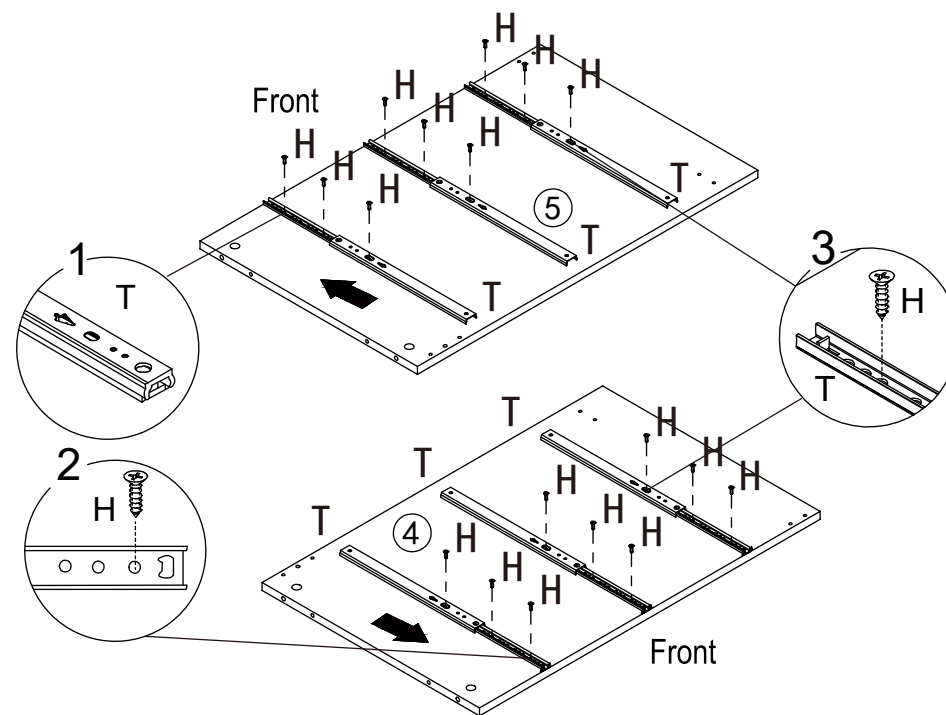

7

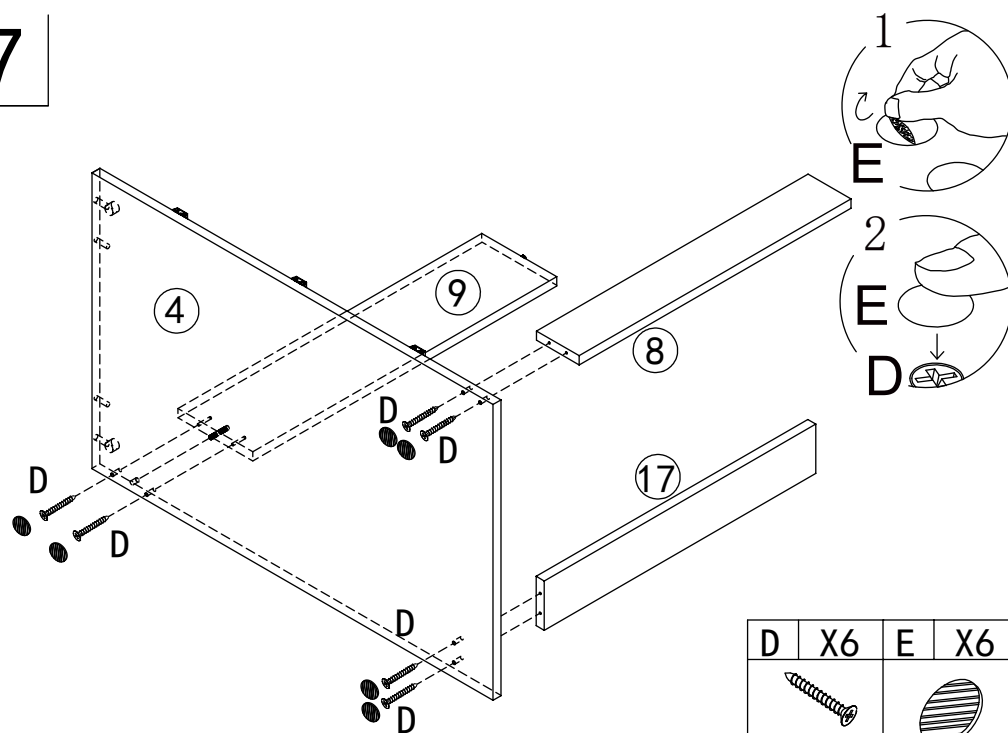


D	X6	E	X6

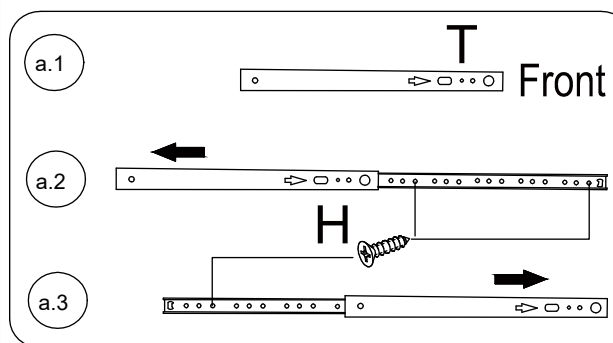


T	X6	H	X18

8

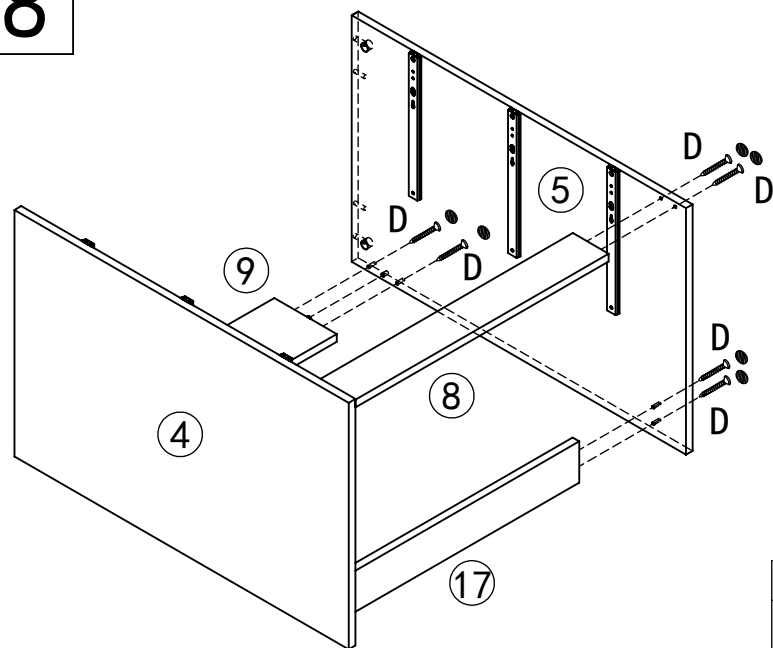


D	X6	E	X6
			
4x40mm			

9

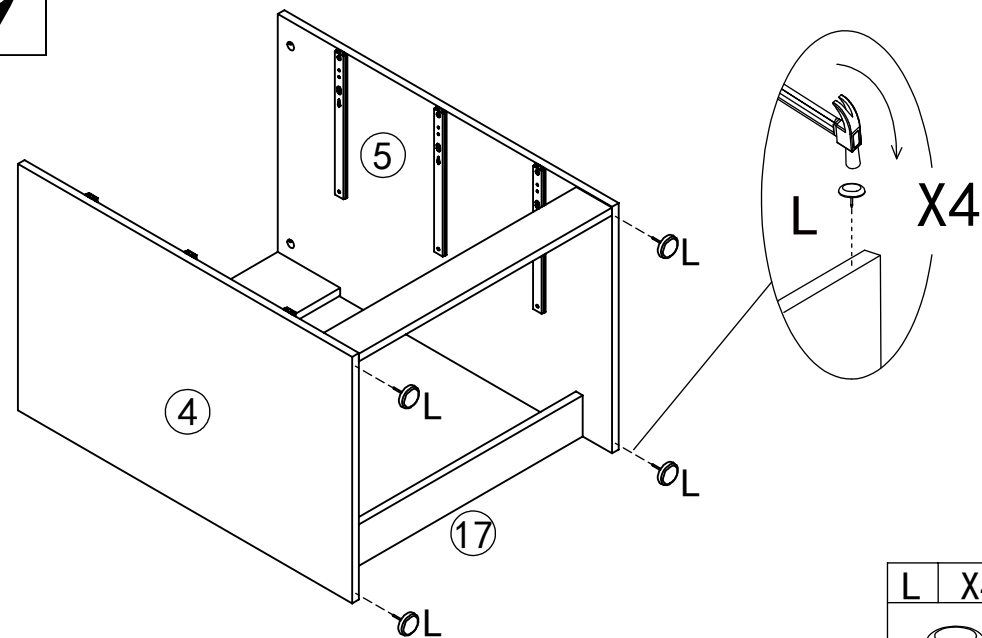


L	X4
	

10

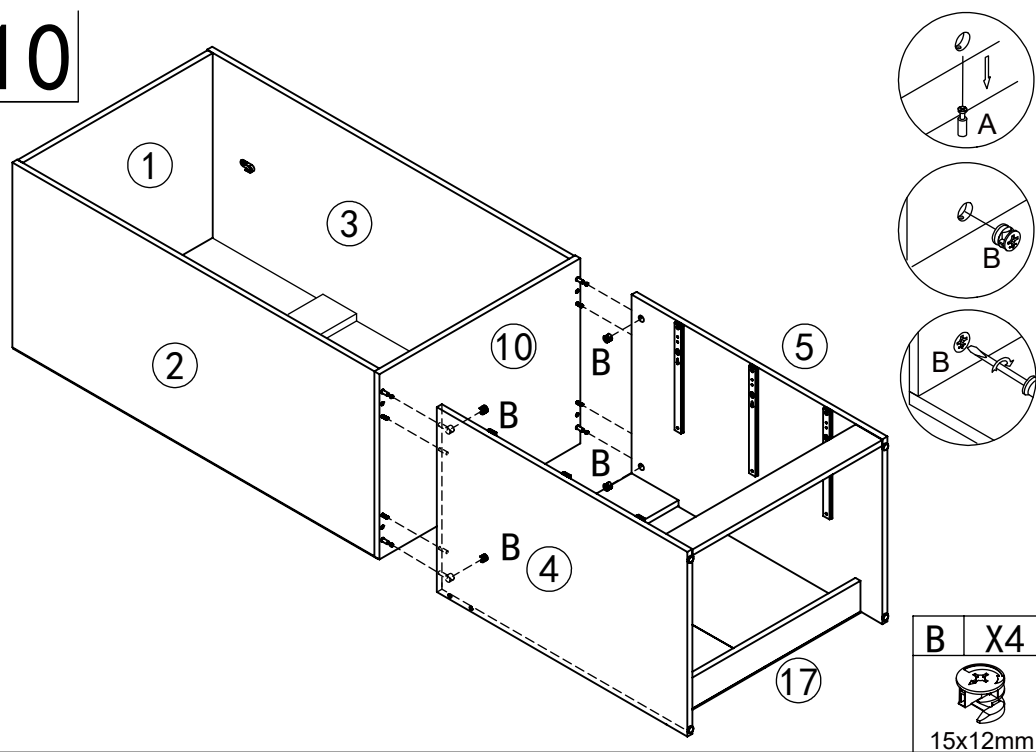


B	X4
	
15x12mm	



11

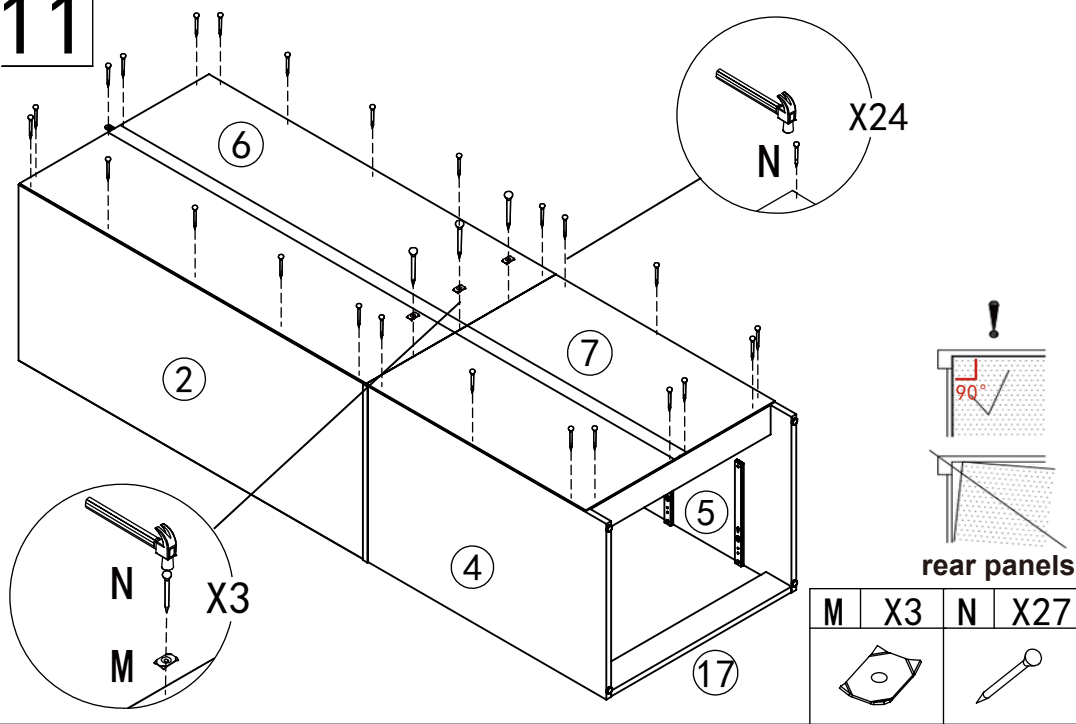




M	X3	N	X27
			

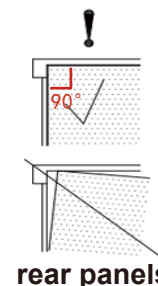

12

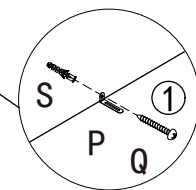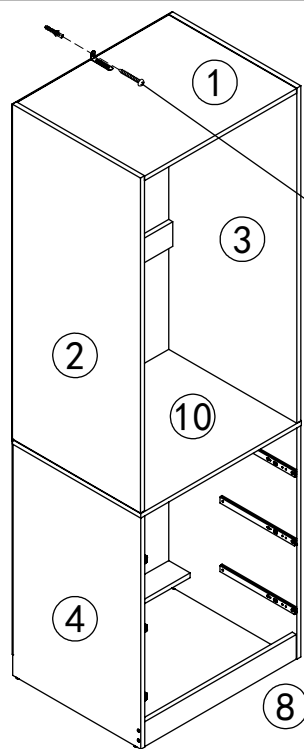


Pre-drilled hole at wall

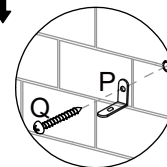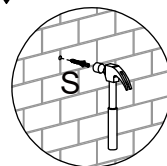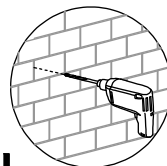






P	X1	Q	X1	S	X1
		4x30mm			

13

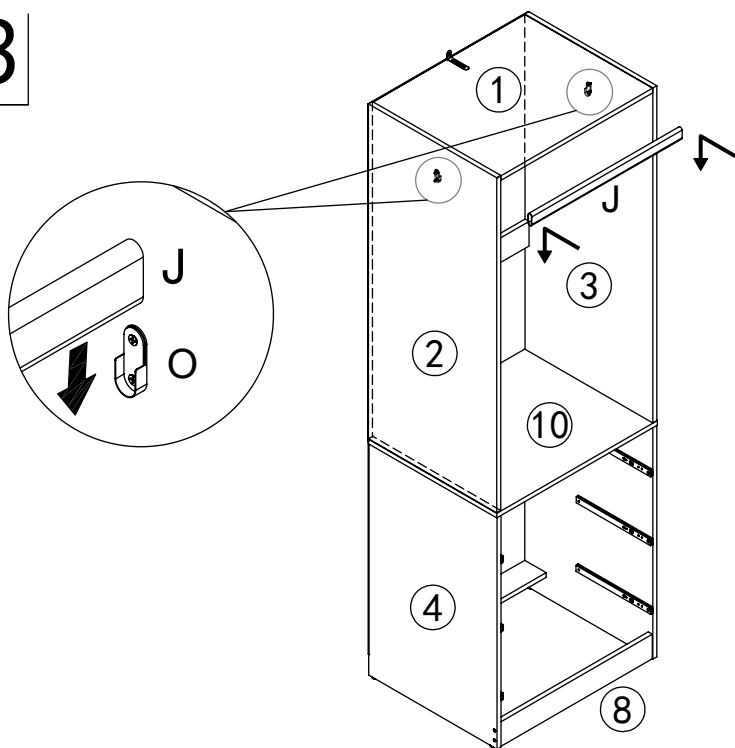

J	X1


14

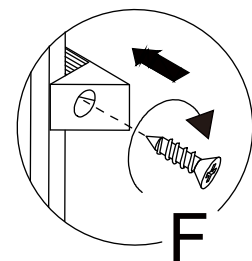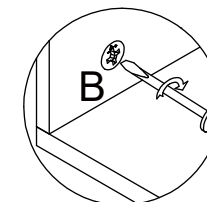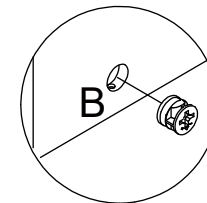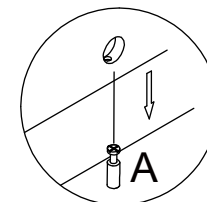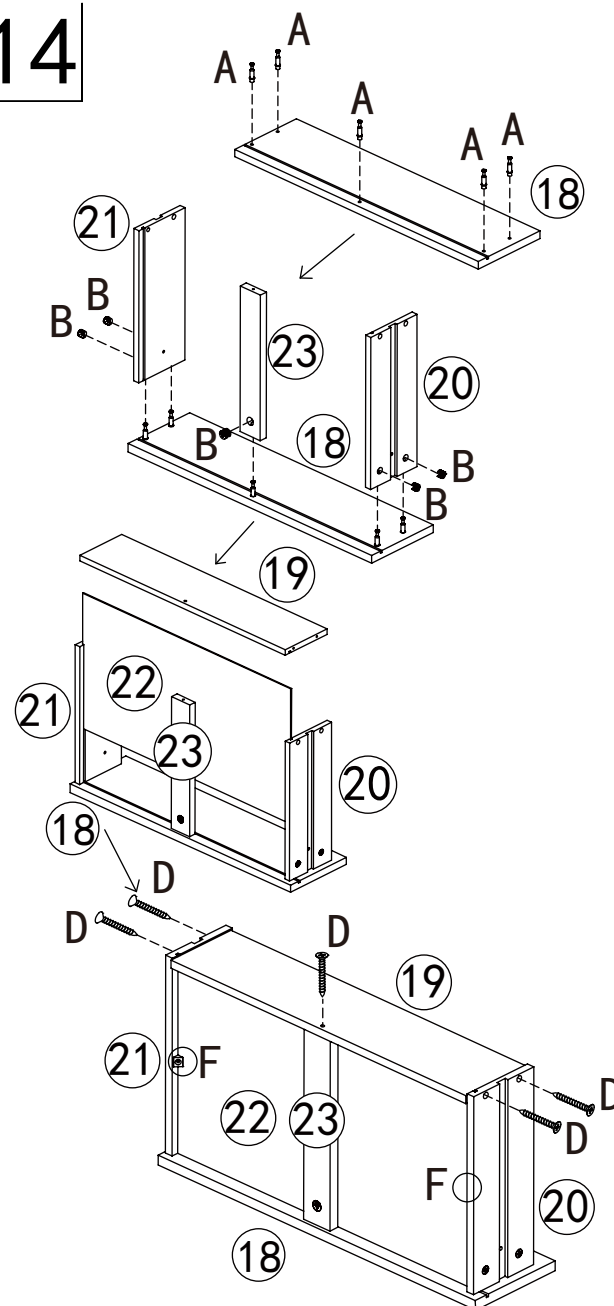


X3

A	X15	B	X15	D	X15	F	X6
7x35mm		15x12mm		4x40mm		3x14mm	

15

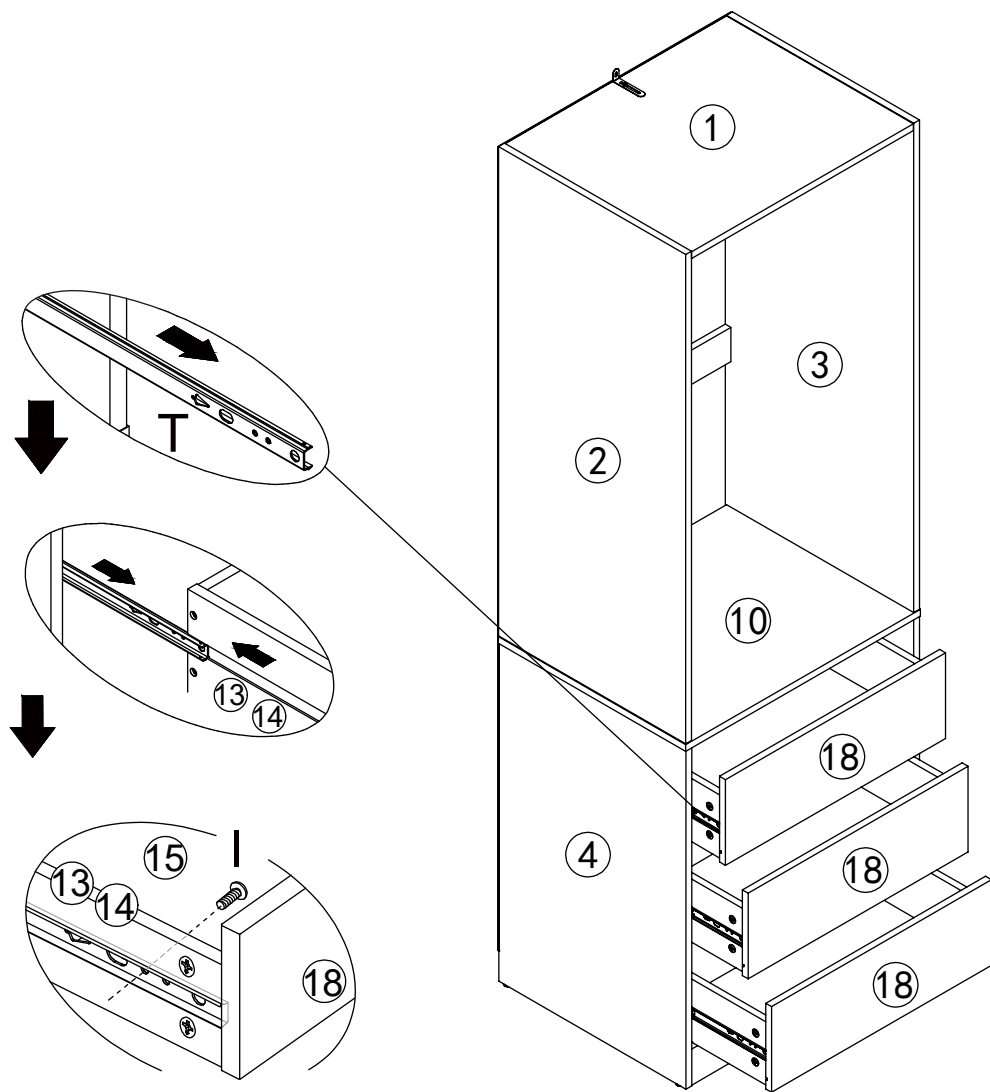

Screw from the inside of the drawers

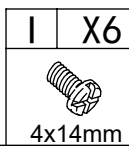

16

