

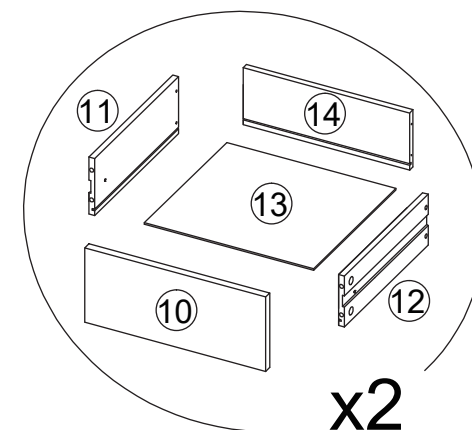
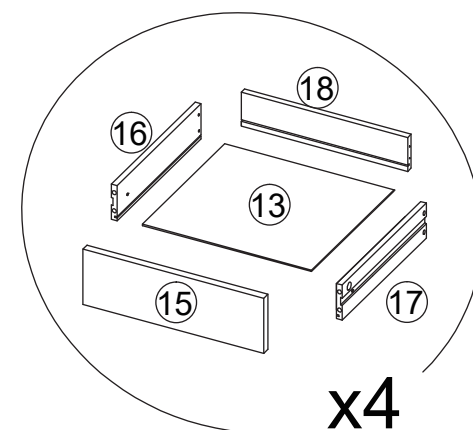
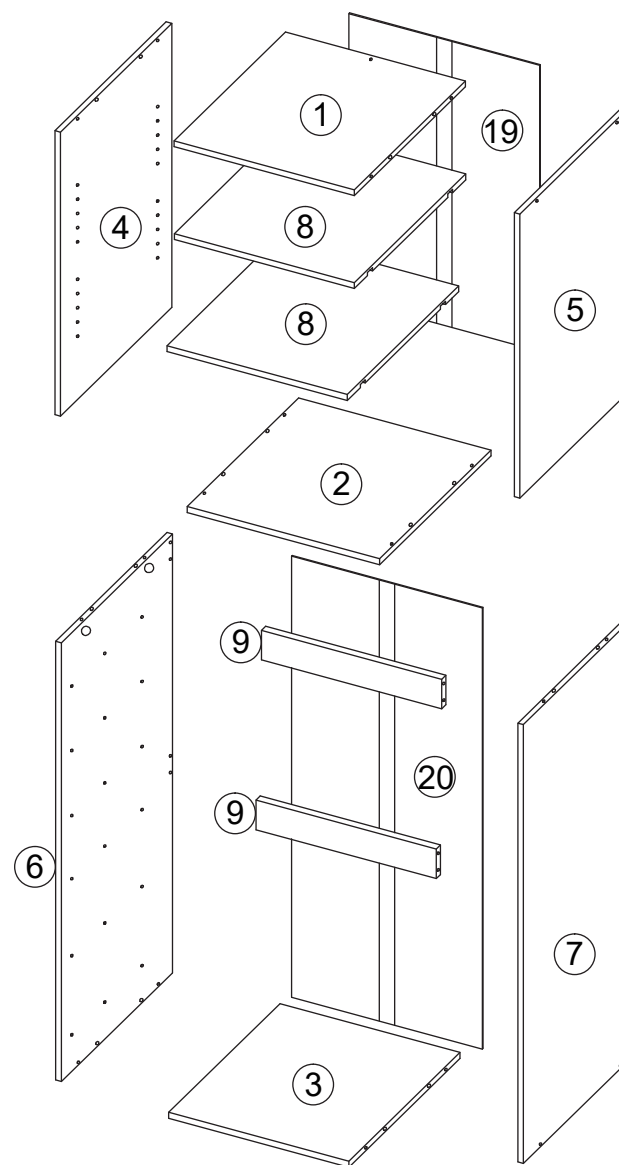

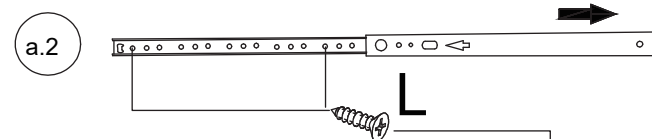

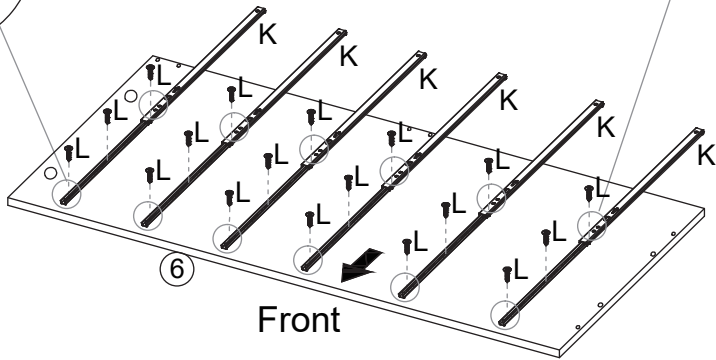
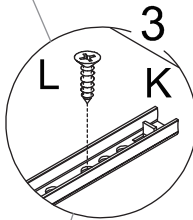
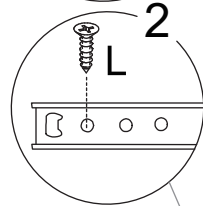


A	x20	B	x4	C	x16	D	x44	E	x16	F	x1
						4x40mm				4x30mm	
G	x1	H	x1	I	x1	J	x12	K	x12	L	x36
4x14mm						4x11mm				3x12mm	
M	x24	N	x30	O	x2	P	x16	Q	x4	R	x4
3x14mm											
S	x8										
7x8mm											



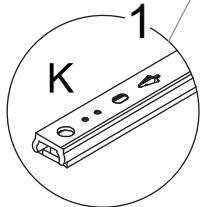


1

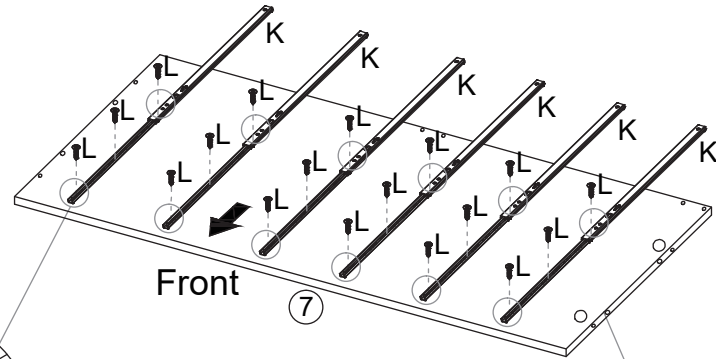




L	x36	K	x12
			
3x12mm			

2

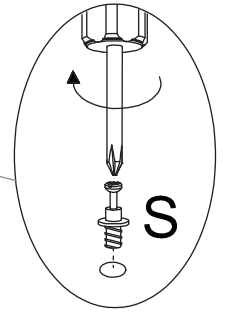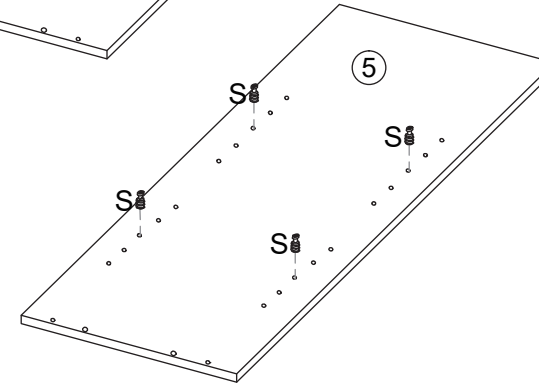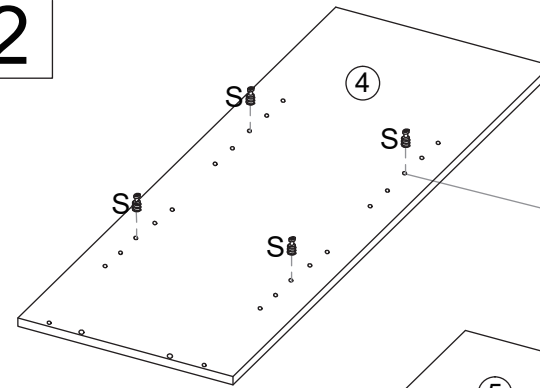


S	x8
	
7x8mm	

3

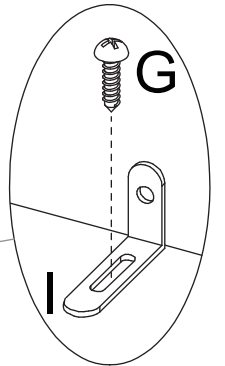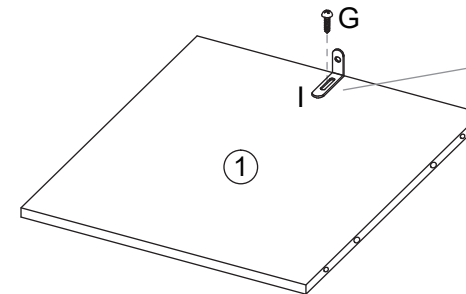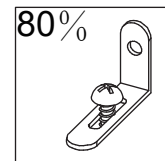


I	x1	G	x1
			
		4x14mm	

4

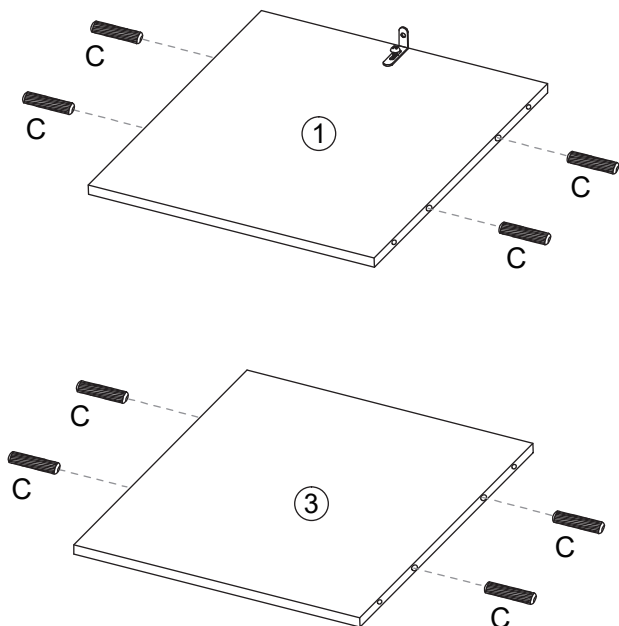


C	x8
	


6

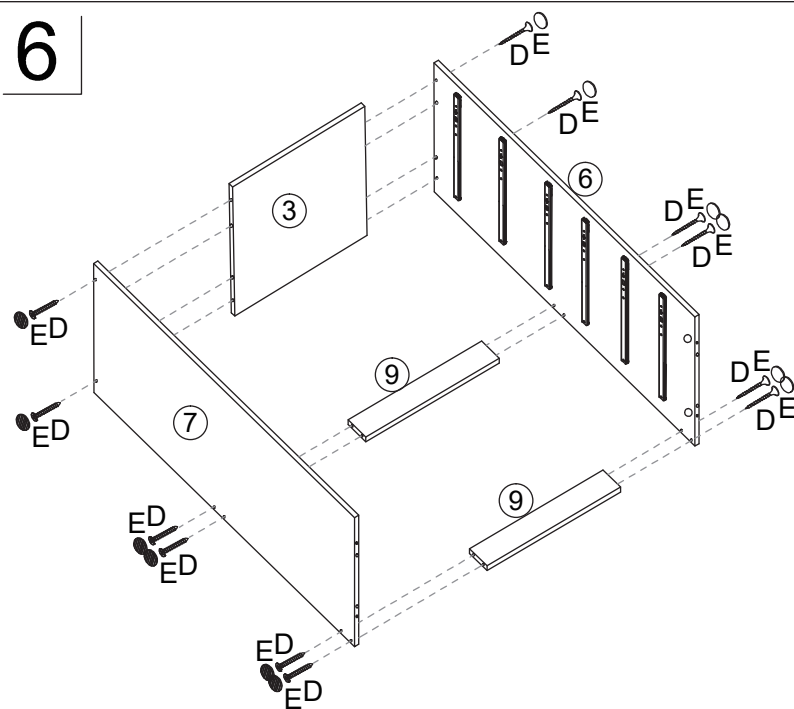


D	x12	E	x12
			
4x40mm			

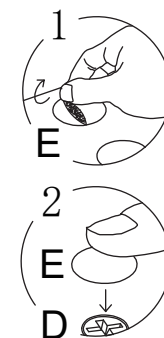


5

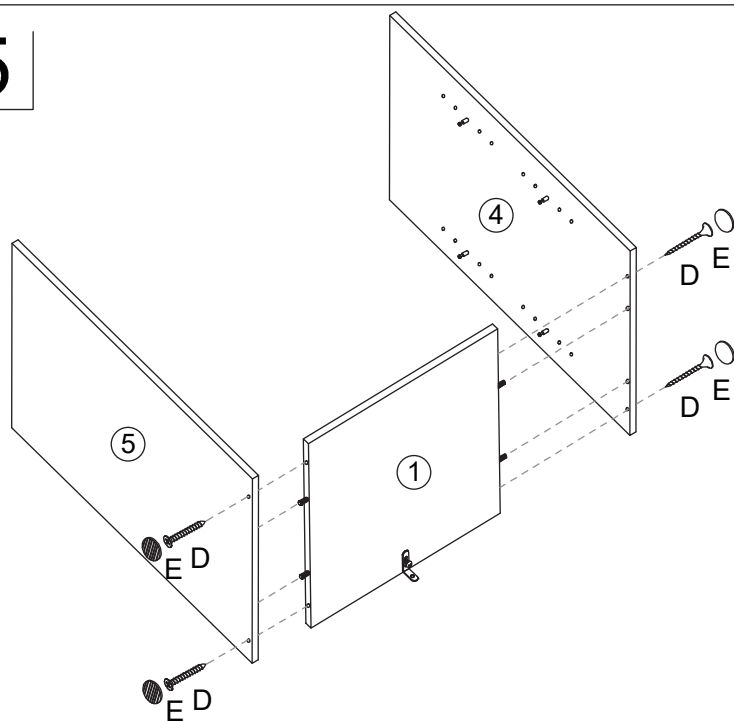

D	x4	E	x4
			
4x40mm			

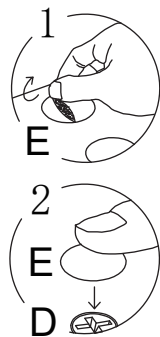


7

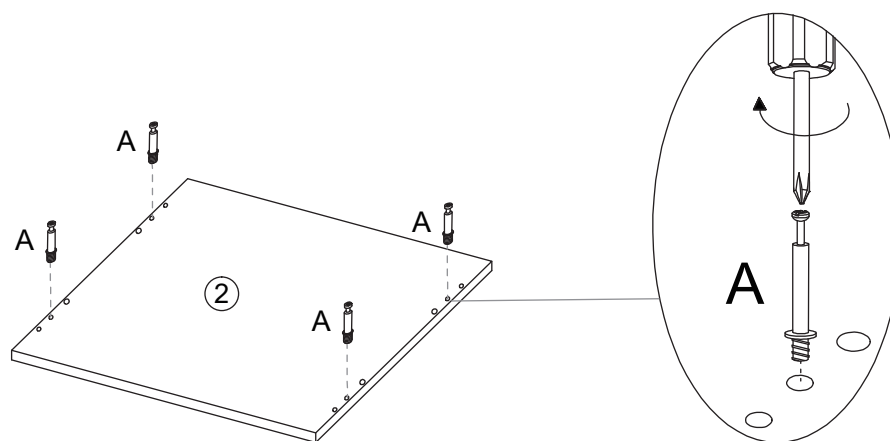


A	x4
	


8

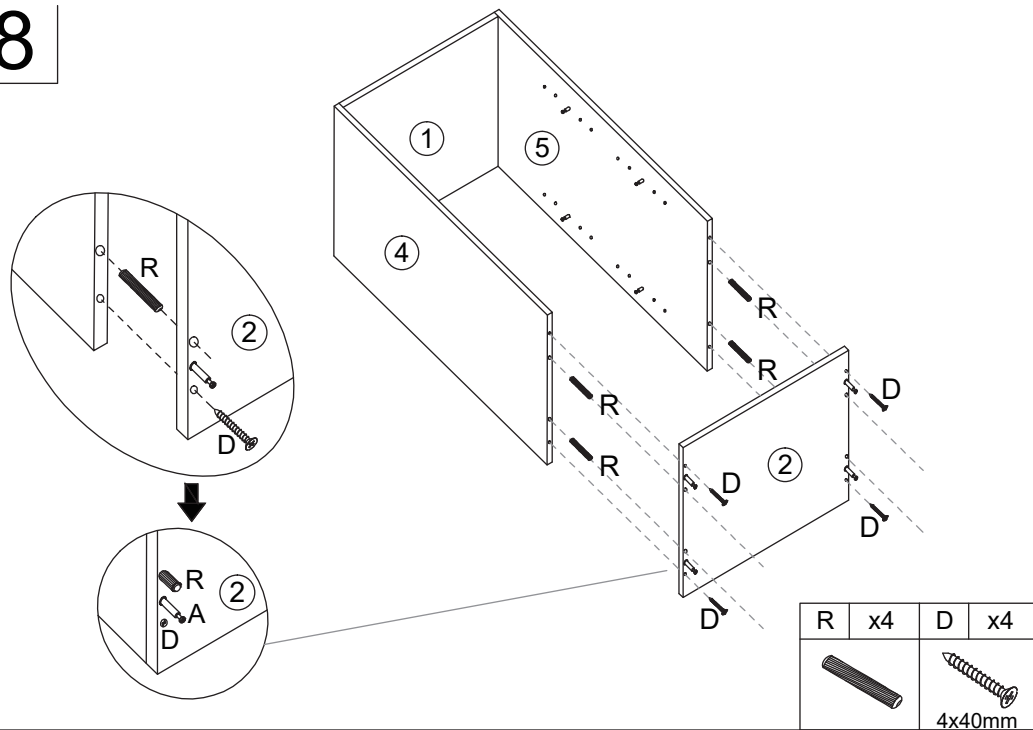

10


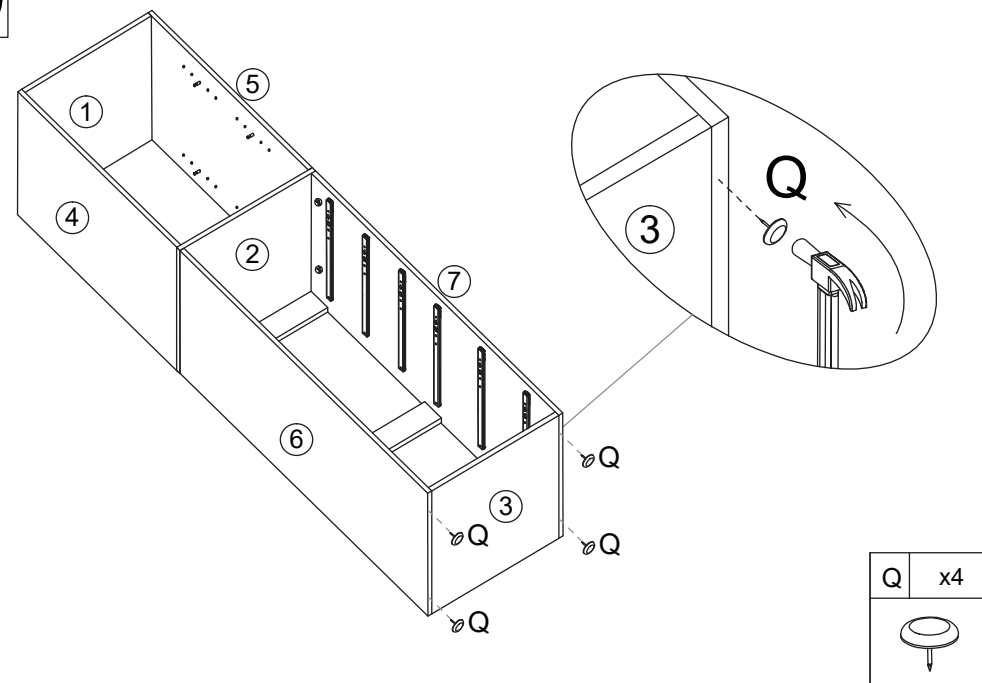


9

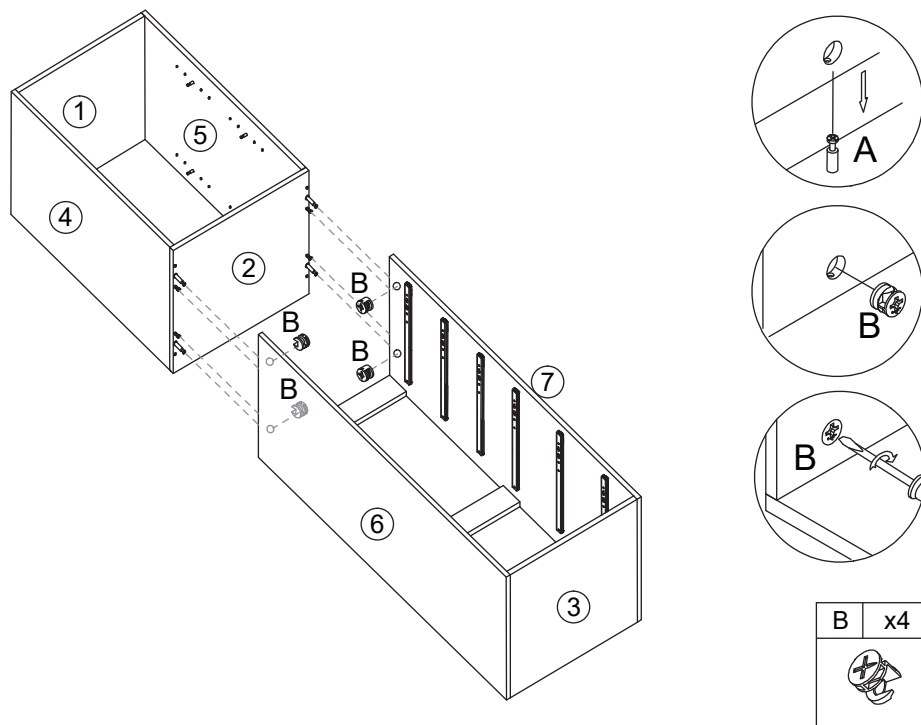


11

Ensure the diagonal of section A is equal to the section B.

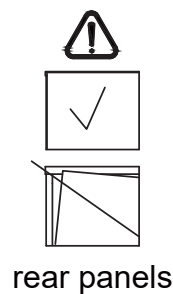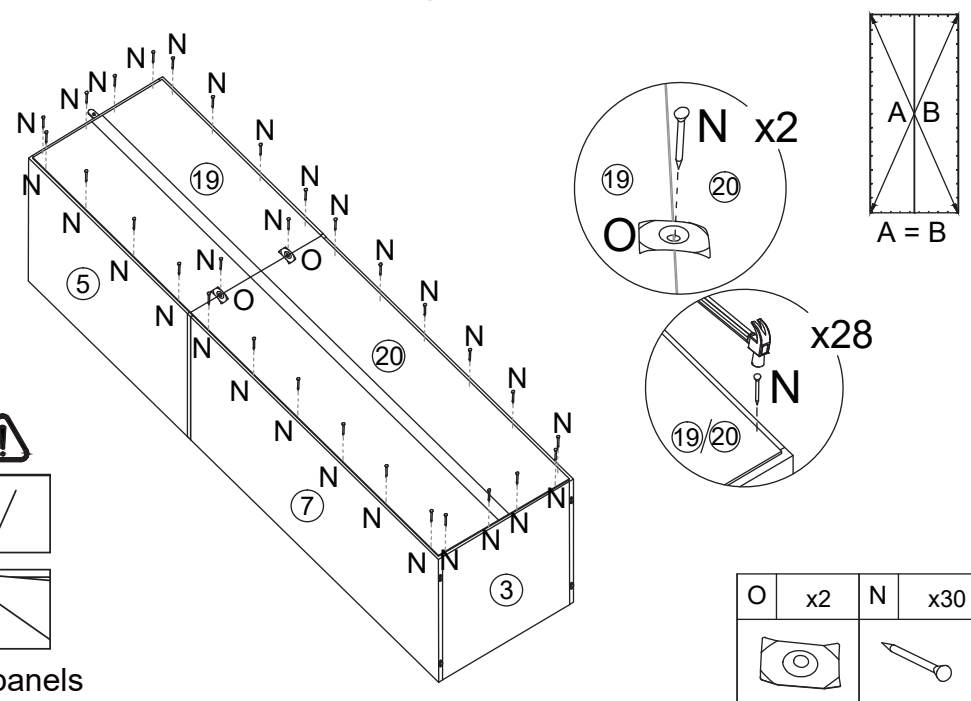

rear panels


12

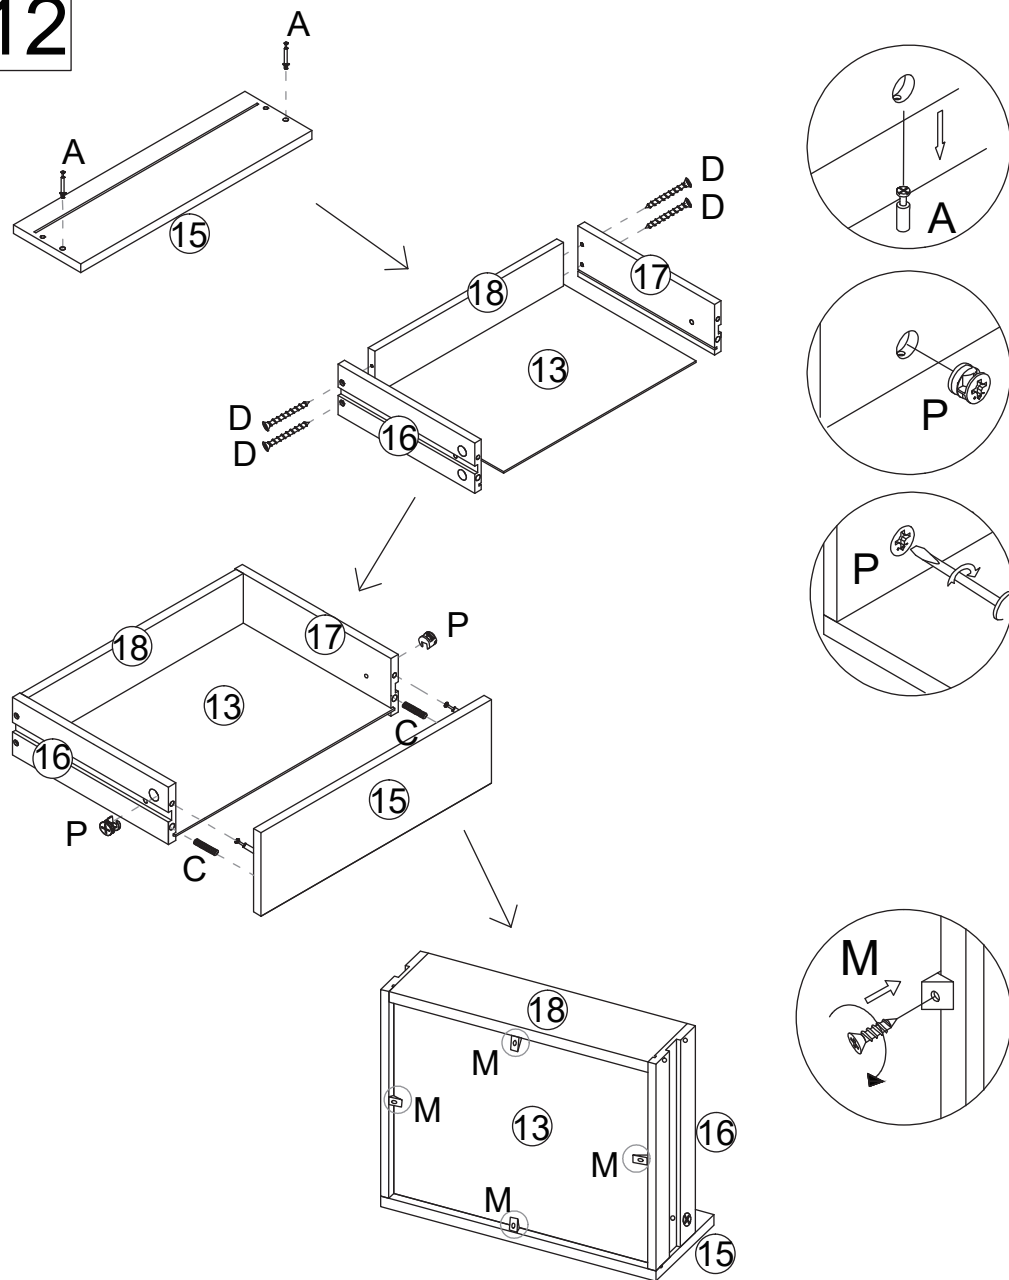

x4

C	X8	A	x8	P	x8	M	x16	D	x16
						3x14mm		4x40mm	


13

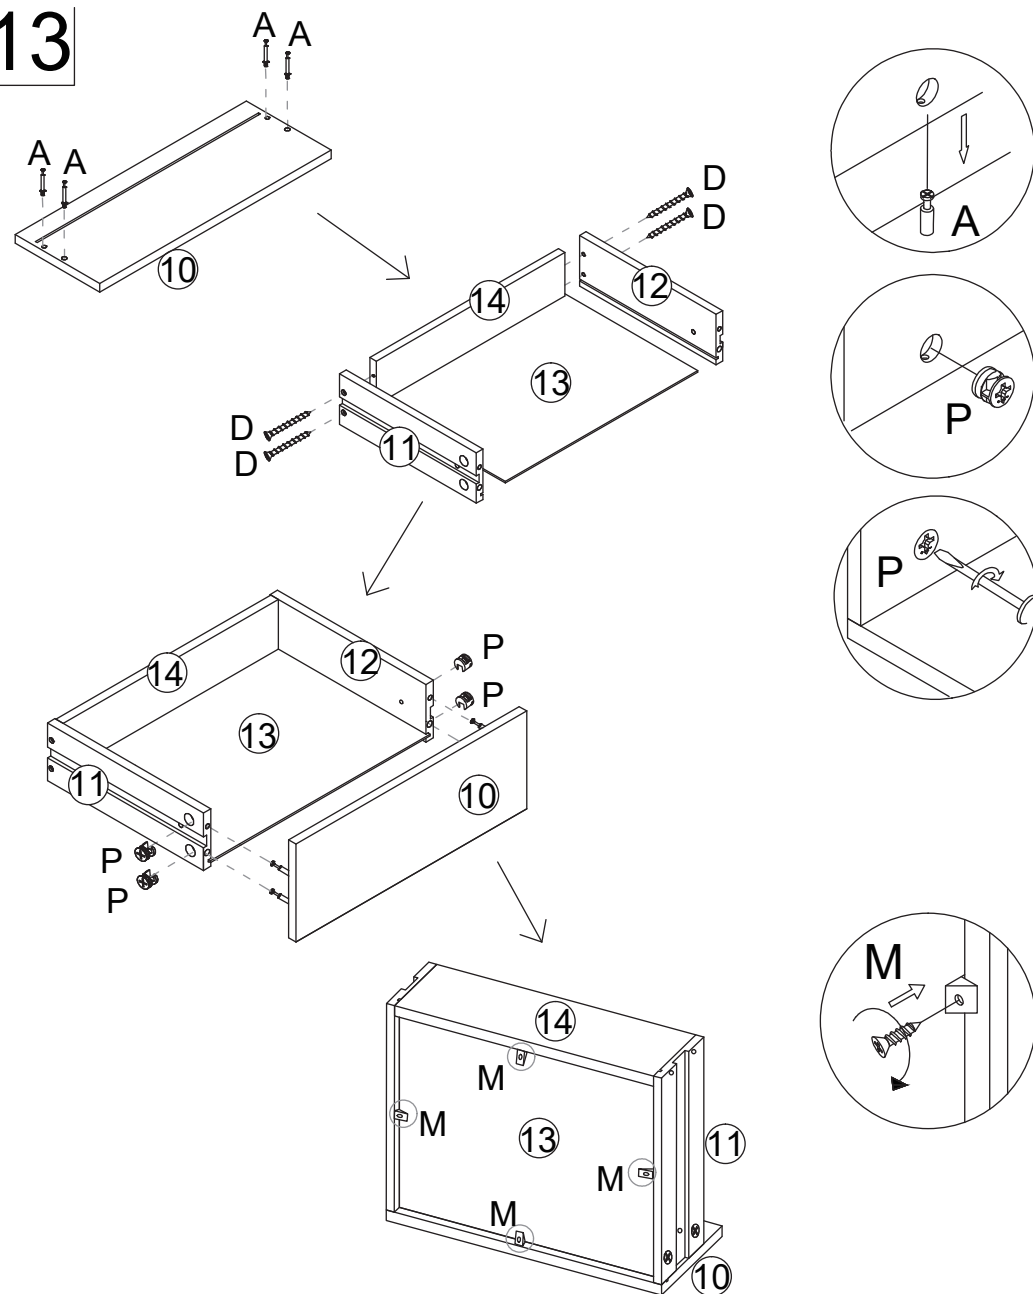

x2

A	x8	P	x8	M	x8	D	x8
				3x14mm		4x40mm	

14

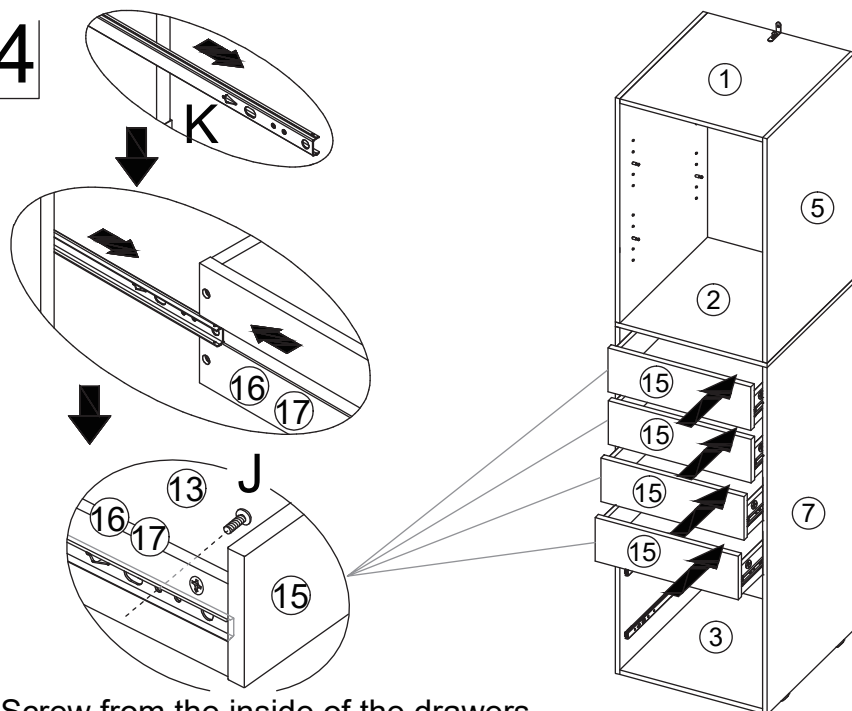


Screw from the inside of the drawers

J x8




4x11mm


16

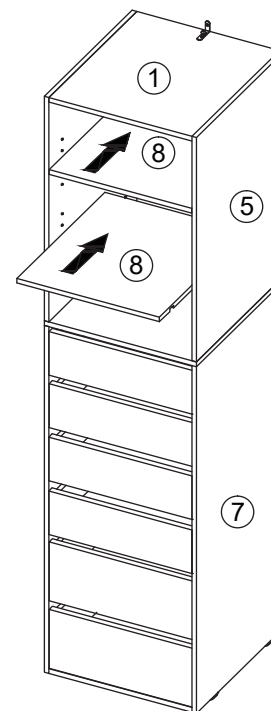

Pre-drilled hole at wall

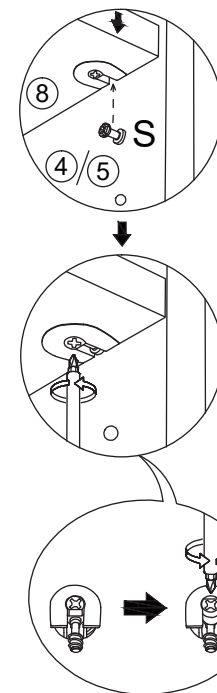

15

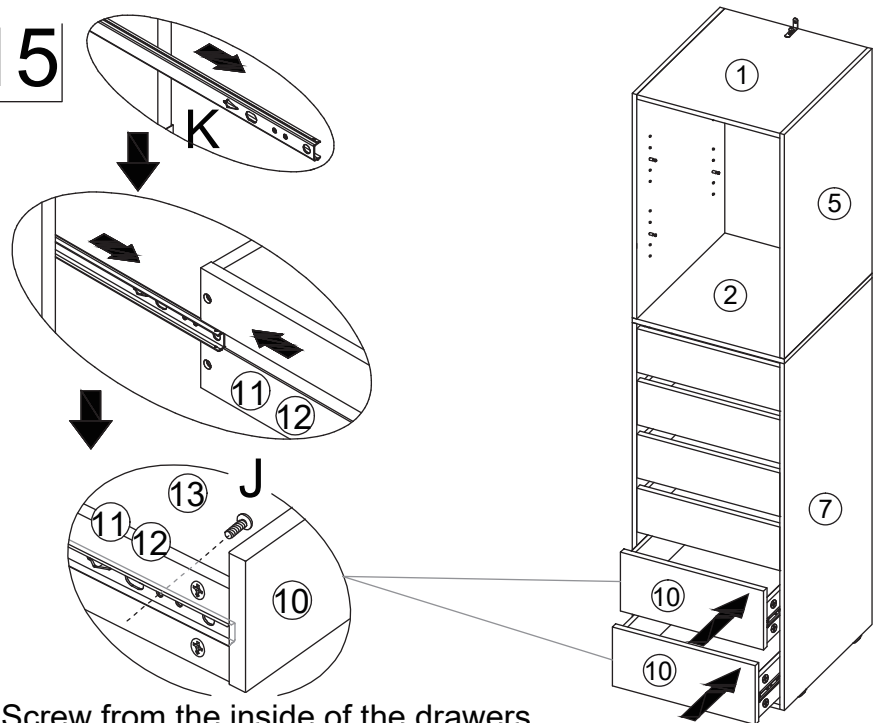



Screw from the inside of the drawers

J x4



4x11mm

17

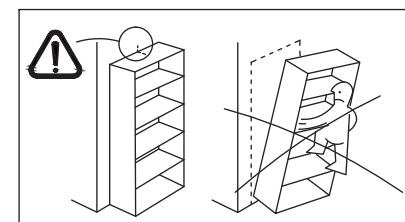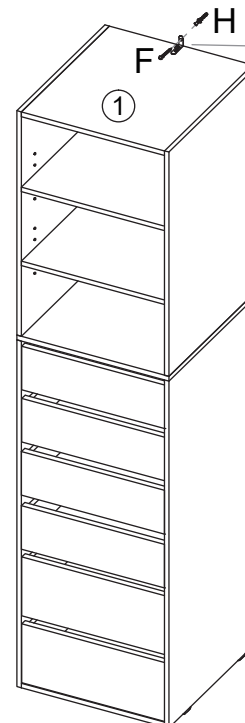

H x1 F x1



4x30mm