


HOME SOURCE®

ASSEMBLY INSTRUCTION

MODEL:Oak Hills China Cabinet

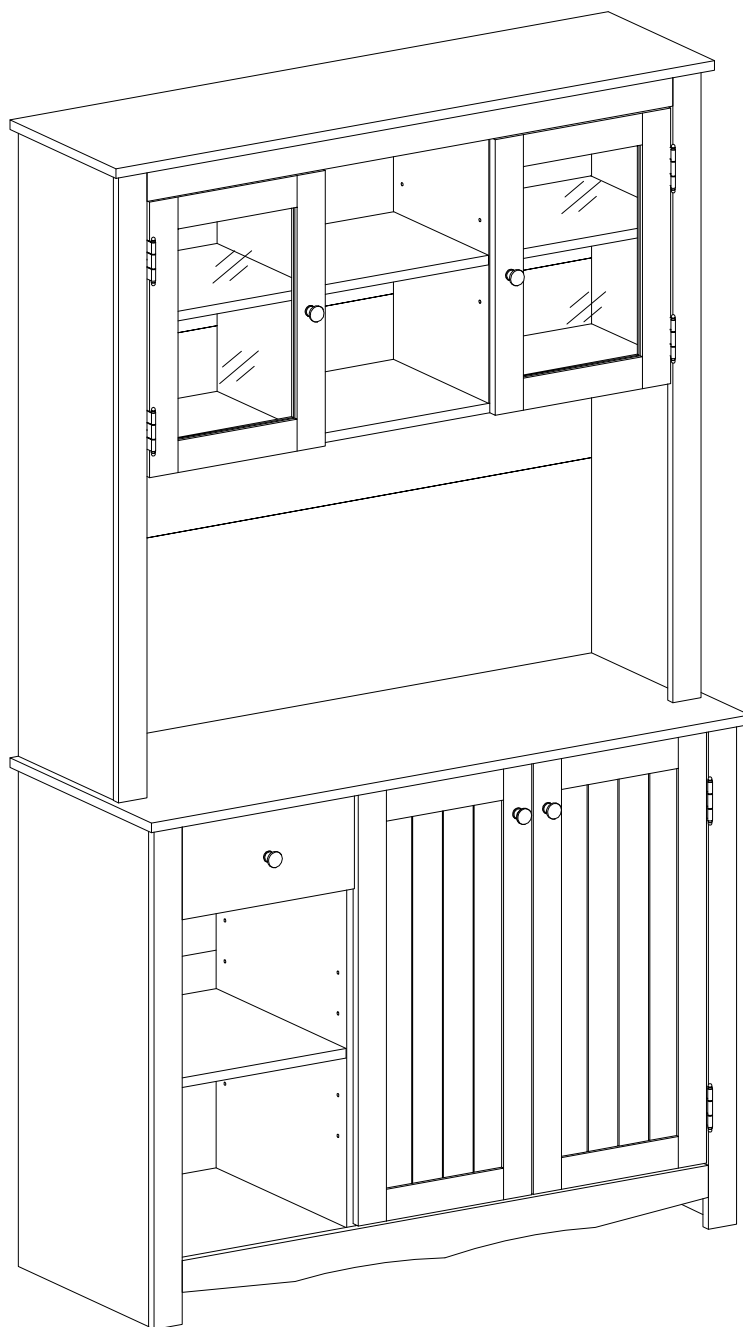


GENERAL ASSEMBLY INSTRUCTIONS

A few Tips before starting to assemble your new bookshelf, table, chair, or any other item


- I. Before you can begin assembling your piece of furniture, make sure that there are no parts or hardware missing.
- II. Make sure you pay careful attention to each step before you progress onto the next step. This you will be able to assemble your item effectively and speedily.
- III. If you have help available, two people, or more are recommended to assist you to assemble the product. This ensures that it takes less time and less effort.
- IV. In the contents of the packaging, you will find pieces of Wood and individual dowels, screws, and bolts. These are the four main types of hardware that are required to assemble your item.
- V. Glue is included to ensure the wood dowels are secured effectively. Before you start inserting a dowel in place, make sure you find the right hole.
- VI. To insert securely, place a minimal amount of glue at the end of the dowel before you start attaching separate pieces of hardware.
- VII. A Philips head screw driver is a prerequisite to successfully assemble this product.
- VIII. Besides a power drill, power tools are not necessary to put this product together.
- IX. A drill may be needed to ensure that the product is efficiently secured to a wall.

Some products may come with three-way hidden hinges.


- a) These hidden three-way hinges can be fastened in place horizontally by mounting a screw.

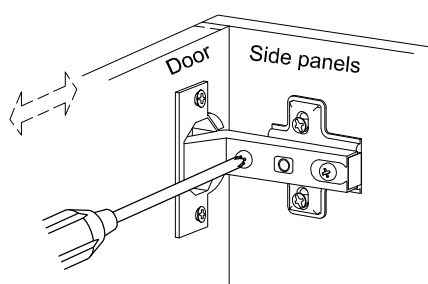

Horizontal
by screw adjustment

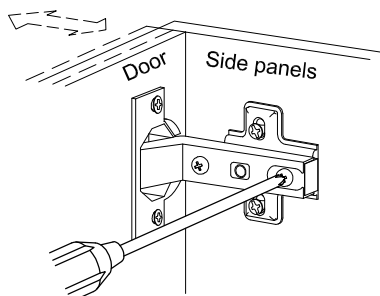

In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

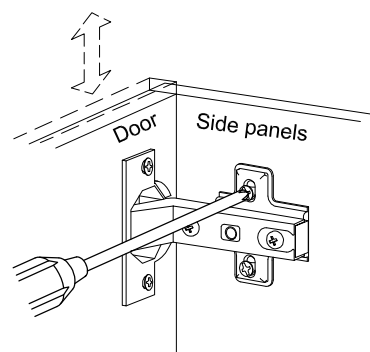

Vertical
Via slots in the mounting
plate or via cam adjustment

- b) They can be secured inward and outward by freeing the hinge arm, or vertically.
- c) This is done through gentle adjustment or slotting the hinges into the mounting plate.


INSTRUCCIONES GENERALES PARA ENSAMBLE

Algunos consejos antes de comenzar a armar su nueva estantería, mesa, silla o cualquier otro artículo


- I. Antes de que pueda comenzar a ensamblar su mueble, asegúrese de que no falten piezas o hardware.
- II. Asegúrese de prestar mucha atención a cada paso antes de avanzar al siguiente paso. De esta manera, podrá ensamblar su artículo de manera efectiva y rápida.
- III. Si tiene ayuda disponible, se recomiendan dos personas o más para ayudarlo a ensamblar el producto. Esto asegura que tome menos tiempo y menos esfuerzo.
- IV. En el contenido del embalaje, encontrará piezas de madera y clavijas, tornillos y pernos (Tarugos) individuales. Estos son los cuatro tipos principales herramientas que se requieren para ensamblar su artículo.
- V. Se incluye pegamento para garantizar que las clavijas de madera se aseguren de manera efectiva. Antes de comenzar a insertar una clavija en su lugar, asegúrese de encontrar el orificio correcto.
- VI. Para insertar de forma segura, coloque una cantidad mínima de pegamento al final de la clavija antes de comenzar a colocar piezas separadas de hardware.
- VII. Un destornillador de cabeza Philips (Tornillos de tria) es un requisito previo para ensamblar con éxito este producto.
- VIII. Además de un taladro eléctrico, no son necesarias herramientas eléctricas para armar este producto.
- IX. Es posible que se necesite un taladro para garantizar que el producto se asegure de manera eficiente a una pared.

Algunos productos pueden venir con bisagras ocultas de tres vías.


- a) Estas bisagras ocultas de tres vías se pueden sujetar en su lugar horizontalmente montando un tornillo.

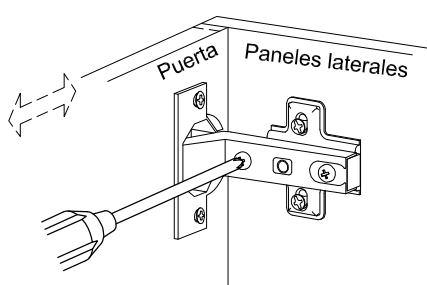

Horizontal
mediante el ajuste del tornillo

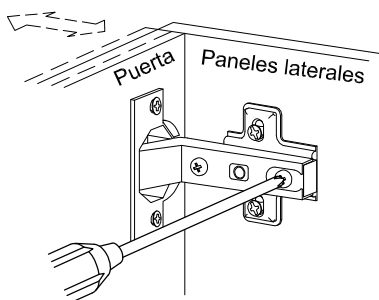


Hacia adentro o afuera
al aflojar el brazo de la bisagra
tornillo de montaje o mediante
ajuste de la leva

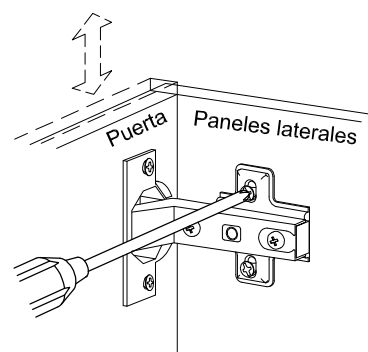







Vertical
por medio de ranuras en la
placa de montaje o mediante
el ajuste de la leva


- b) Se pueden asegurar hacia adentro y hacia afuera liberando el brazo de la bisagra, o verticalmente:
- c) Esto se hace a través de un ajuste suave o ranurando las bisagras en la placa de montaje.

Parts List

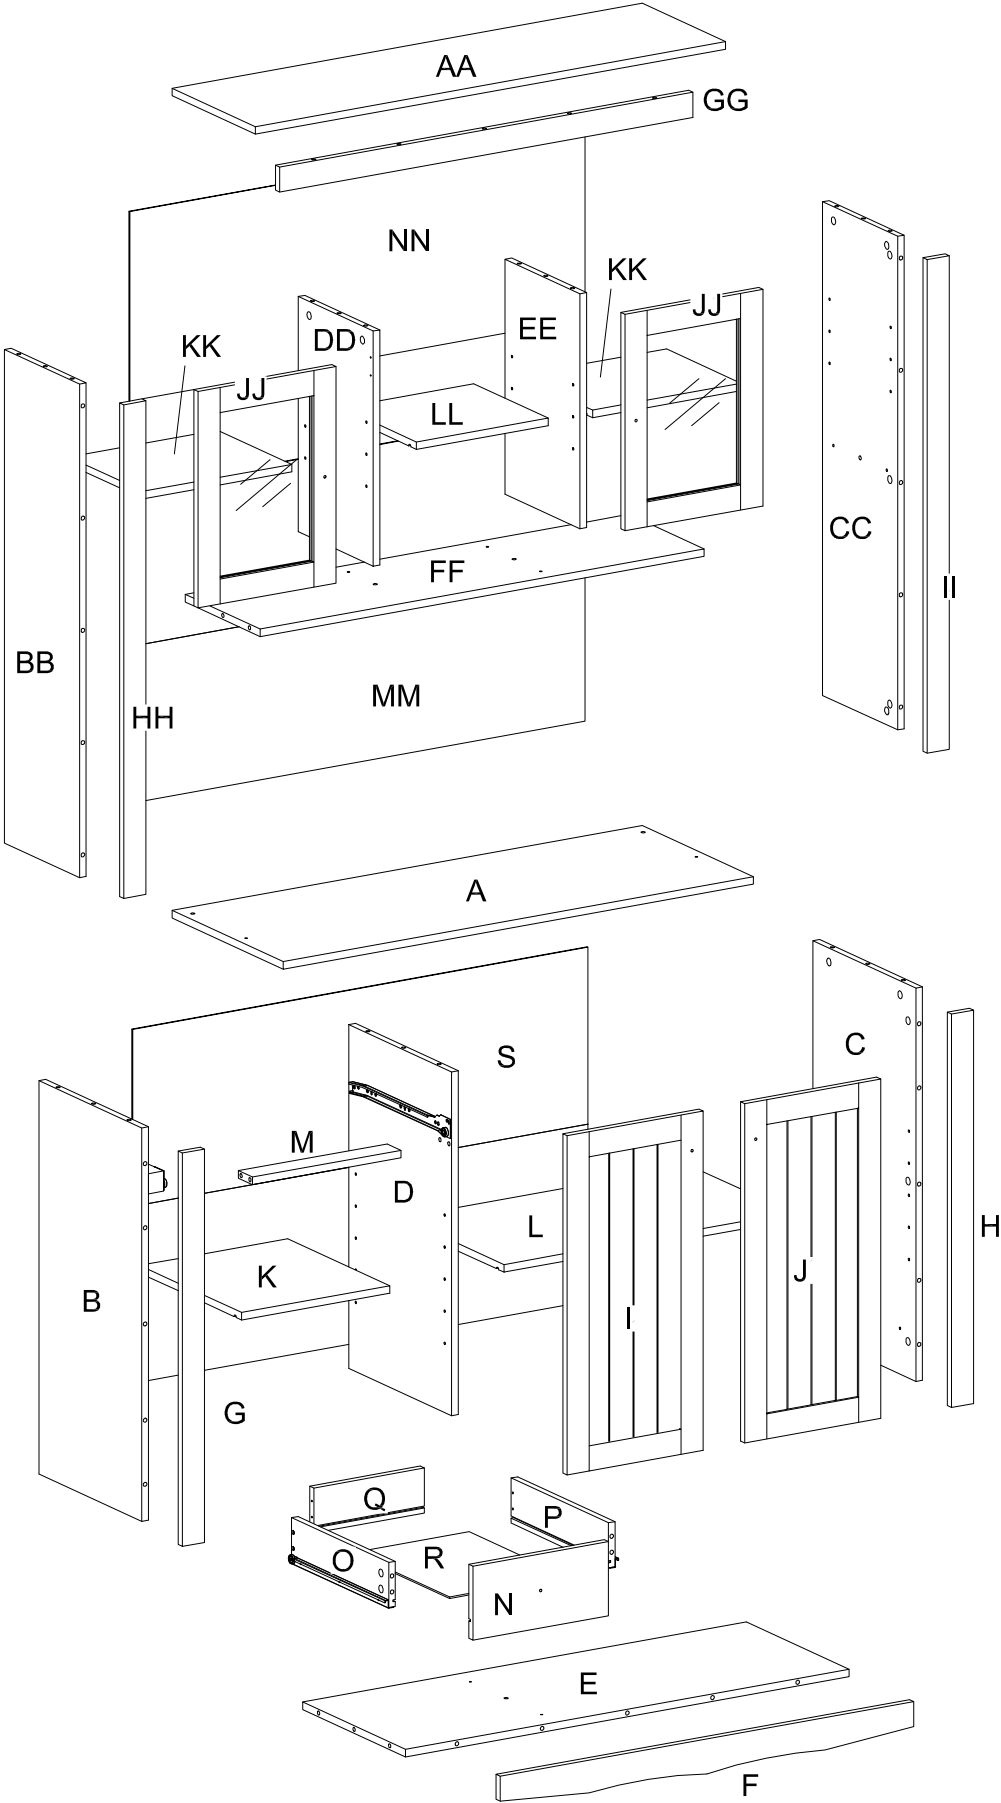


Hardware List


1		Ø8x30mm	Wooden dowel	32 pcs
2		Ø6x35mm	Cam bolt	42 pcs
3		Ø15x11mm	Cam lock	42 pcs
4		Ø5x13mm	Shelf support pin	20 pcs
5		Ø6x35mm	Cam bolt	4 pcs
6		Ø12x10mm	Cam lock	4 pcs
7		Ø3x12	Screw	24 pcs
8		Ø4x38	Screw	6 pcs
9		Ø4x32	Screw	4 pcs
10		Ø4x22	Bolt	5 pcs
11			Handle	5 pcs
12			Hinge and screw	2 set
13			Flip hinge	6 pcs
14			Door stopper and screw	3 set
15			Nail	55 pcs
16			Glue tube	1 pcs
17		Ø4x12	Screw	2 pcs
18		Ø4x26	Screw	2 pcs
19			Wall strap	2 pcs
20			Plastic socket	2 pcs
21		Ø30mm	Sticker	46 pcs

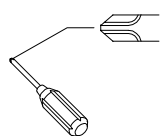


Philips head screwdriver required for assembly
(not included)


Step 1

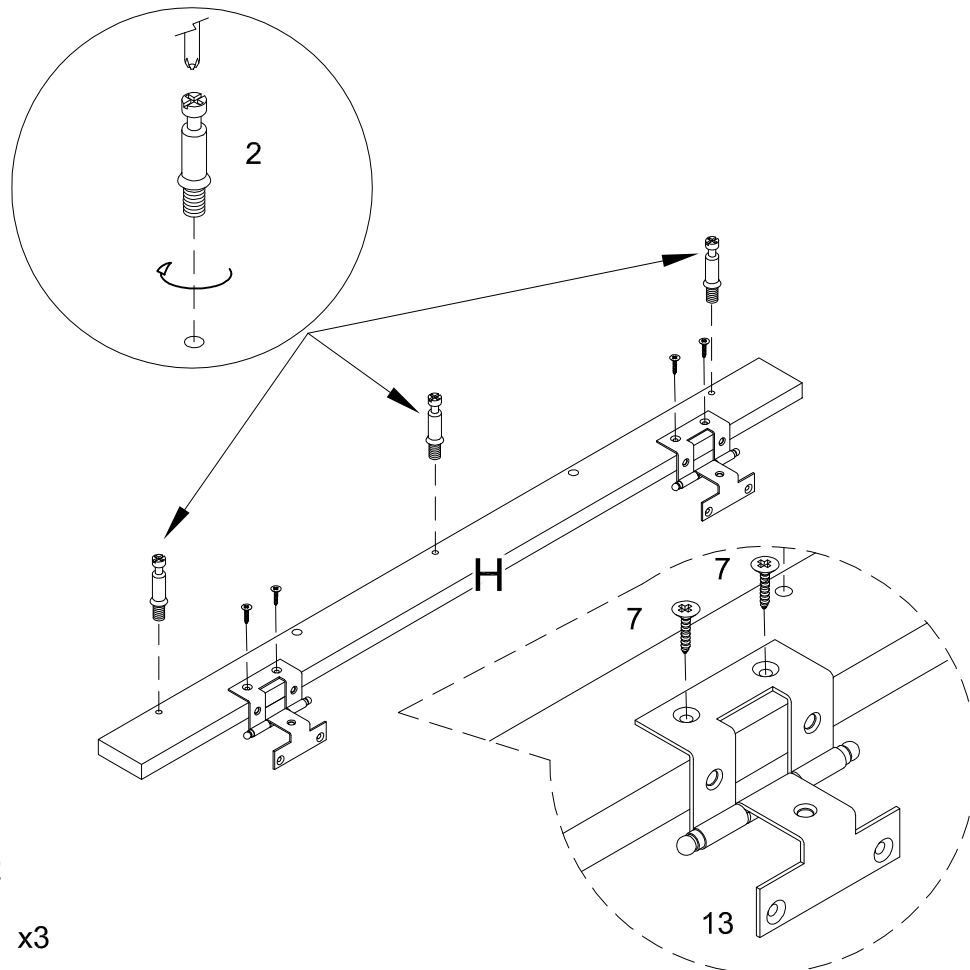


- (7)  x4
- (13)  x2
- (2)  x3

Step 2

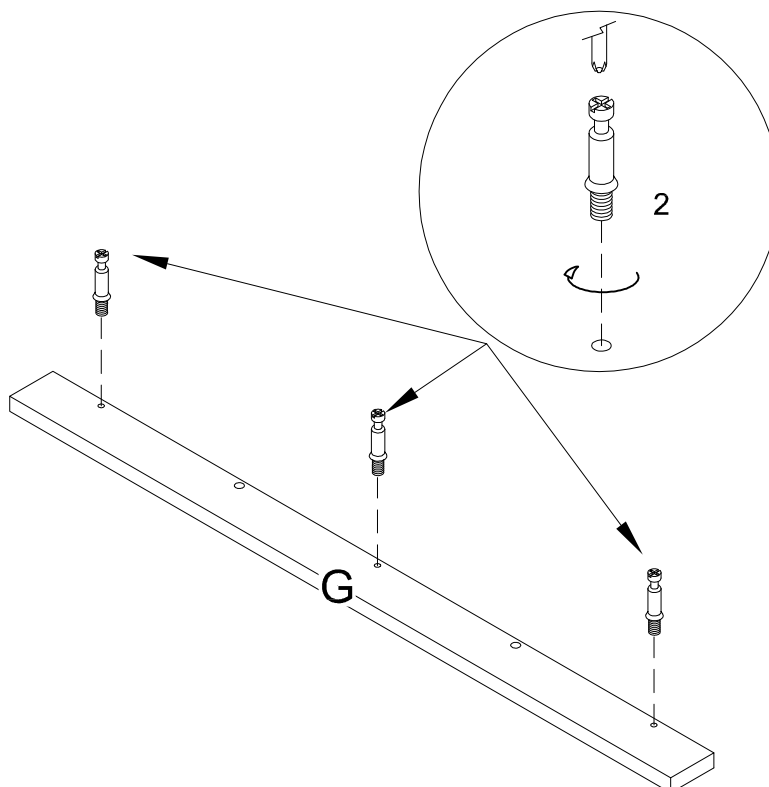


- (2)  x3


Step 3

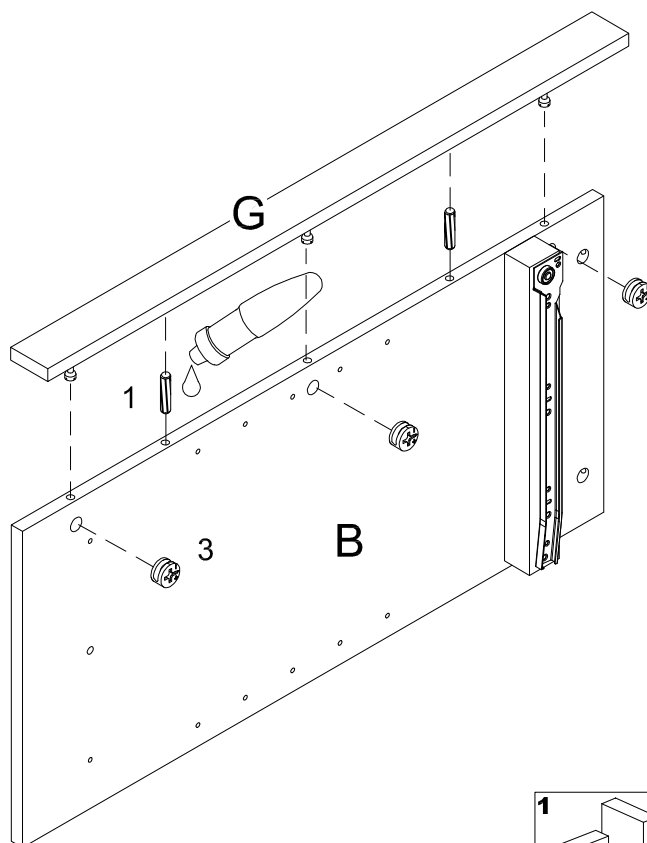


- ①  x2
- ③  x3

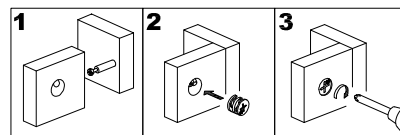




Step 4

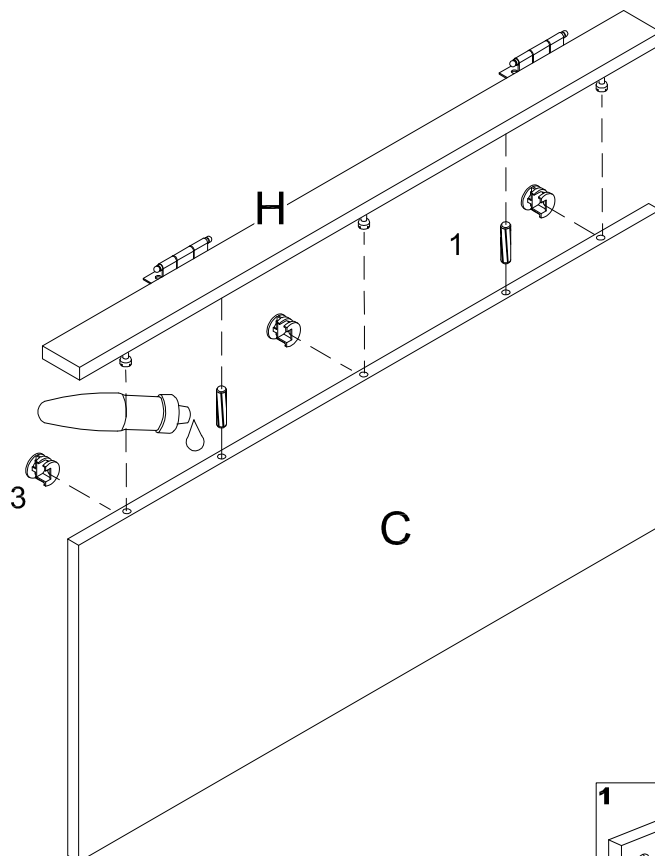

- ①  x2
- ③  x3


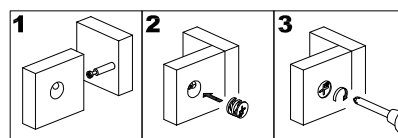




Step 5

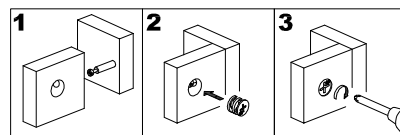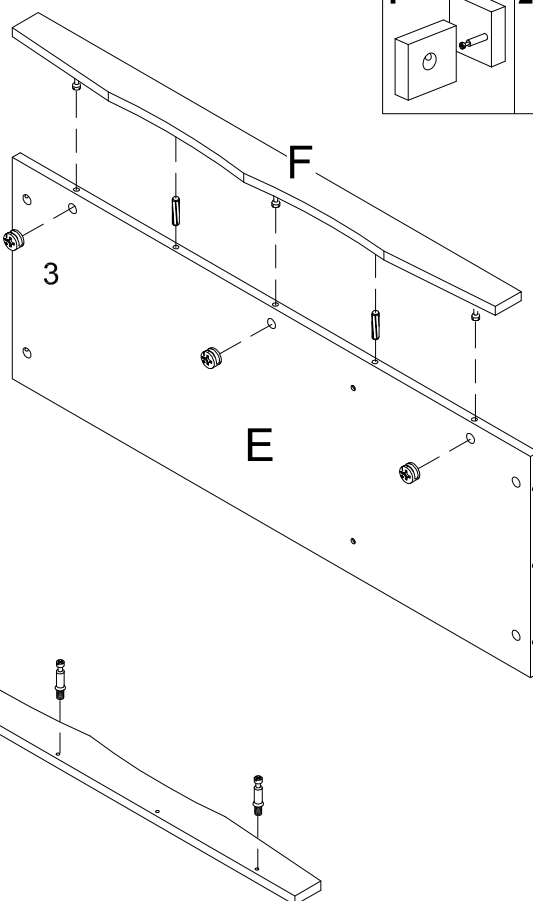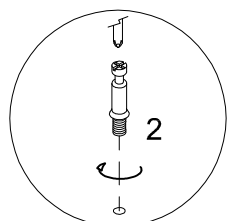


- ①  x2
- ②  x3
- ③  x3

Step 6

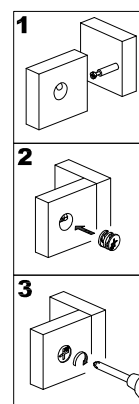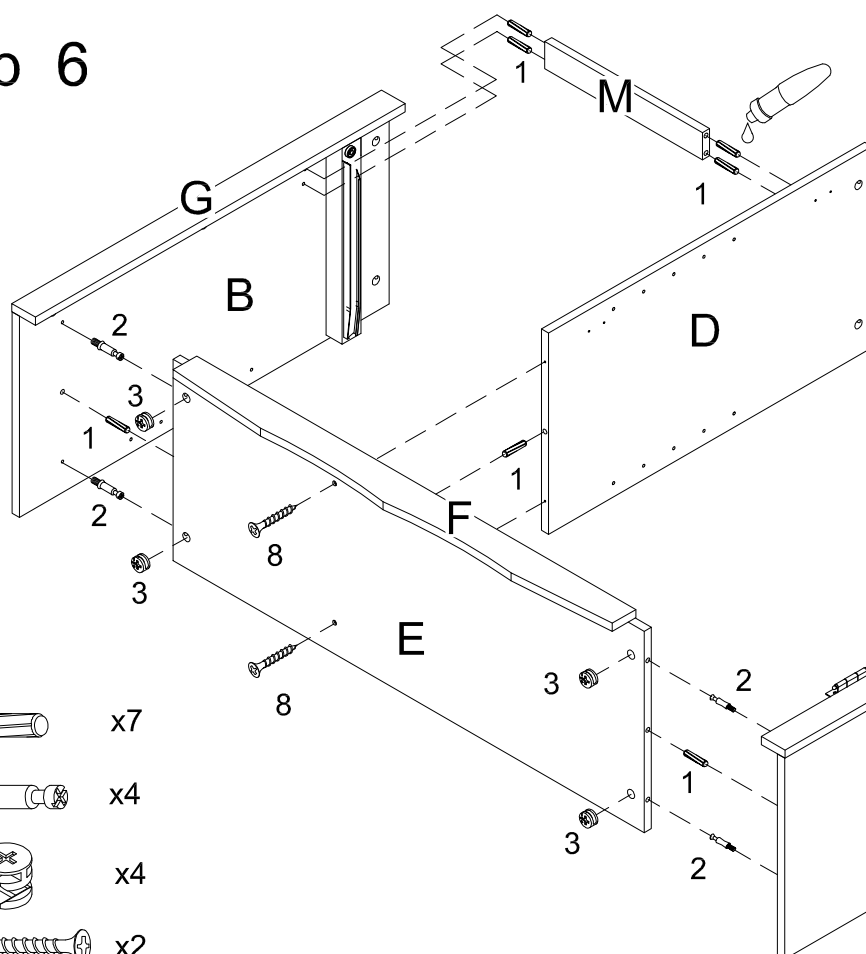


- ①  x7
- ②  x4
- ③  x4
- ⑧  x2


Step 7

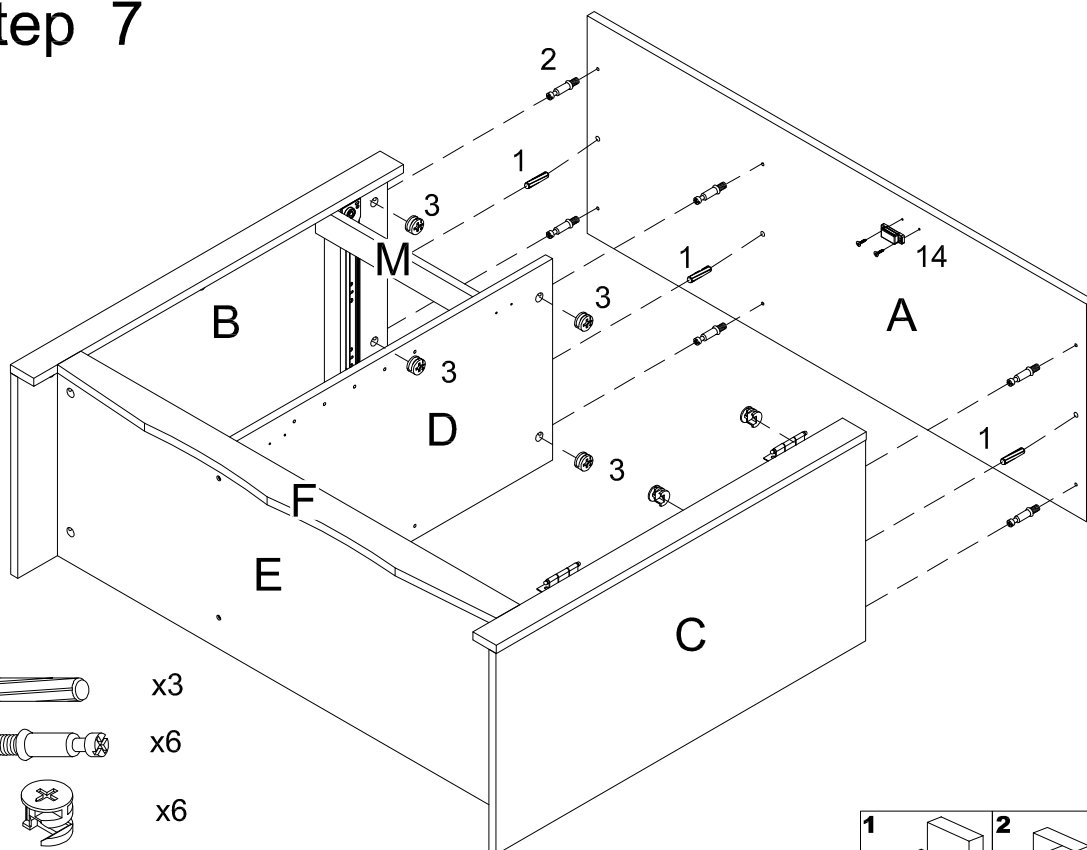

- ①  x3
- ②  x6
- ③  x6
- ⑭  x1

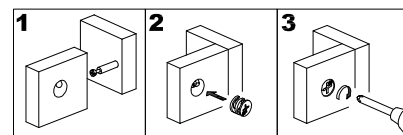


Step 8

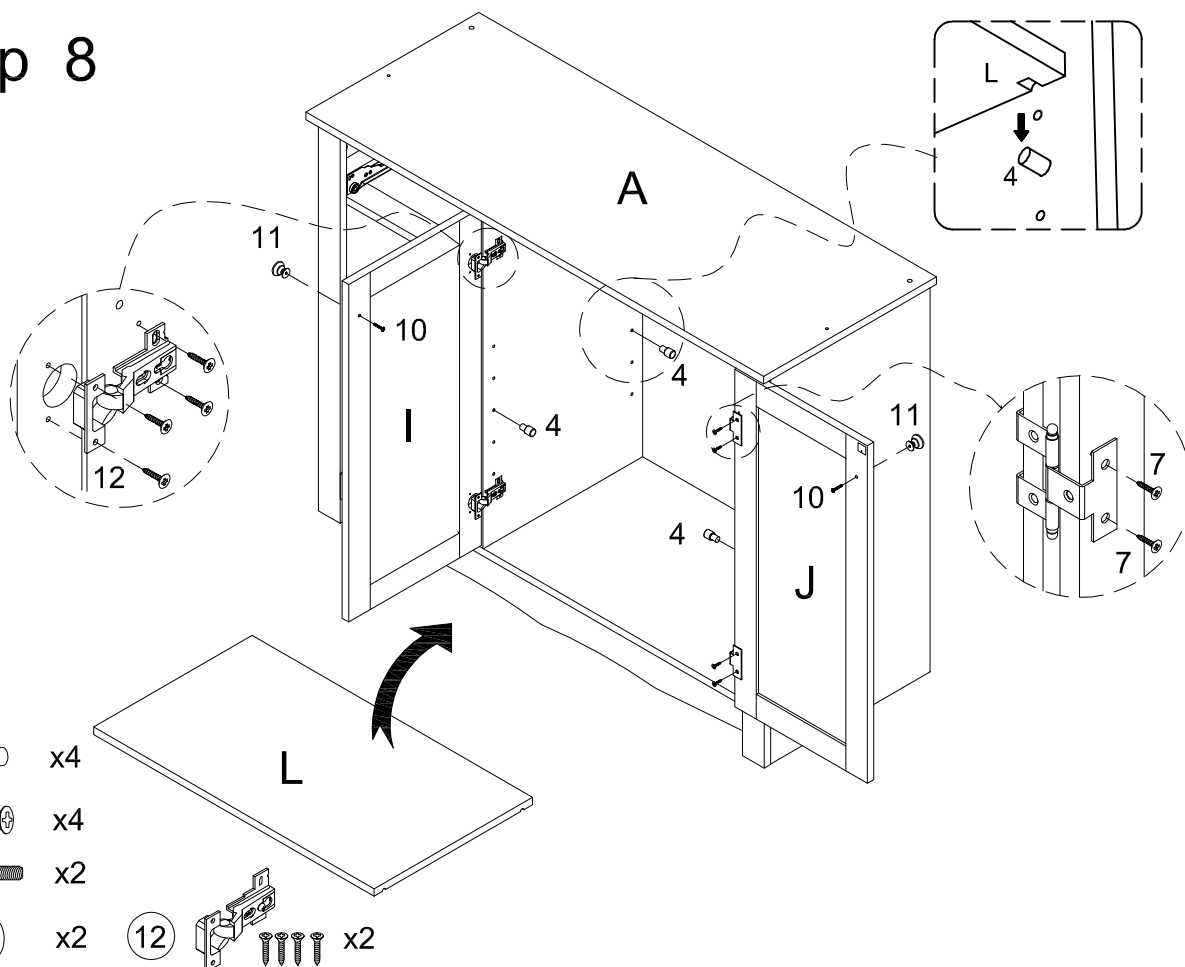

- ④  x4
- ⑦  x4
- ⑩  x2
- ⑪  x2
- ⑫  x2

Step 9

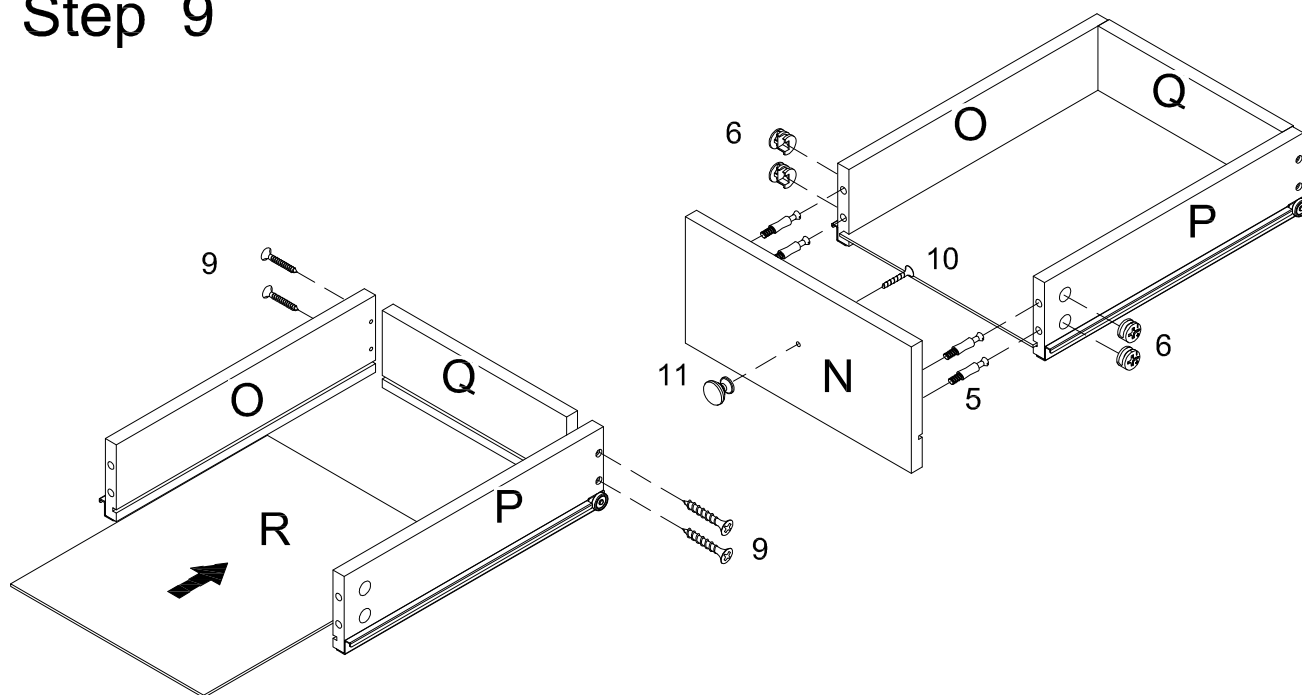


5  x4




6  x4

9  x4


10  x1 11  x1

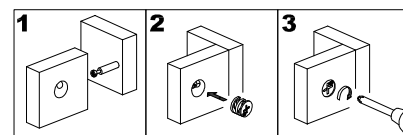


Step 10

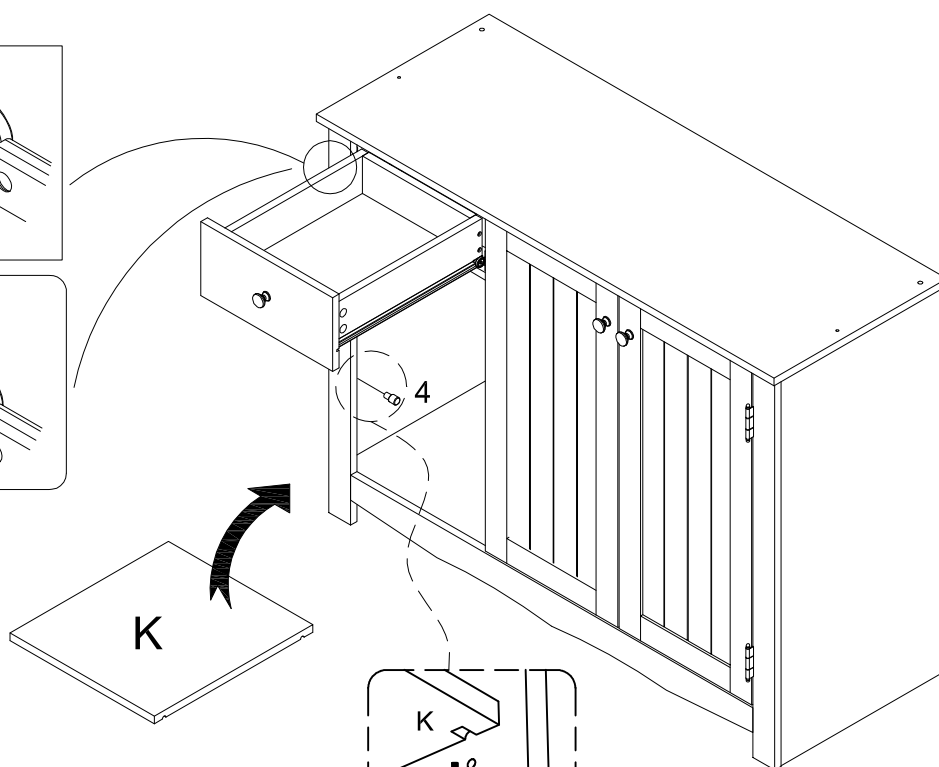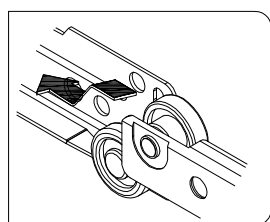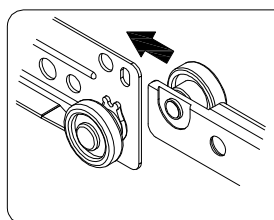


4  x4

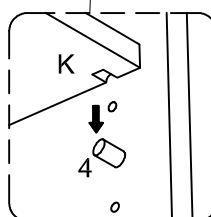


Step 11

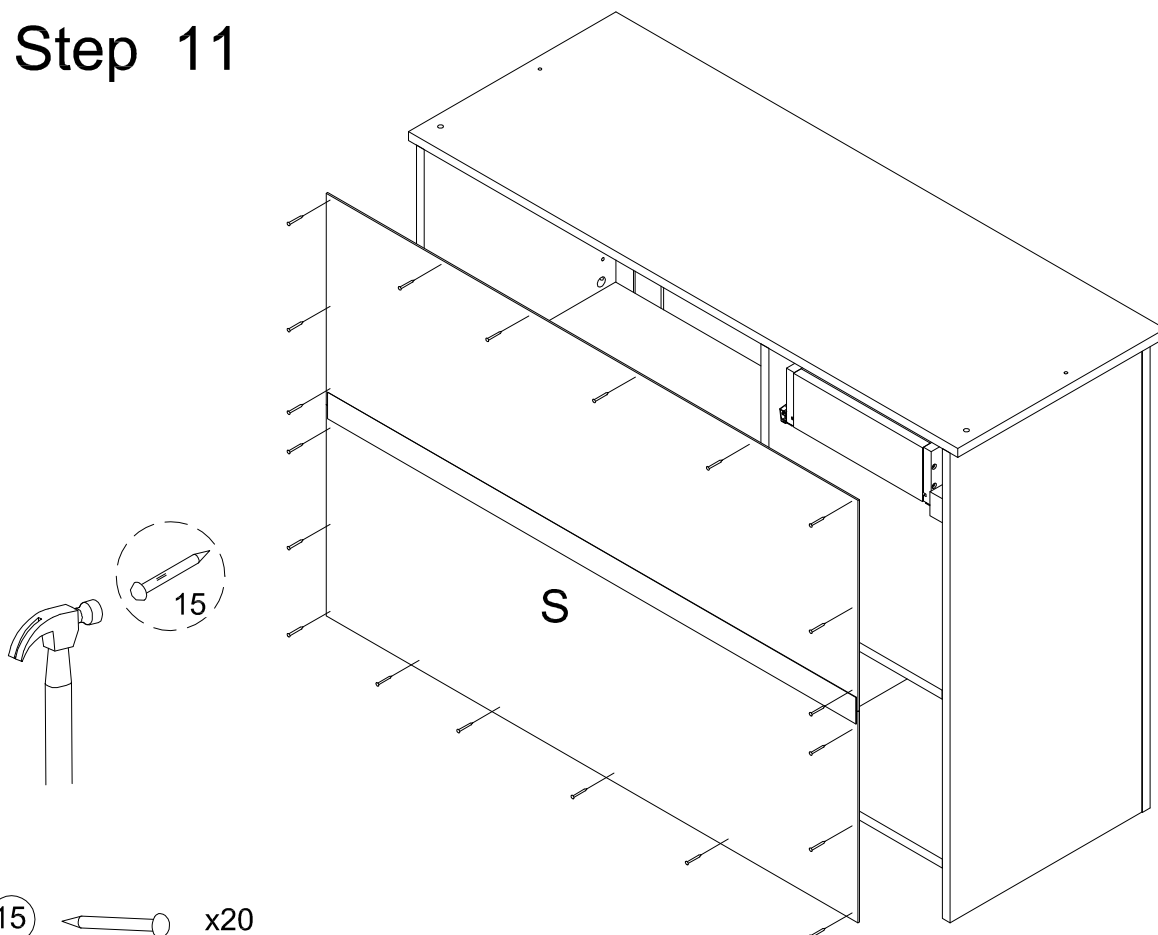

Step 12

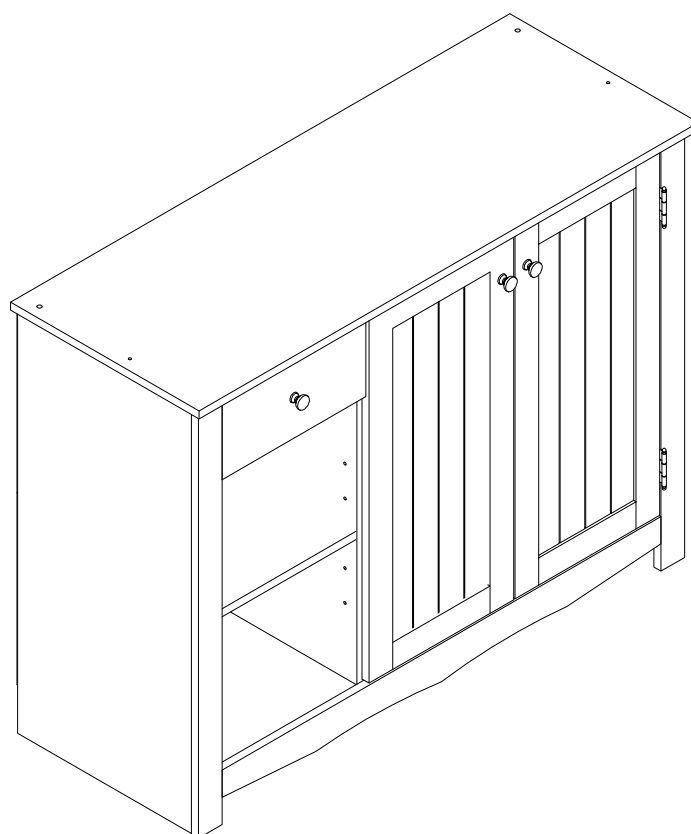


Step 13

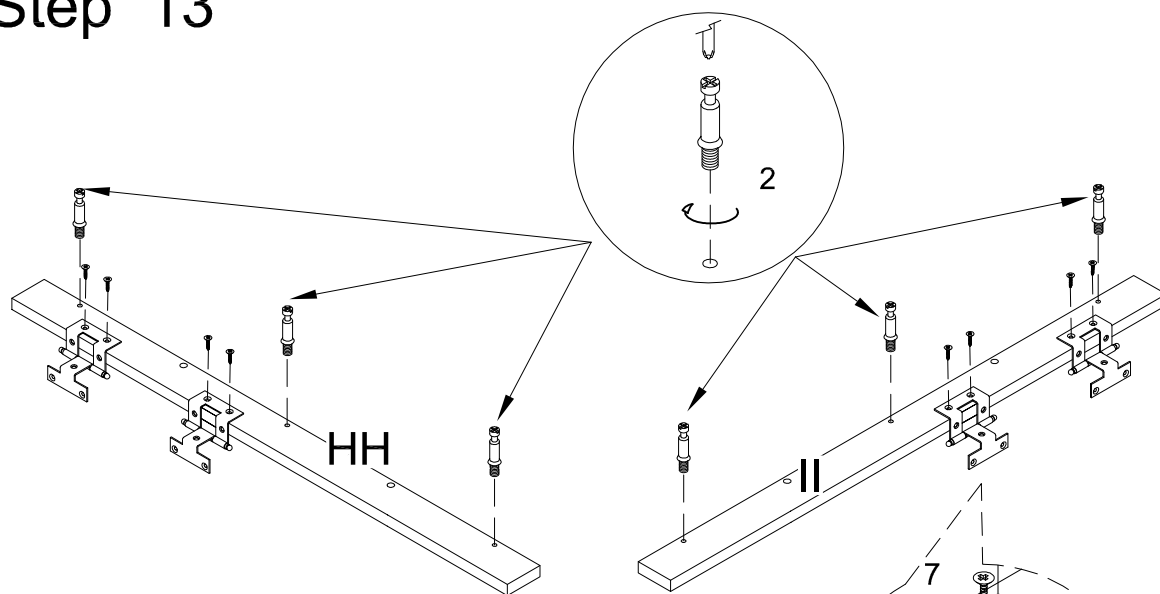


- (7)  x8
- (13)  x4
- (2)  x6



Step 14

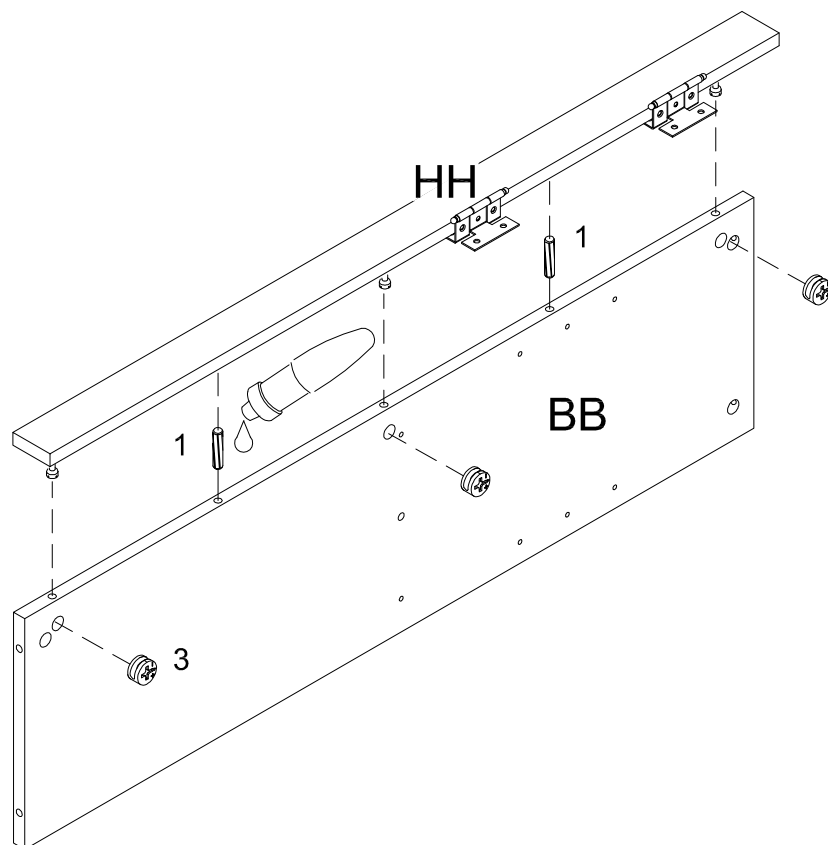

- (1)  x2
- (3)  x3

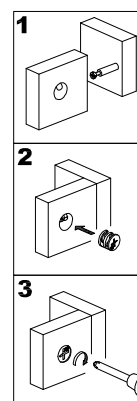


Step 15

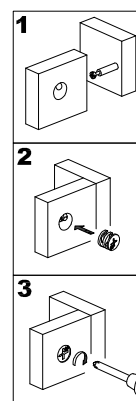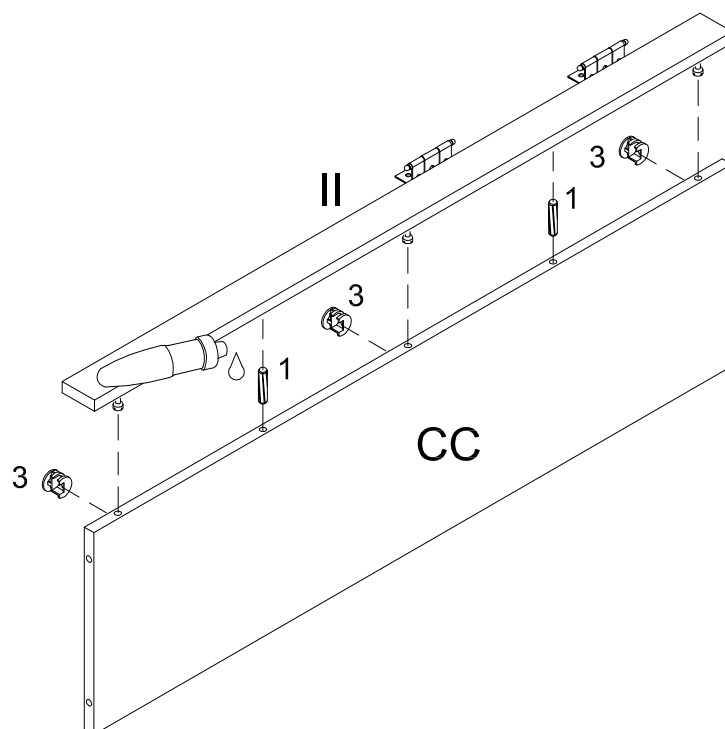


- ①  x2
- ③  x3


Step 16

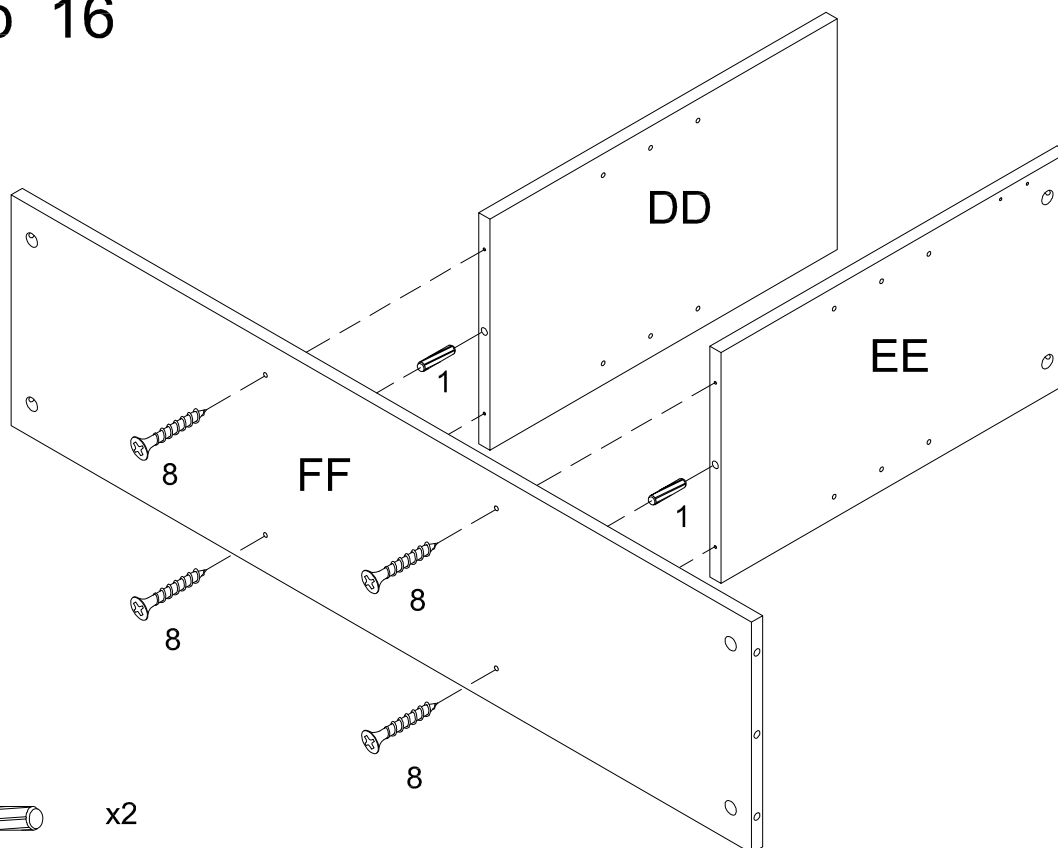



- ①  x2
- ⑧  x4

Step 17

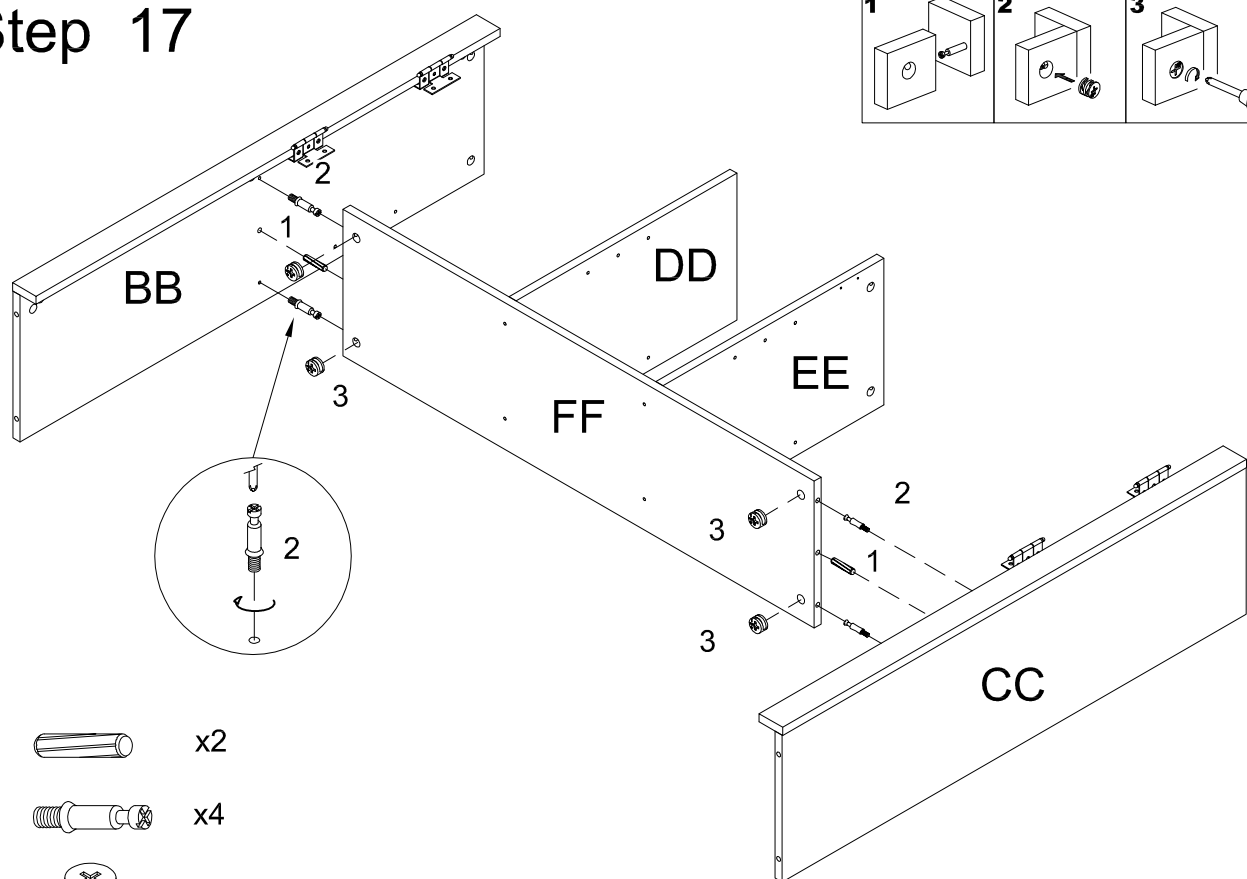


- ①  x2
- ②  x4
- ③  x4

Step 18

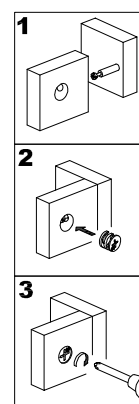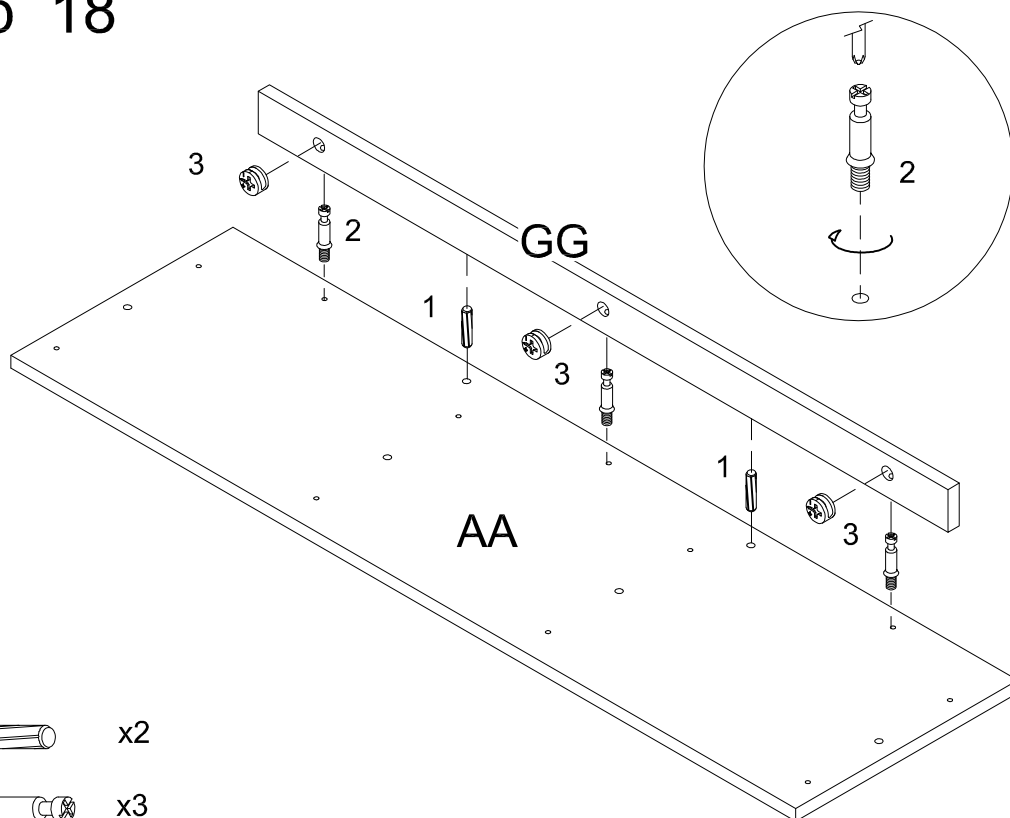


- ①  x2
- ②  x3
- ③  x3



Step 19

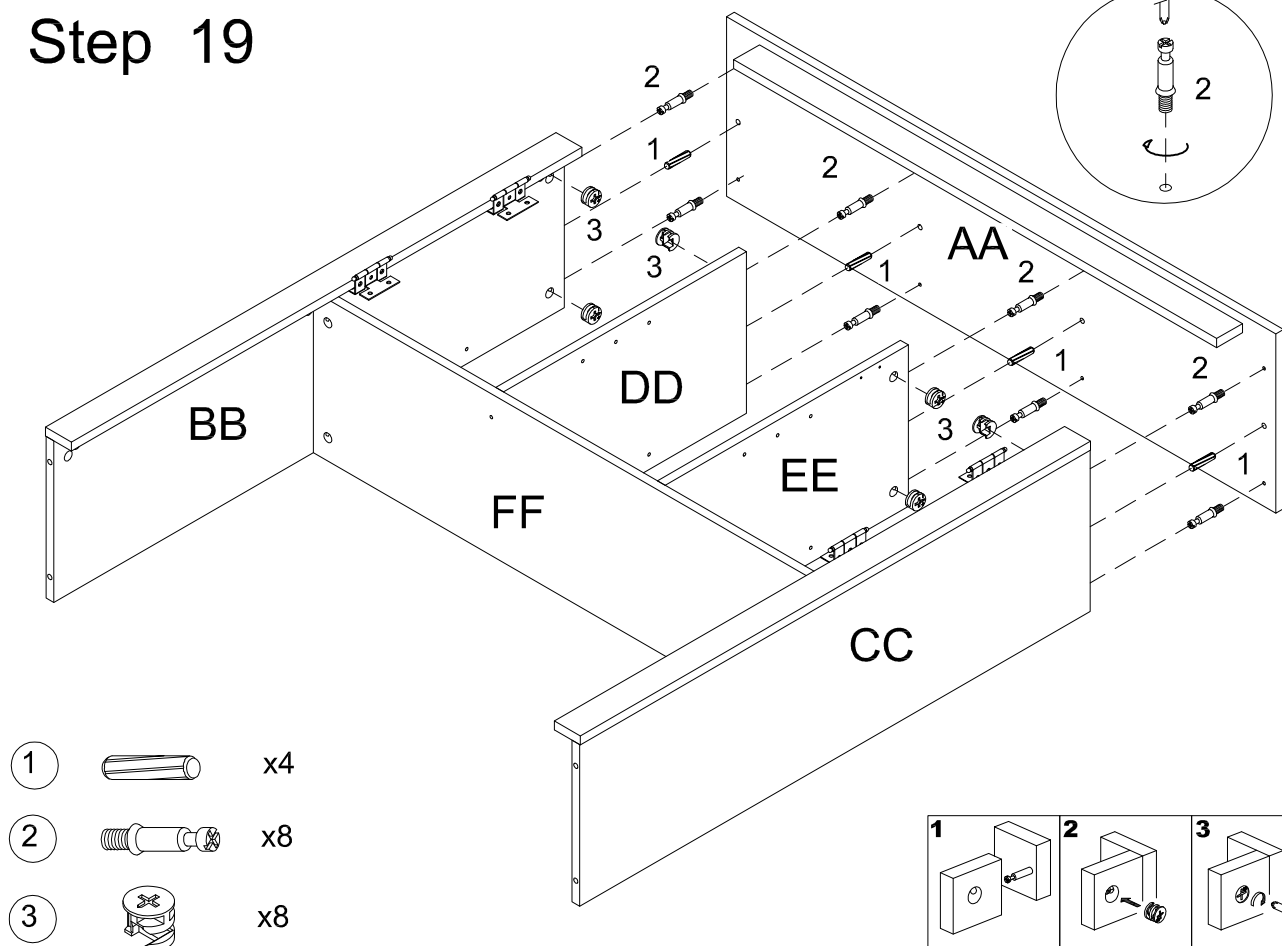


Step 20

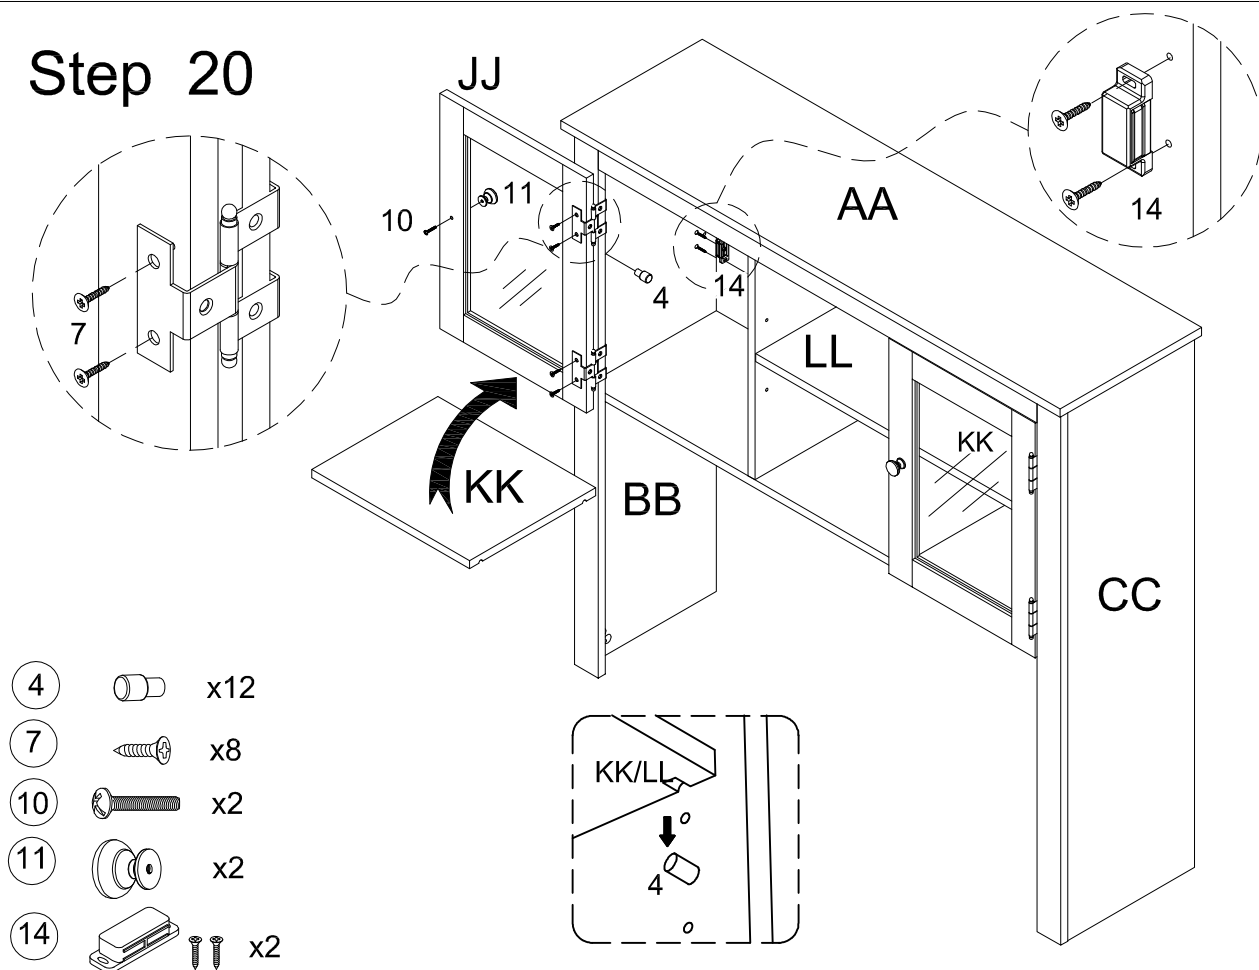




Step 21

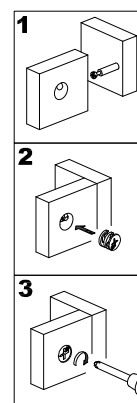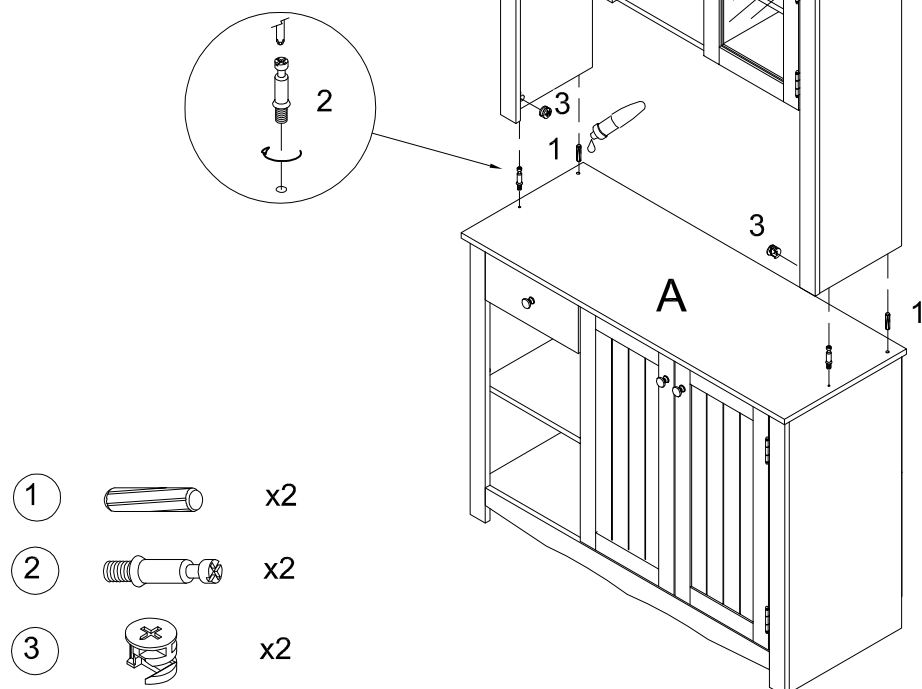

Step 22

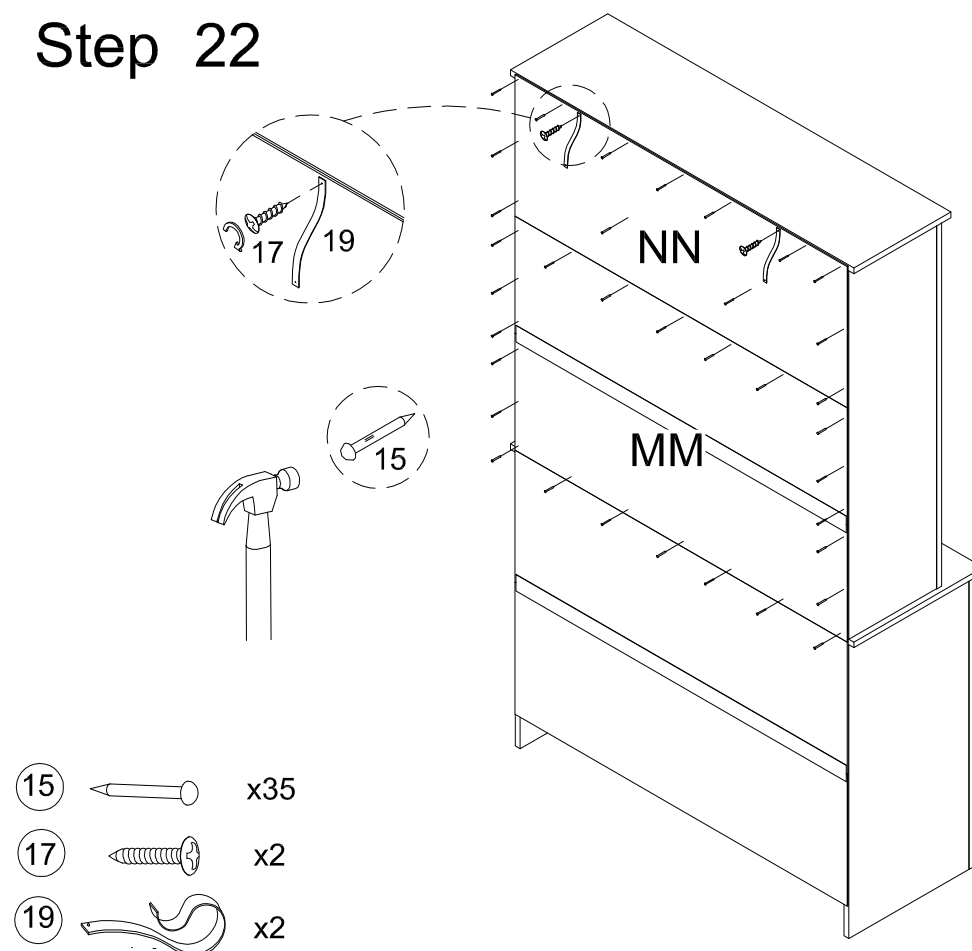

Step 23

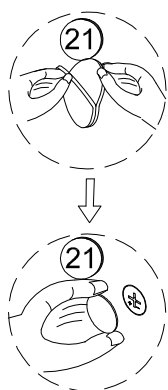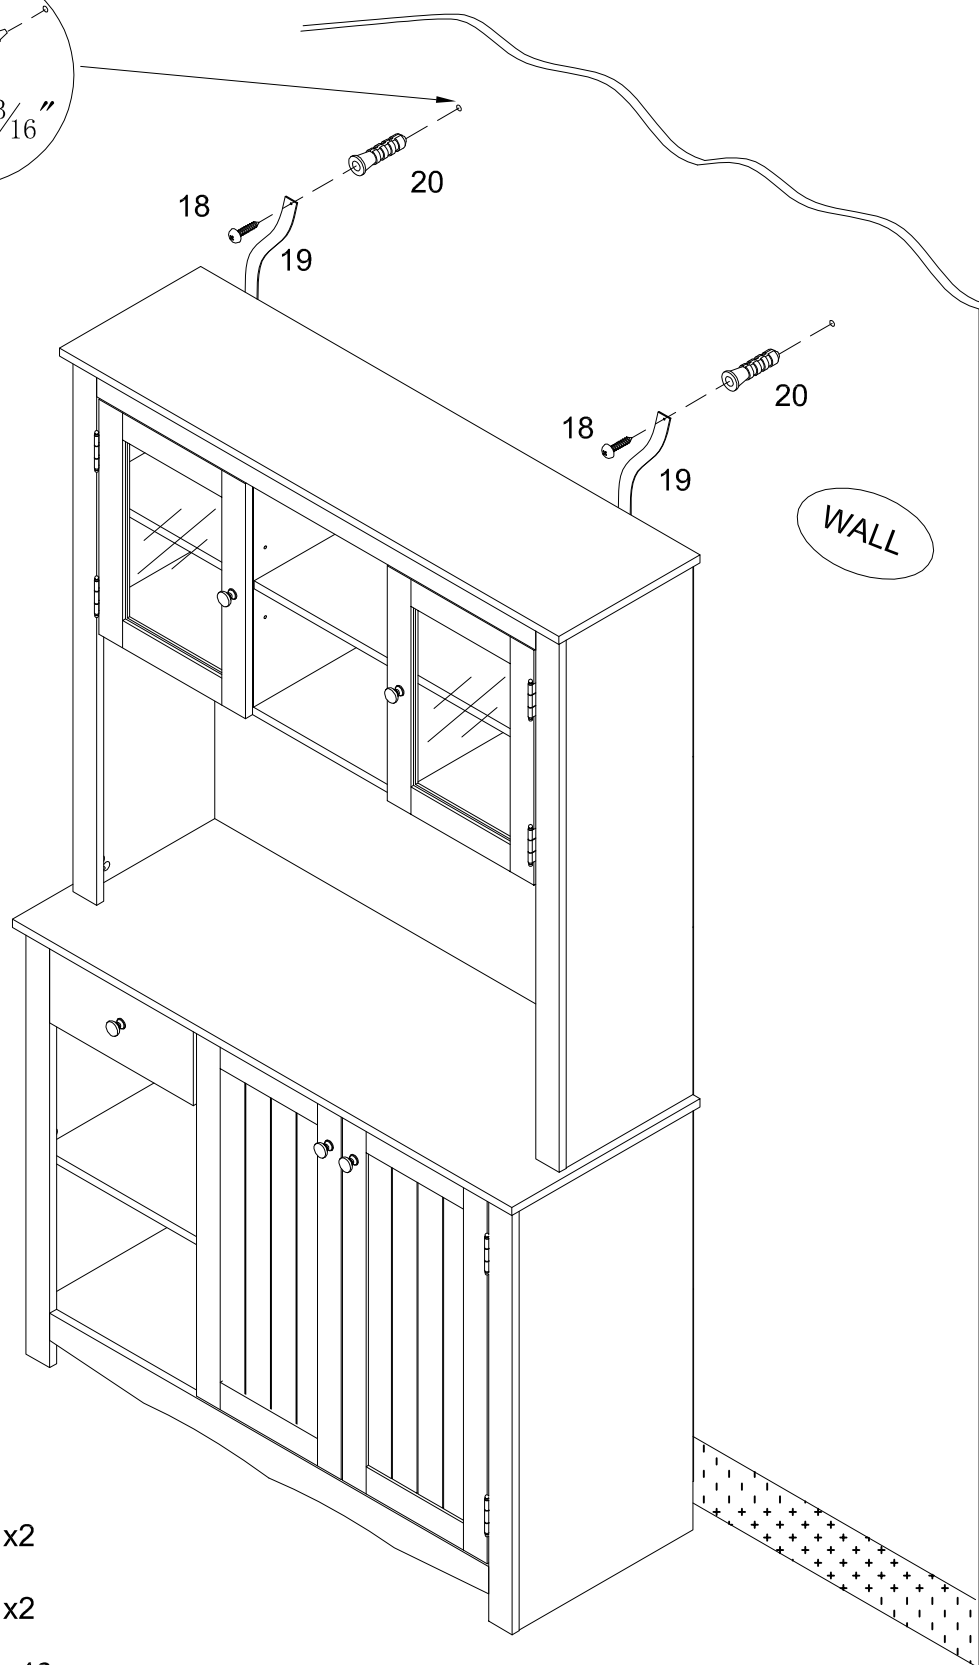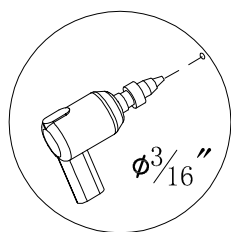

- | | | |
|------|--|-----|
| (18) | | x2 |
| (20) | | x2 |
| (21) | | x46 |

WARNING: ALL SCREWS MUST BE TIGHTENED!