

## **RETURN / DAMAGE CLAIM INSTRUCTIONS**

1. **DO NOT** discard of the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

2. Take a photo of the box markings.

A photo of the markings (text) on the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

3. Take a photo / Video of Damage (if applicable).

A photo /Video of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

4. Send us an email with the images requested.

Email us directly with the attached images, order number (SOXXXX) and a description of your claim.


|                                  |                                                                                      |
|----------------------------------|--------------------------------------------------------------------------------------|
| Auckland / Waikato / BOP Branch: | <a href="mailto:sales@tsbliving.co.nz">sales@tsbliving.co.nz</a>                     |
| Christchurch Branch:             | <a href="mailto:customersupport@tsbliving.co.nz">customersupport@tsbliving.co.nz</a> |
| Wellington Branch:               | <a href="mailto:wellington@tsbliving.co.nz">wellington@tsbliving.co.nz</a>           |

Model : CF 9441-A (5'6")


Assembly Instruction

| PART LIST |                                                                                                                                                                           | HARDWARE |                                                                                                    | Step 1 : Attach the footboard legs (E) to the footboard (B). | Step 2 : Attach the headboard legs (D) to the headboard (A). |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------|--------------------------------------------------------------|
|           |                                                                                                                                                                           |          |                                                                                                    |                                                              |                                                              |
| A         |                                                                                         | 1pc      |  Allen Key 65mm | 1pc                                                          |                                                              |
| B         |                                                                                         | 1pc      |  Allen Key 70mm | 1pc                                                          |                                                              |
| C         | <br> | 4pcs     |  JCBB M8 x 20   | 8pcs                                                         |                                                              |
| D         |                                                                                         | 2pcs     |  JCBC M6 x 30   | 8pcs                                                         |                                                              |
| E         |                                                                                          | 2pcs     |  JCBC M6 x 50    | 8pcs                                                         |                                                              |
| F         |                                                                                           | 2pcs     |  JCBC M6 x 60     | 6pcs                                                         |                                                              |
| G         |                                                                                           | 2pcs     |  CSK Screw 16mm   | 16pcs                                                        |                                                              |
| H         |                                                                                           | 2pcs     |  CSK Screw 32mm   | 38pcs                                                        |                                                              |
| I         |                                                                                           | 2pcs     |  CSK Screw 50mm   | 8pcs                                                         |                                                              |
| J         |                                                                                           | 6pcs     |  Spring Washers   | 8pcs                                                         |                                                              |
| K         |                                                                                           | 1pc      |  Flat Washers     | 16pcs                                                        |                                                              |
| L         |                                                                                           | 1pc      |  CSK Screw 25mm   | 2pcs                                                         |                                                              |
| M         |                                                                                           | 1pc      |  Roller           | 4pcs                                                         |                                                              |
| N         | <br>     | 2pcs     |  Power Nail 6/8   | 24pcs                                                        |                                                              |
| O         |                                                                                           | 2pcs     |                                                                                                    |                                                              |                                                              |
| P         |                                                                                           | 3pcs     |                                                                                                    |                                                              |                                                              |

Step 3 : Attach the JCBB Bolt (3) to the headboard bracket and footboard bracket.

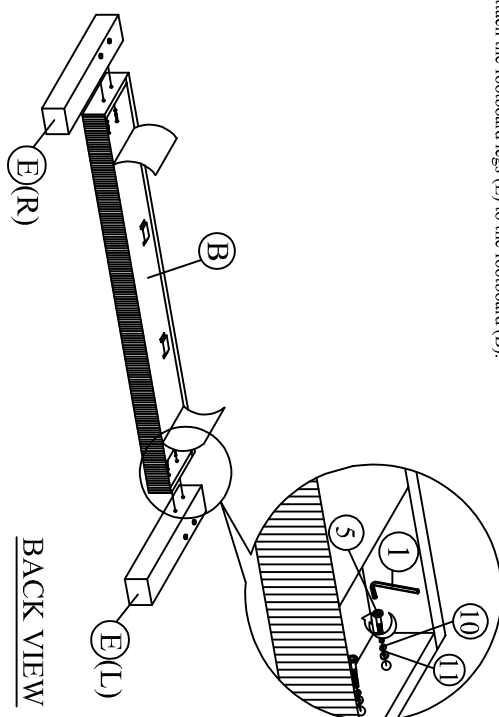


BACK VIEW

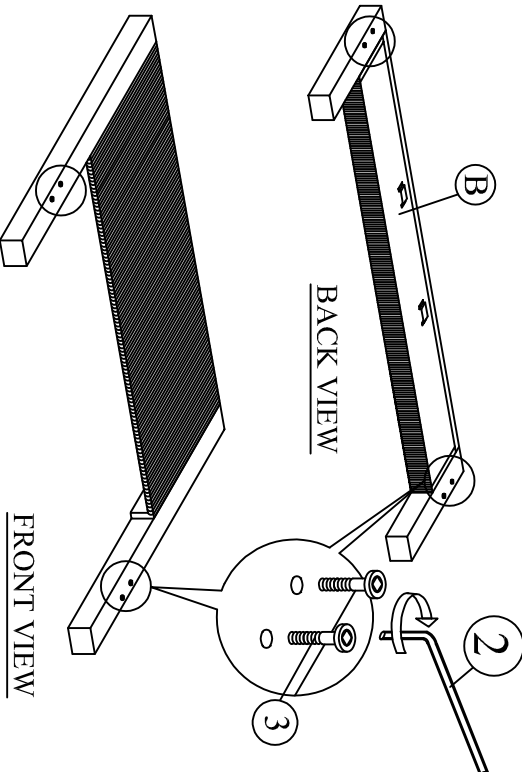


BACK VIEW

FRONT VIEW

Step 4 : Attach the side rail leg (F) to the side rail (C).

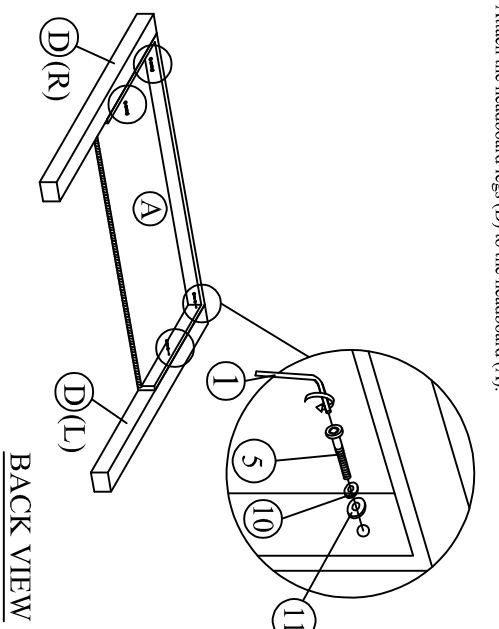


BACK VIEW

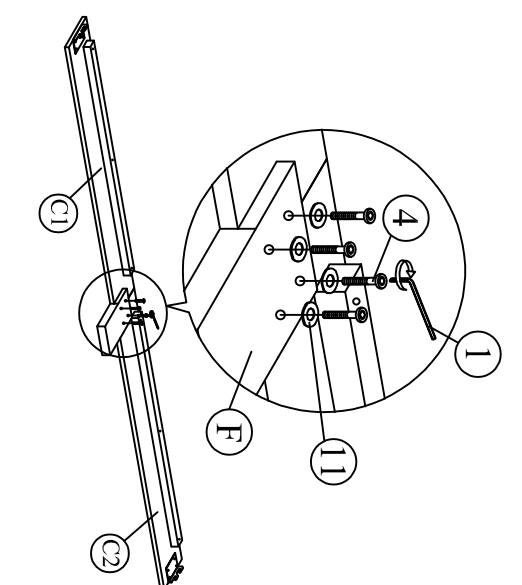


BACK VIEW

Step 1 : Attach the footboard legs (E) to the footboard (B).

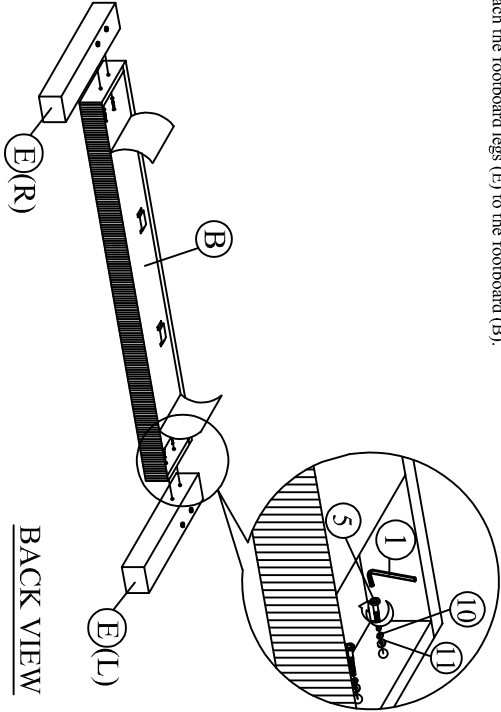

BACK VIEW


Step 3 : Attach the JCBB Bolt (3) to the headboard bracket and footboard bracket.

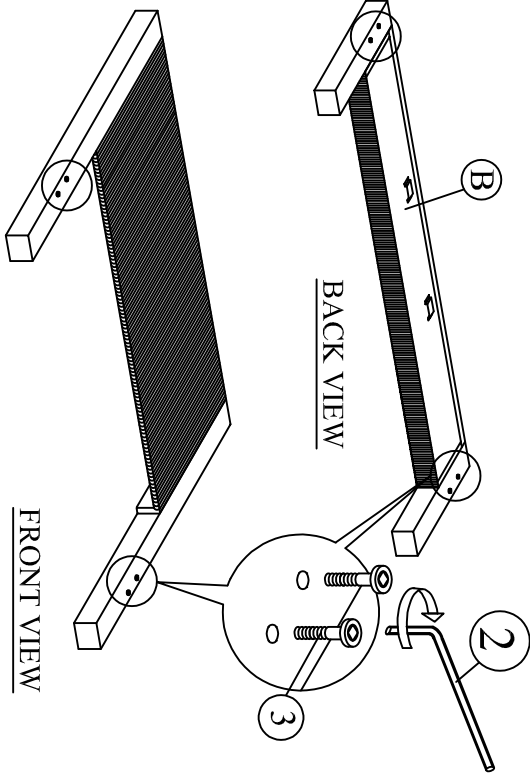

BACK VIEW


FRONT VIEW

Step 2 : Attach the headboard legs (D) to the headboard (A).

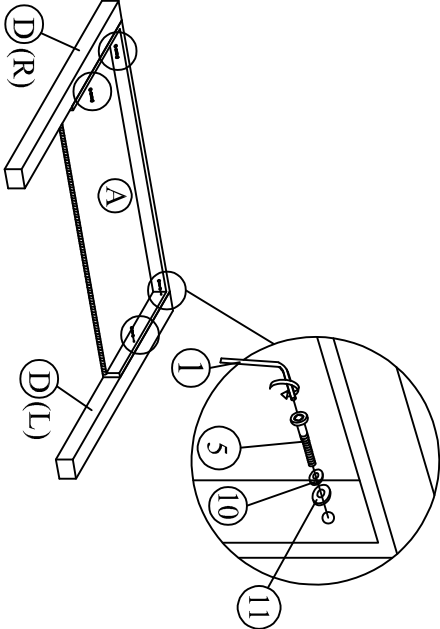


BACK VIEW


Step 4 : Attach the side rail leg (F) to the side rail (C).

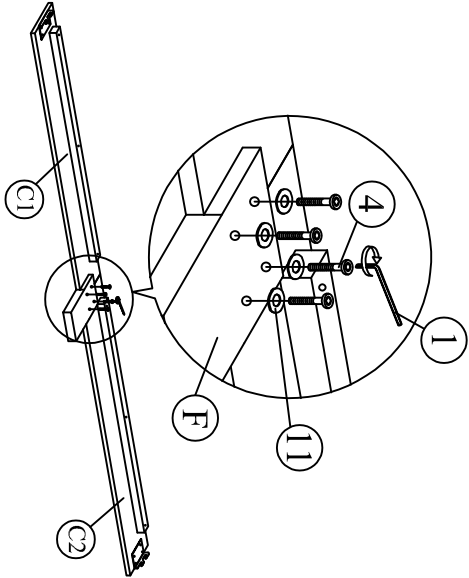


Step 5 : Attach side rail (C) to headboard (A) and Footboard (B) by pushing the bracket down to fit it.

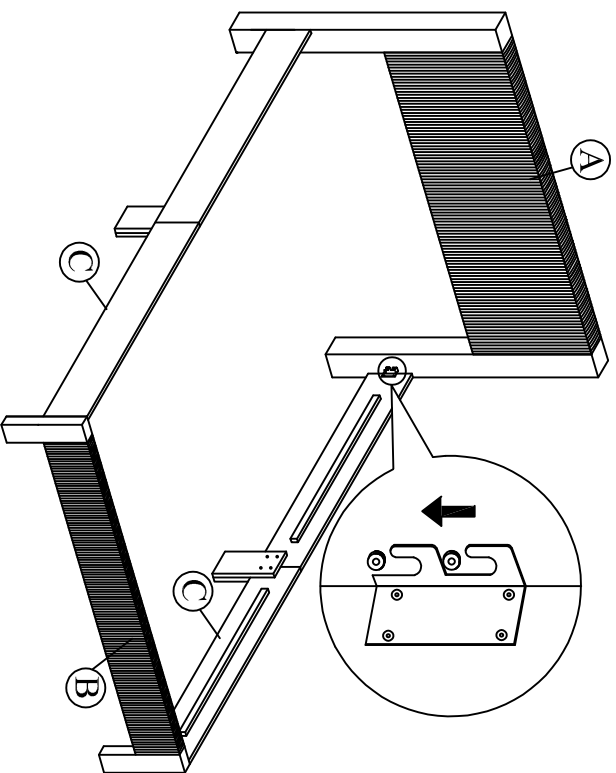

Step 6 : Attach the support legs (J) to the slats (I).

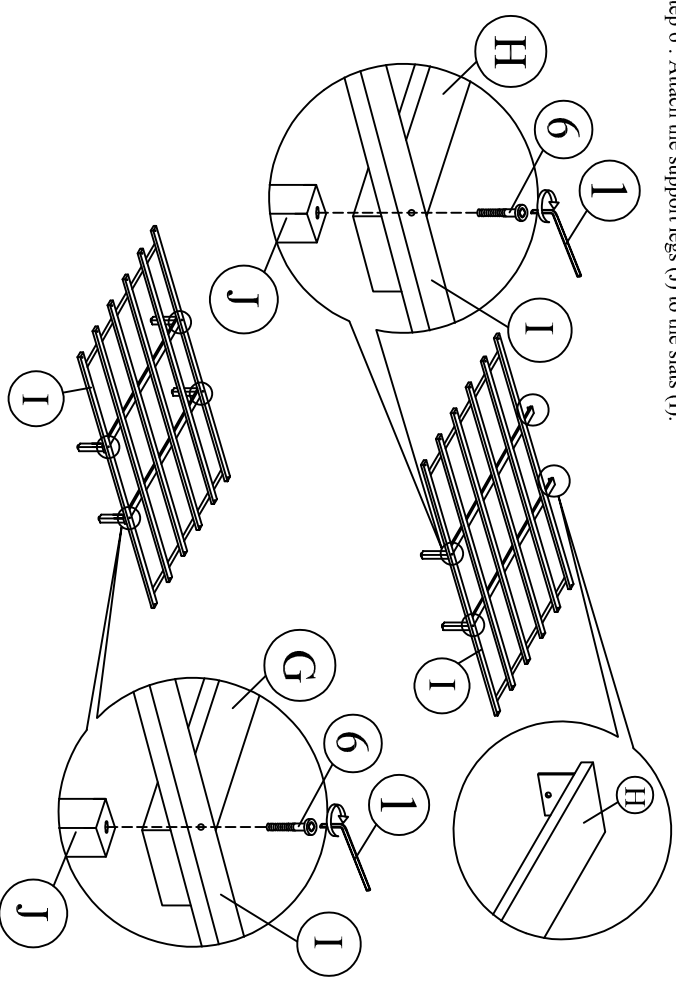


Step 7 : Slide the center rail (H) to the footboard (B). Tighten screws (12) using screw driver (not included) to the footboard (B).

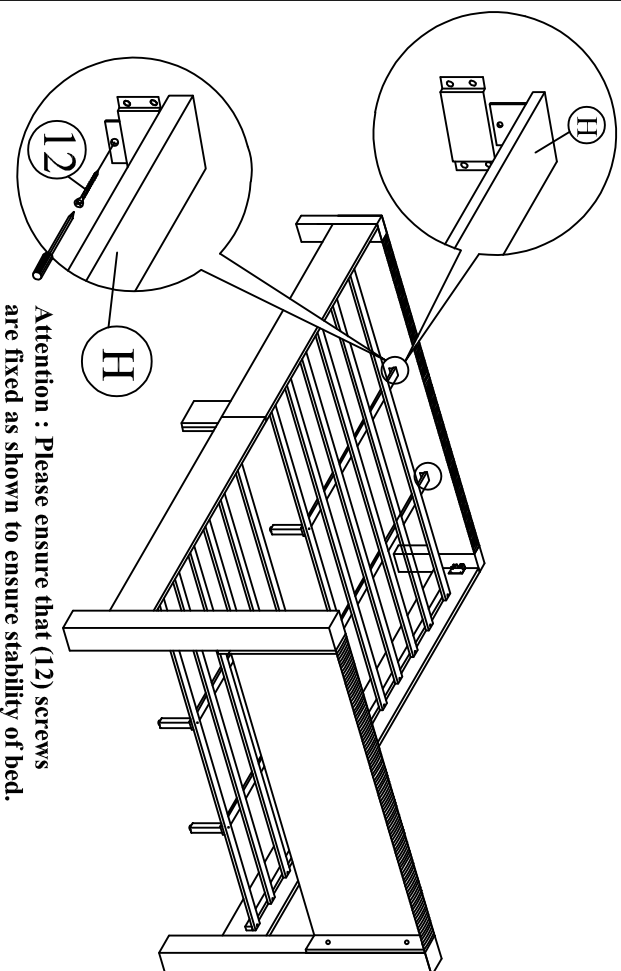


**Attention : Please ensure that (12) screws are fixed as shown to ensure stability of bed.**


Step 8 : Tighten the 4 Corner with Allen Key (2). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

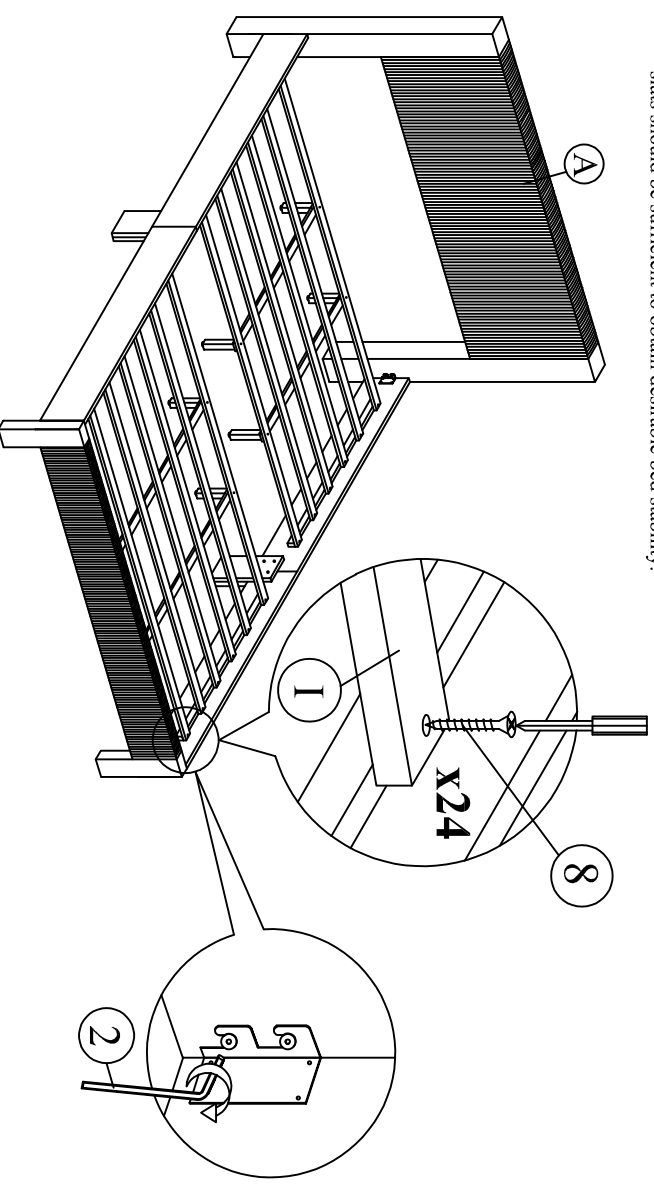


Step 9 : Attach the Drawer Side Panel (N) to the Front Footboard Panel (K) and Back Footboard Panel (L).

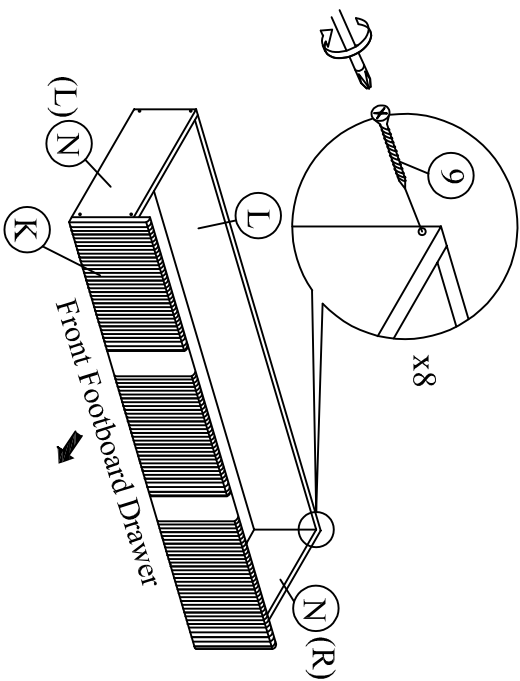


Step 10 : Attach the Footboard Bottom Panel (M) to the Drawer Side Panel (N).

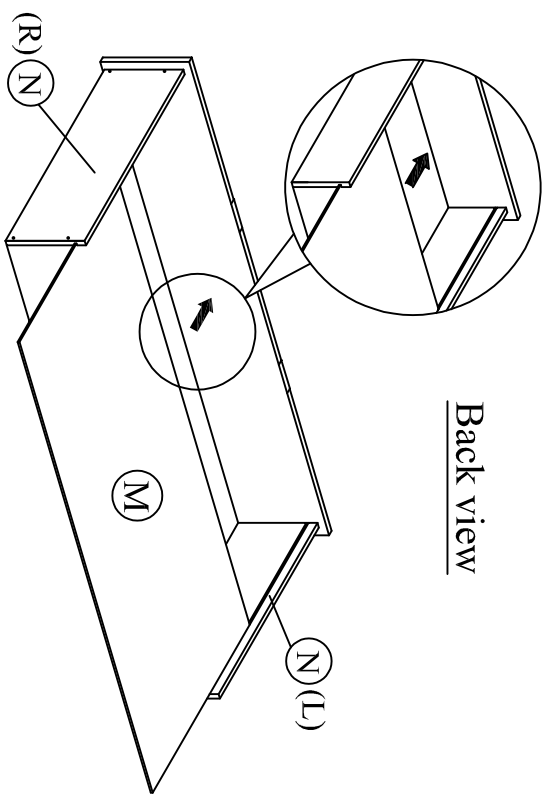

Step 11 : Attach the Bottom Panel Big Support Wood (O) and Bottom Panel Small Support Wood (P) to the Footboard Bottom Panel (M) . Attach the bottom panel with Nail (14) using the hammer (not included).

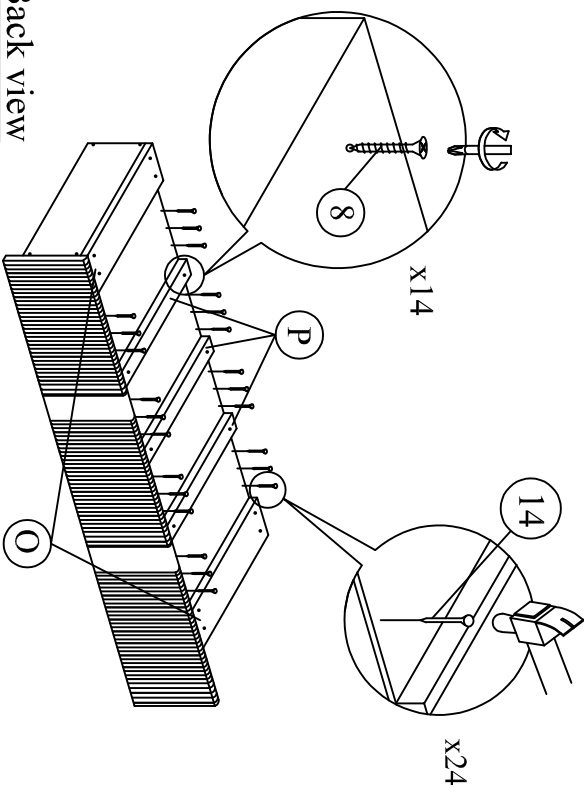

Step 12 : Attach the Roller (13) to the Bottom Panel Big Support Wood (O).

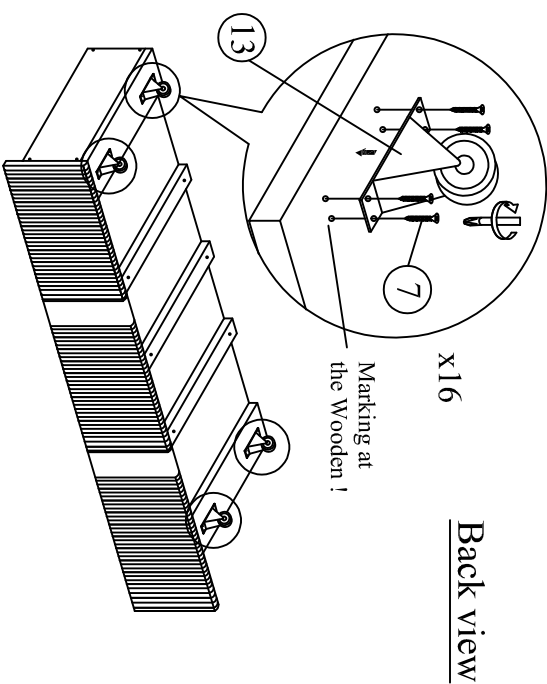

Step 13 : Attach Drawer to Footboard (B).

