

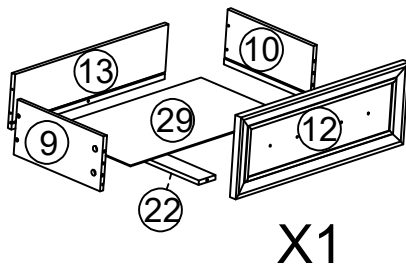


Multifunctional storage


Assembly Instructions

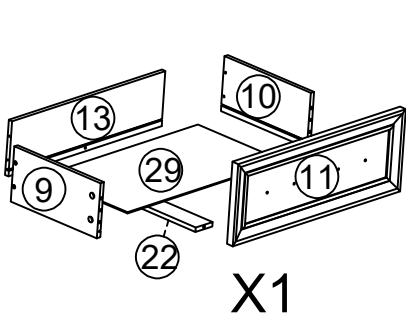


Parts List

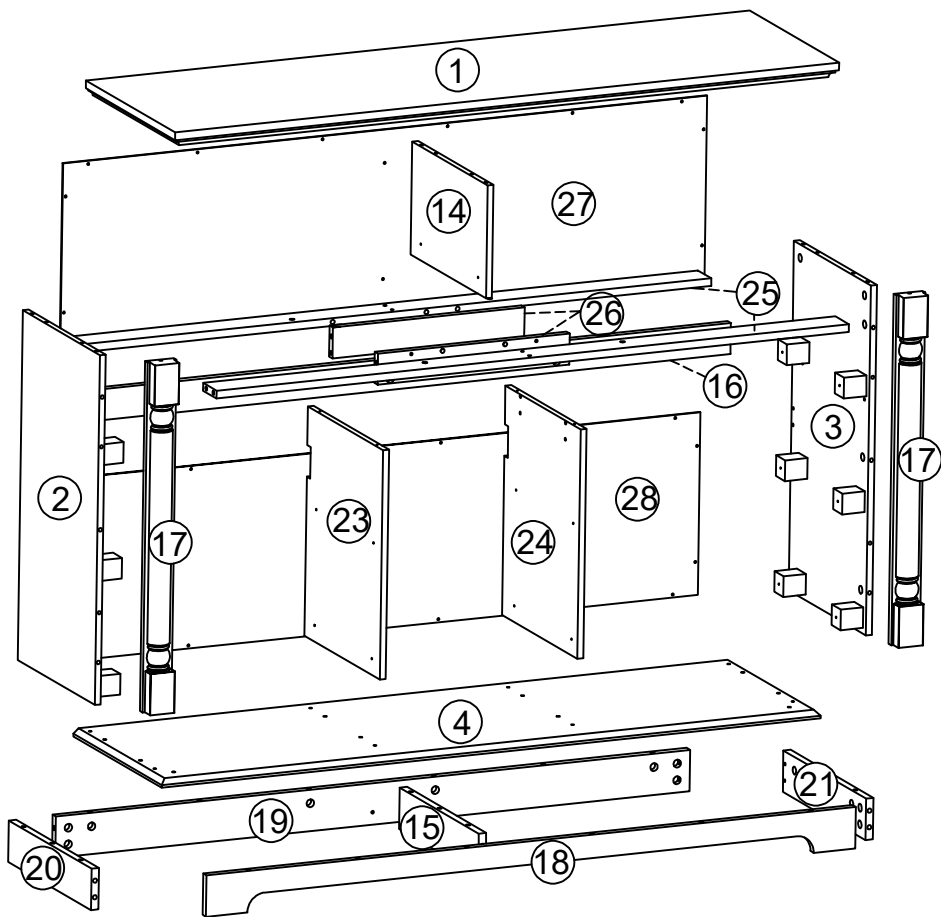


X1

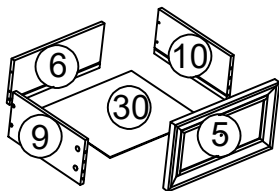

X2

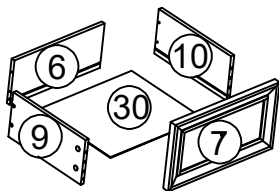


X2

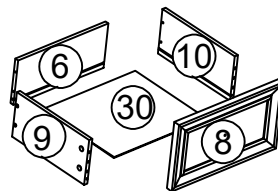


X2

Hardware

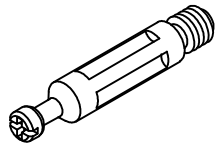


A x 92sets




Ø15X9.5MM

B x 92sets

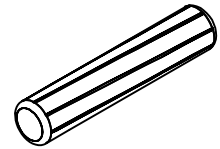


Ø6 x 30MM

C x 41pcs

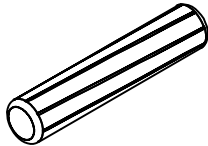


Ø8 x 30MM

D x 13pcs




3.5 x 12MM

E x 66pcs

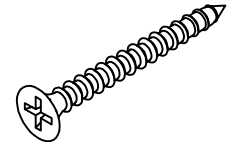


3.5 x 35MM

F x52pcs

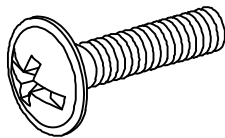


M4 x 12MM

G x 10pcs

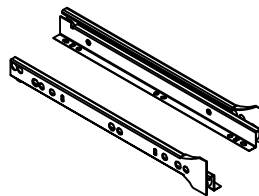


300MM

H x 8sets

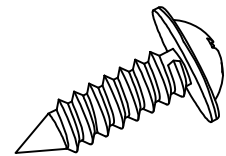


3.5 x 12MM


I x36pcs

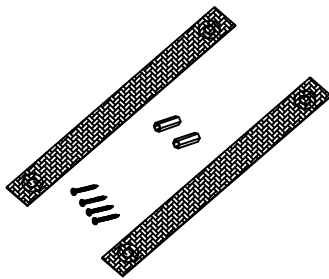


J x 1sets

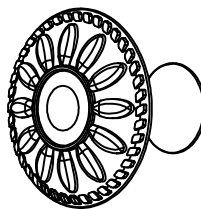


K x 6sets

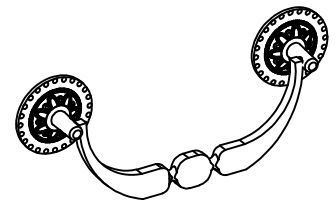

L x 2sets




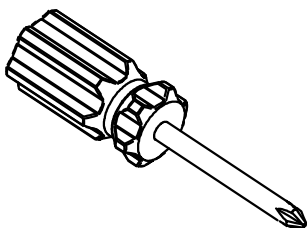





M x 1sets

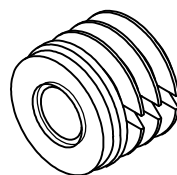





N x 5sets




ASSEMBLY MATERIAL

Item no.	Reference Image	Oty.
1		X1
3		X1
5		X2
7		X2
9		X8





Item no.	Reference Image	Oty.
2		X1
4		X1
6		X6
8		X2
10		X8





ASSEMBLY MATERIAL

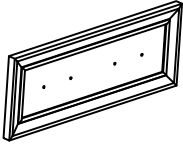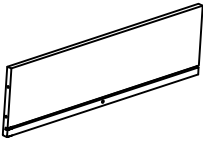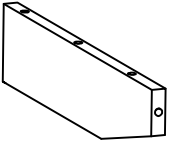Item no.	Reference Image	Oty.
11		X1
13		X2
15		X1
17		X2
19		X1

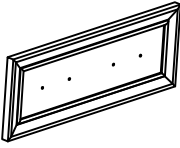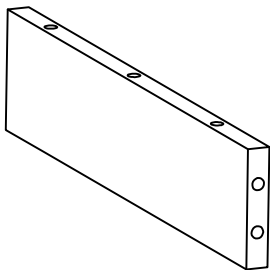
Item no.	Reference Image	Oty.
12		X1
14		X1
16		X1
18		X1
20		X1

ASSEMBLY MATERIAL

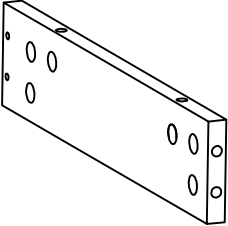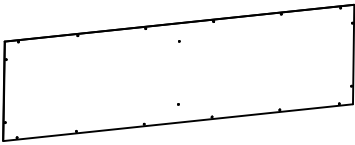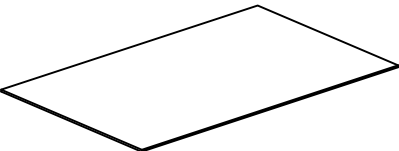
Item no.	Reference Image	Oty.
21		X1
23		X1
25		X2
27		X1
29		X2

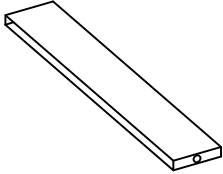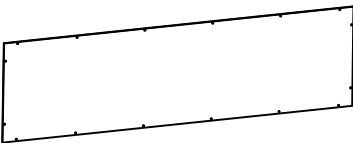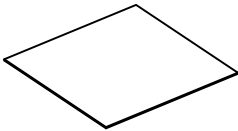Item no.	Reference Image	Oty.
22		X2
24		X1
26		X2
28		X1
30		X6


How to use the cam lock system

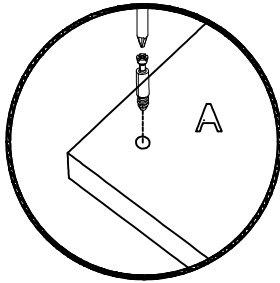


1. Screw cam bolt into panel

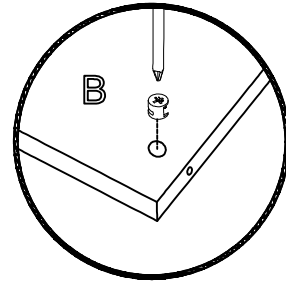


2. Push cam into panel - arrow feature on cam top points to panel edge

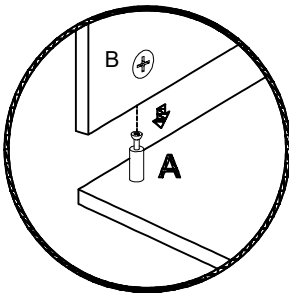

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

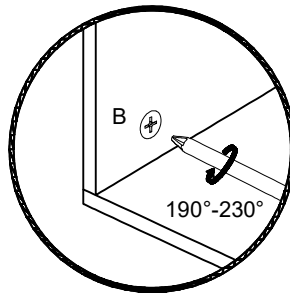


3. Rotate cam(s) clockwise 190°-230° to lock panels together

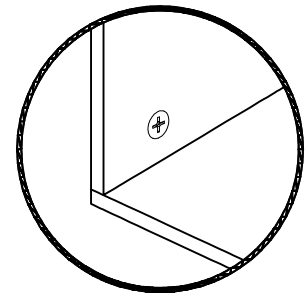

5. Panels should be tight against each other and connection should be rigid


Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet ,IF NECESSARY.

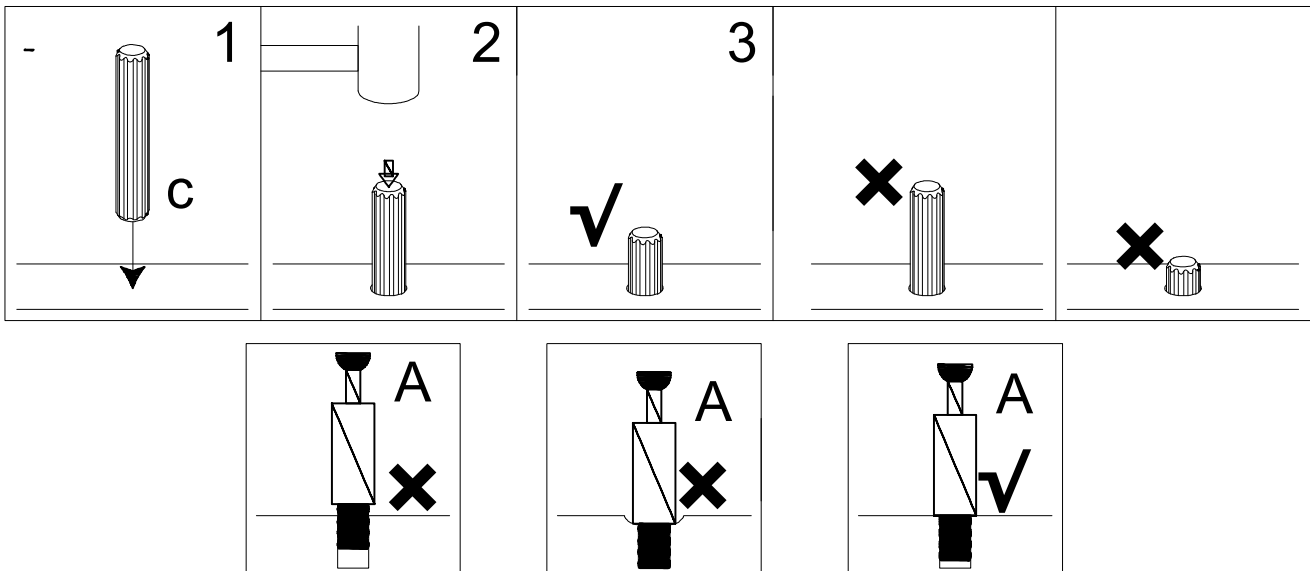


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Ready to assemble the Multi-purpose lockers


Before installation, observe each structure of the Multi-purpose lockers. The Multi-purpose lockers consists of two main parts. You will assemble the chest first, and then install the eight drawers. Finally, look at the finished look, and contrast list of part, imagine how to install it faster, hope this will help you.

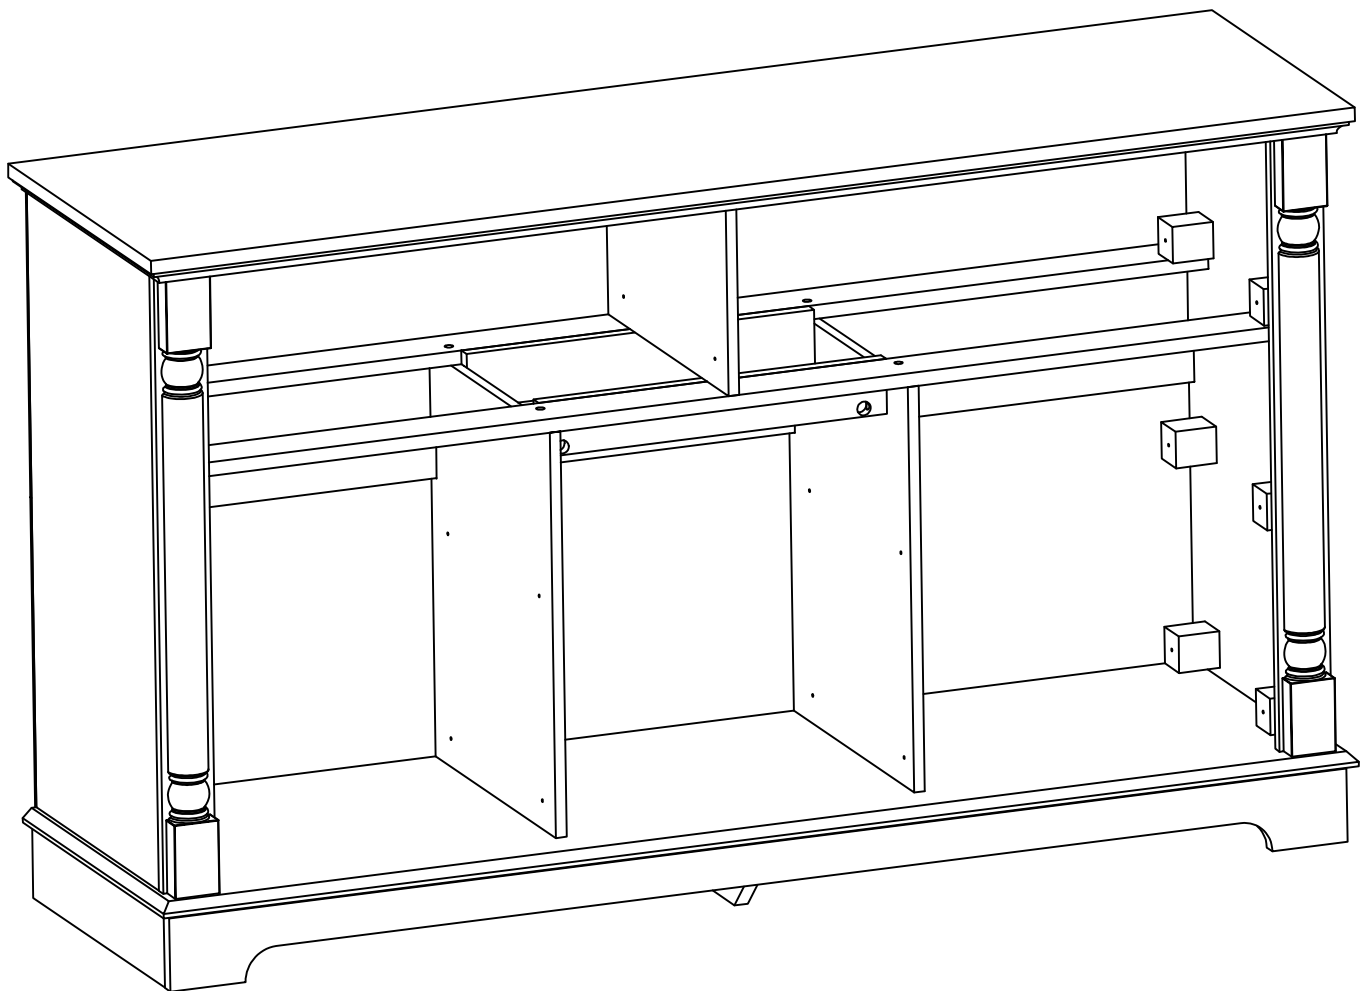

Step 1

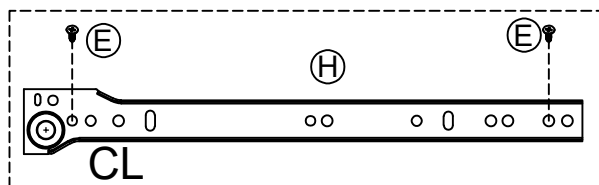

Install first rail on the left side of board.

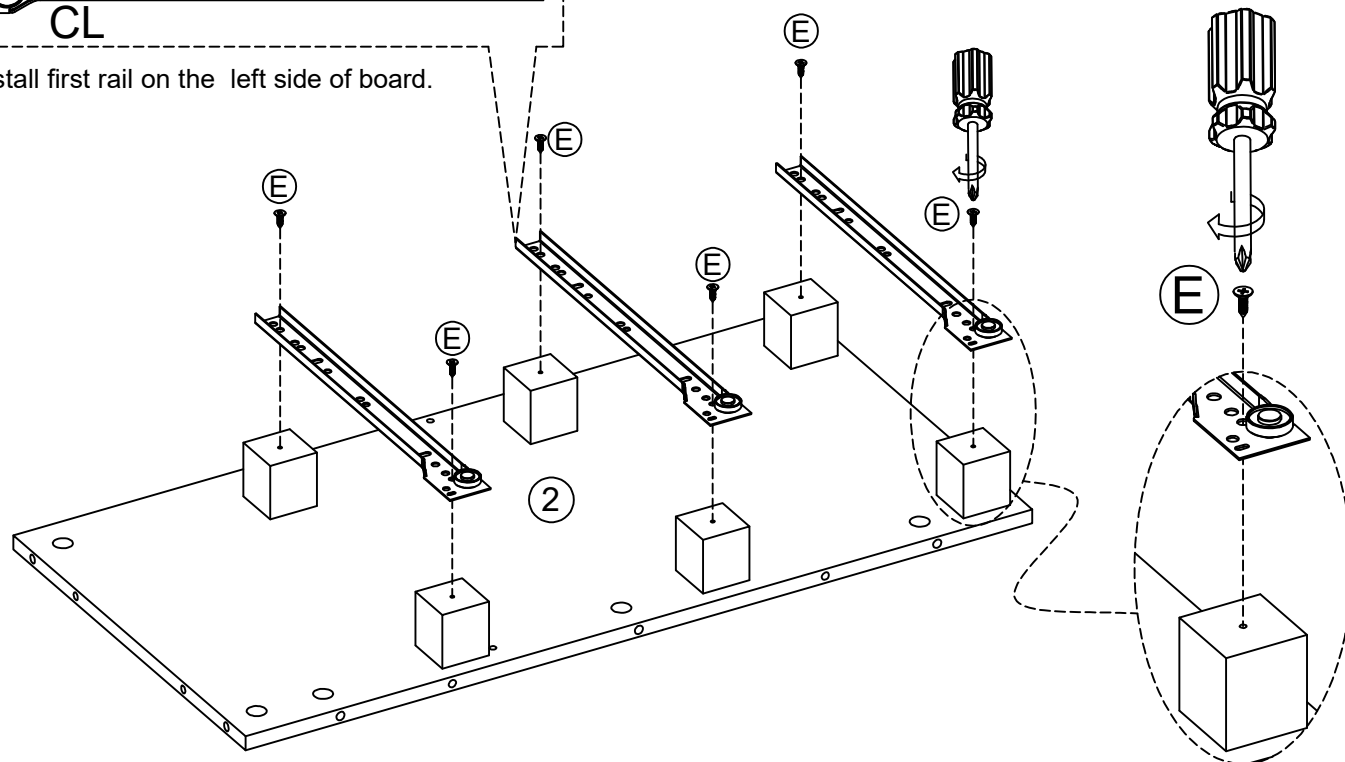


E




E x 6


H



Step 2

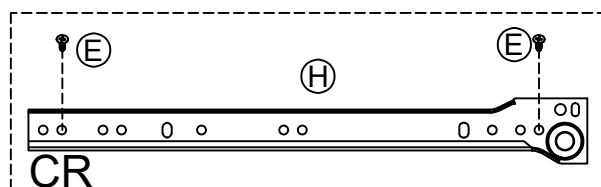

Install first rail on the right side of board.

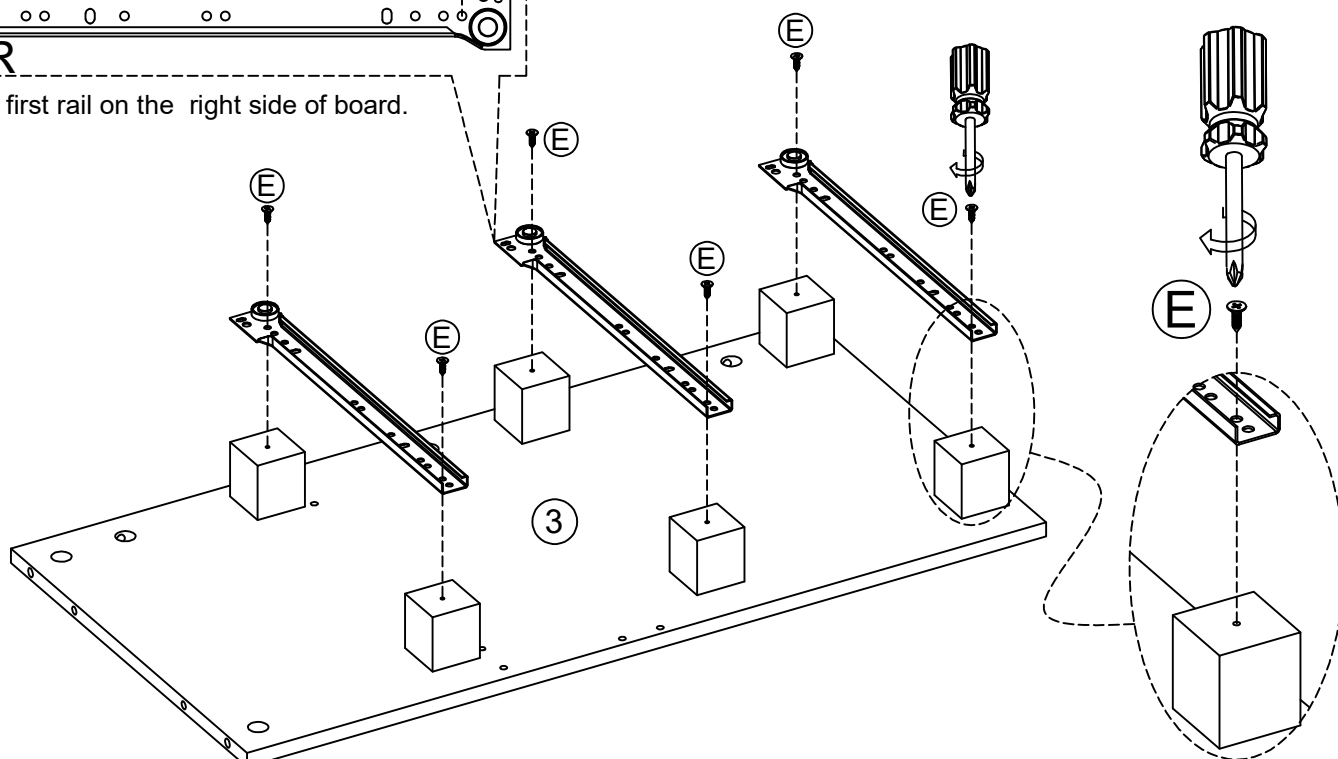


E



E x 6

H



Step 3


E




3.5 x 12MM

E x 4



H




HX1

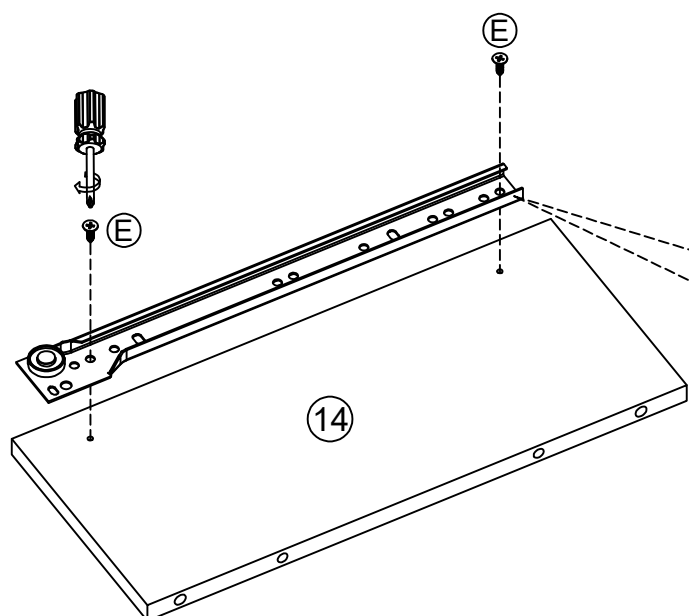

Install second rail on the right side of board.

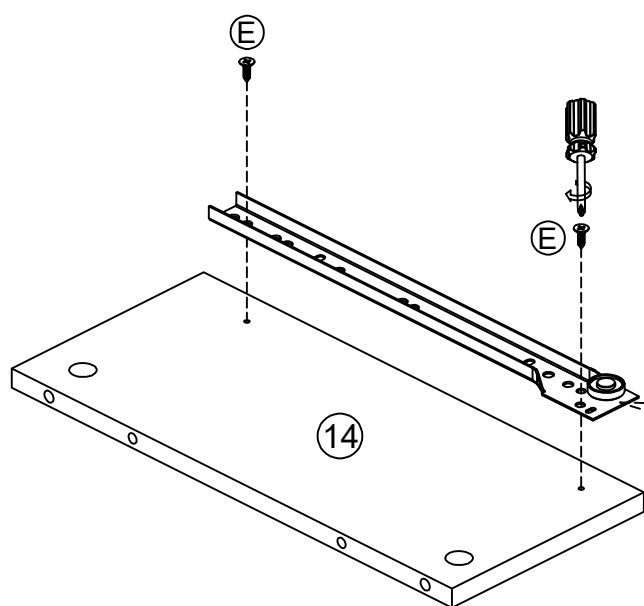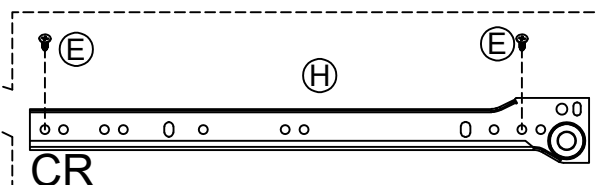

Install first rail on the left side of board.

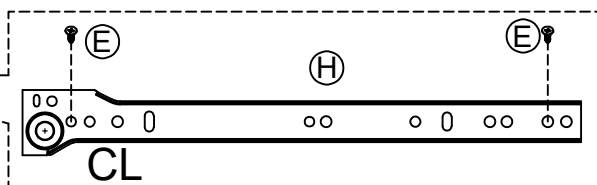

NOTICE: To ensure the stability of the structure, please pay attention to the hole position when locking screws. CL slide should lock on the first hole position near the pulley, CR slide lock on the second hole position near the pulley.

Step 4


E




3.5 x 12MM

E x 8



H




HX2

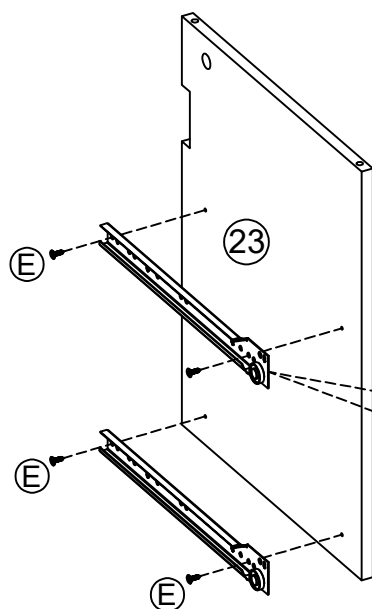

Install second rail on the right side of board.

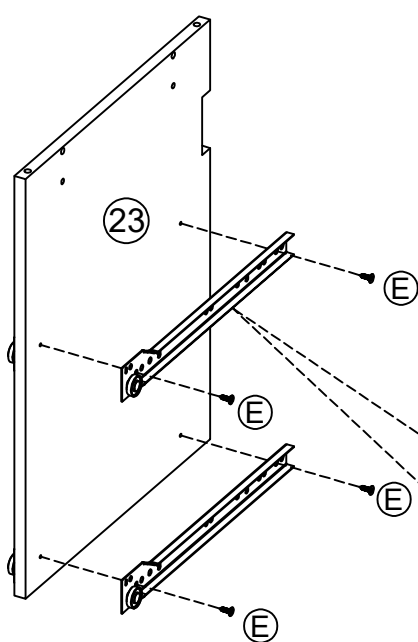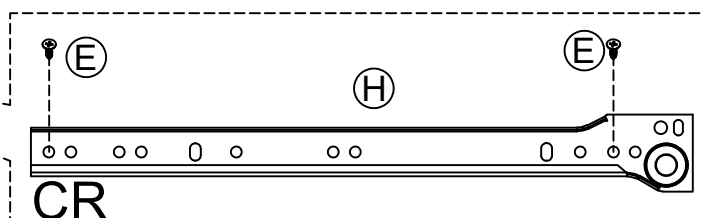

Install first rail on the left side of board.

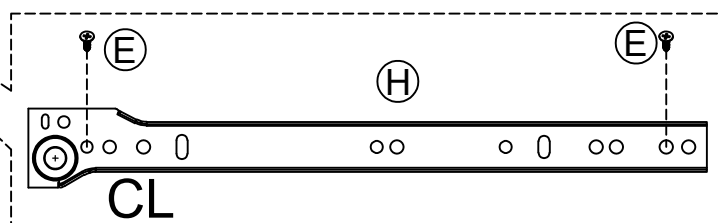

NOTICE: To ensure the stability of the structure, please pay attention to the hole position when locking screws. CL slide should lock on the first hole position near the pulley, CR slide lock on the second hole position near the pulley.

Step 5


E




3.5 x 12MM

E x 8



H




HX2

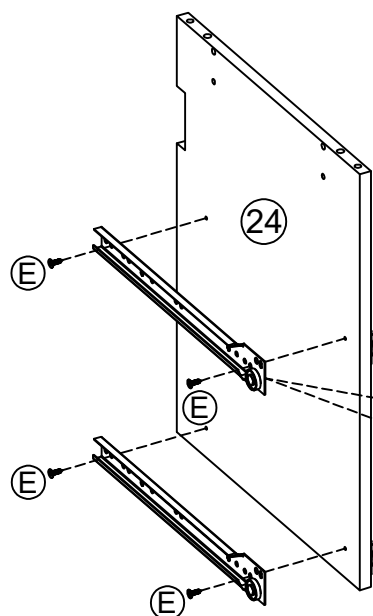

Install first rail on the right side of board.

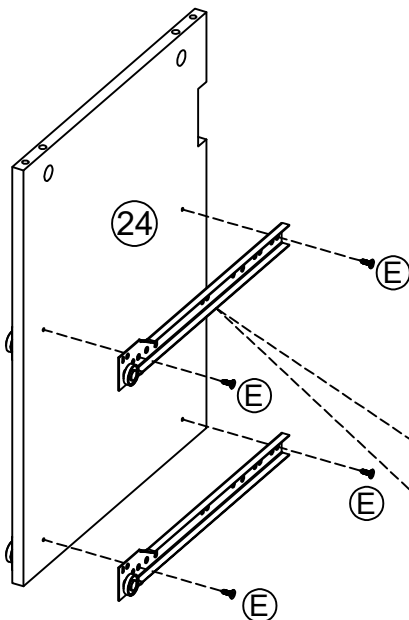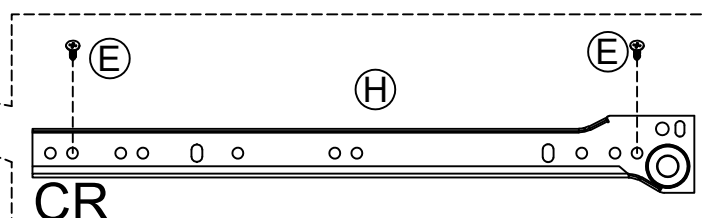


Install second rail on the left side of board.

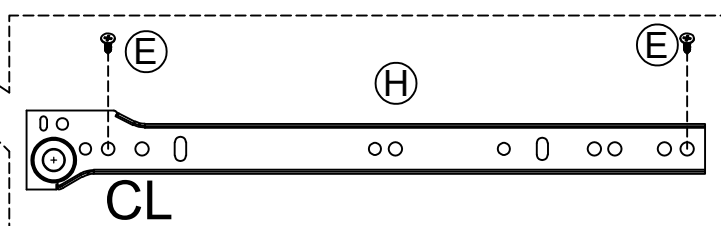

NOTICE: To ensure the stability of the structure, please pay attention to the hole position when locking screws. CL slide should lock on the first hole position near the pulley, CR slide lock on the second hole position near the pulley.

Step 6

A



Ax4

B





BX4

D



8 x 30MM


D x 4

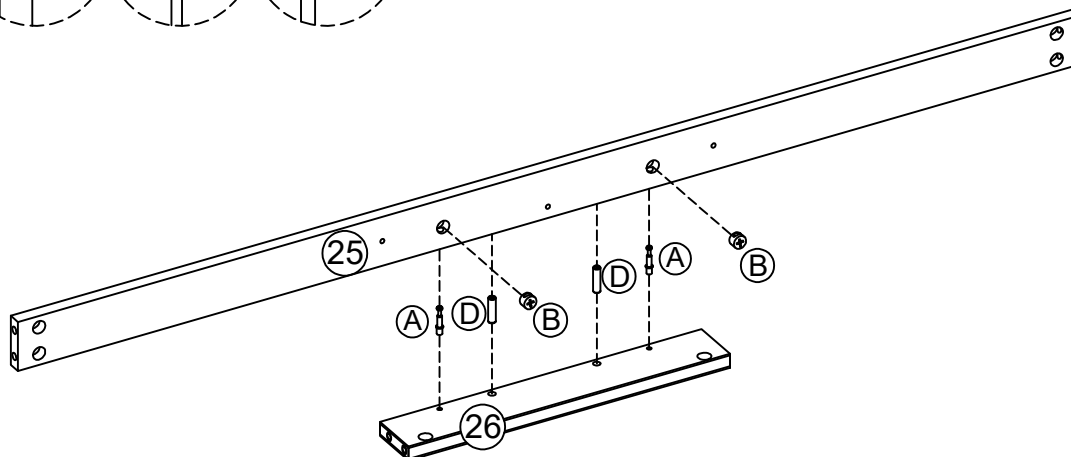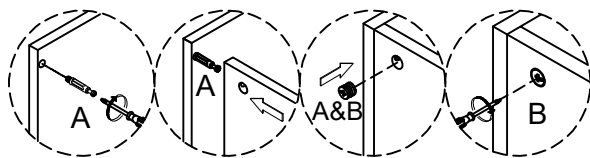

X2

Step 7

A



Ax4

B





BX4

C



6 x 30MM

C x 4

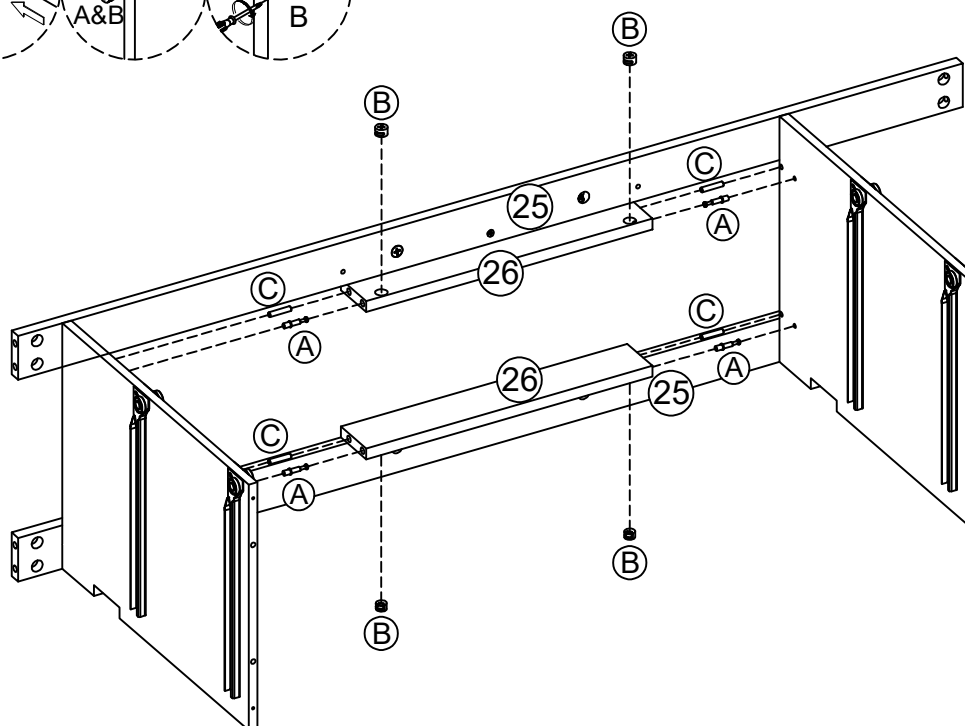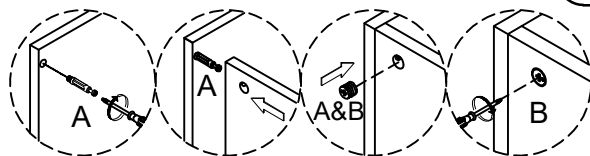


Step 8

F



F x 4

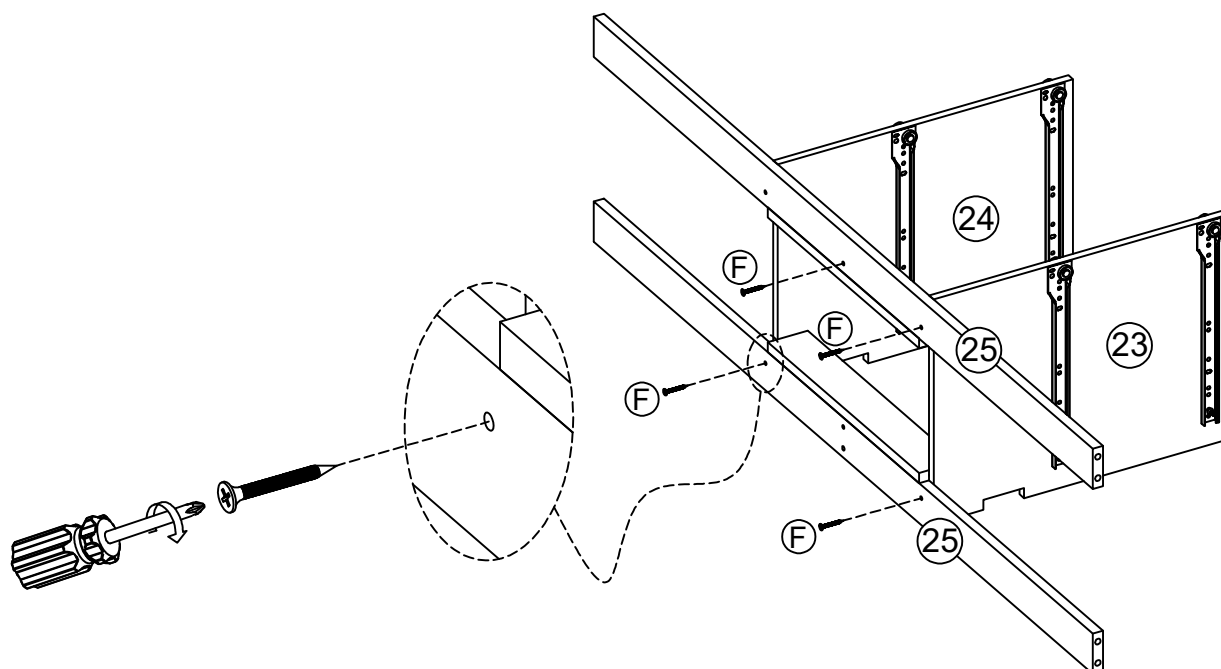


Step 9






F








F x 2

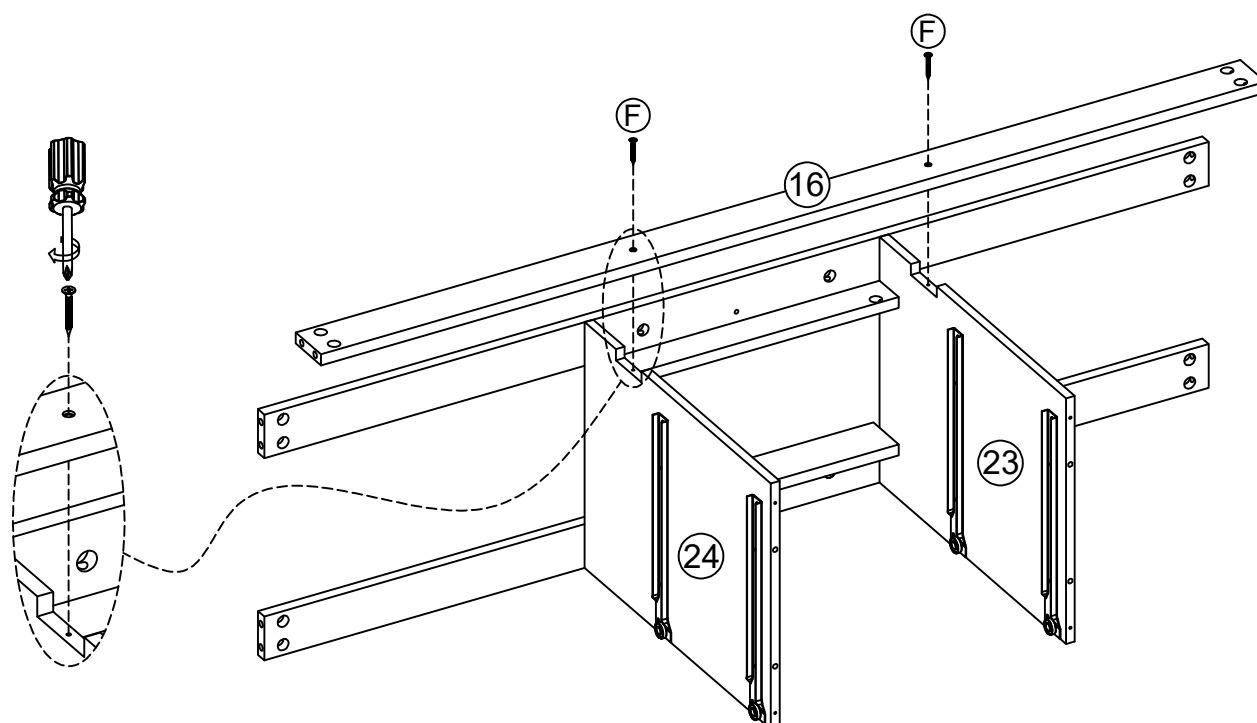

Step 10

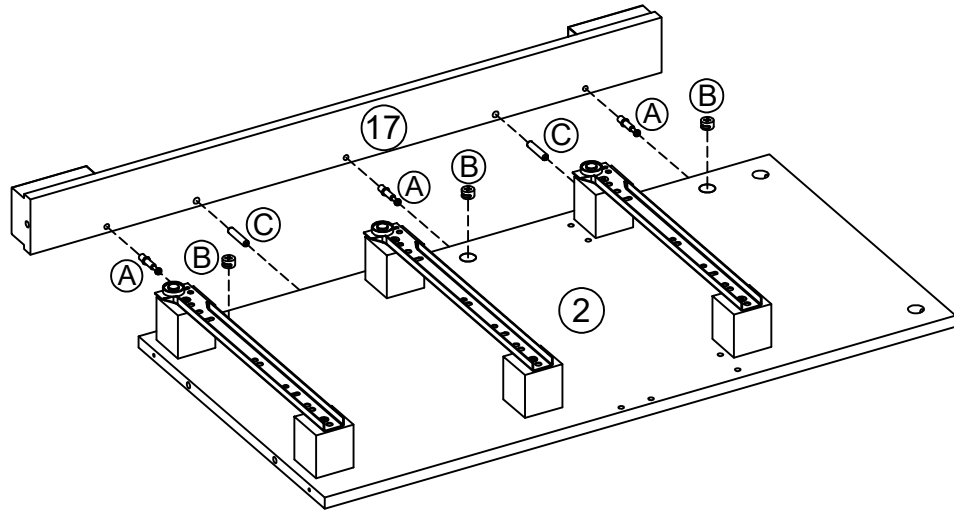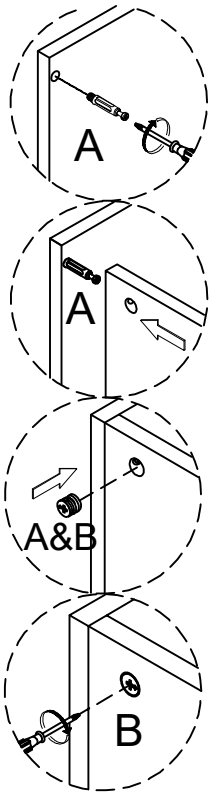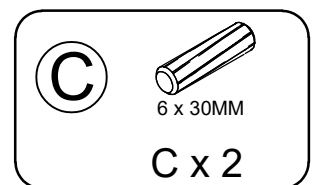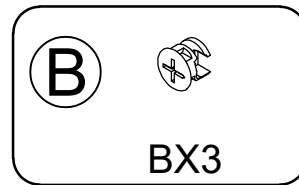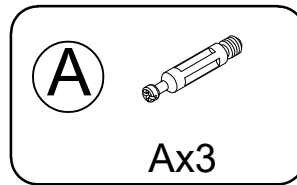


Step 11

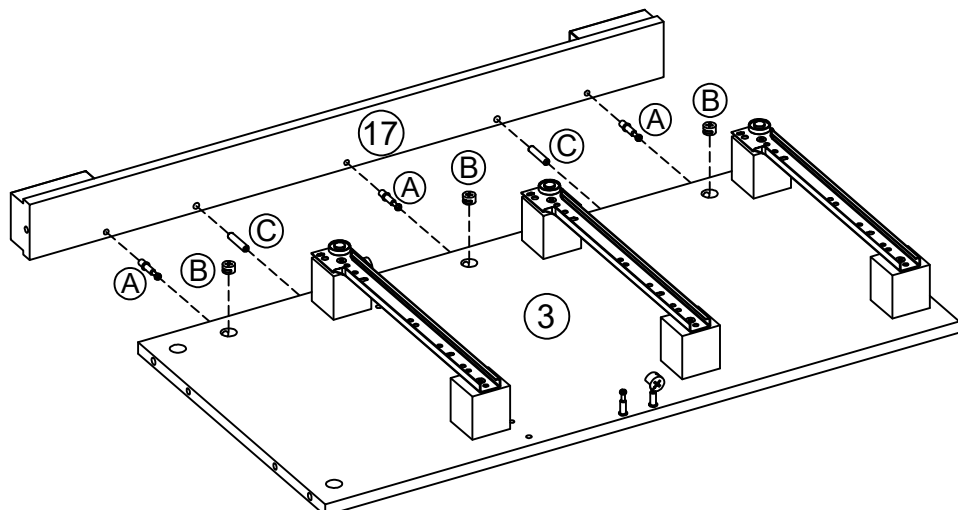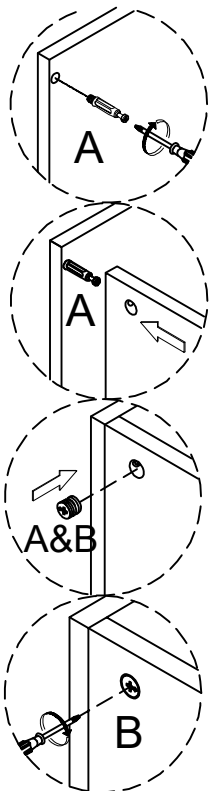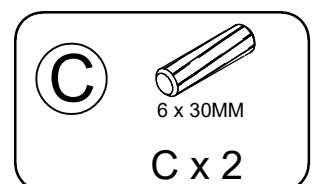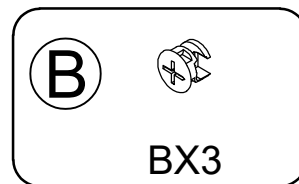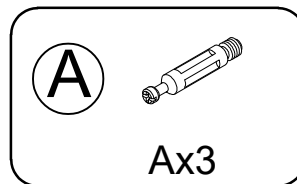

Step 12

A





Ax6

B




BX6

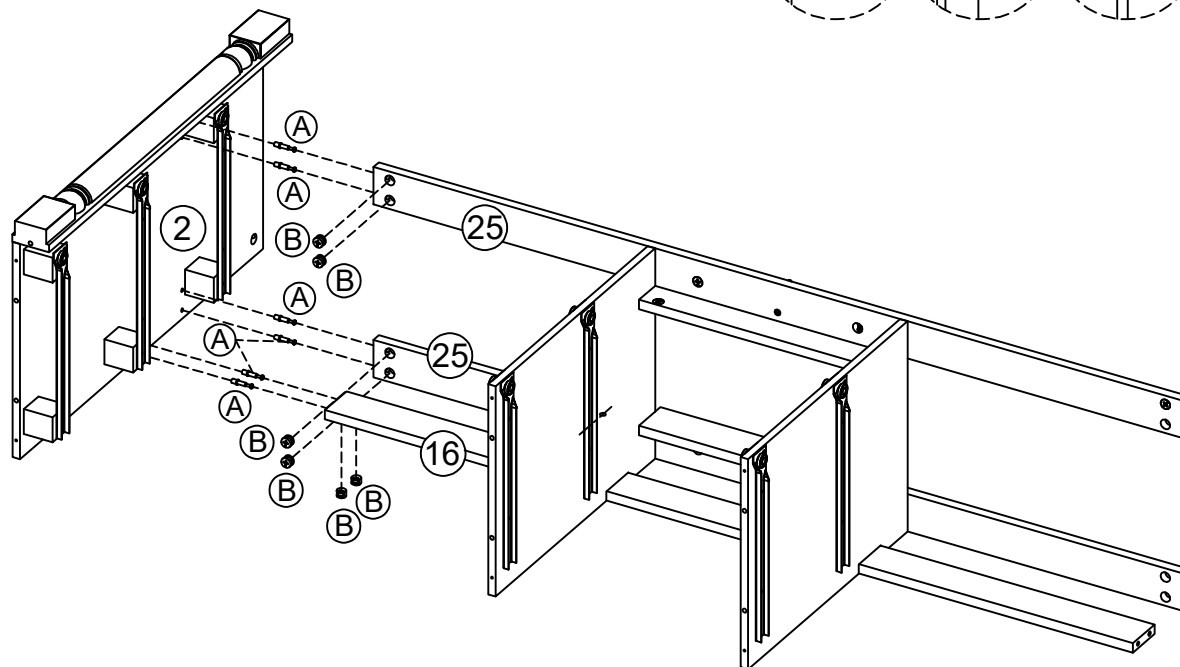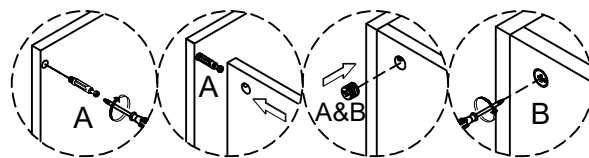

Step 13

A





Ax6

B



BX6

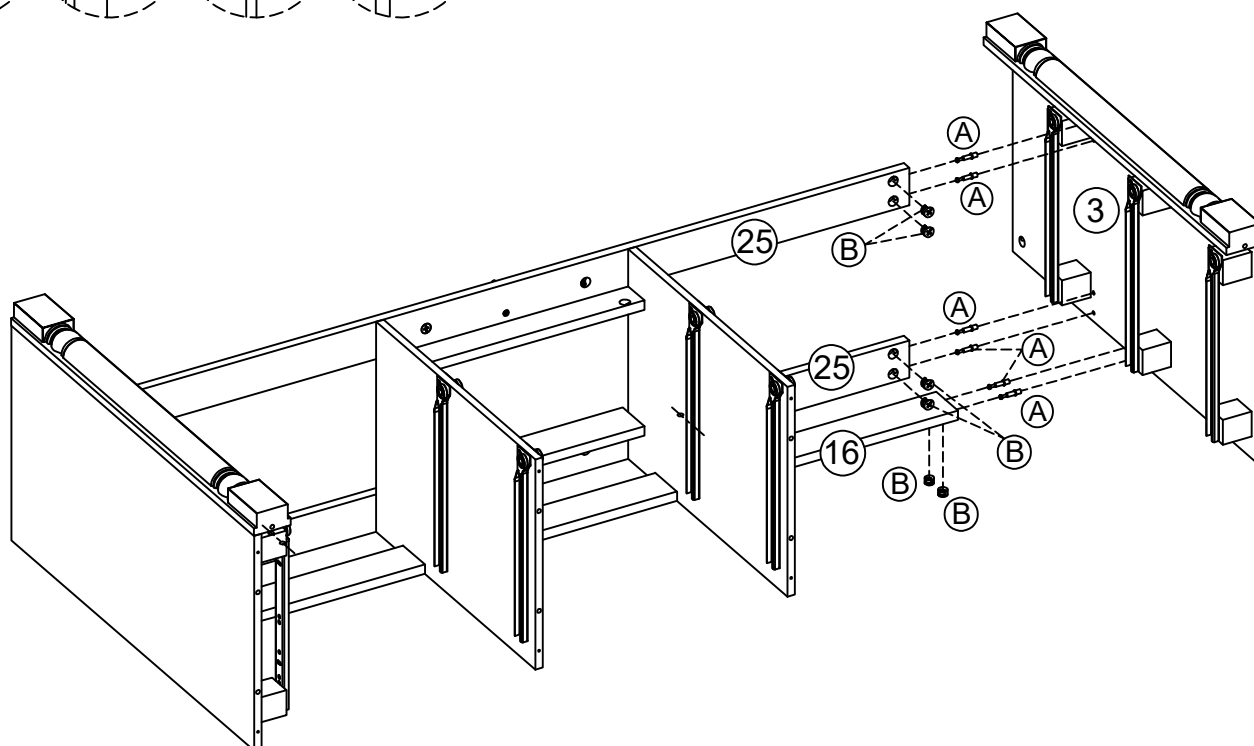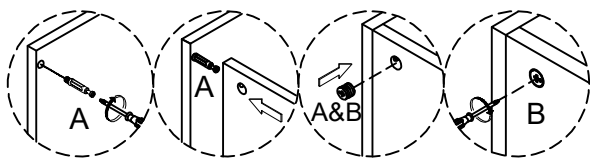

Step 14

C



6 x 30MM


C x 10

F




3.5 x 35MM

F x 8

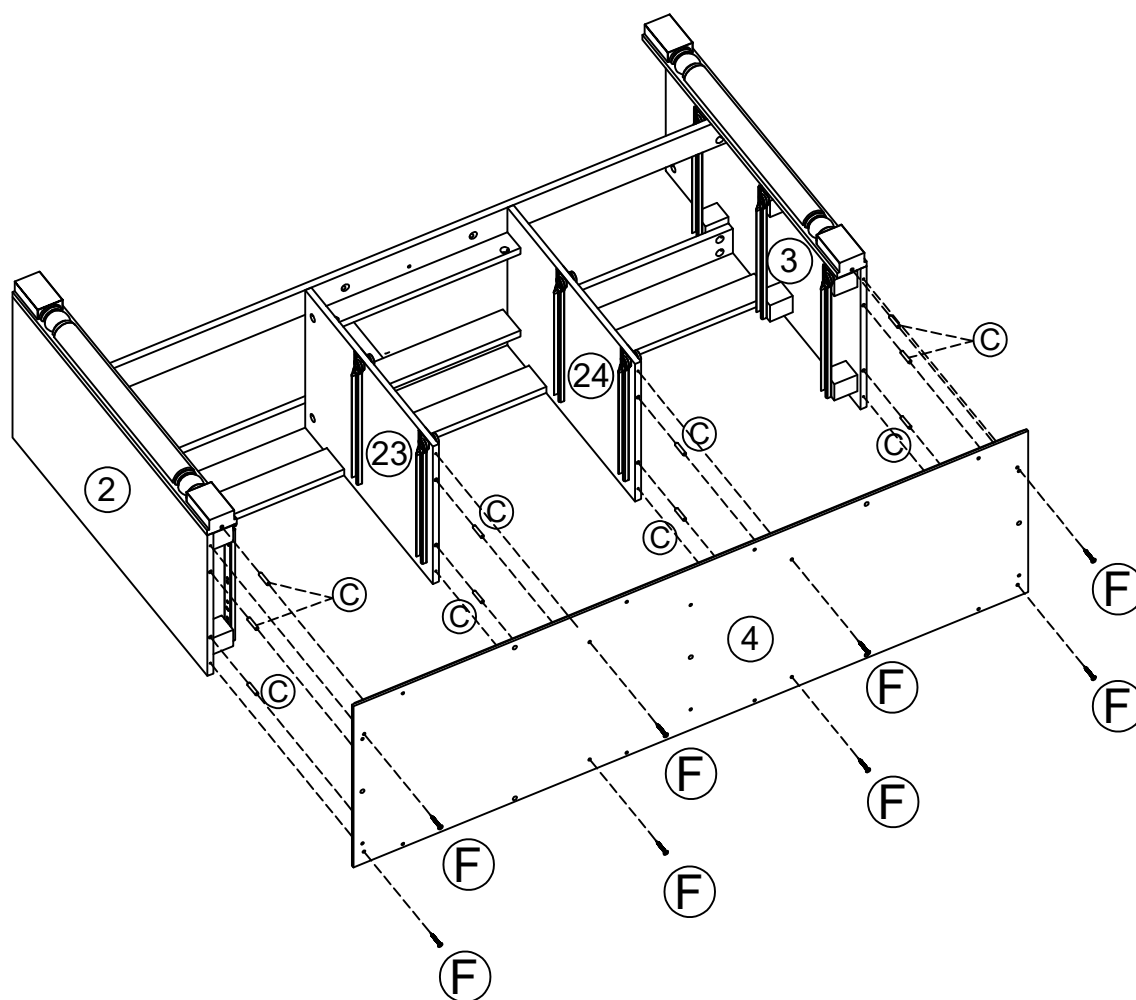

Step 15

A





Ax5

B




BX5

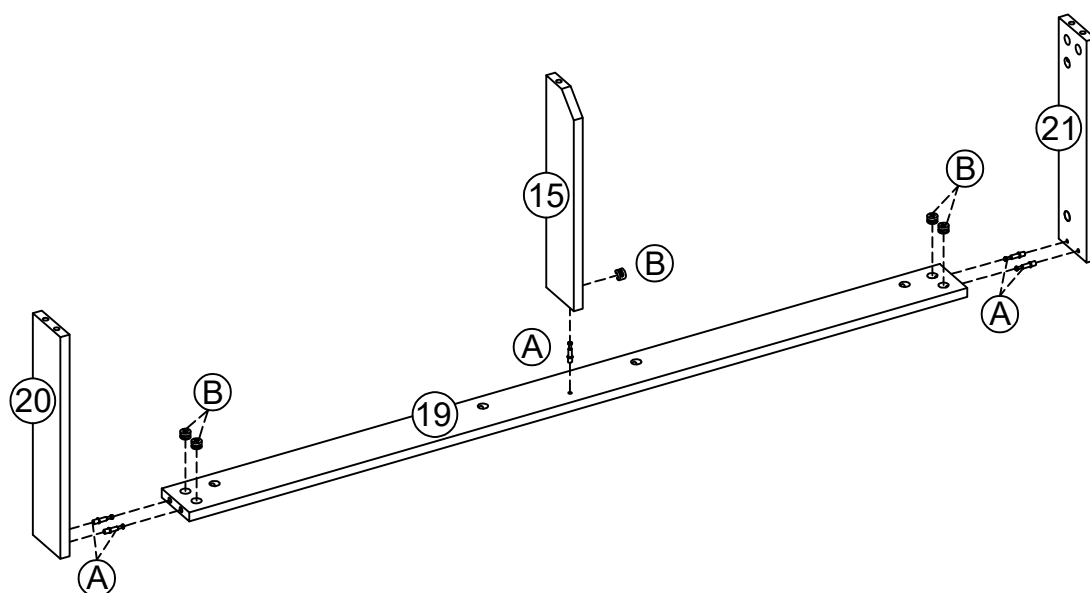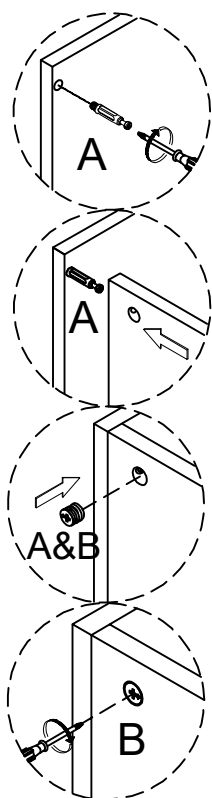

Step 16

A





Ax5

B




BX5

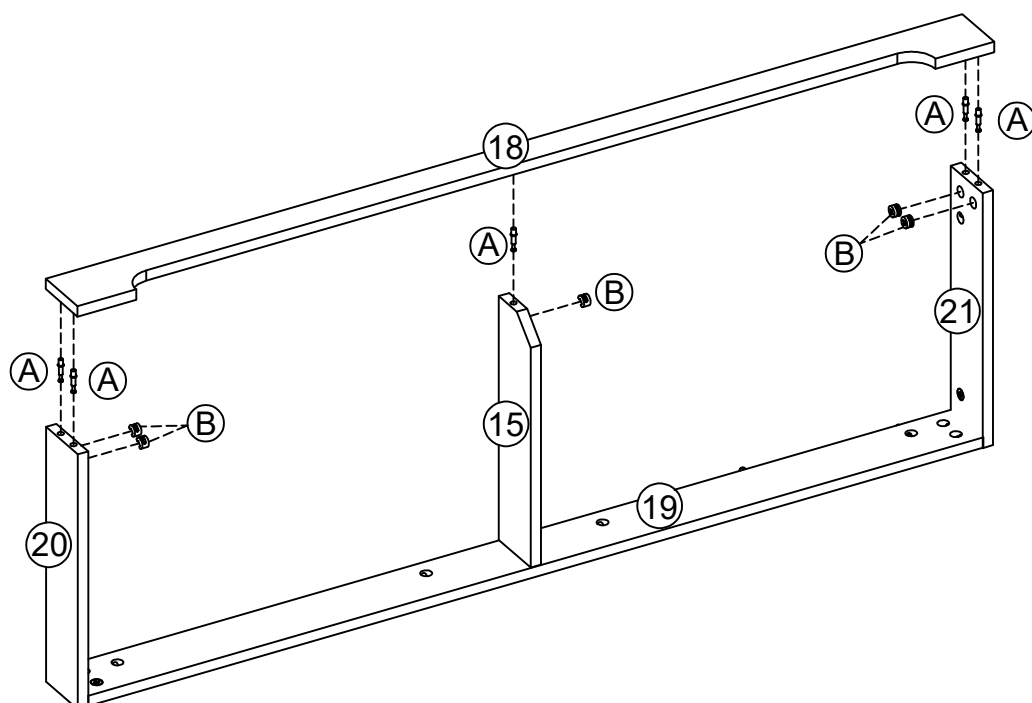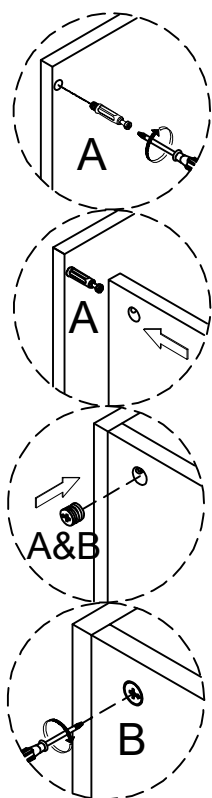

Step 17

A




Ax14

B





BX14

D



8 x 30MM

D x 7

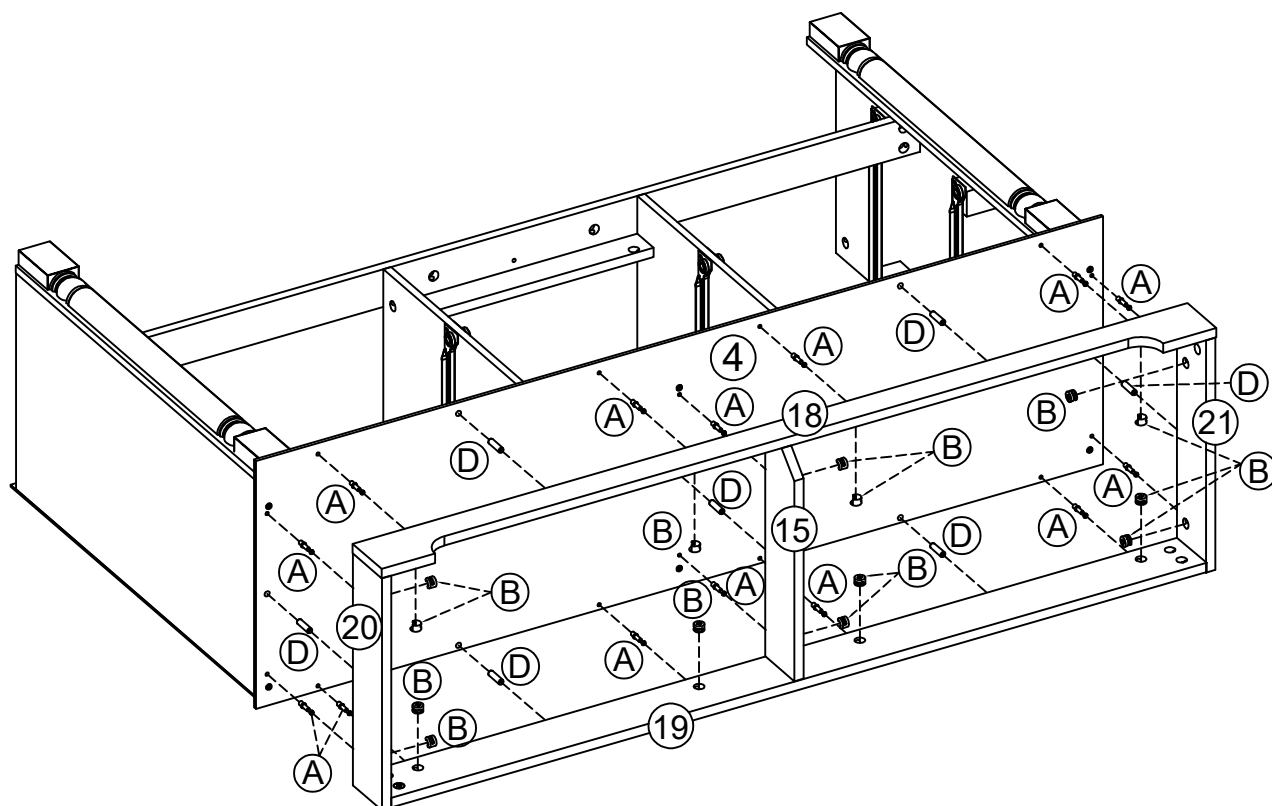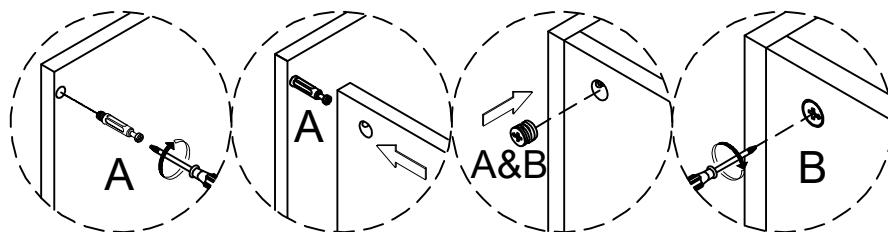

Step 18

C



6 x 30MM


C x 2

F




3.5 x 35MM

F x 2

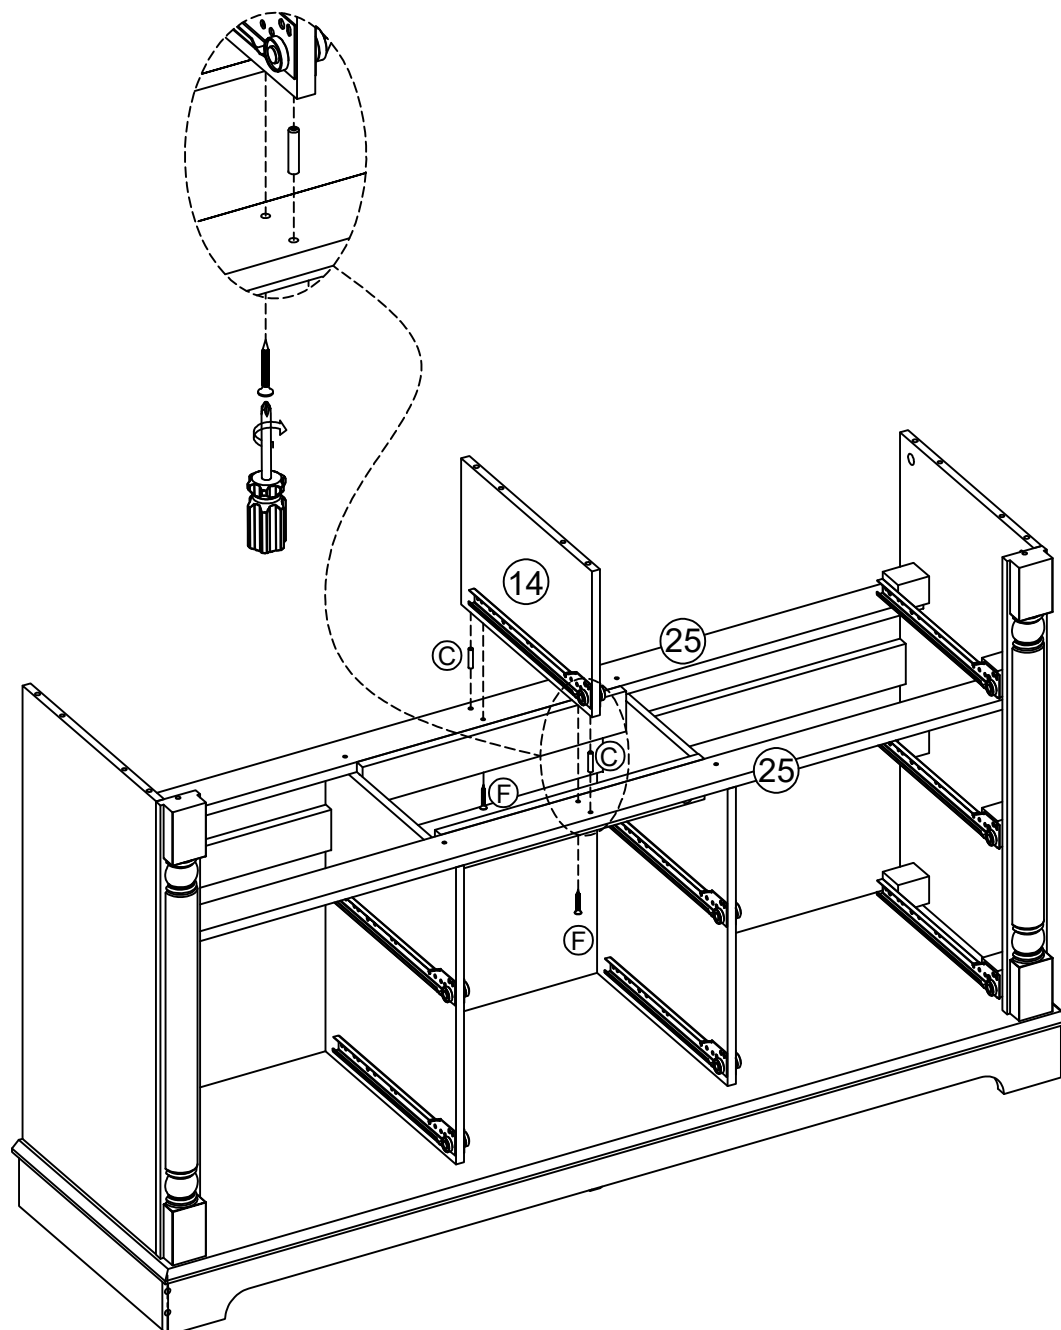

Step 19

A



Ax6

B





Bx6

C



6 x 30MM

C x 8

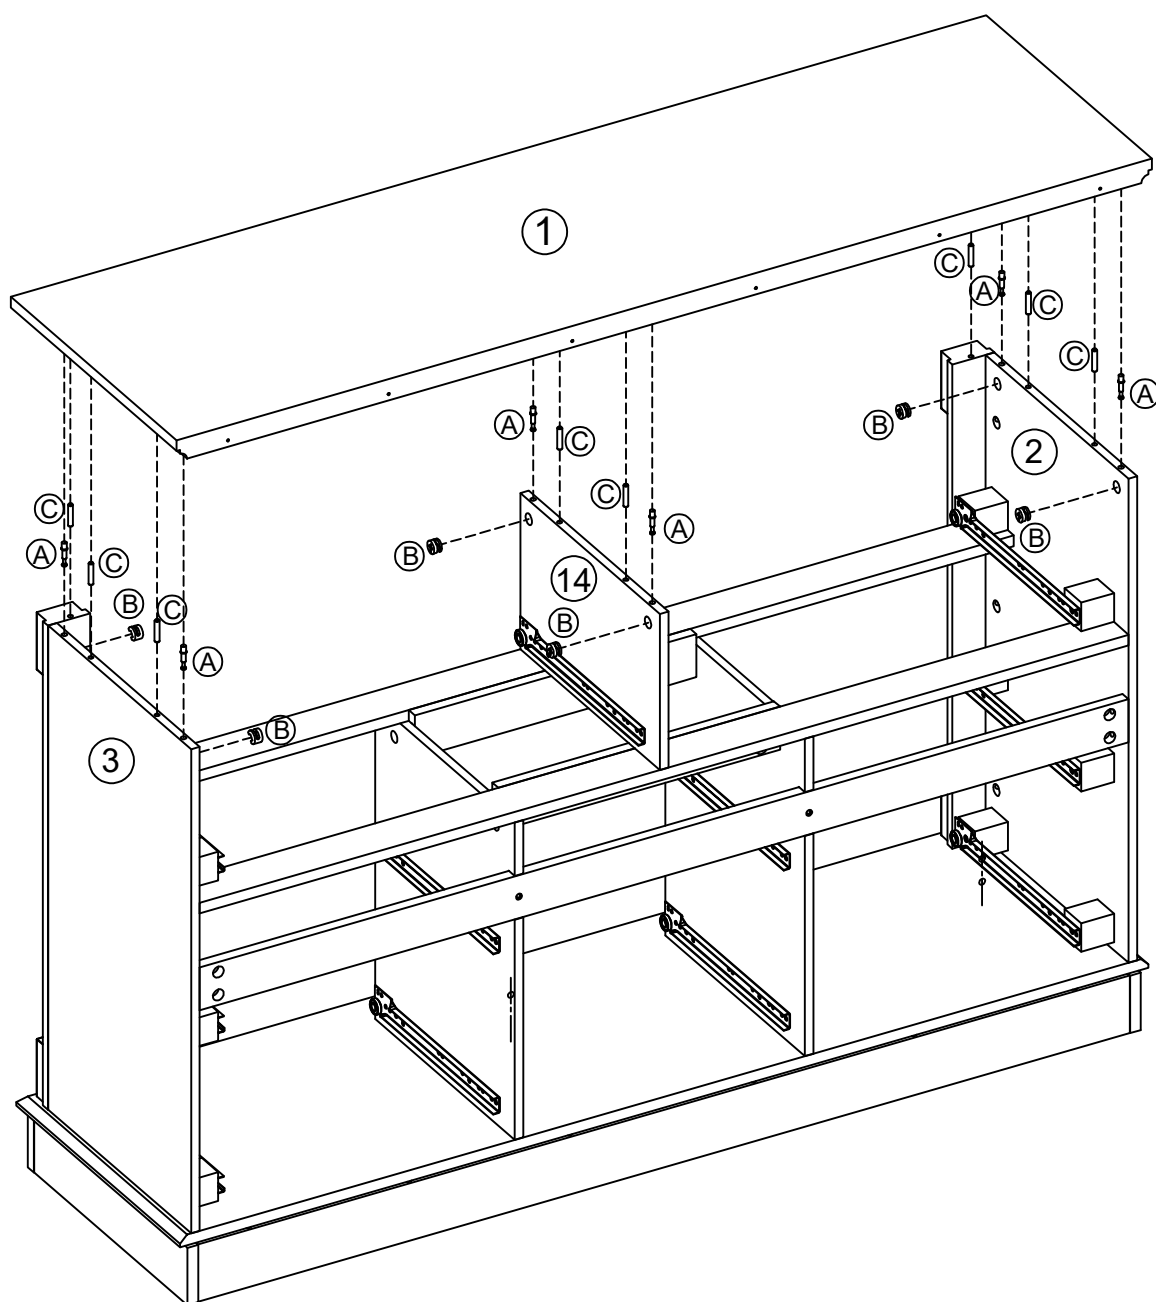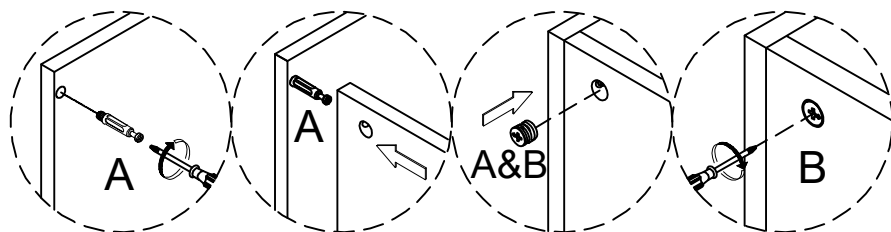

Step 20


I




3.5 x 12MM

I x 34






J




J x 1

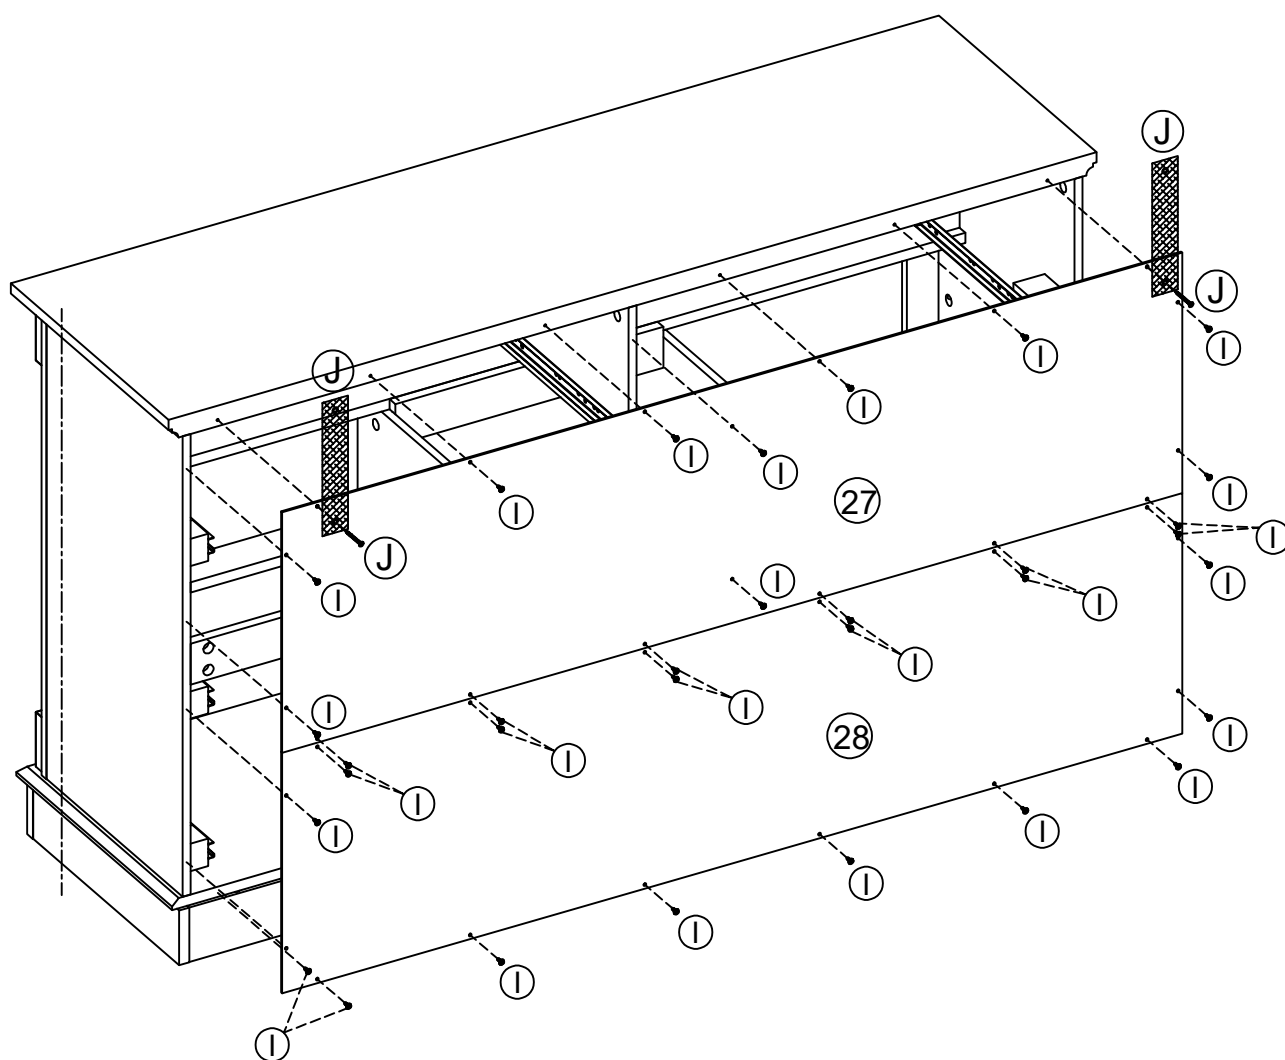


Step 21

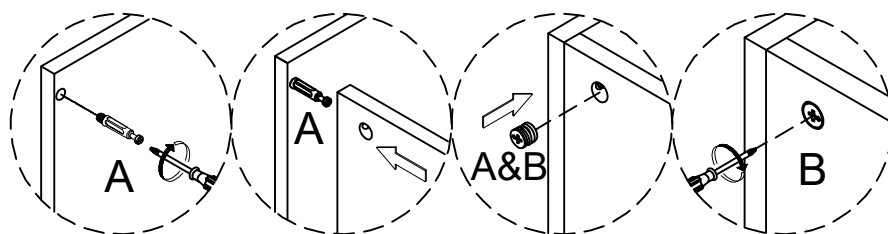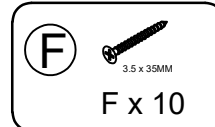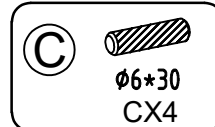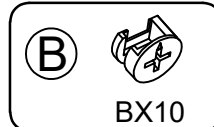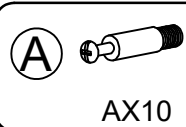

Step:1

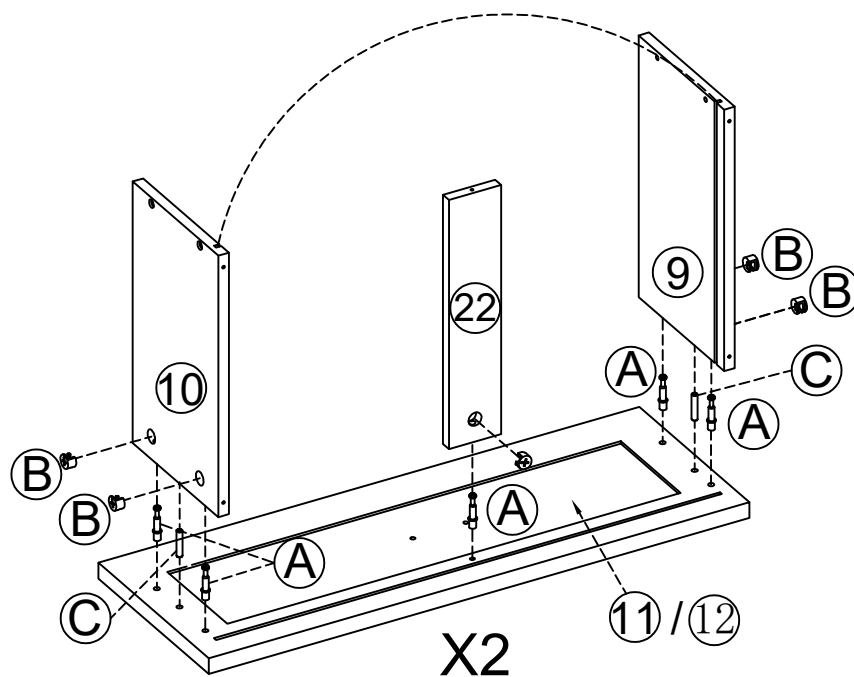

Step:2

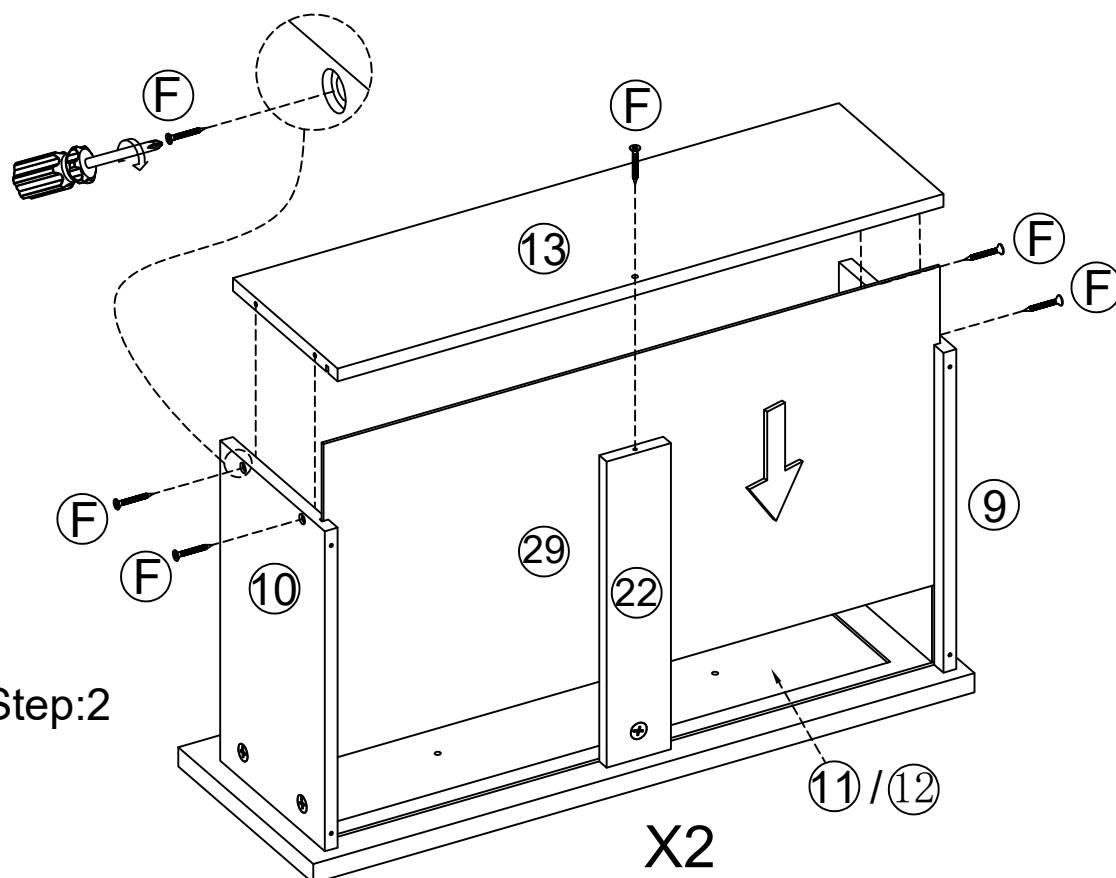

Step 22

G



M4 x 14MM


GX4

E



Ø3.5*12mm
EX8

H



HX2

L



L x 2sets

Install Third rail on the board.

-The roller is
facing backward

Step:1










X2

Install Third rail on the board.







Step:2

X2


Step 23

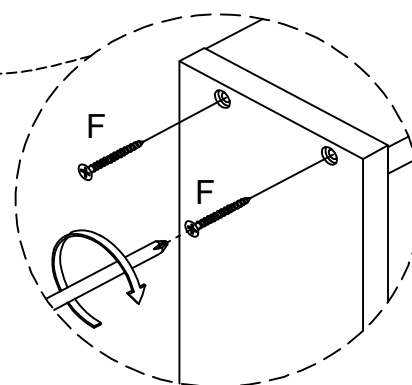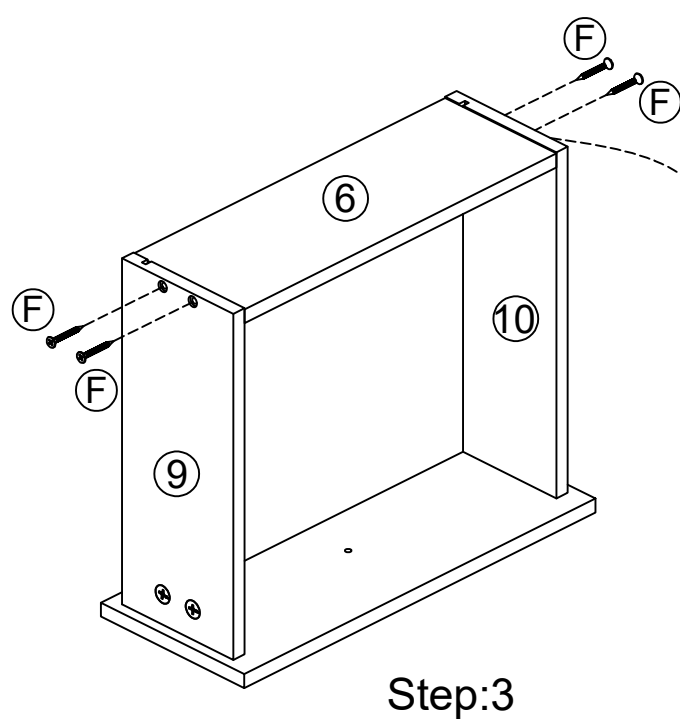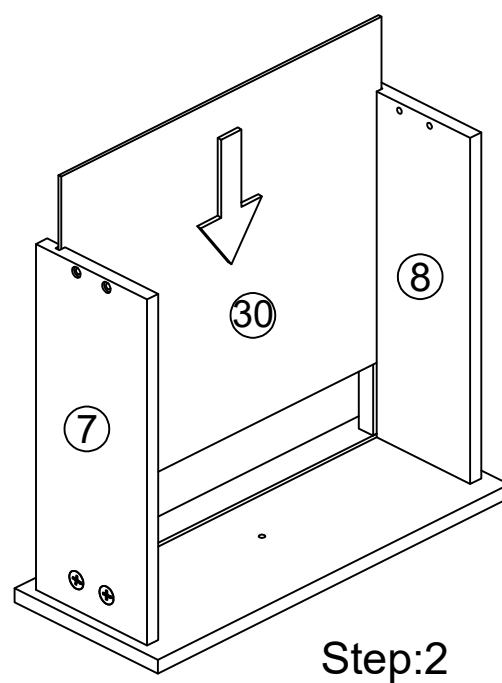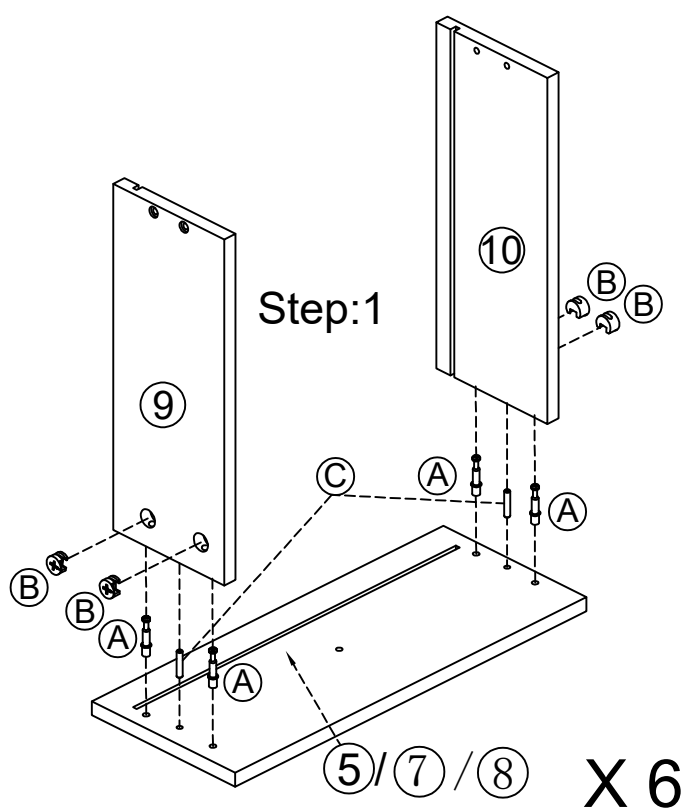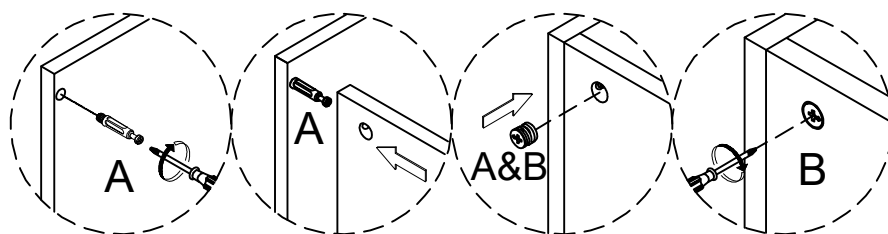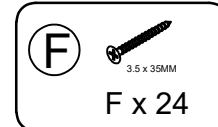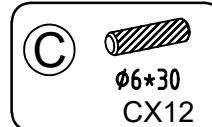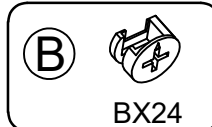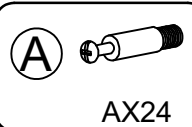

Step 24

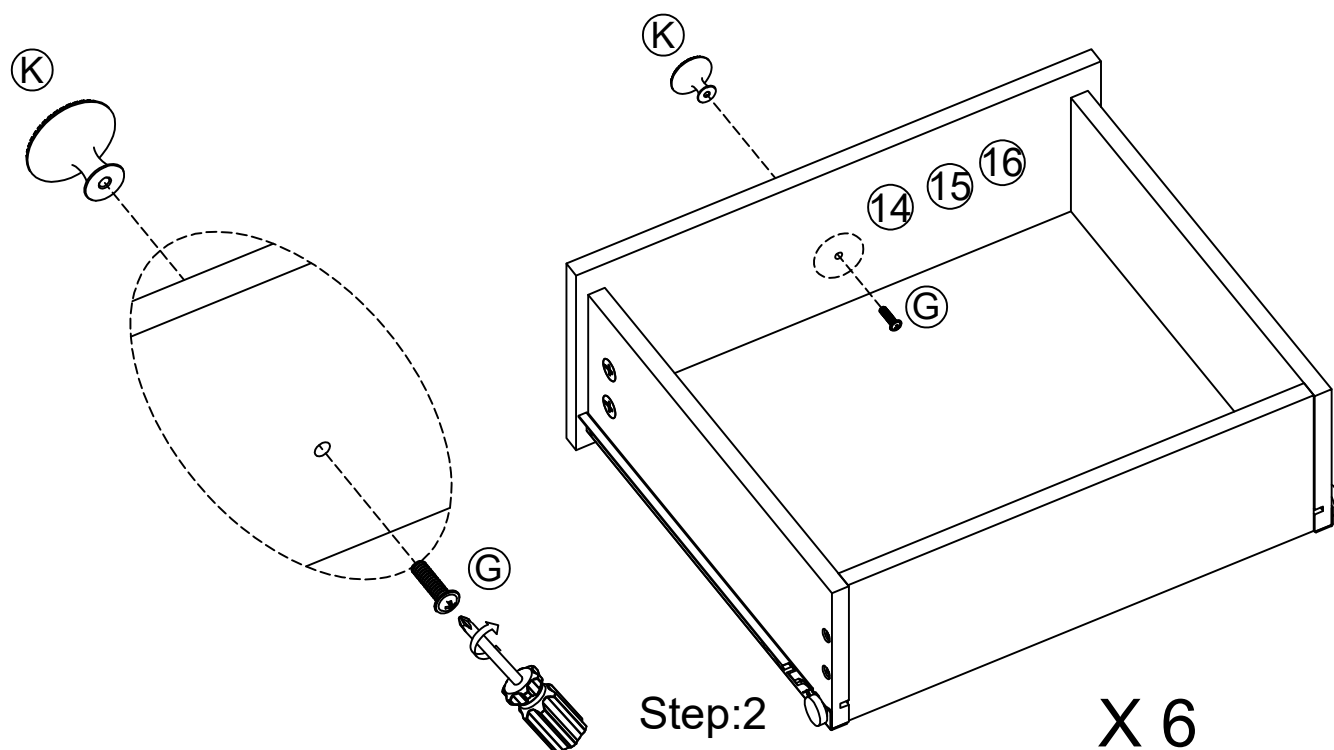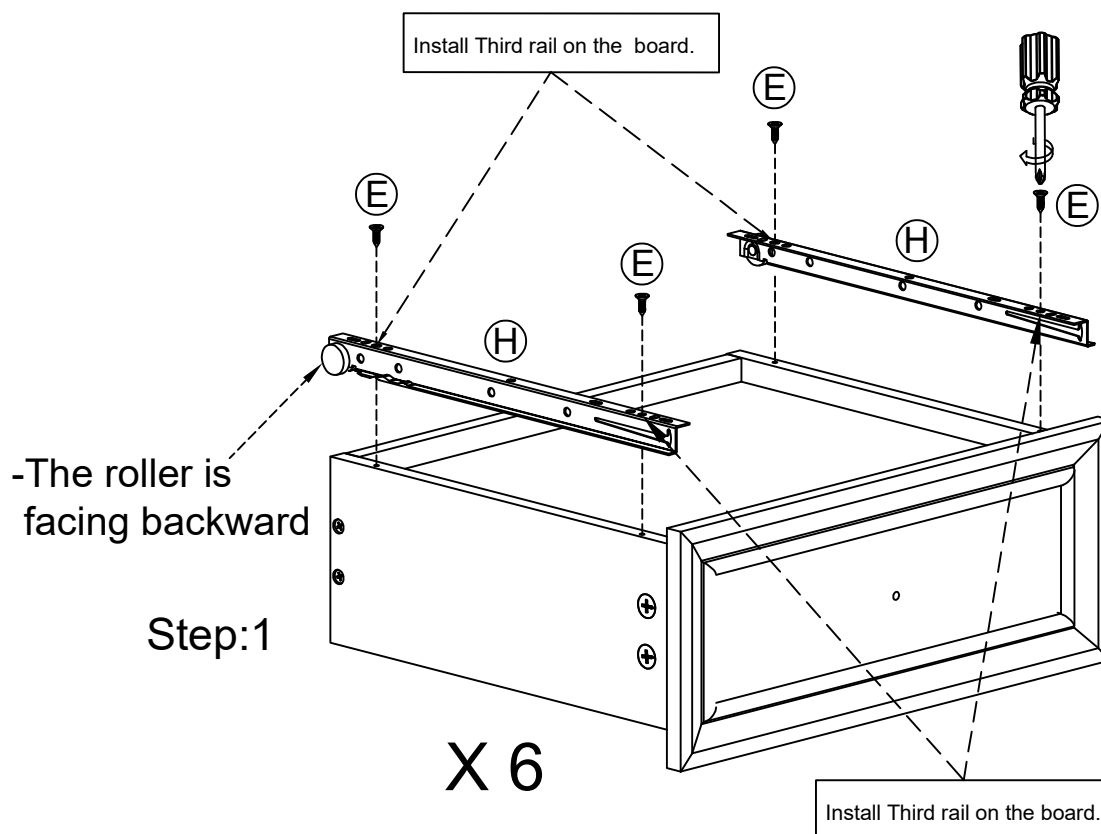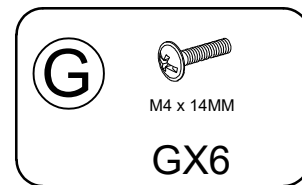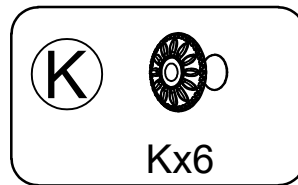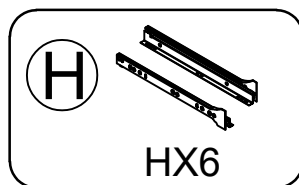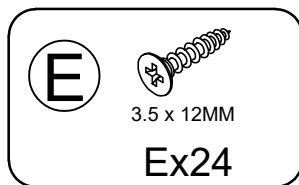

Step 25

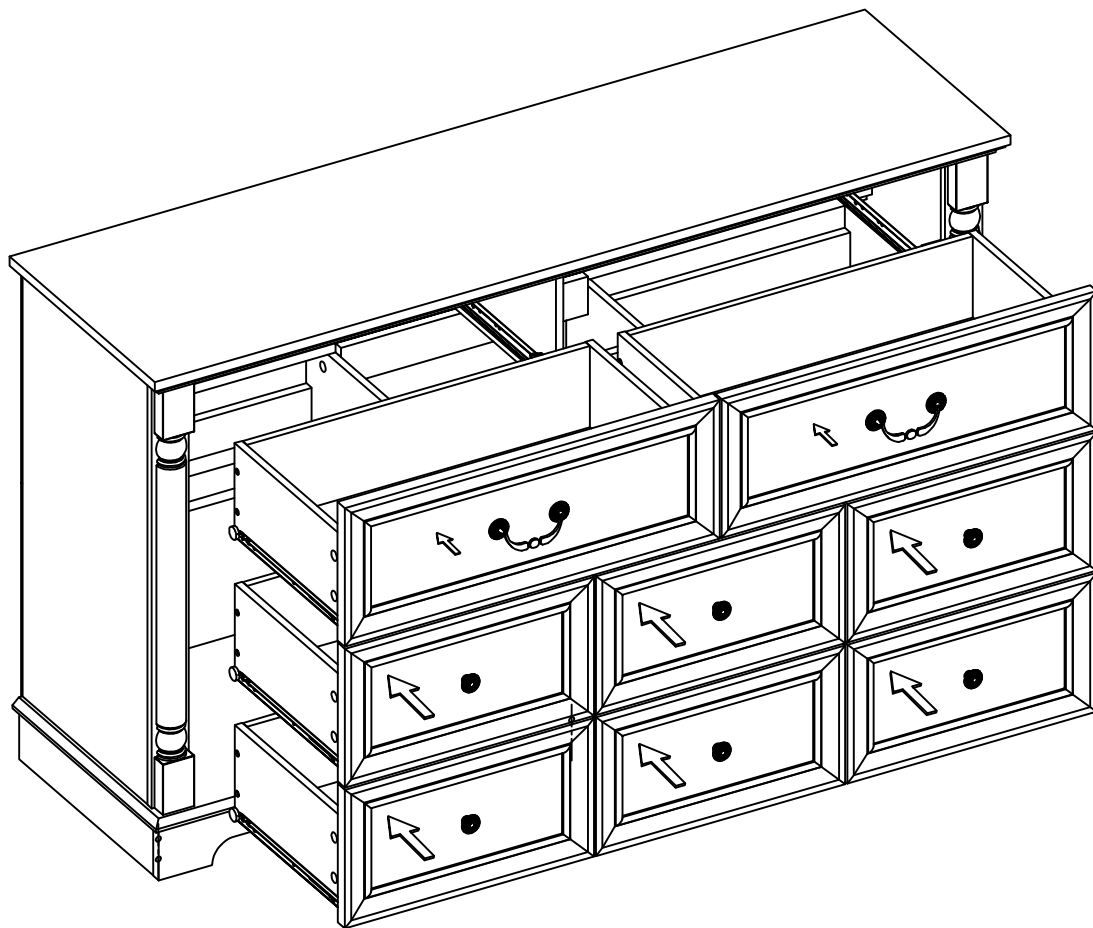

Step 26

J



J x 1

