

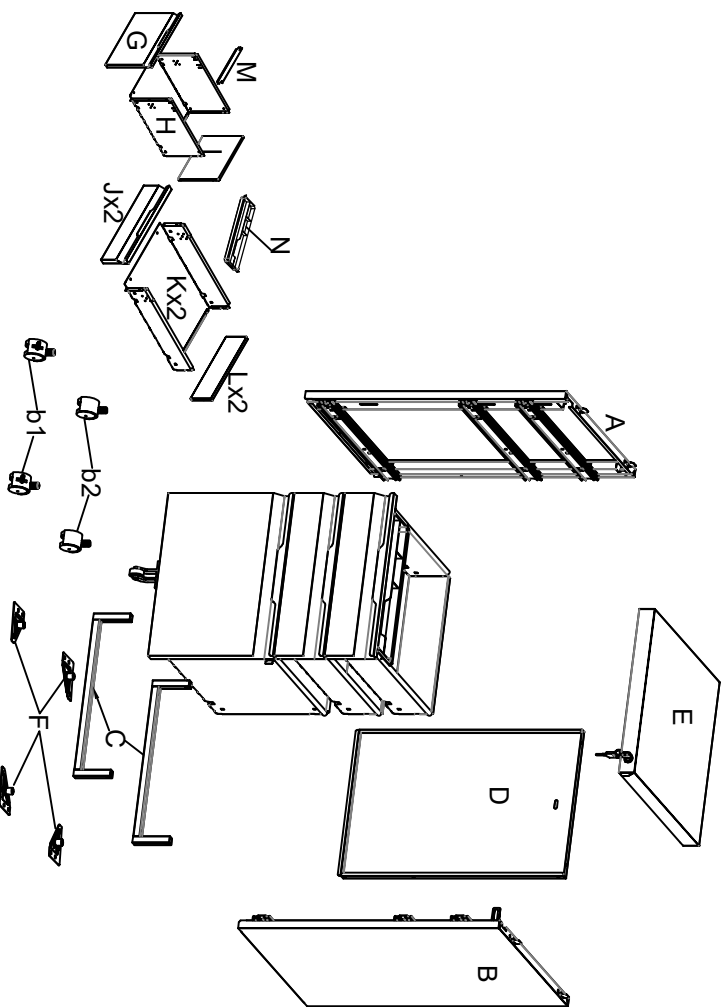


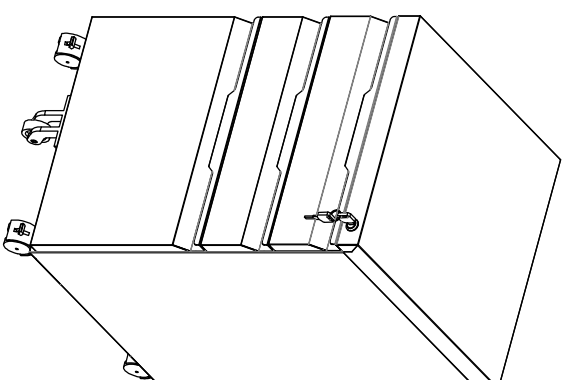


1

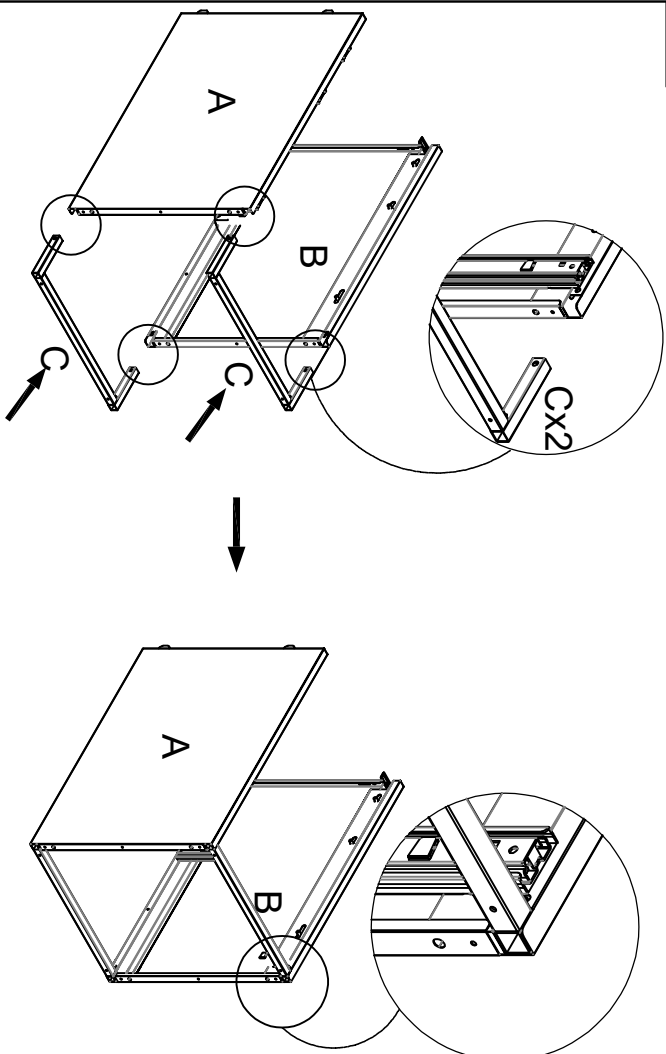


2

- g x 1
MAX10
a x 55
- b1
b x 4
- b2
- c x 1
- d x 8
- e x 3
- f1 x 3
- f2 x 3

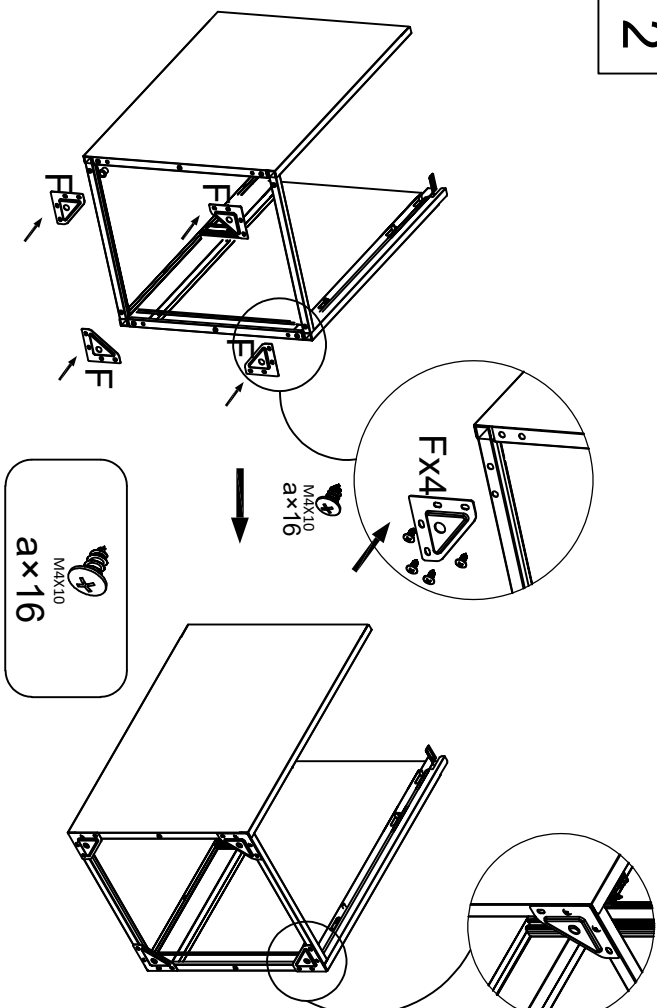


MAX10
a x 16


3

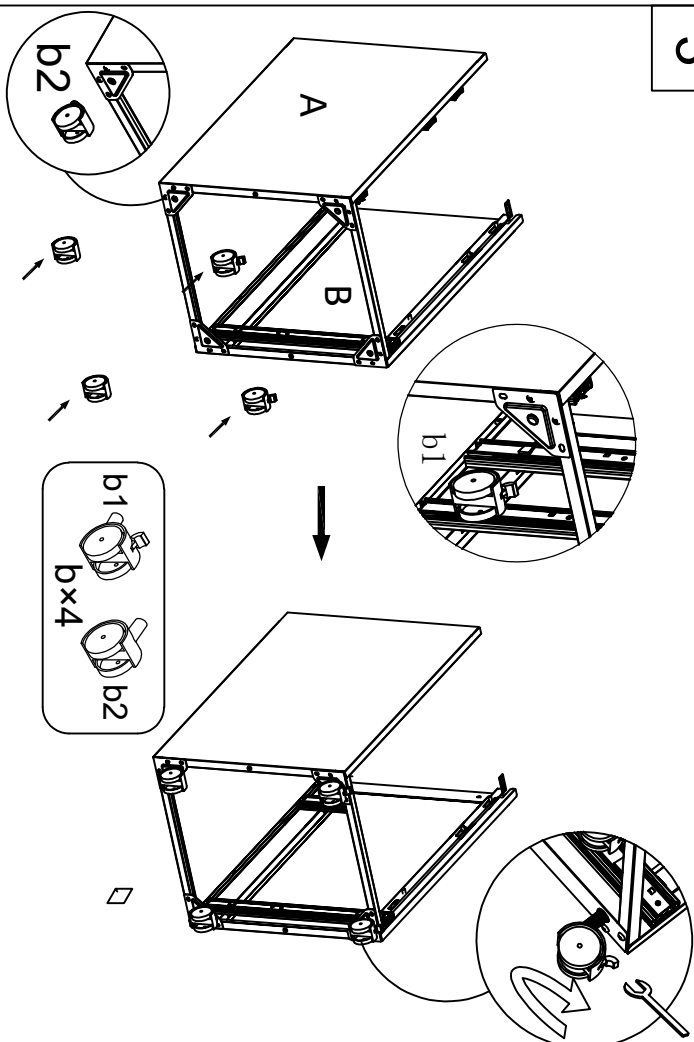


4

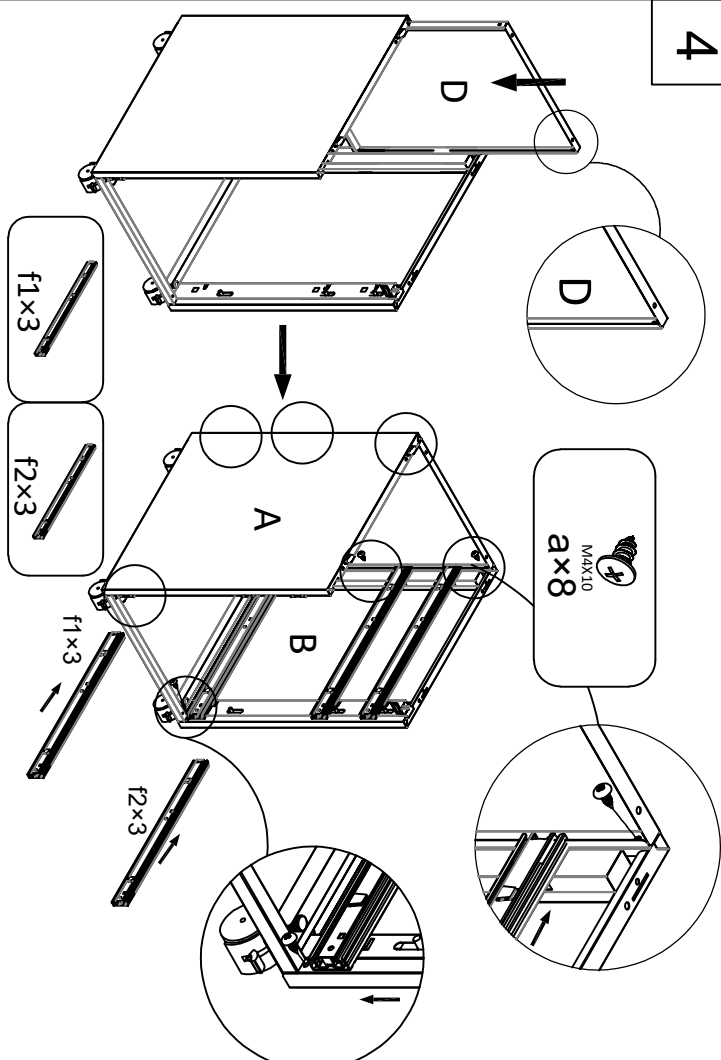


5

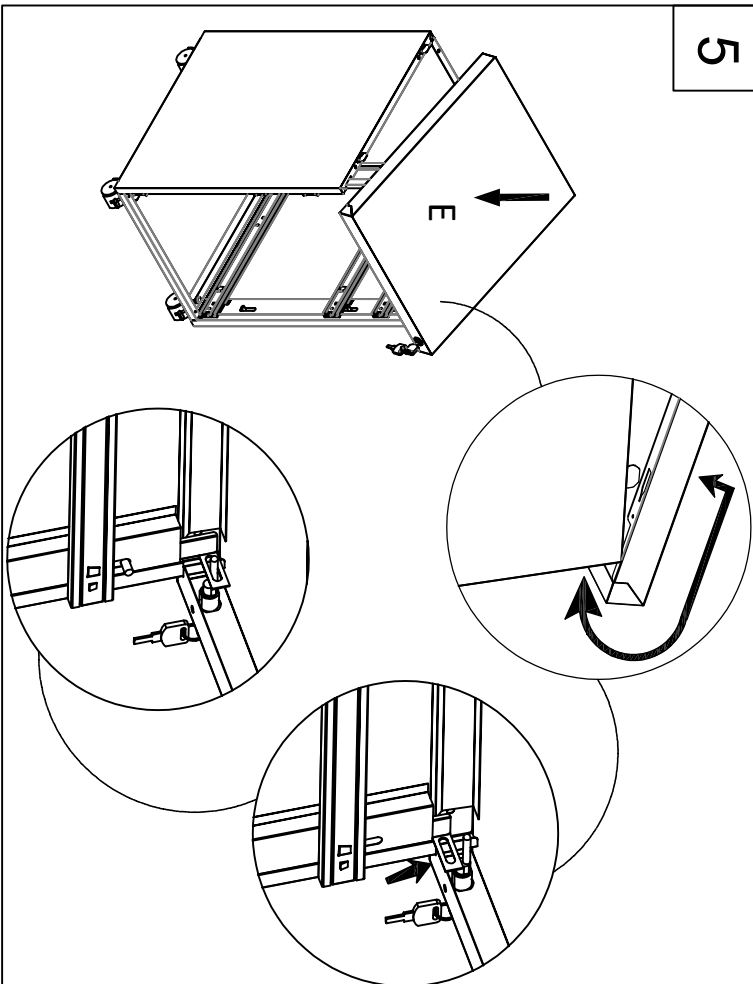


6

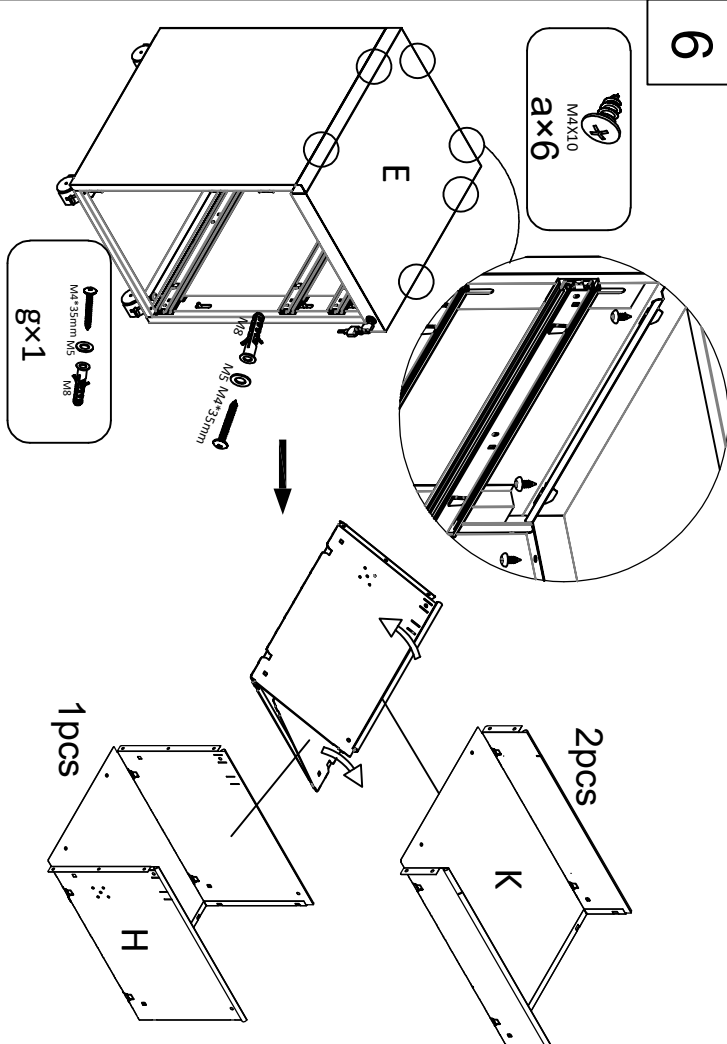


7

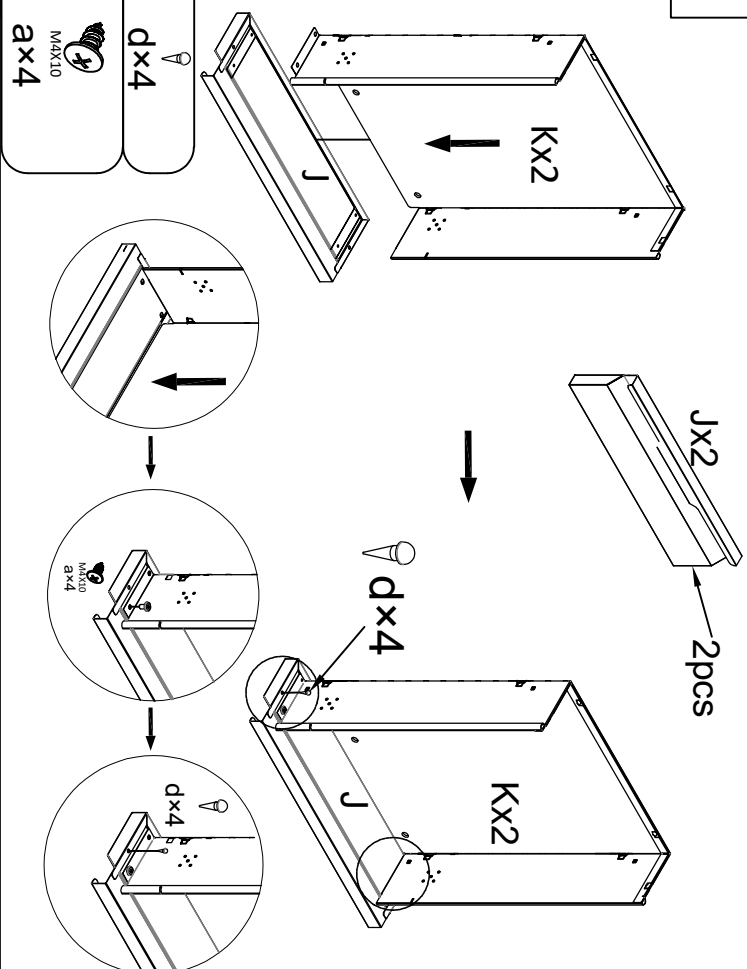


8

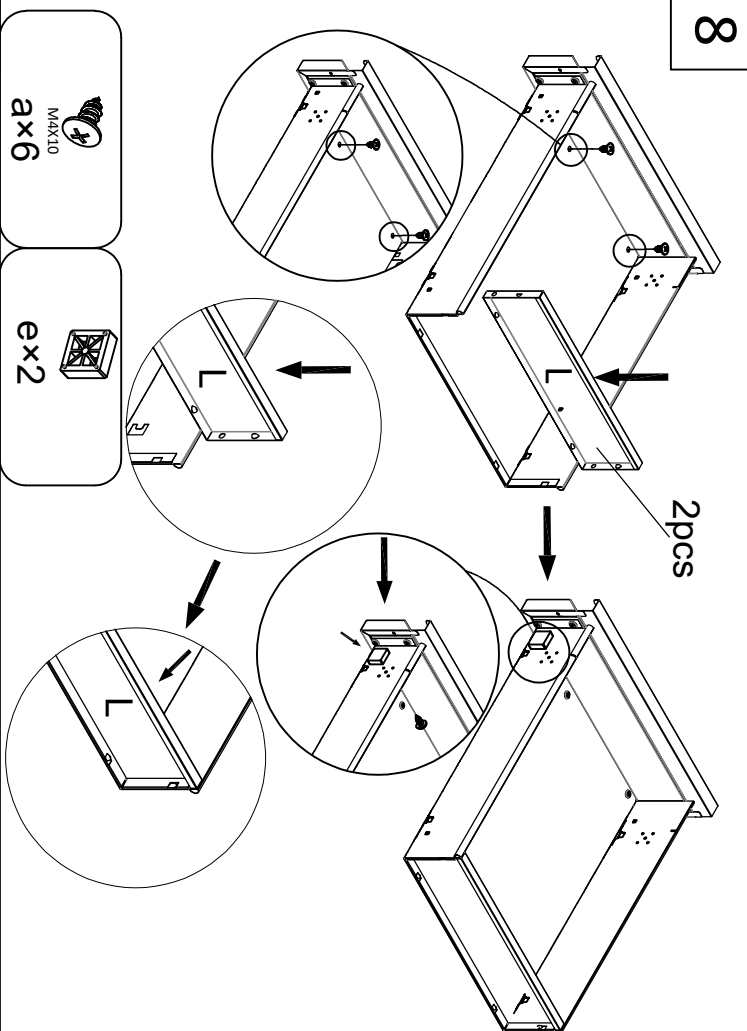

9

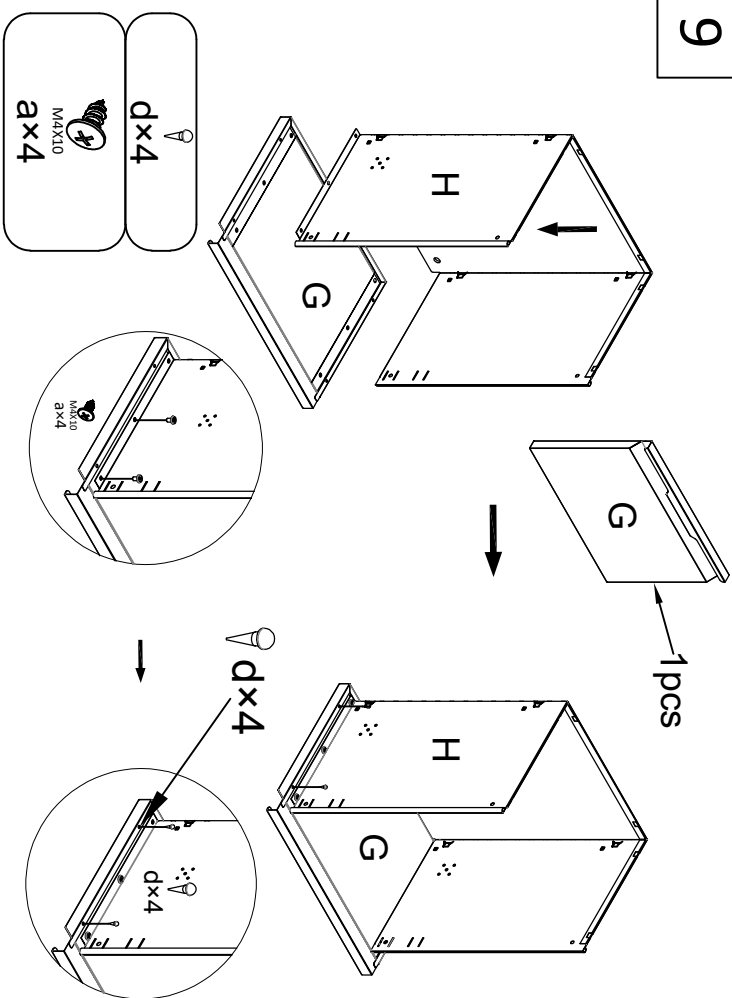

10

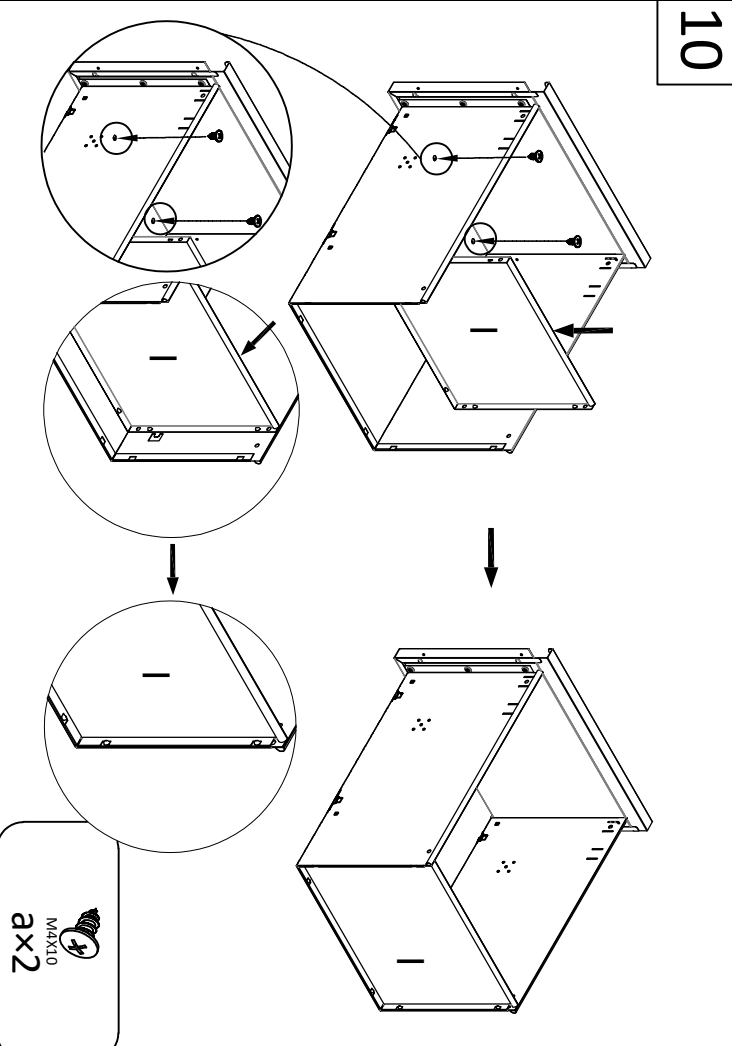

ANTI-TIP WALL ANCHOR INSTALLATION Tools Required:

Drill Screwdriver Pencil Stud finder (recommended) Installation: 1. Position furniture in its final location. 2. Locate a suitable wall stud or solid fixing point. 3. Attach the anti-tip bracket or strap to the furniture. 4. Secure the bracket or strap to the wall. 5. Ensure all screws are tightened firmly. 6. Verify the furniture cannot tilt forward. **IMPORTANT:** Wall fixing hardware supplied may not be suitable for all wall types. Consult a qualified installer if unsure.