


Dresser-9 Drawers

SHX12092

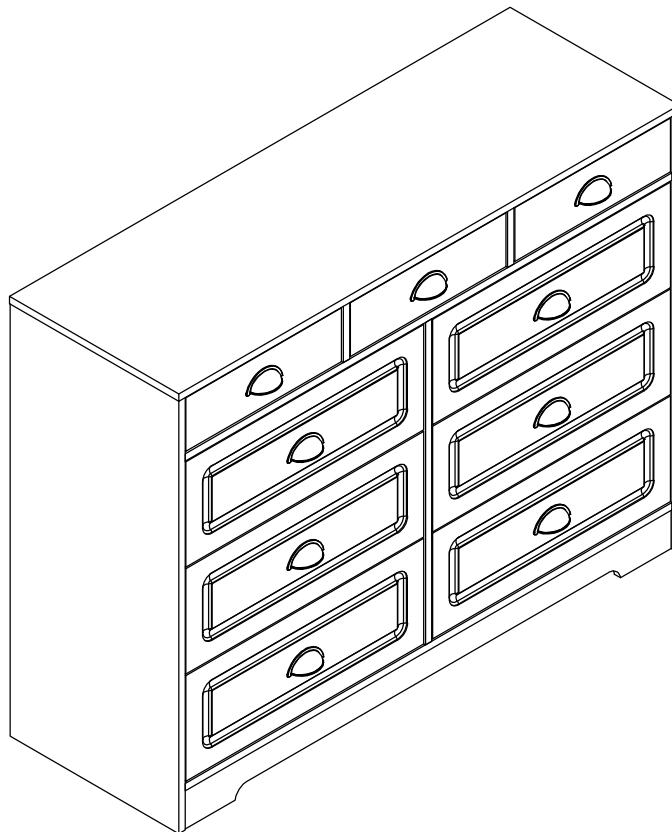

Instruction Manual

Thank you for shopping with us!























We appreciate your purchase and are ready to be at your service!

If you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!


We will definitely give you a satisfactory solution or answer then!

Contact us at our after-sales service email: **CSsince1987@hotmail.com**


PART LIST

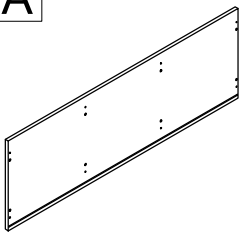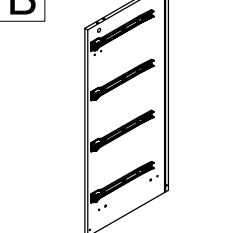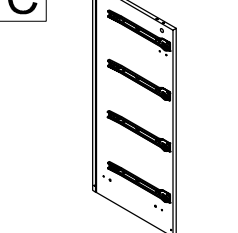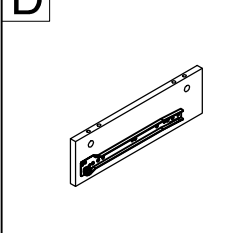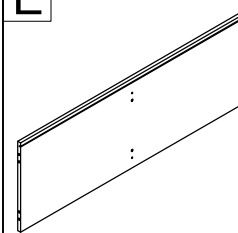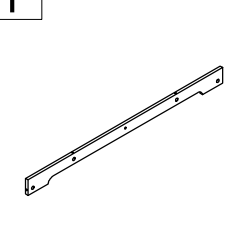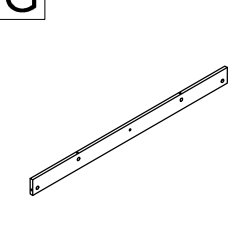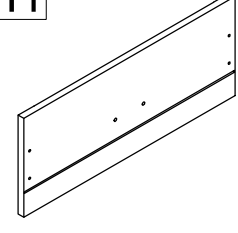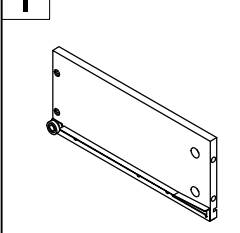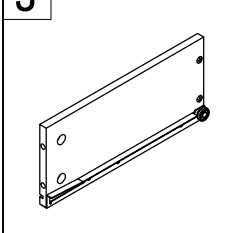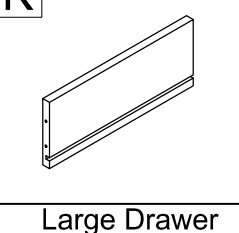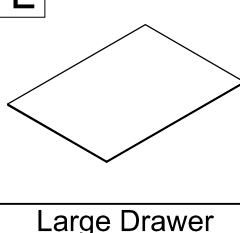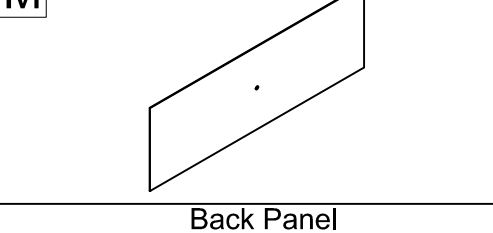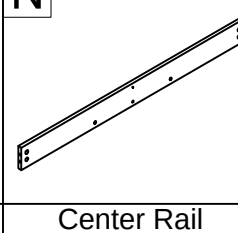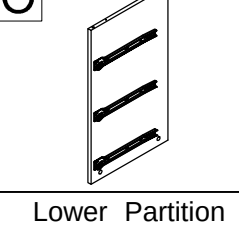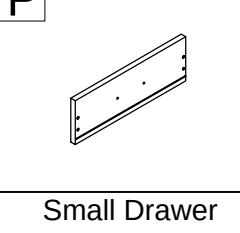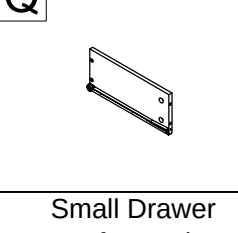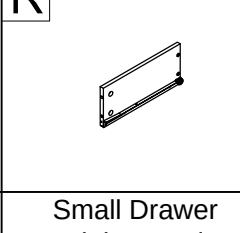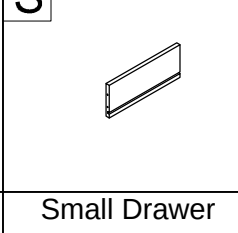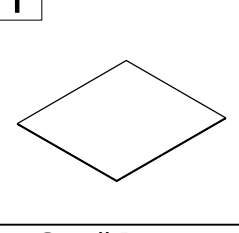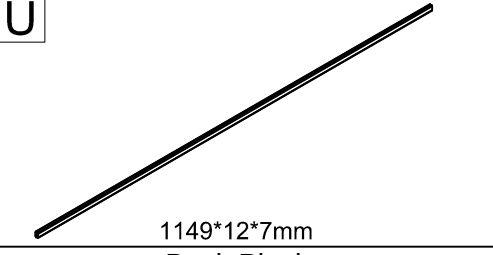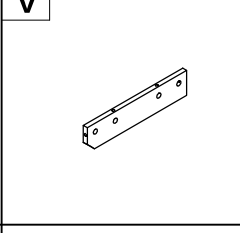				
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Upper Partition Panel 2 PCS	Bottom Panel 1 PC
				
Front Foot Board 1 PC	Rear Foot Board 1 PC	Large Drawer Front Panel 6 PCS	Large Drawer Left Panel 6 PCS	Large Drawer Right Panel 6 PCS
				
Large Drawer Back Panel 6 PCS	Large Drawer Bottom Panel 6 PCS	Back Panel 2 PCS		Center Rail 1 PC
				
Lower Partition Panel 1 PC	Small Drawer Front Panel 3 PCS	Small Drawer Left Panel 3 PCS	Small Drawer Right Panel 3 PCS	Small Drawer Back Panel 3 PCS
				
Small Drawer Bottom Panel 3 PCS	1149*12*7mm Back Plastic Strip 1 PC		Center Foot Board 1 PC	


ASSEMBLY OVERVIEW

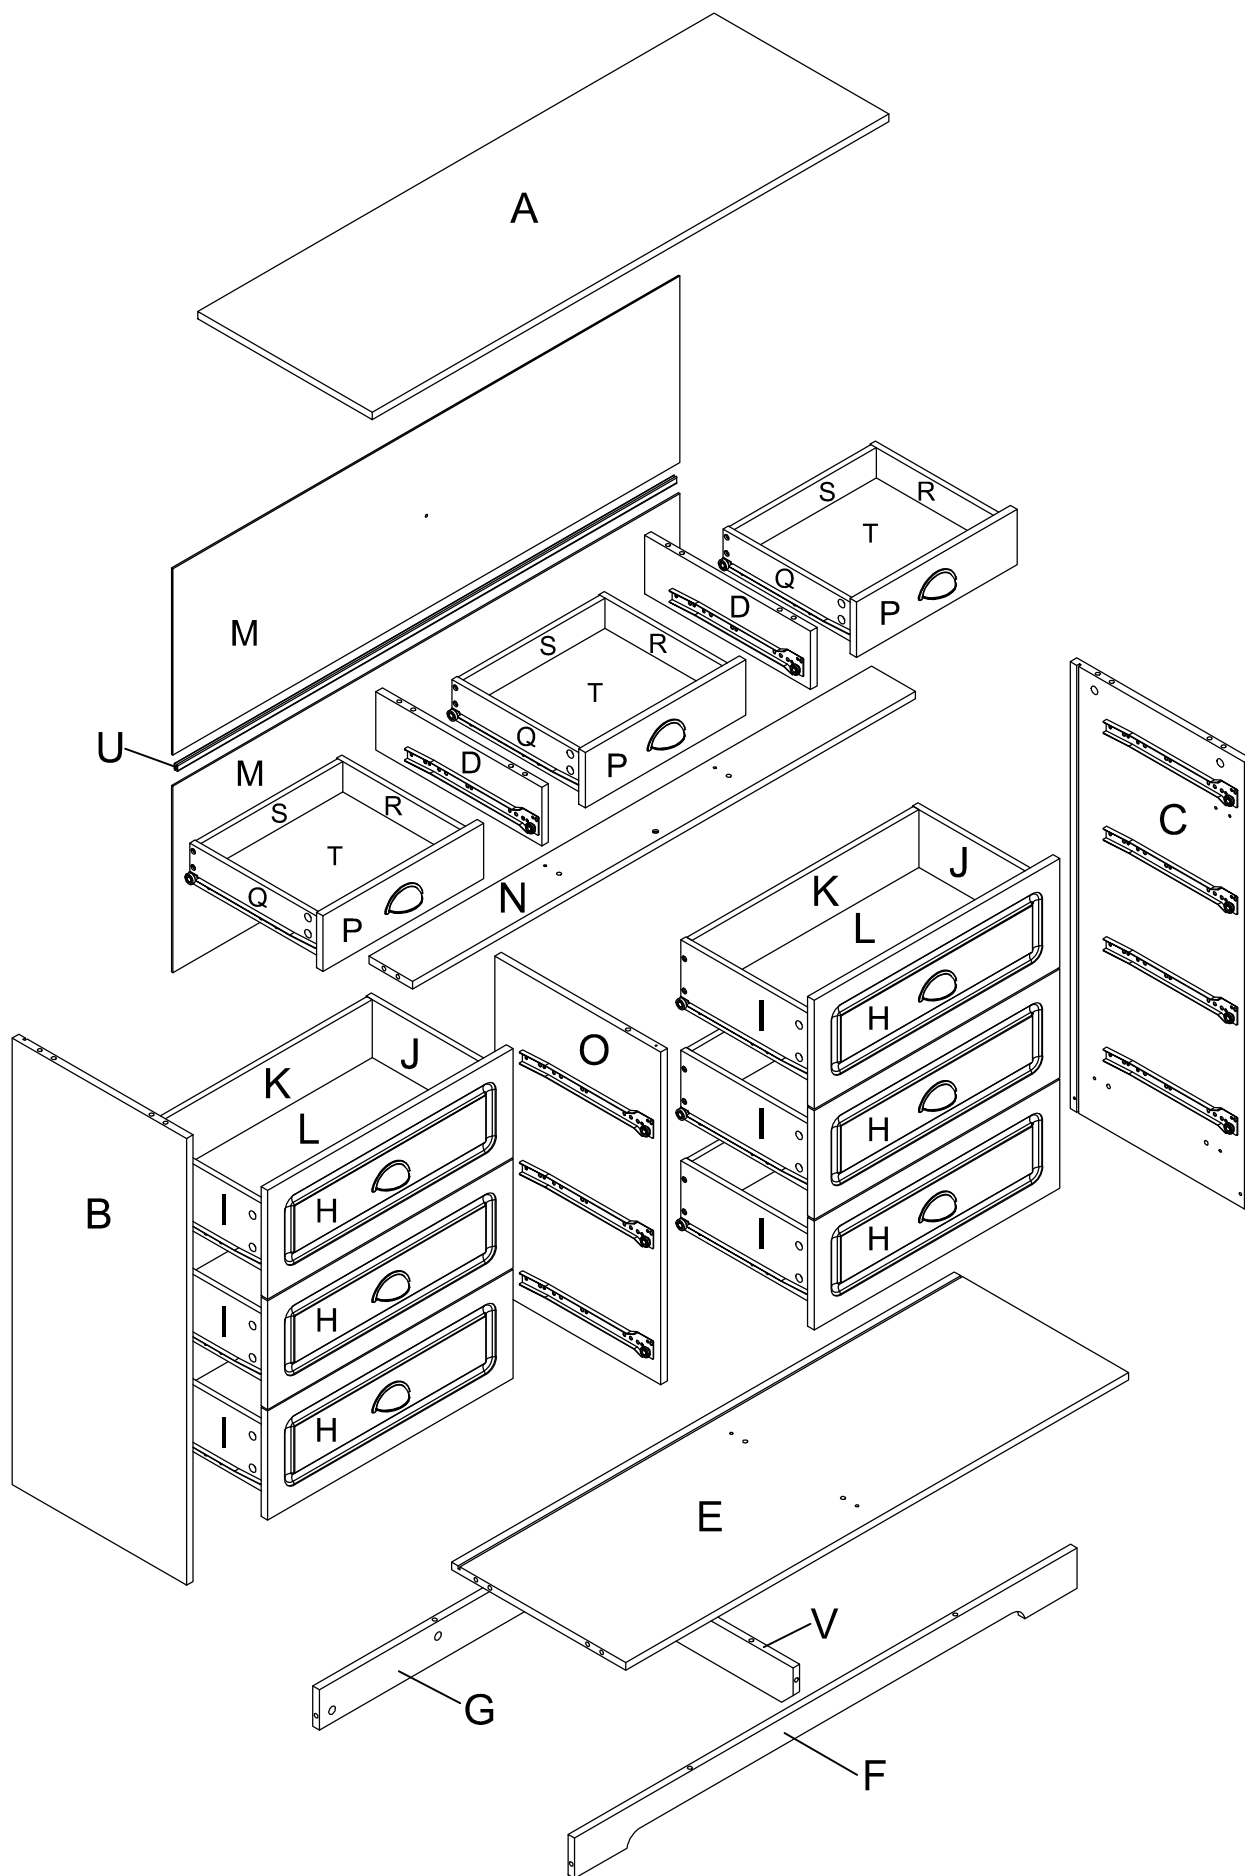

HARDWARE LIST
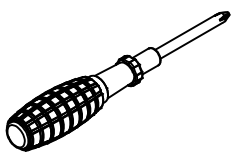
#1		#2		#3		#4		#5	
Ø3.5*15mm		Ø8*30mm		Ø3*30mm		Ø6*35mm		Ø15*9mm	
Screw		Wood Dowel		Screw		Cam-bolt		Cam-lock	
8 PCS (Extra 2)		17PCS (Extra 2)		39PCS (Extra 4)		66PCS (Extra 4)		66PCS(Extra 4)	
#6		#7		#8		#9			
78*34*26mm		M4*12mm							
Handle		Round Head Bolt		Back Bracket		Safety Strap Kit		Phillips Screwdriver	
9 PCS		18 PCS (Extra 2)		6 PCS (Extra 2)		2 SET		1 PC	

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

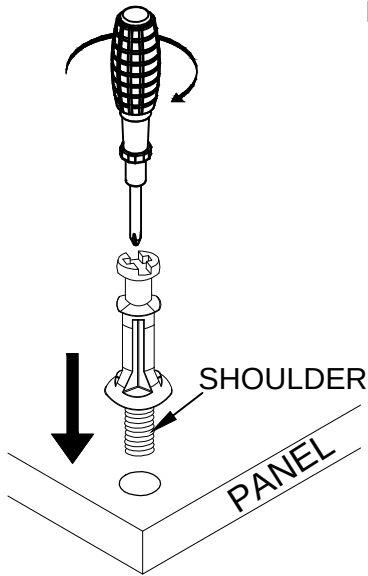

Place Cam-bolt on pre-drilled hole and screw in vertically

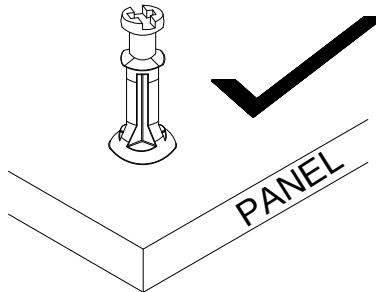


Shoulder is flushed (on the same level) with the panel.

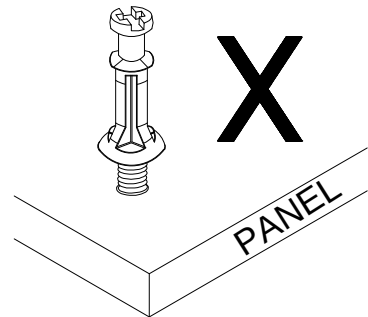


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

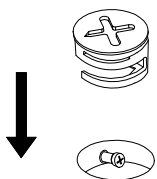

Insert Cam-lock with arrow align to Cam-bolt head




CORRECT



WRONG



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK







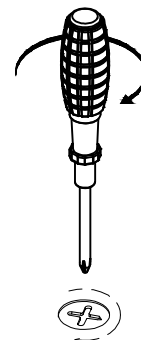


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Step 1.

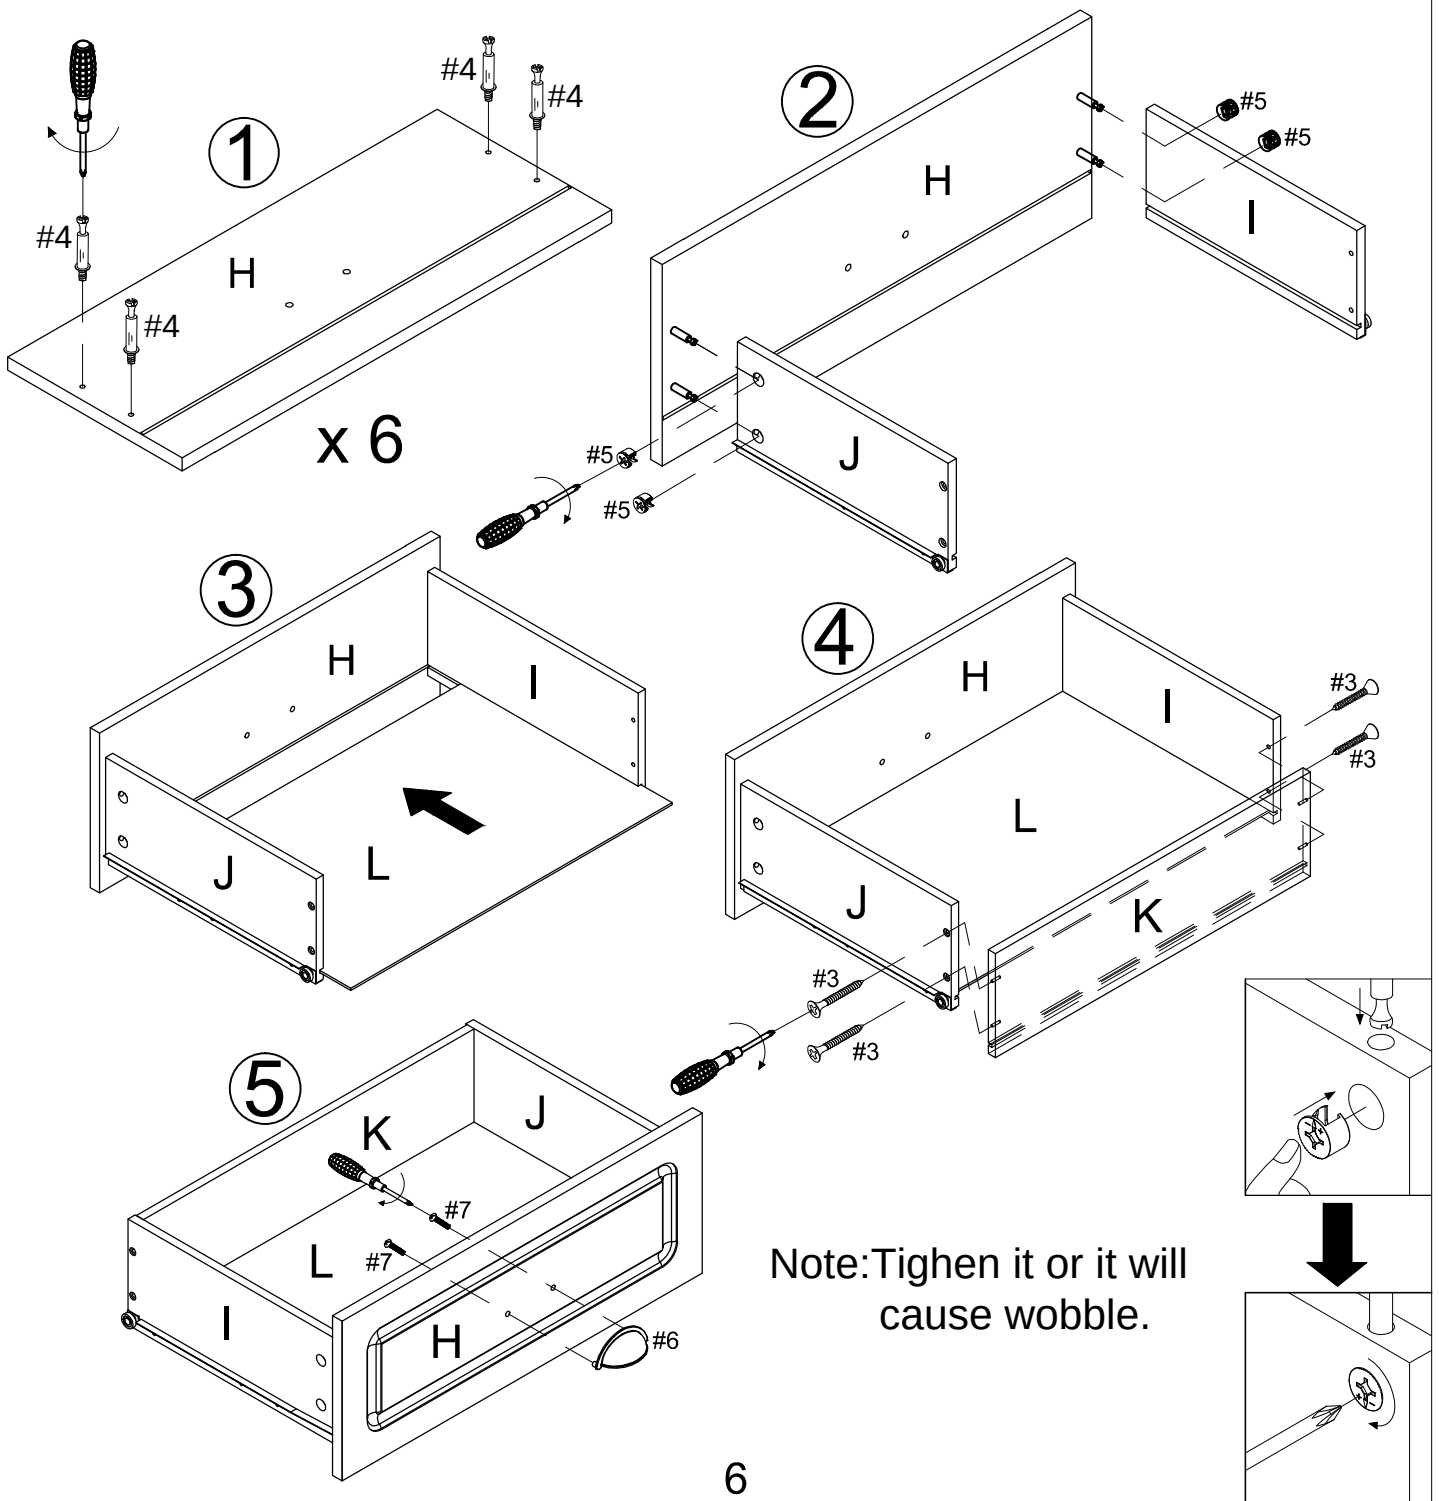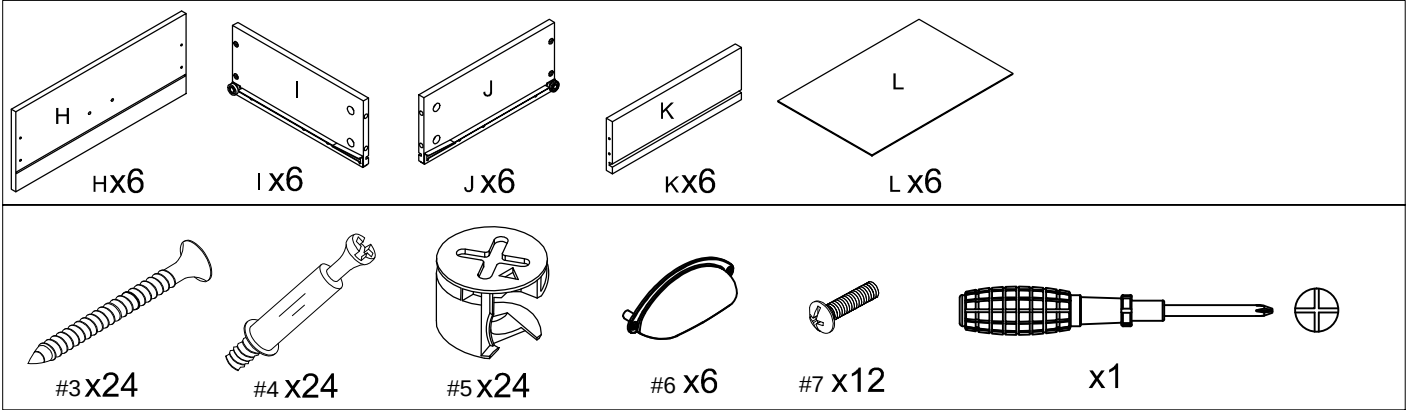



Step 2.

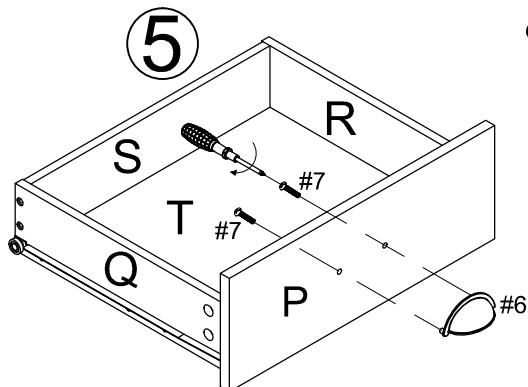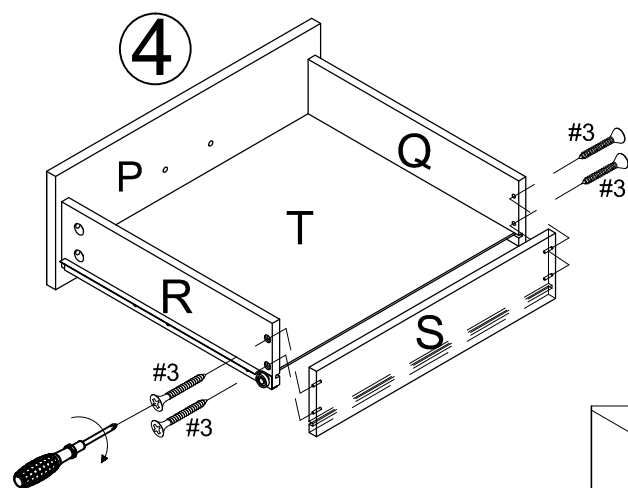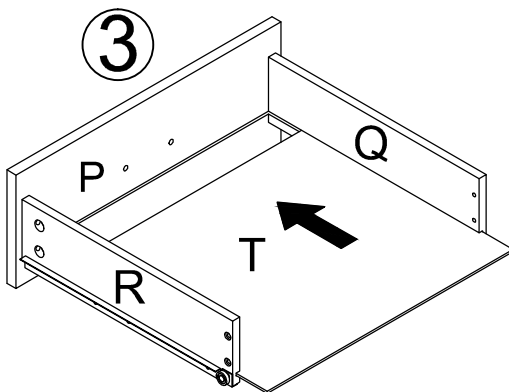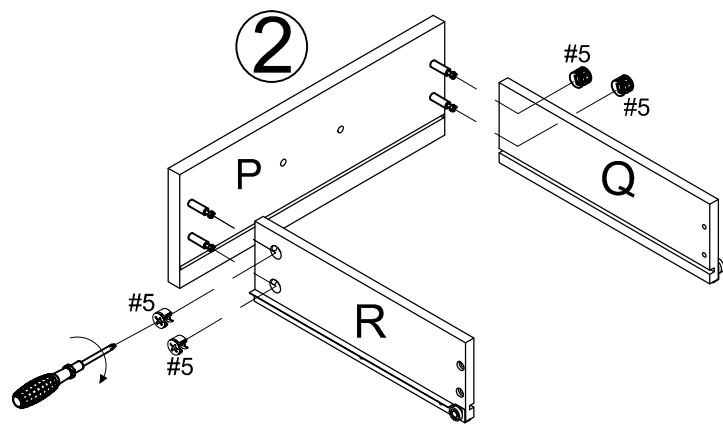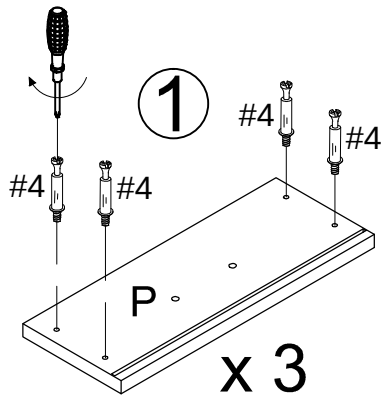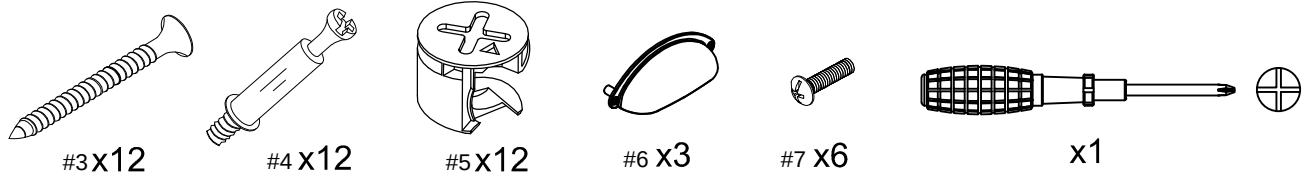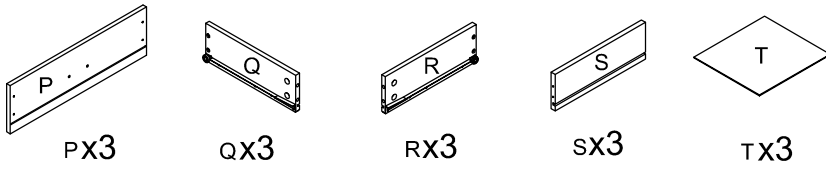



Note: Tighten it or it will cause wobble.

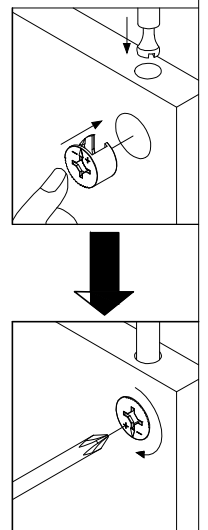


Step 3.

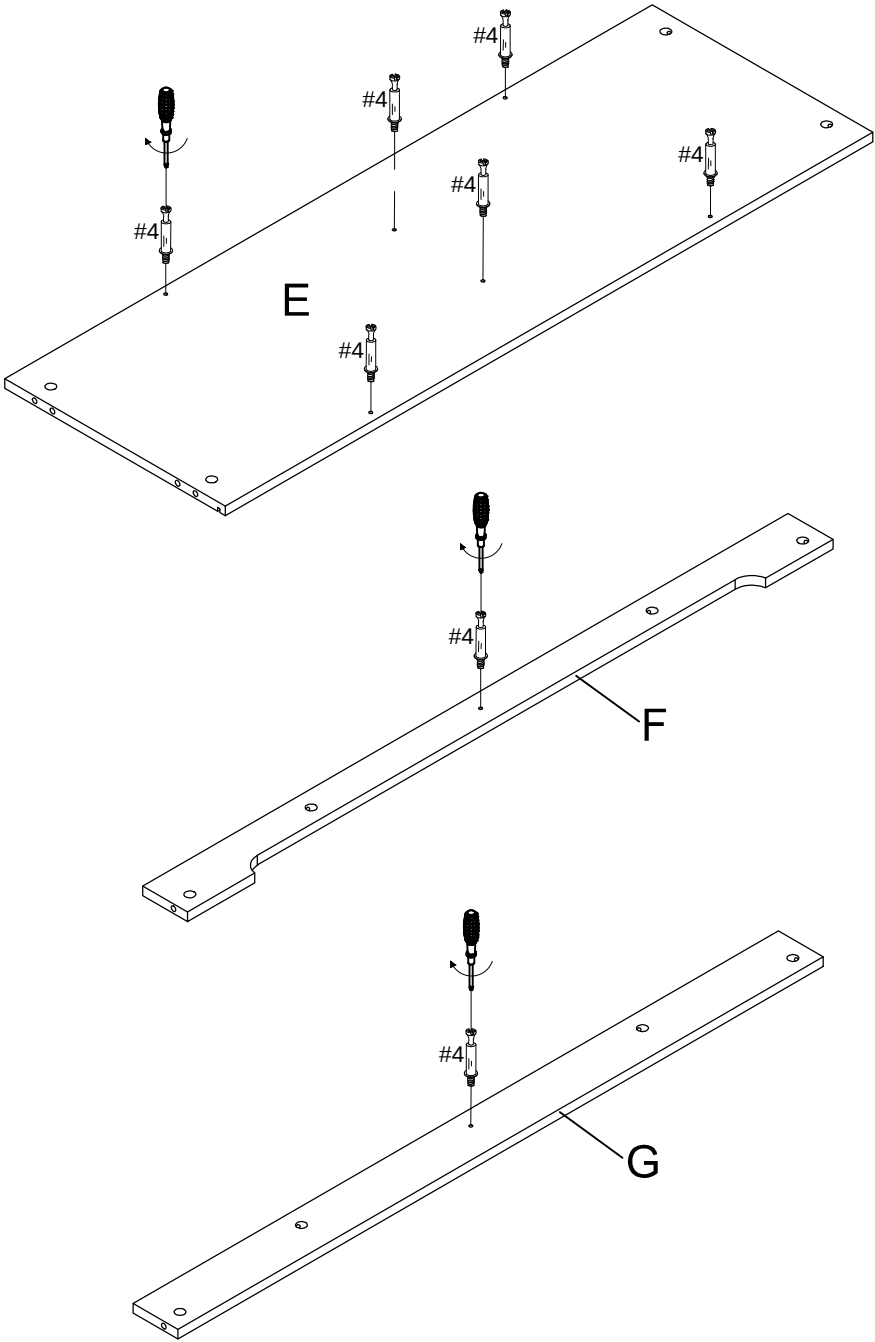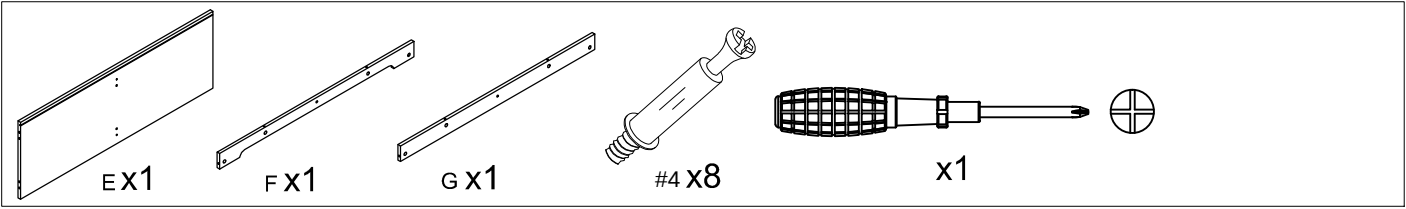



Step 4.

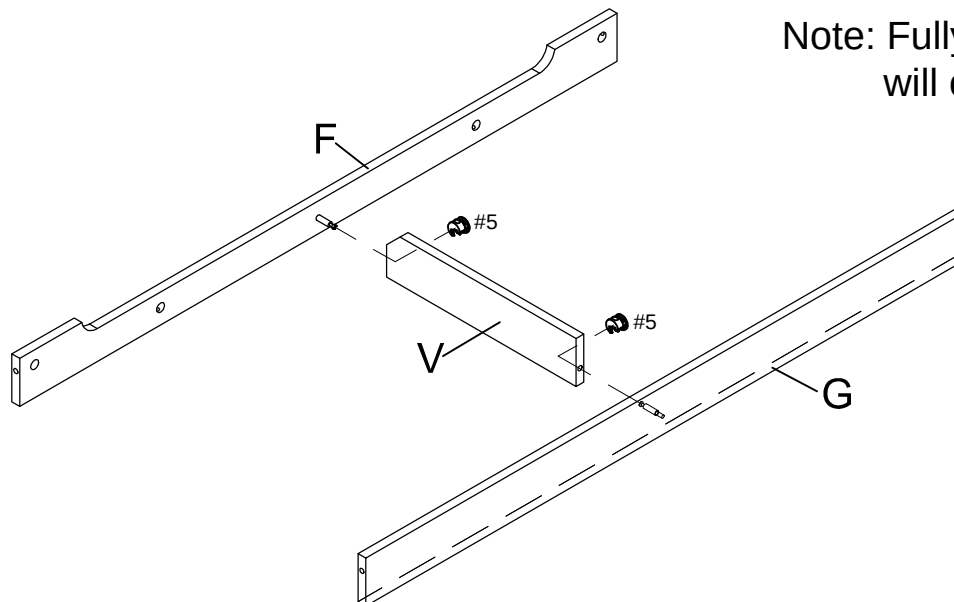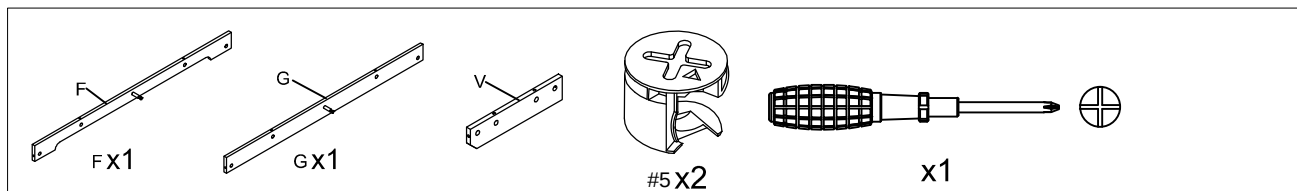


Note: Fully Tighen or it will cause wobble.

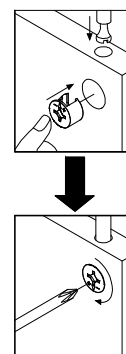

Step 5.


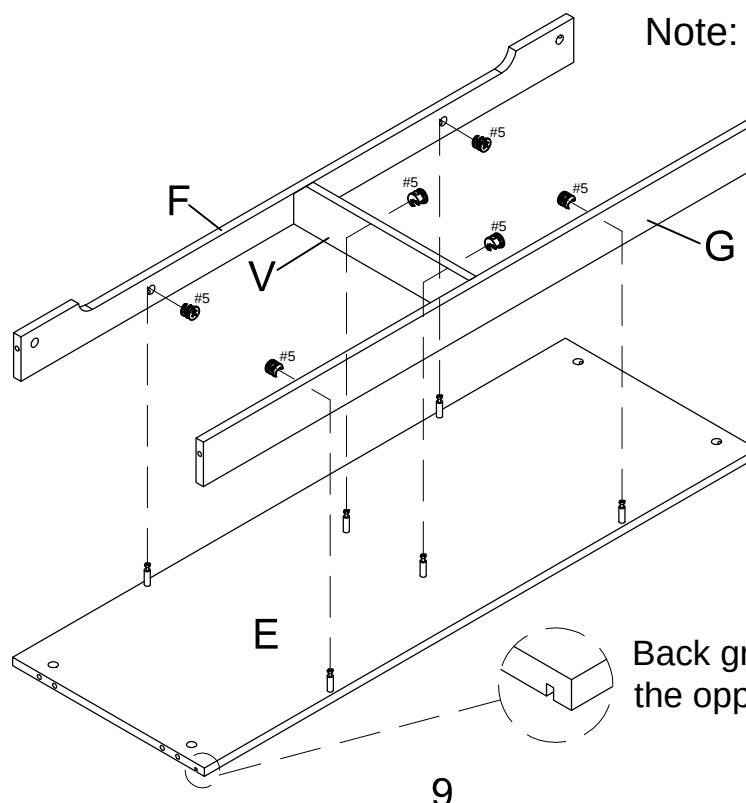
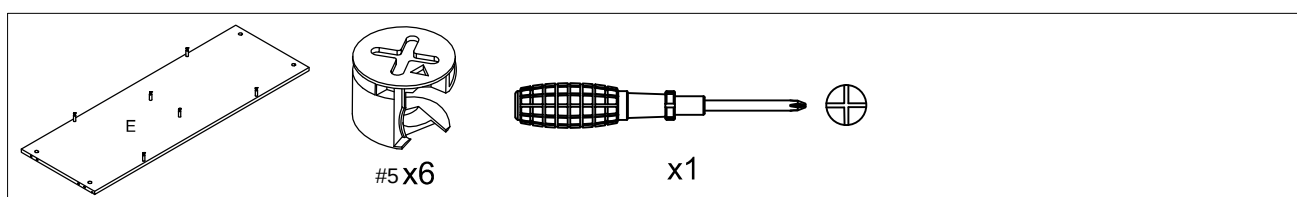


Note: Fully Tighen or it will cause wobble.






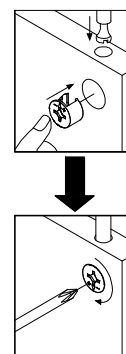


Back groove is on the opposite side.


Step 6.

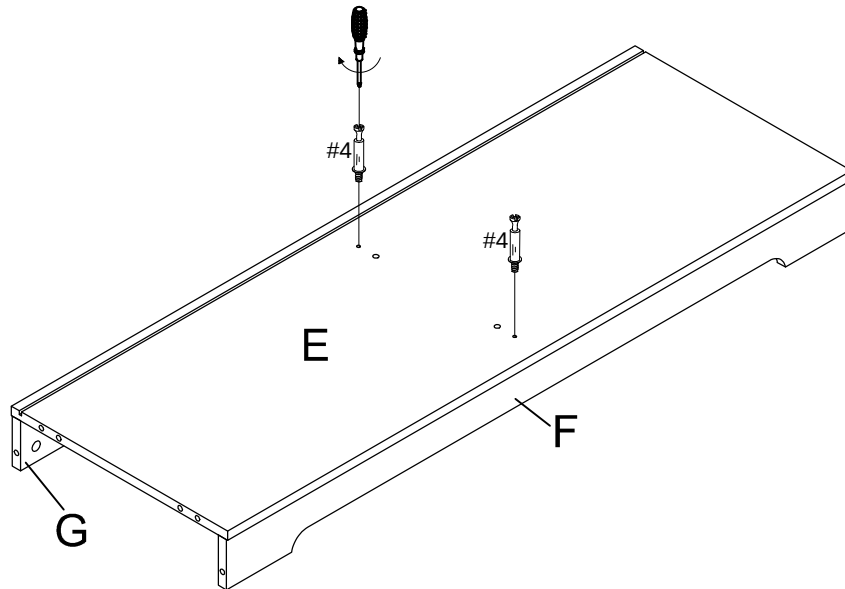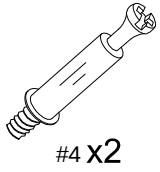


Step 7.

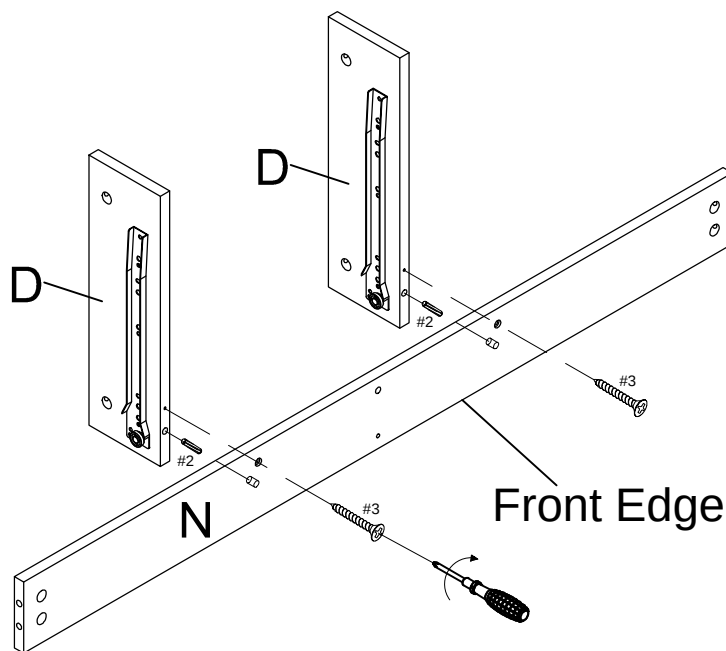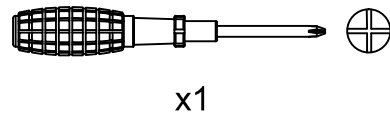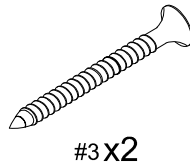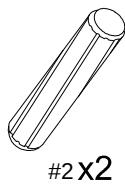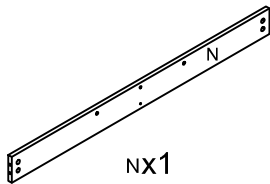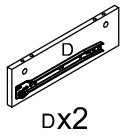



Step 8.

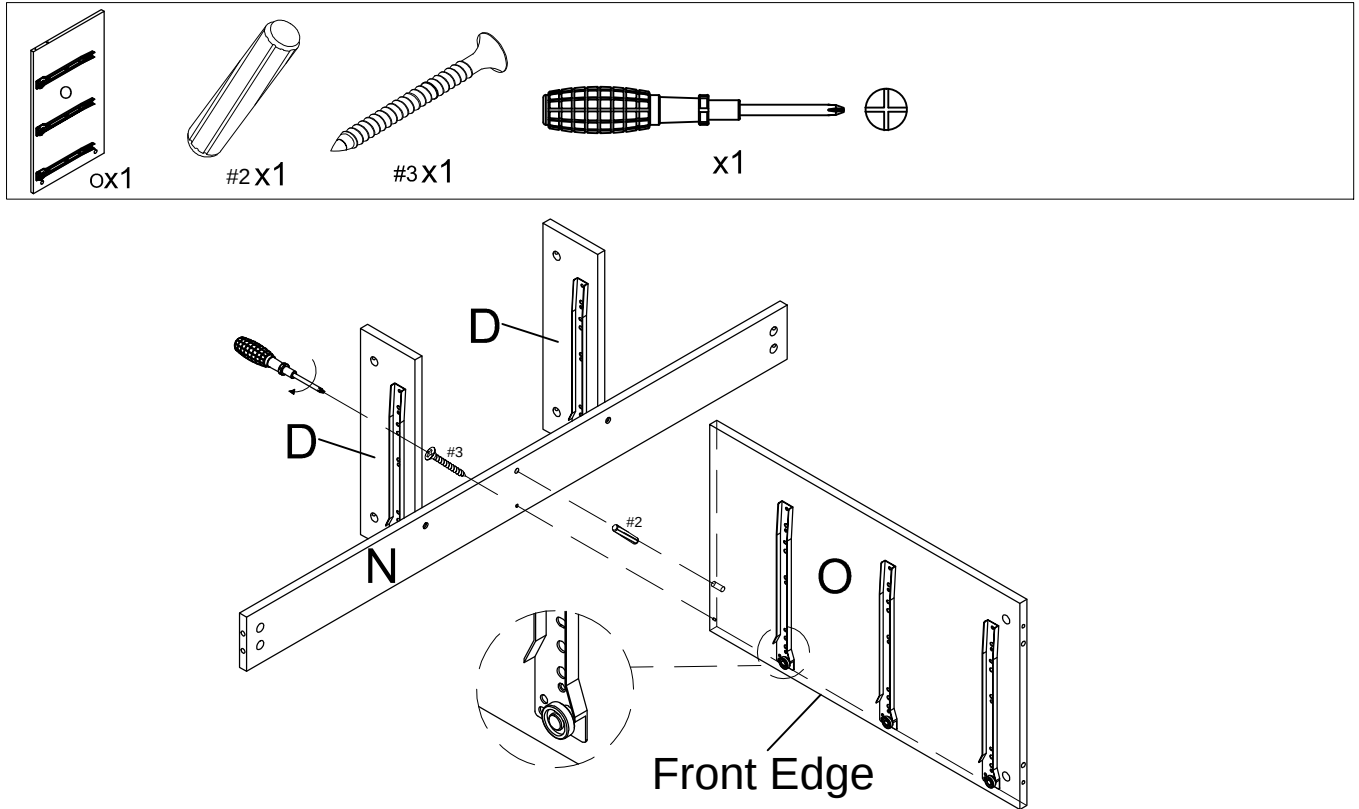


Step 9.

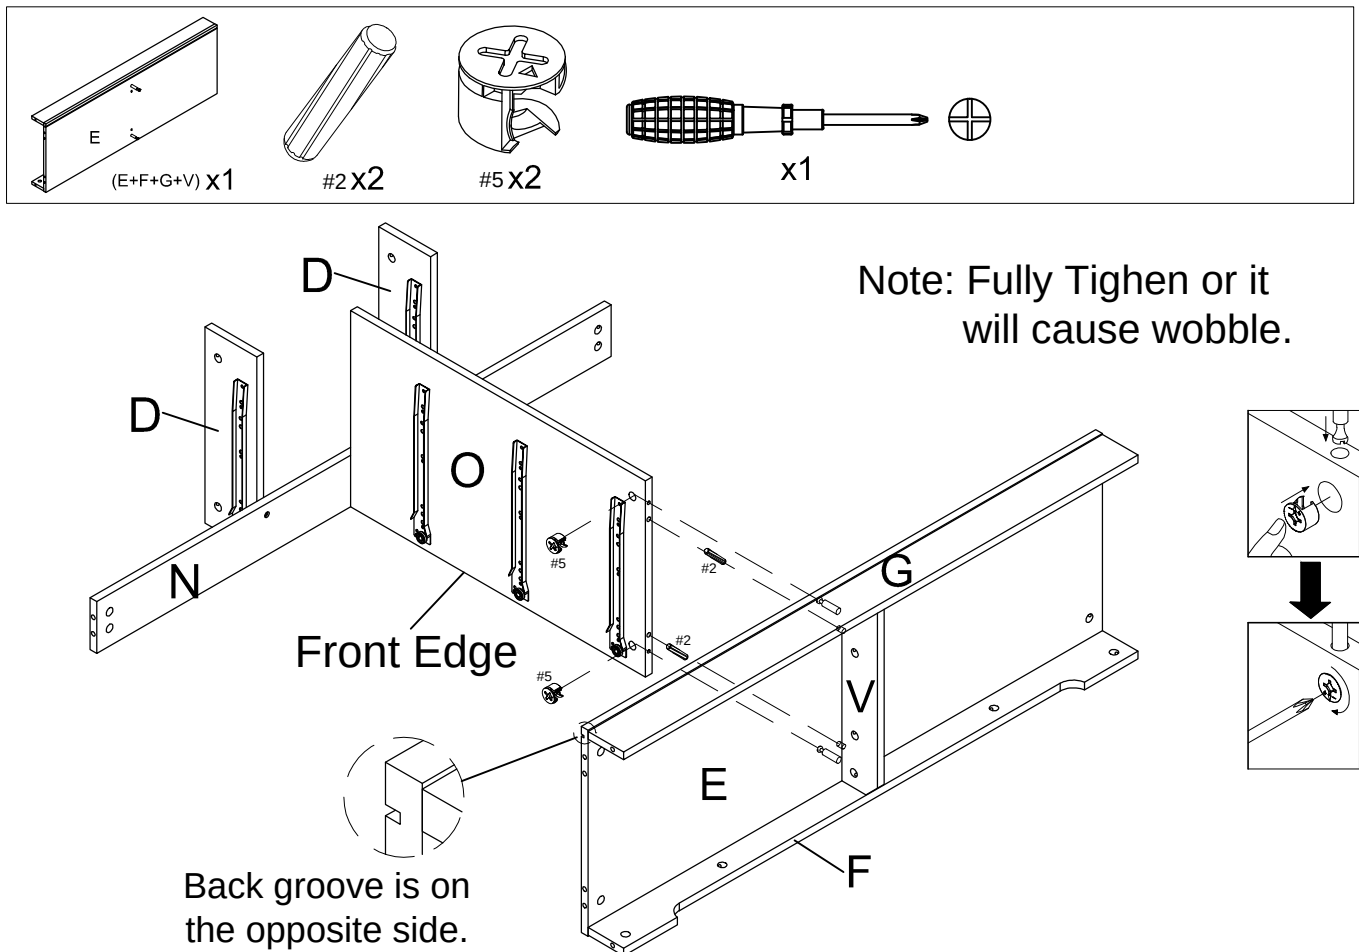

Step 10.

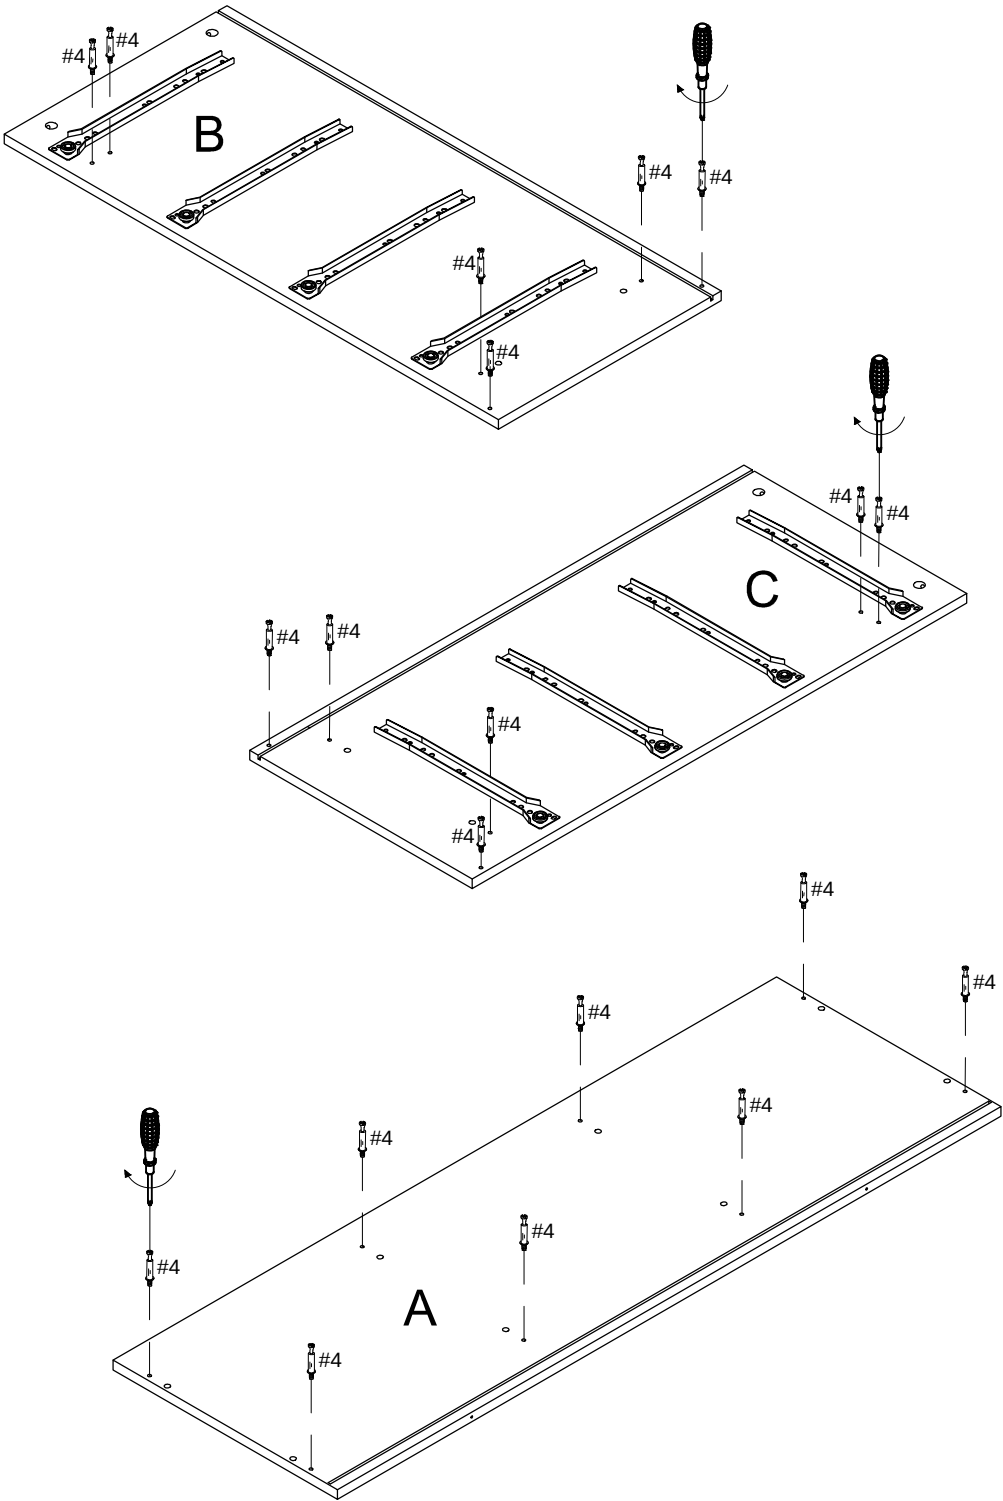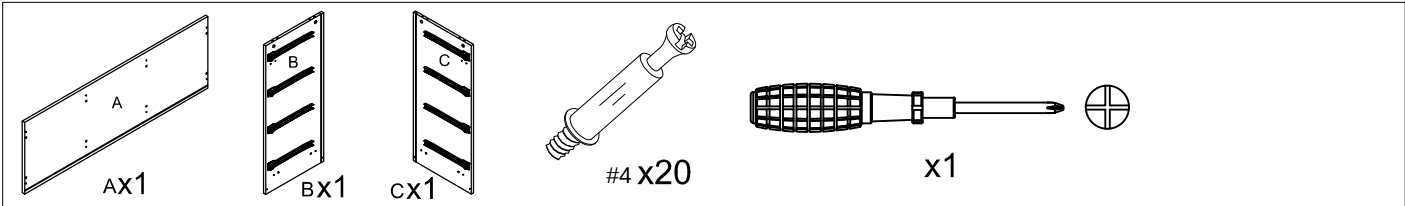


Step 11.

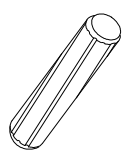

#2 x2



#5 x6





x1





Note: Fully Tighten or it
will cause wobble.


Back groove is on
the opposite side.

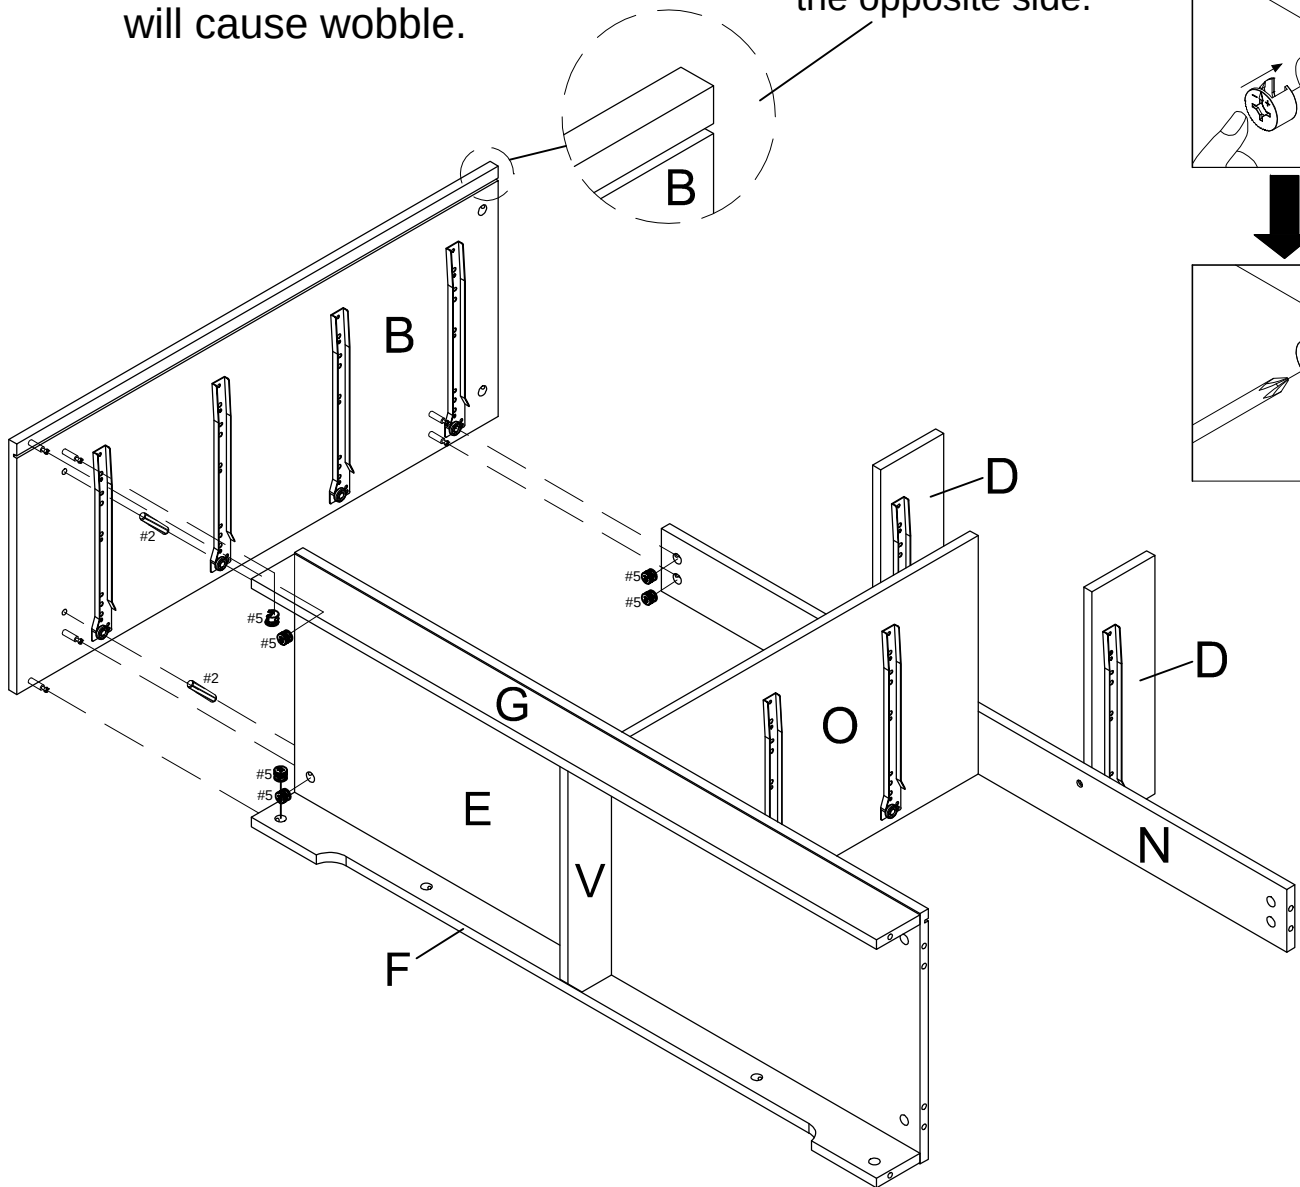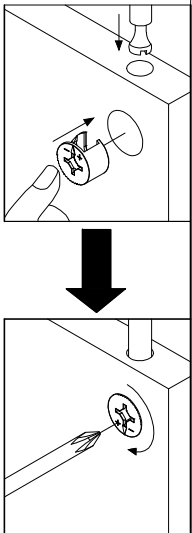


Step 12.

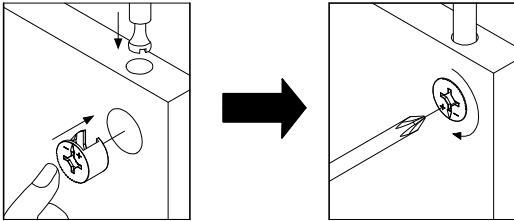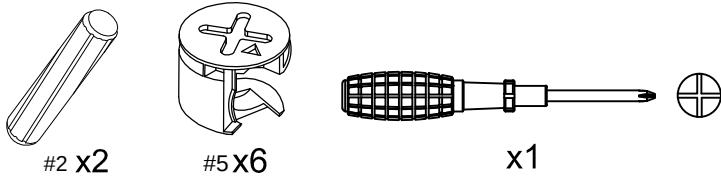



Back groove is on the opposite side.

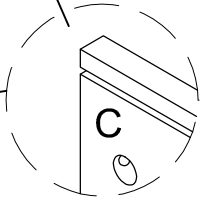




Note: Fully Tighen or it will cause wobble.

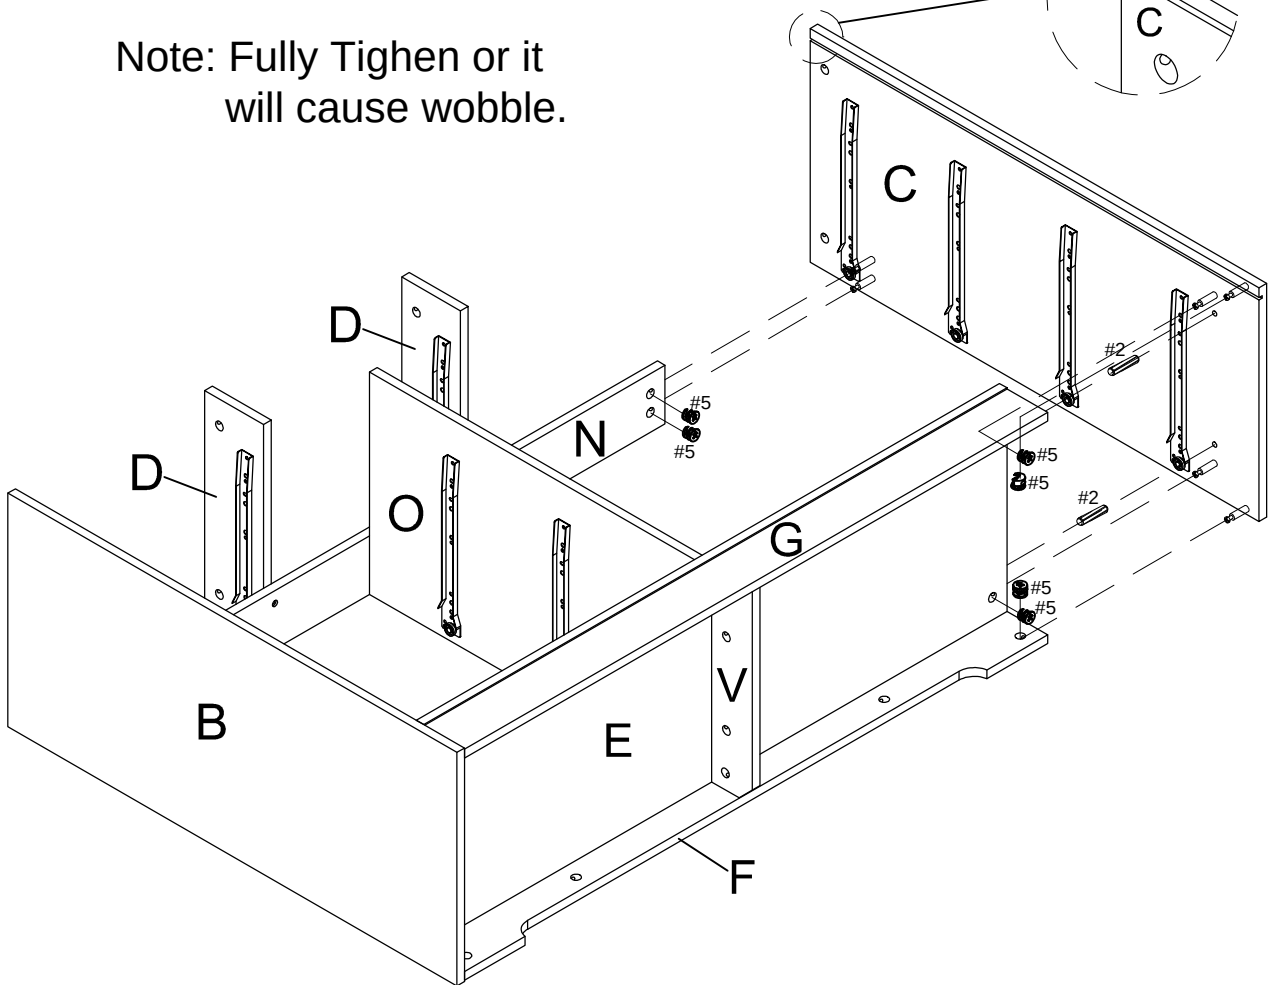

Step 13.

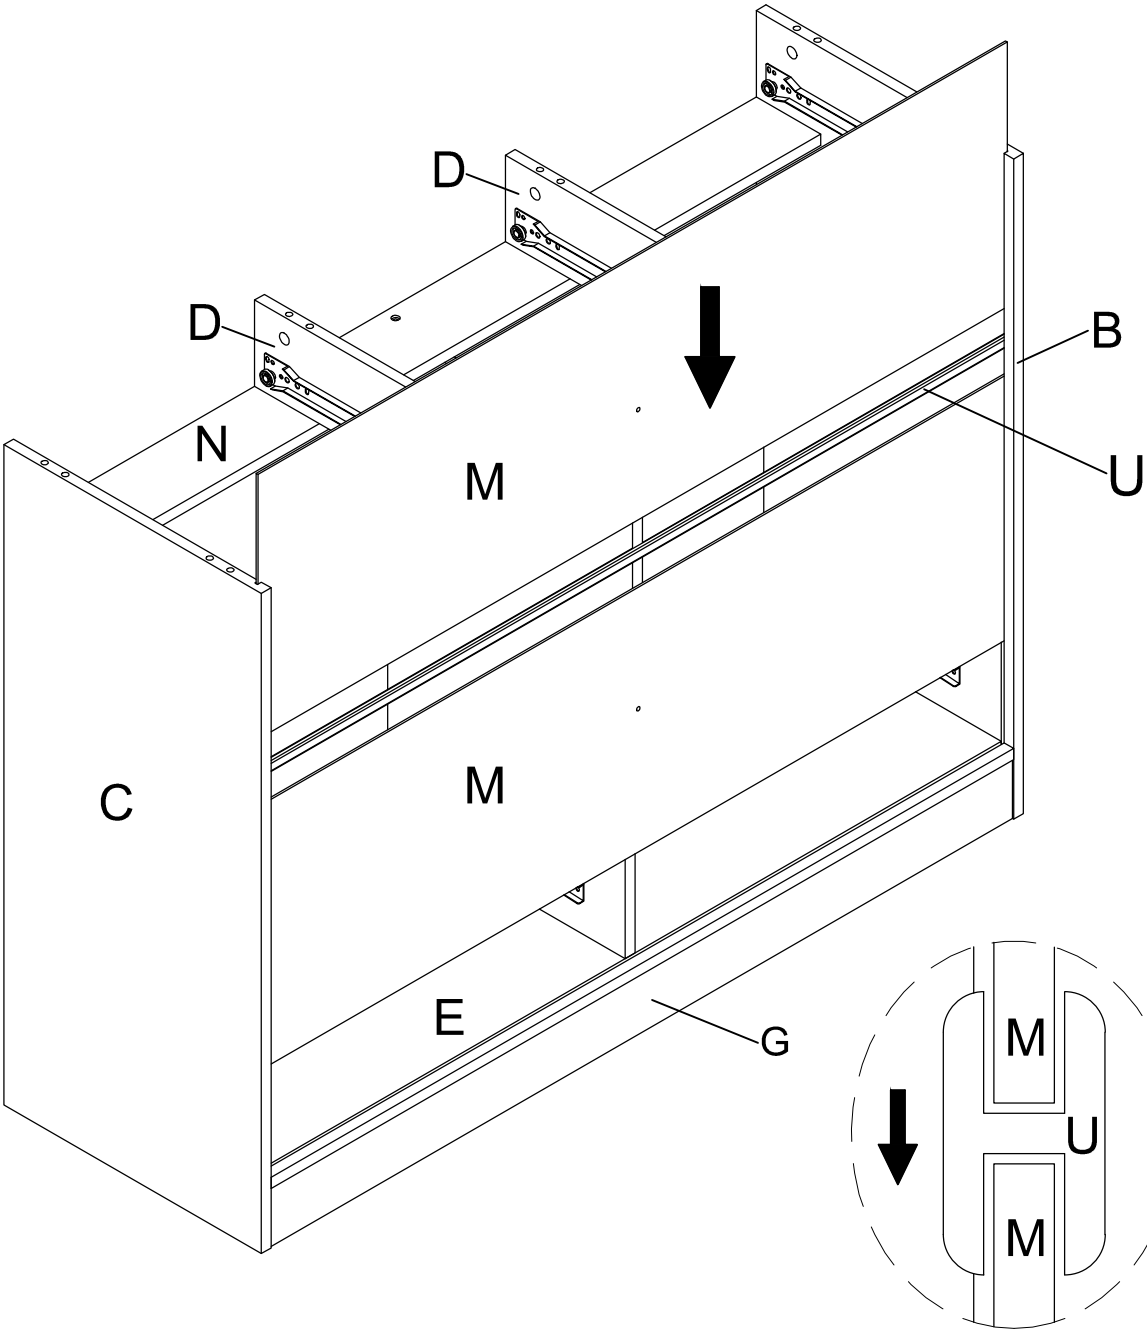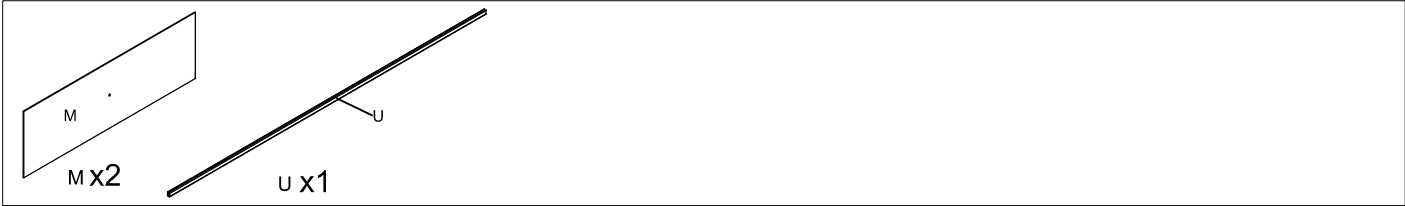


Step 14.

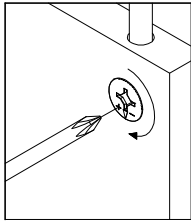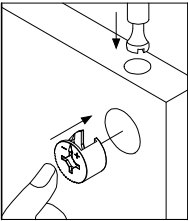
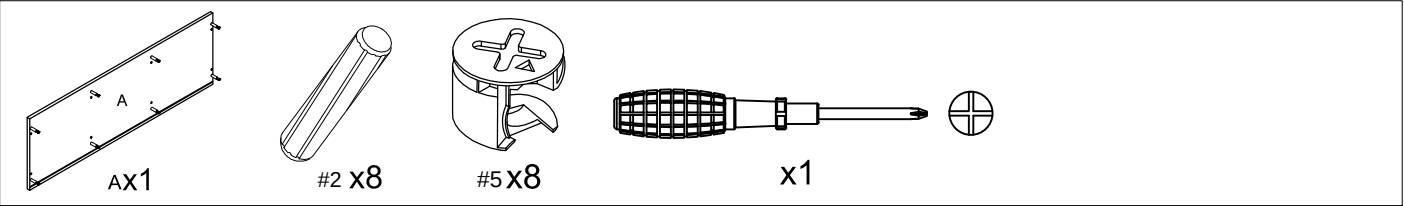


Note: Fully Tighen or it
will cause wobble.


Back groove is on
the opposite side.

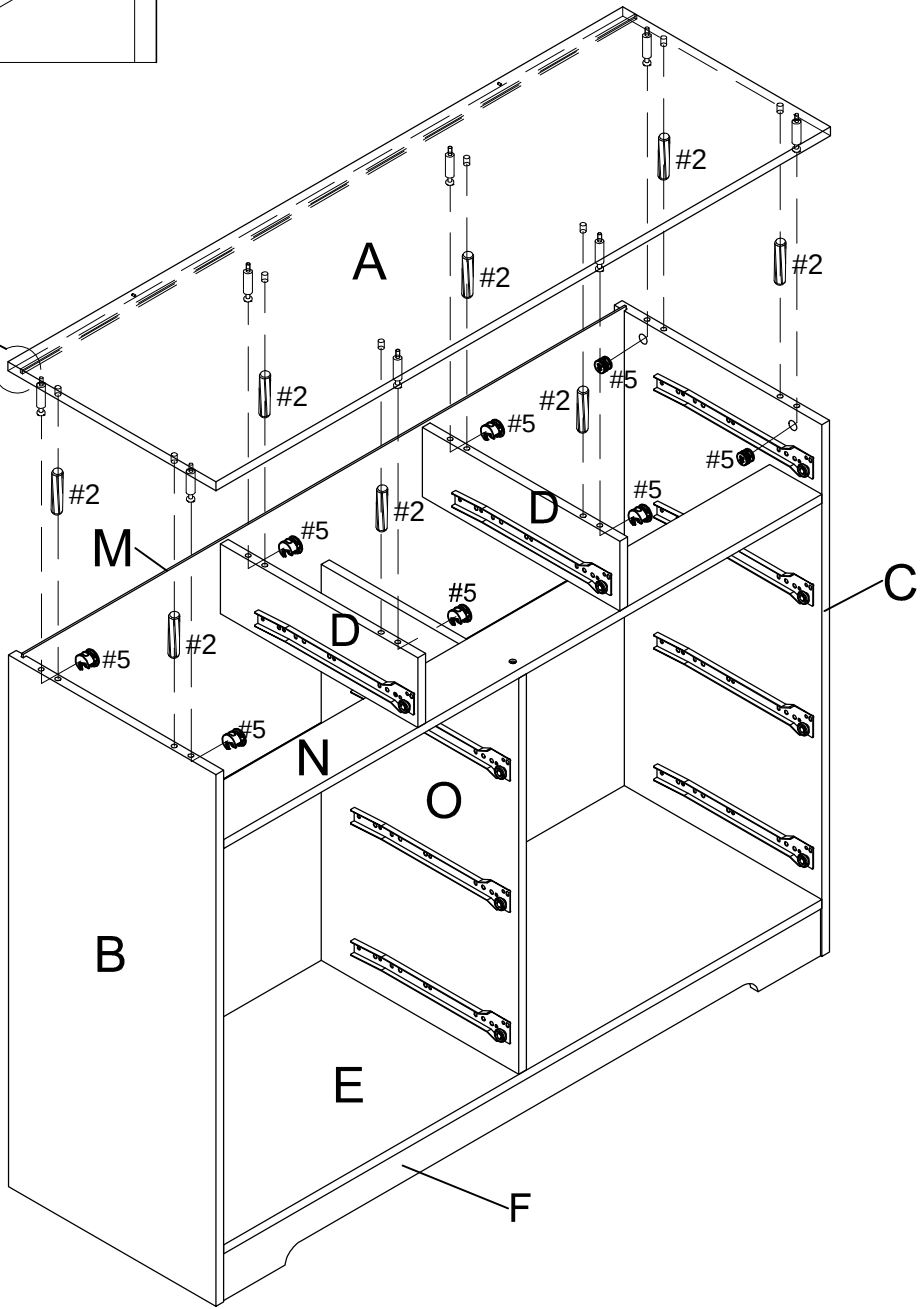


Step 15.

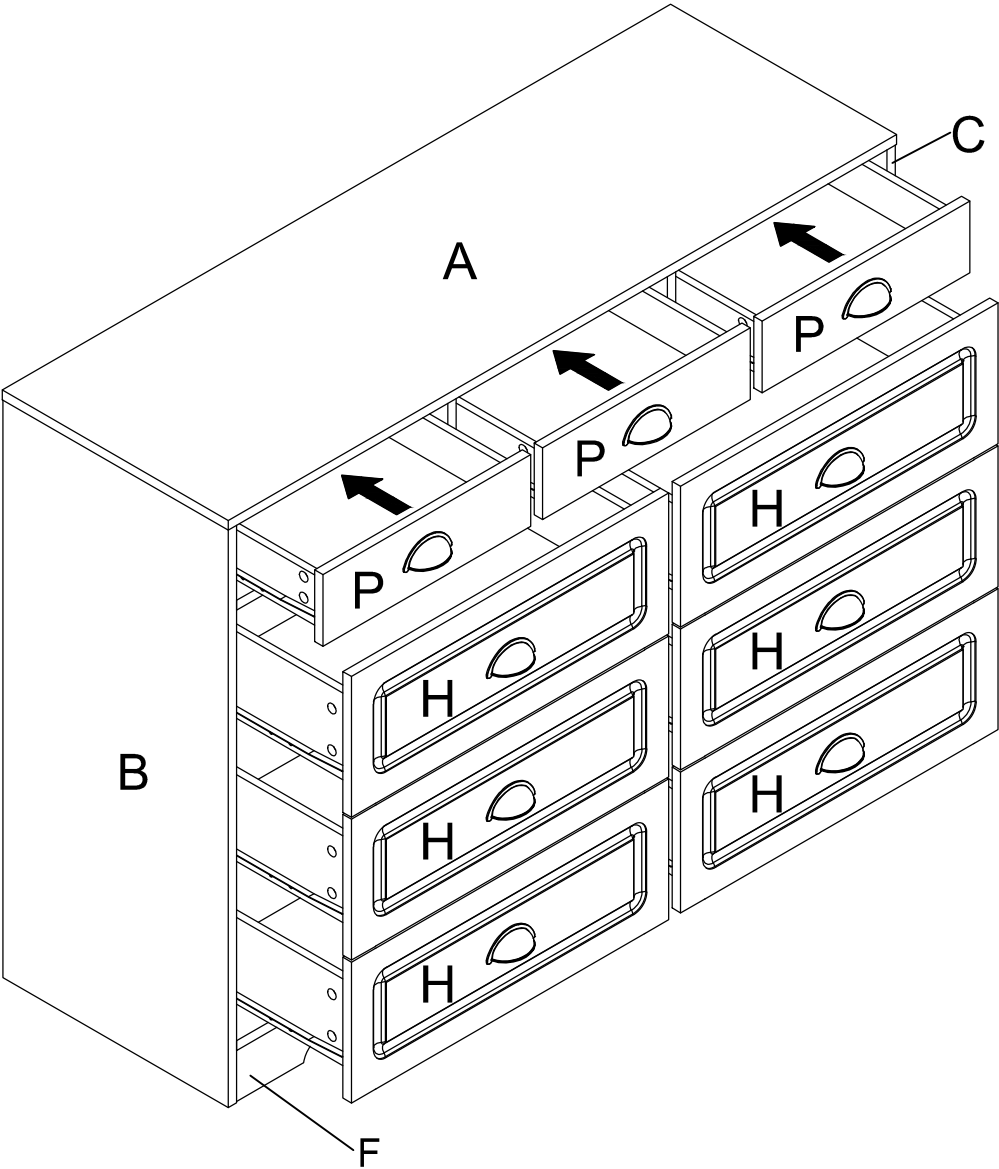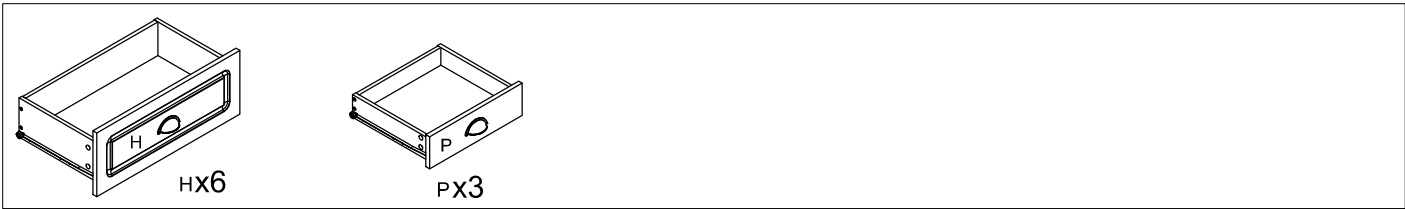


Step 16.




#1 x 8



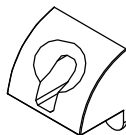


#8 x 6



x1

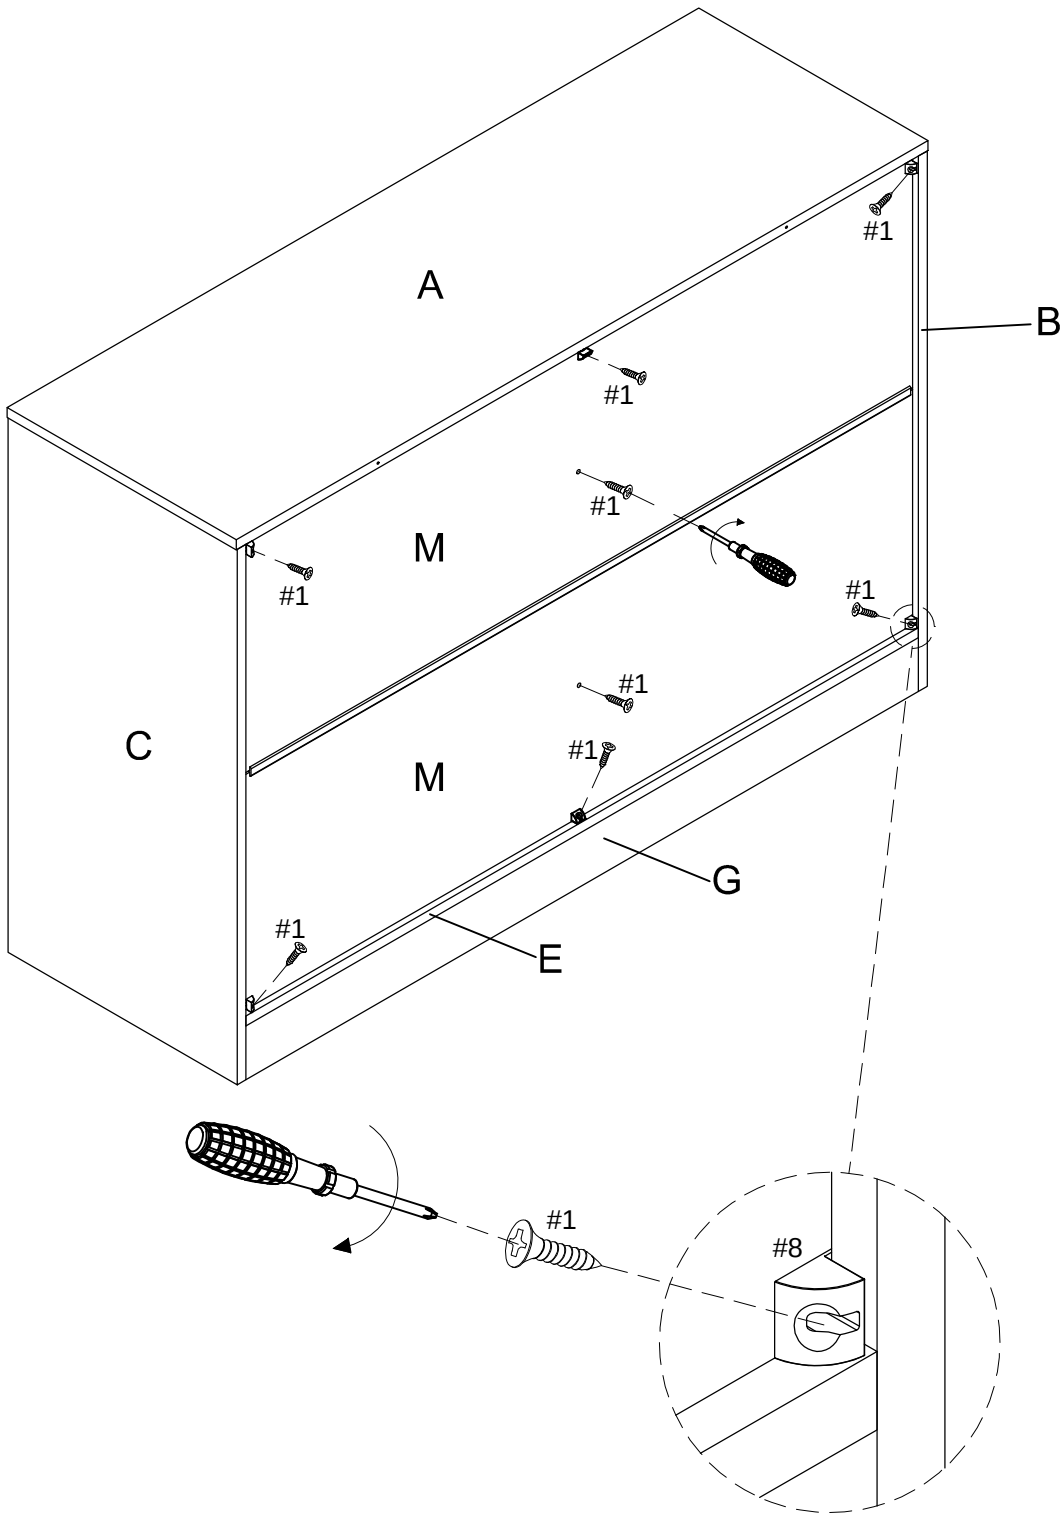
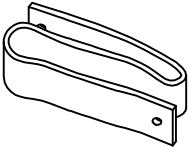
#9	A	B	C	D	E
					
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
2 SET	2 PCS	4 PCS	2 PCS	2 PCS	2 PCS

