

MODEL : CF 9334-B (3')


ASSEMBLY INSTRUCTION

A	A1 Arm	A2	2 pcs
B	927mm Slat 13 Pcs		1 pc
C	Back Panel		1 pc
D	Front Side Rail (PU)		1 pc
E	Back Side Rail		1 pc
F	927mm Slat 12 Pcs		1 pc
G	Trundle Front Panel (PU)		1 pc
H	Trundle Back Panel		1 pc
I	Wooden Block		4 pcs


Packing Hardware (1)

1	M5 x 70 mm	1 pc
2	M4 x 65 mm	1 pc
3	JCBB M8 X 20	8 pcs
4	JCBC M6 X 50	4 pcs
5	SPRING WASHER	4 pcs
6	FLAT WASHER	4 pcs
7	CSK M3.5 x 16 mm	40 pcs
8	CSK M4 x 32 mm	56 pcs
9	L-bracket	4 pcs
10	Roller	6 pcs

Step 1 : Attach side rail (D) & (E) to arm (A) by pushing the bracket down to fit it.

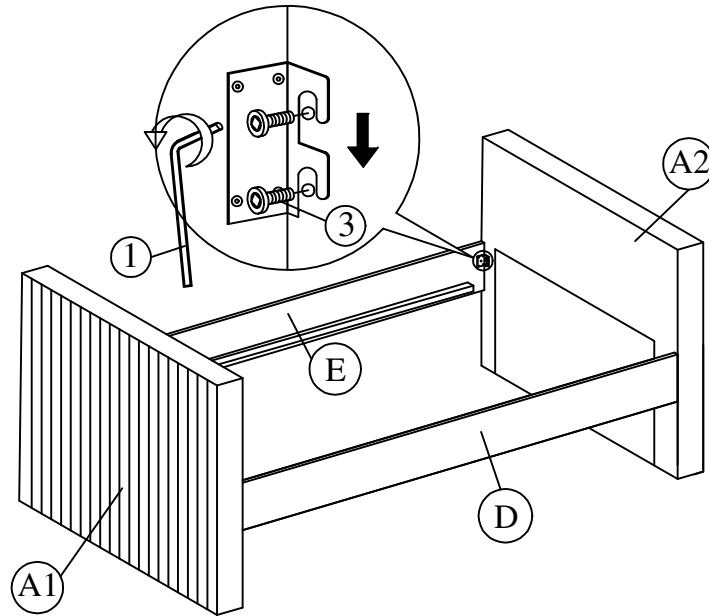


Step 2 : Attach the Back Panel (C) to the arm (A1+A2) as shown.

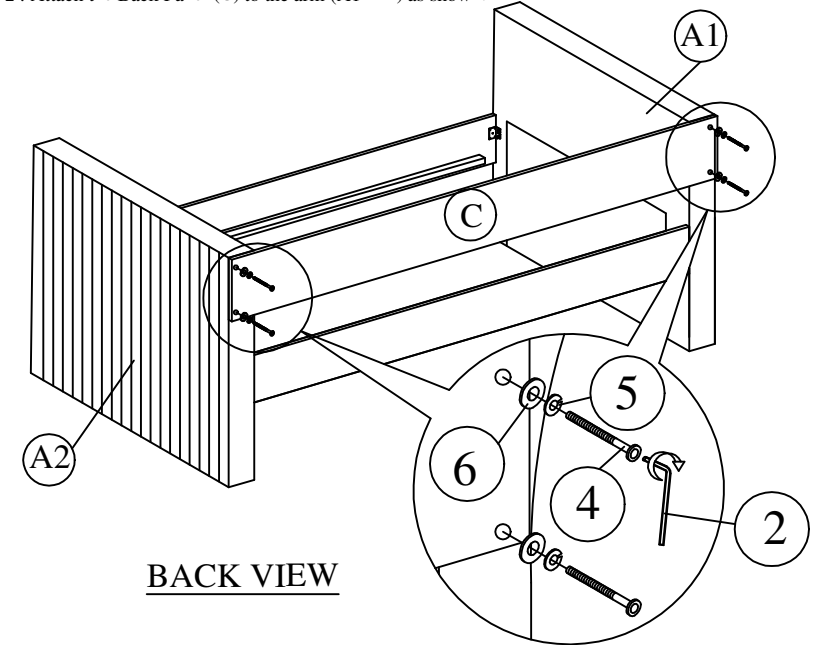


BACK VIEW


Step 3 : Install the slats (B) to side rail (D & E). Tighten the slats with CSK screw (8). The distance of the slats should be sufficient to obtain desirable bed stability.

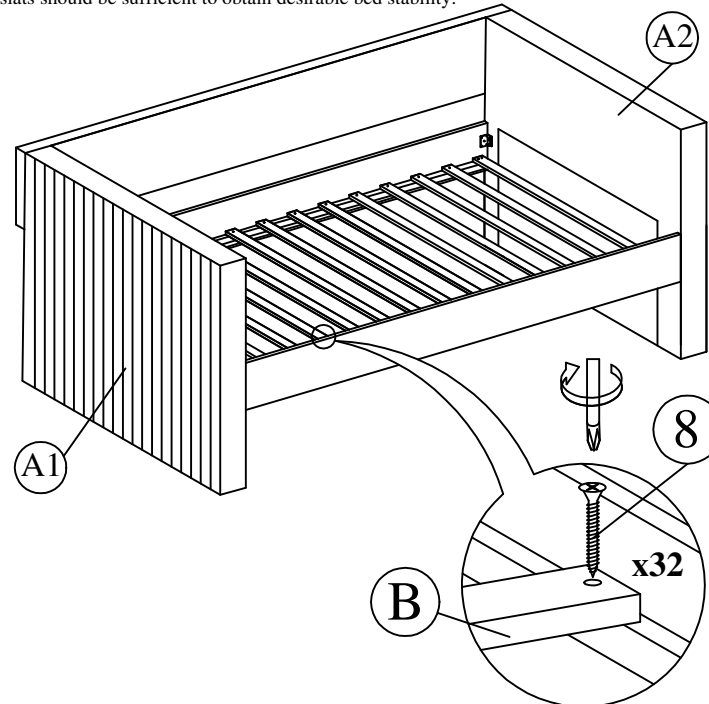


Step 4 : Affix the roller (10) to the slat (F) follow the marking on the slat (F).

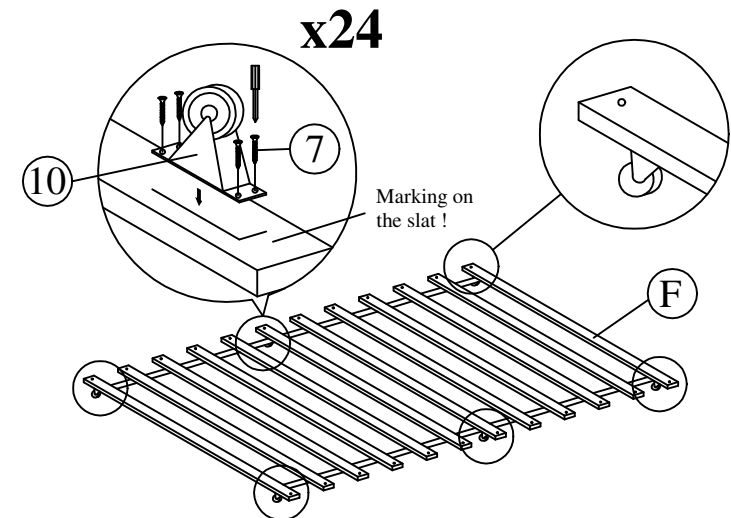

Step 5 : Place the wooden blocks (I) at the corner of the trundle and fix the slat (F) to the trundle at (G) & (H).

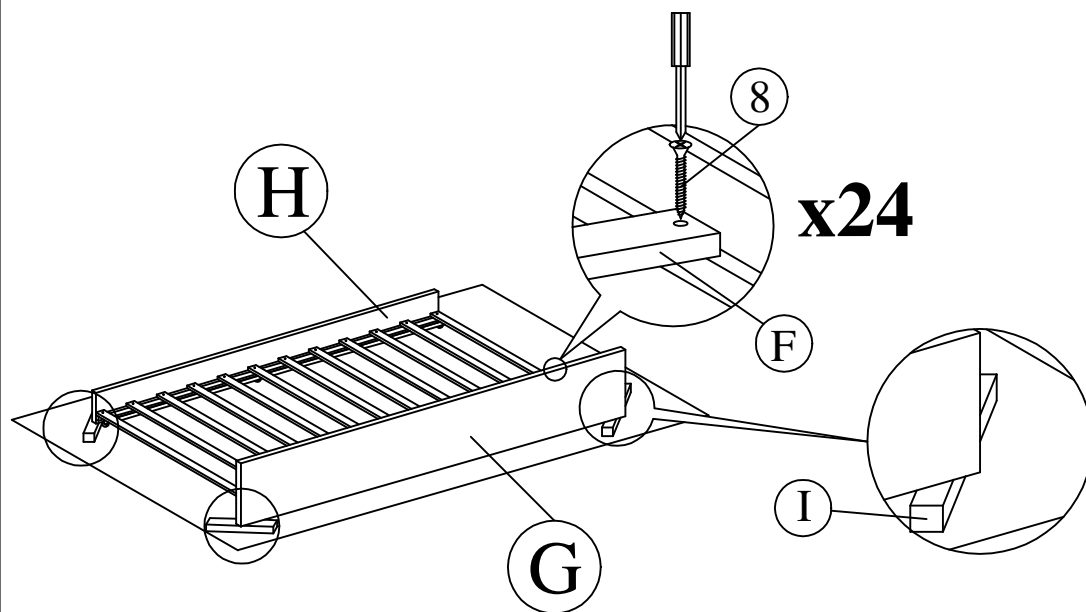

Step 6 : Attach the L-bracket (9) on the slat (F).

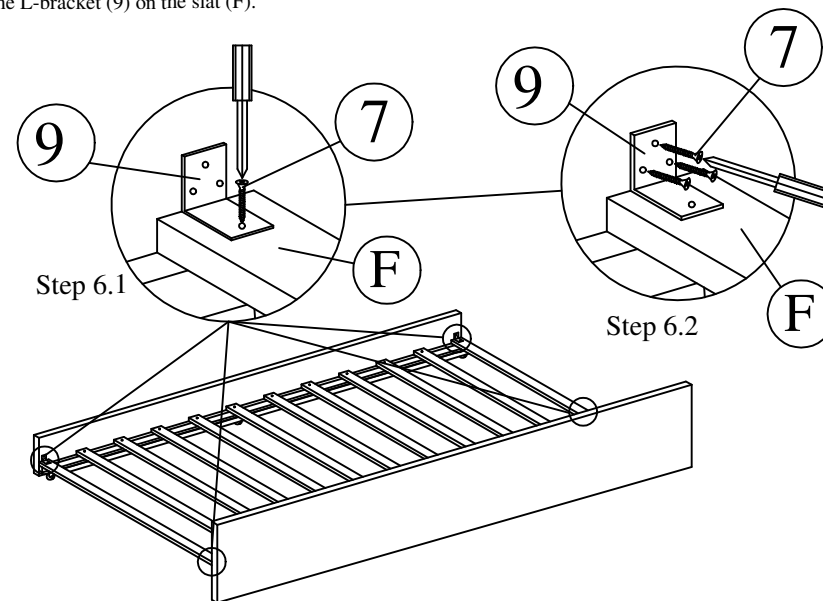

Step 7 : Assembly is complete.

