



Model : CF 9471-K (5')

Assembly Instruction


Step 1 : Fix the headboard (A) and footboard (B) with legs (D,E) as shown.

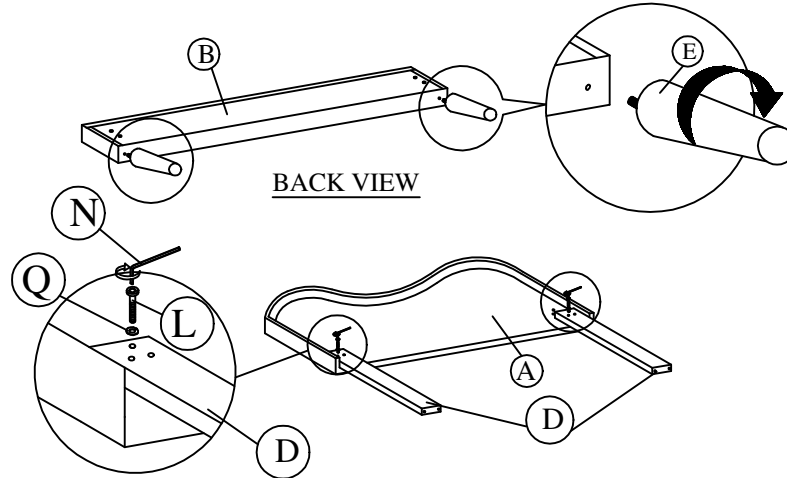


Step 2 : Attach the JCBB Bolt (K) to the headboard (A) and footboard (B).

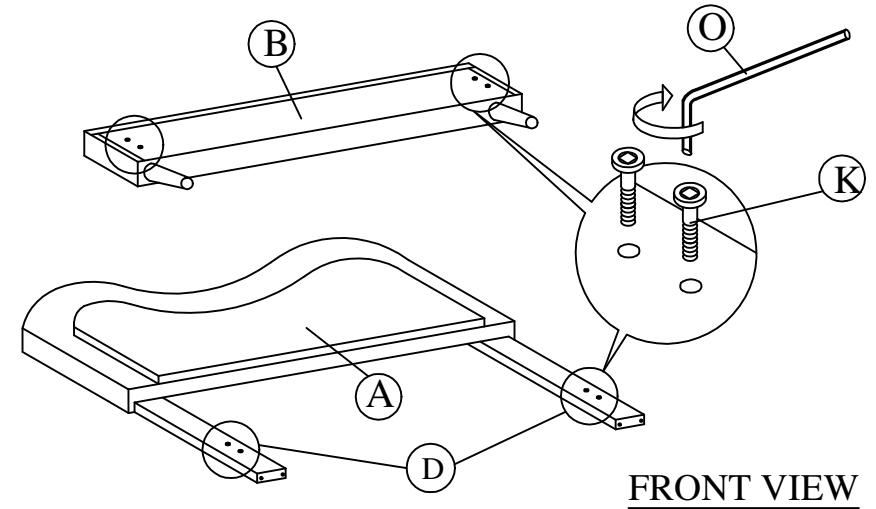

Step 3 : Attach the side rail leg (F) to the side rail (C).

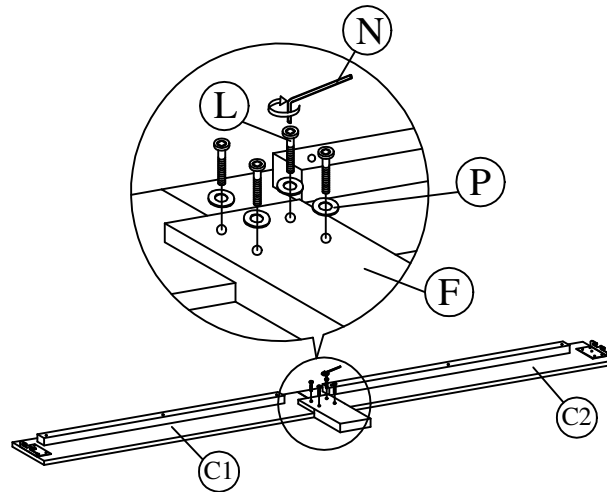


Step 4 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

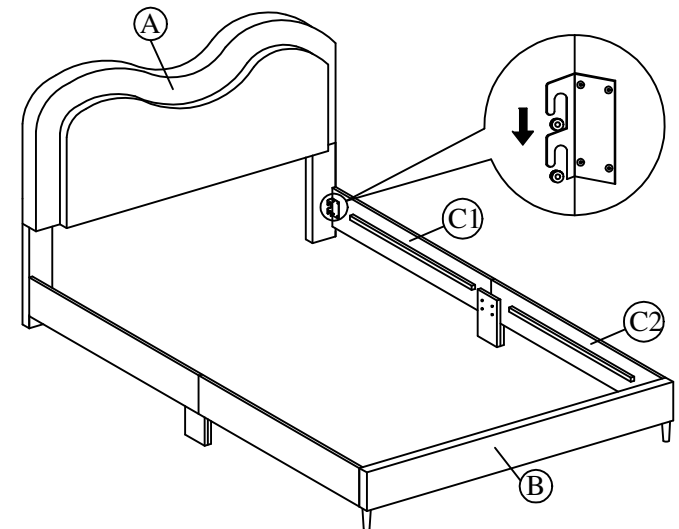

A		Headboard	1pc
B		Footboard	1pc
C		Side Rail	4pcs
D		Headboard Legs 695 x 80 x 20mm	2pcs
E		Footboard Legs No.99 - 60 x 150(H)	2pcs
F		Side Rail Legs 240 x 80 x 30mm	2pcs
G		Center Rail 870mm	2pcs
H		12 pcs slat 1477mm	2pcs
I		Support Legs 250mm	4pcs
J		CSK Screw 32mm	24pcs
K		JCBB M8 x 20	8pcs
L		JCBC M6 x 30	14pcs
M		JCBC M6 x 60	4pcs
N		Allen Key 65mm	1pc
O		Allen Key 70mm	1pc
P		Flat Washers	8pcs
Q		Spring Washers	6pcs
R		Small Adjuster	4pcs

Step 5 : Attach the support legs (I) to the slats (H) and center rail (G).

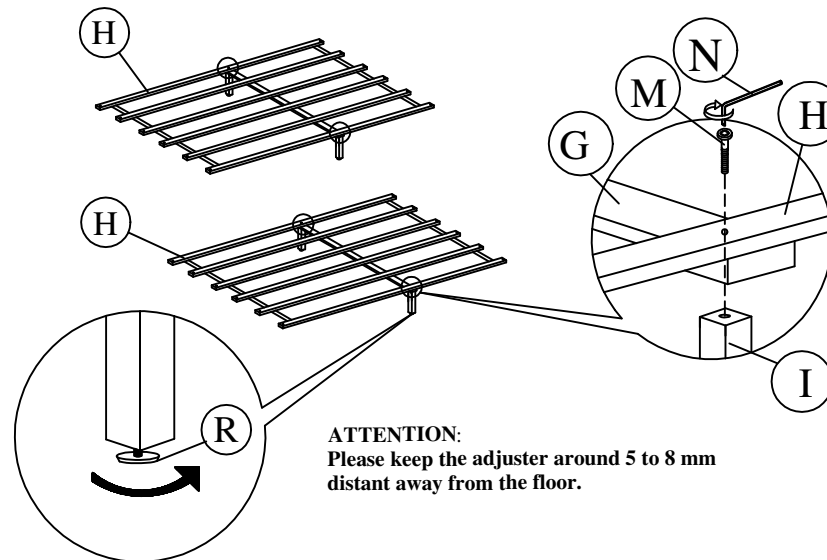

Step 6 : Tighten the 4 Corner with Allen Key (O). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

