














ASSEMBLY INSTRUCTION


MODEL : CF 9671-B (5')

A		1 pc
B		1 pc
C		2 pcs
D	 L R 35x1200(H)	2 pcs
E	 L R 65x380(H)	2 pcs
F	 1940mm	1 pc
G	 300mm	3 pcs
H	 1537mm	1 set
I		4 pcs
J		1 pc
K		1 pc
L		28 pcs
M		4 pcs
N		3 pcs
O		4 pcs
P	 25 mm	4 pcs
Q		4 pcs
R		1 pc
S		4 pcs
T		3 pcs


Step 1 : Unzip back of the headboard (A) and install the headboard legs (D) to headboard (A).
Tighten the legs as shown.

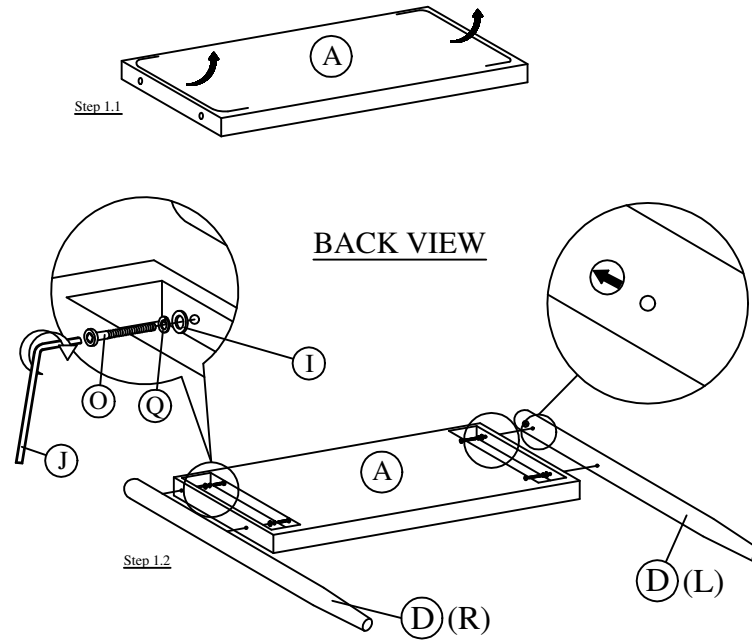


Step 2 : Attach the plastic dowel (P) to the footboard (B). Install the footboard leg (E) to the footboard (B). Tighten the legs.

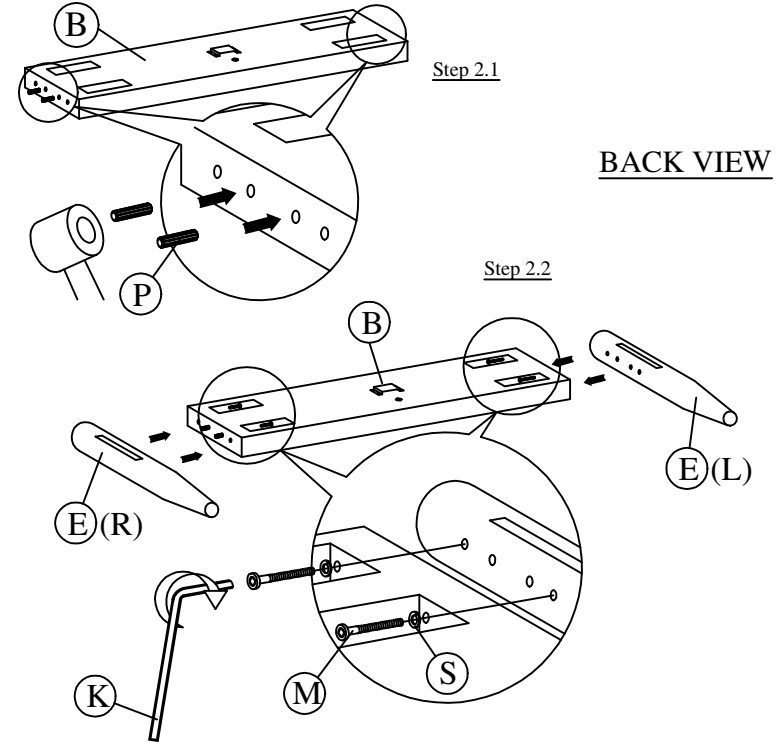


Step 3 : Attach side rail (C) to the footboard legs (E) as shown.

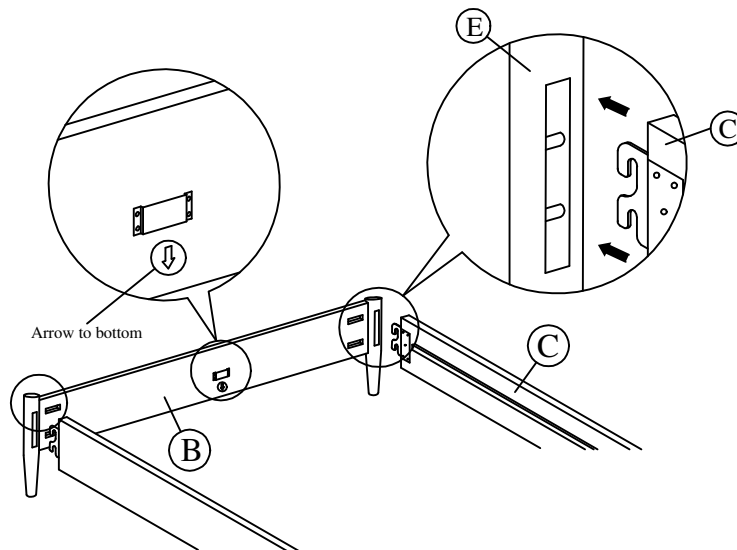


Step 4 : Attach side rail (C) to headboard legs (D) as shown.

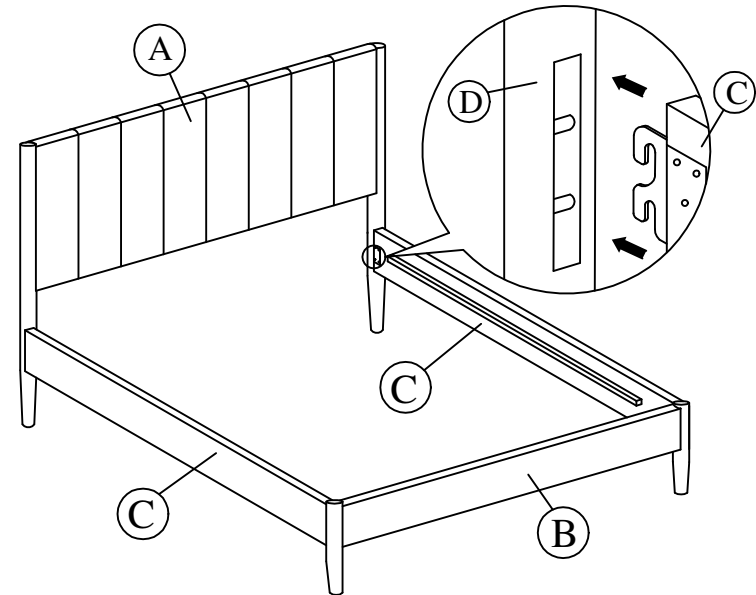

Step 5 : Attach the support legs (G) to the center rail (F) and slat (H) of the bed as shown.

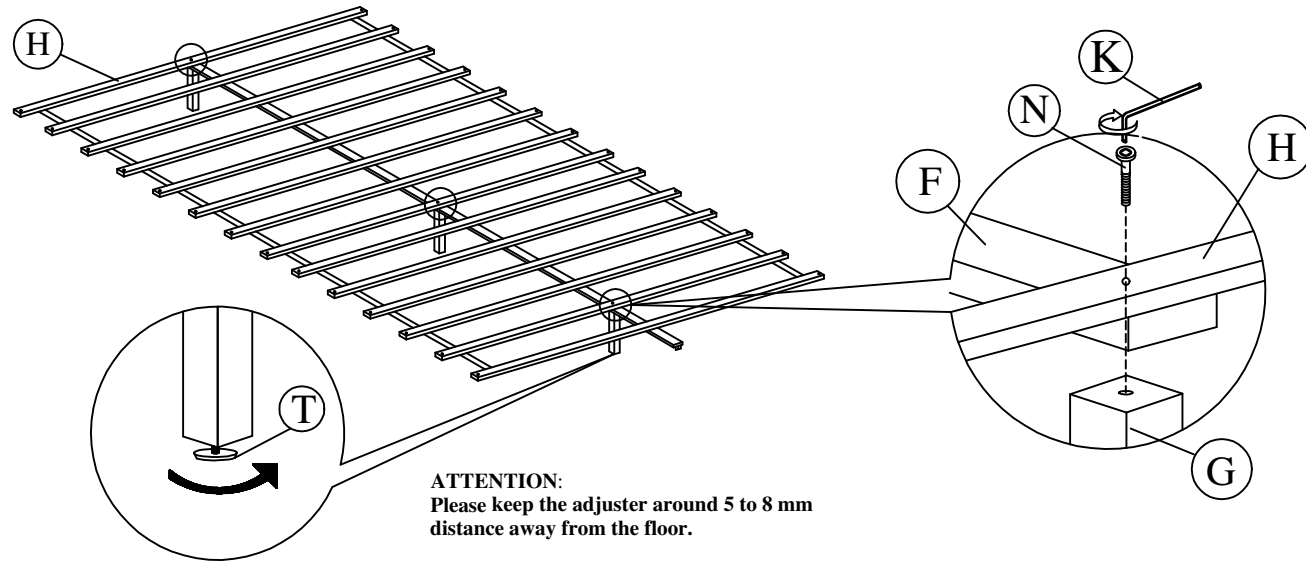

Step 6 : Slide the Center Rail (F) to the Footboard (B).

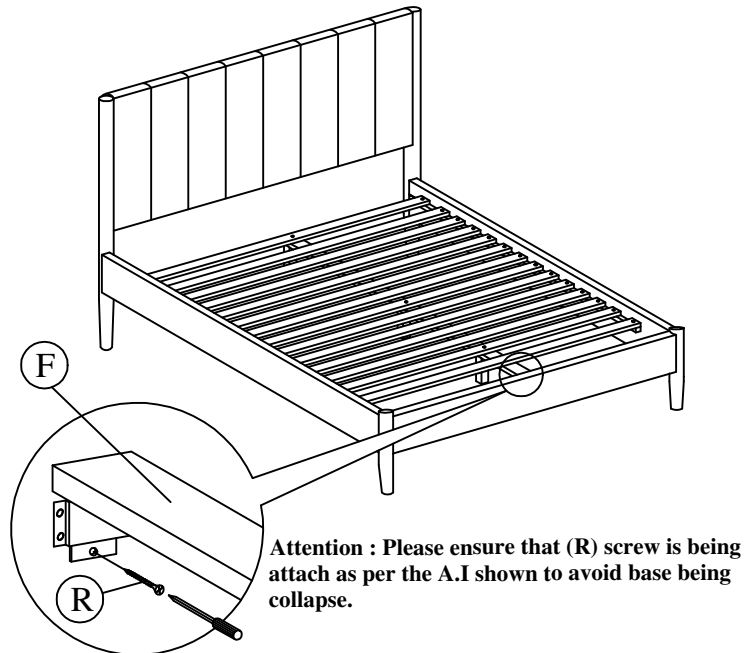

Step 7 : Affix the Slat (H) to the side rail support wood. Assembly is completed.

