

		
Ⓐ 18X M6*20	Ⓑ 18X M6*Ø16	Ⓒ 1X 4mm	Ⓓ 4X	Ⓔ 1X	Ⓕ 1X	


STEP:1

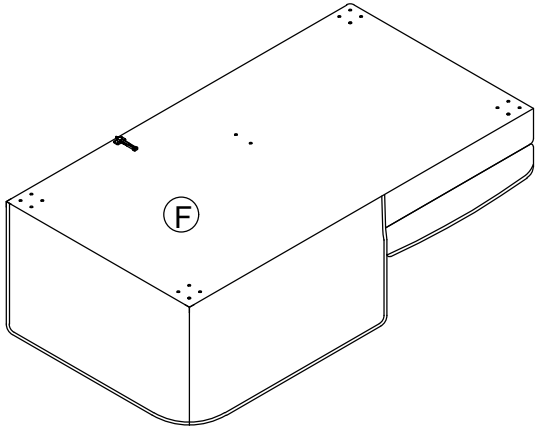


STEP:2

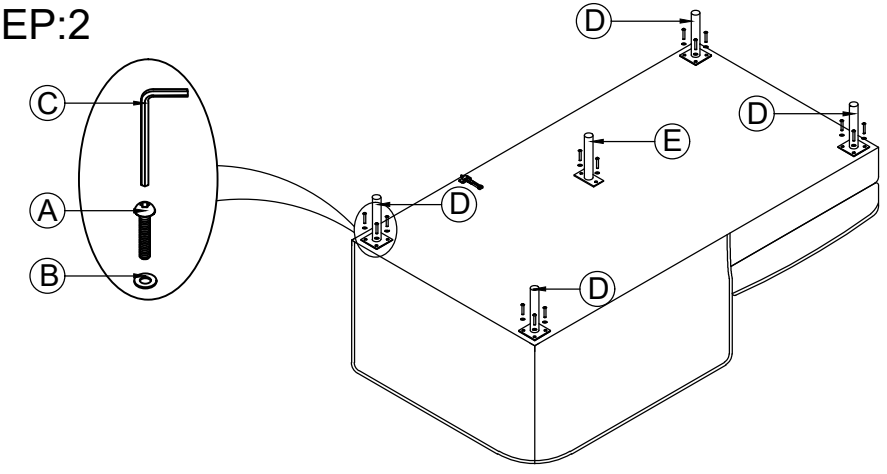






STEP:3

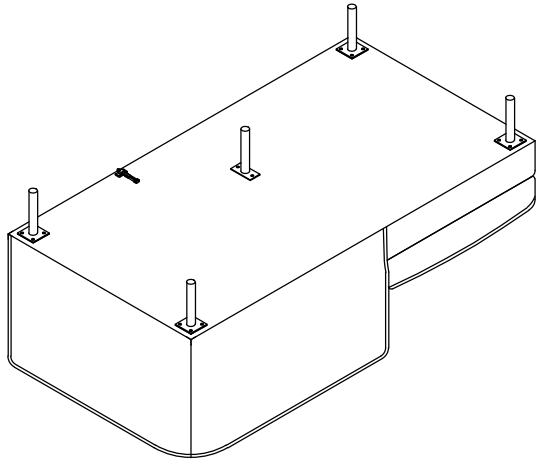


STEP:4

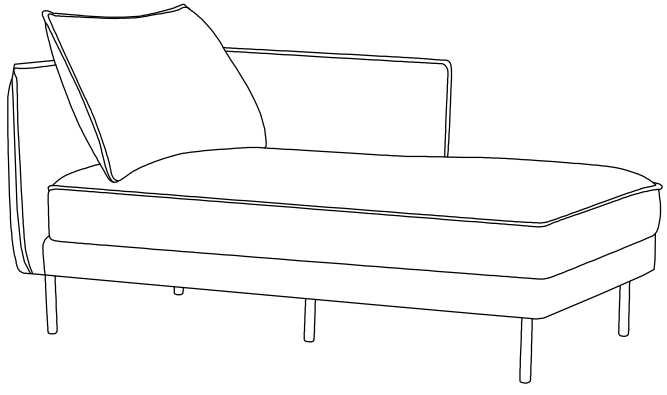


Please release the connector before moving the sofa.

 Ⓐ 18X M6*20	 Ⓑ 18X M6*Ø16	 Ⓒ 1X 4mm	 Ⓓ 4X	 Ⓔ 1X	 Ⓕ 1X	


STEP:1

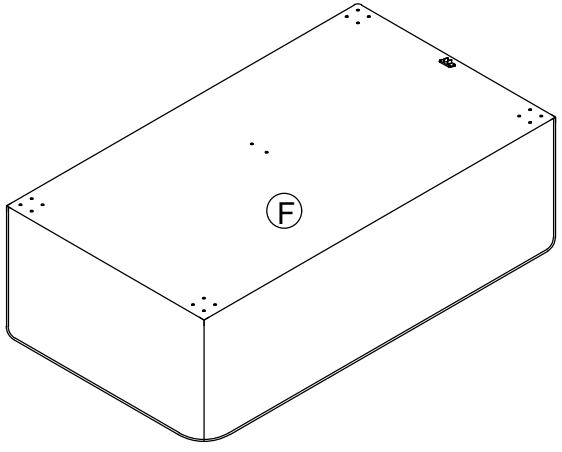


STEP:2

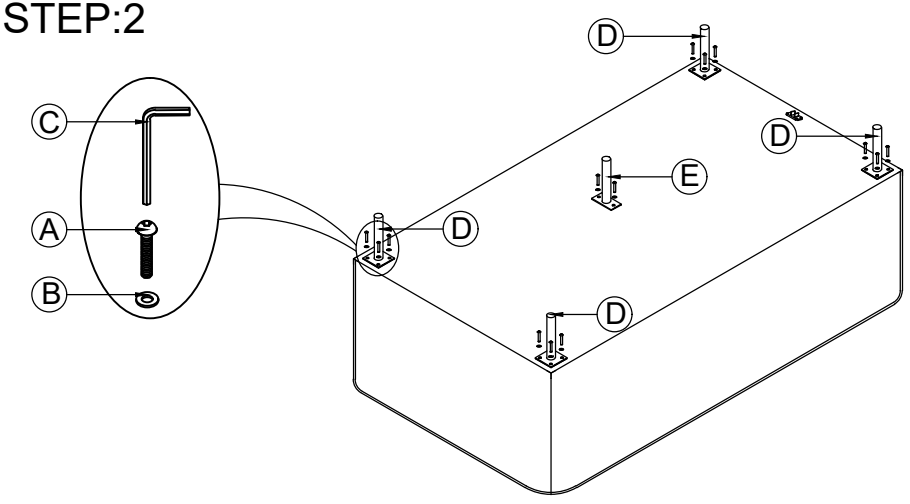

STEP:3

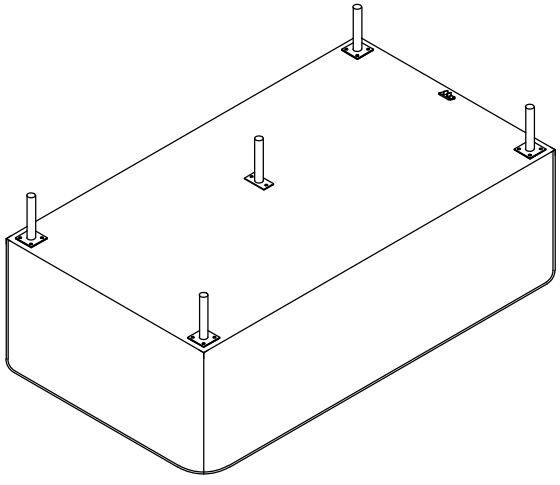

STEP:4

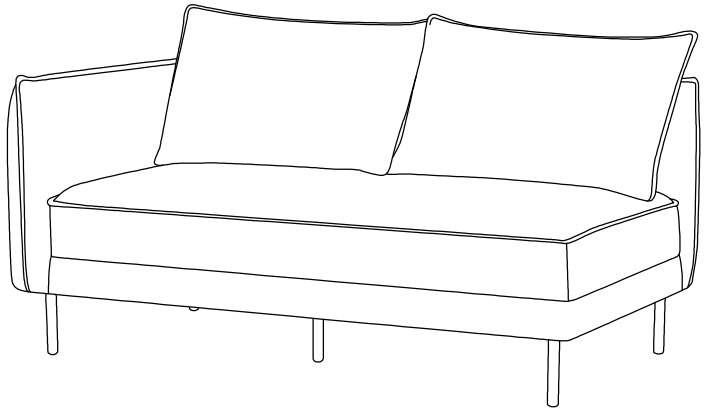

Please release the connector before moving the sofa.