



ASSEMBLY INSTRUCTIONS

MODEL: ZINNIA SHOE CABINET















PART LIST		
NO	DESCRIPTION	QTY
1	Back Panel	2pcs
2	Shelf Panel	3pcs
3	Top Panel	1pc
4	Bottom Panel	1pc
5	Door-L	1pc
6	Door-R	1pc
7	Back Hanging	1pc
8	Side Panel-L	1pc
9	Side Panel-R	1pc
10	Shelf Fix Panel	1pc

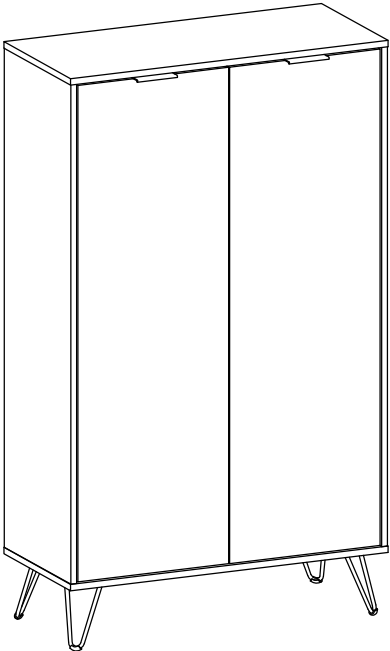


COMPLETE ASSEMBLY

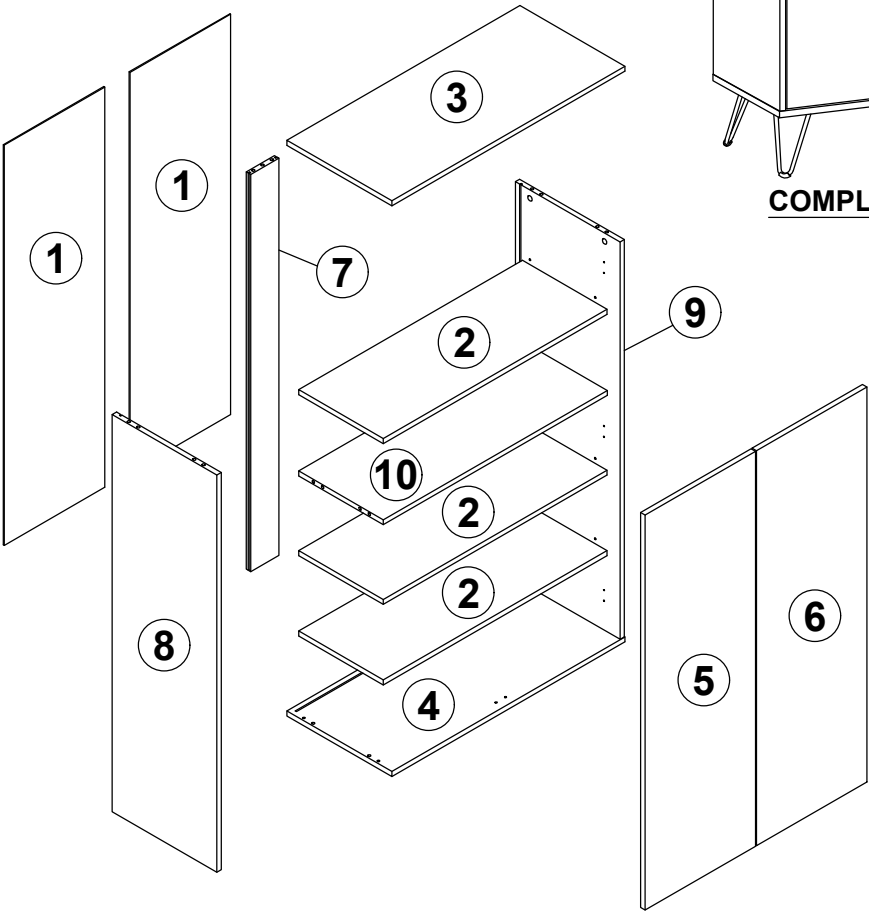


HARDWARE LIST

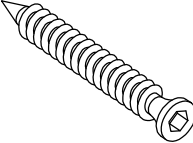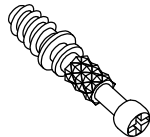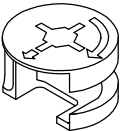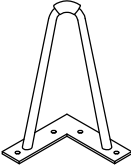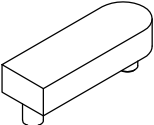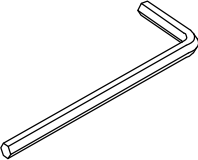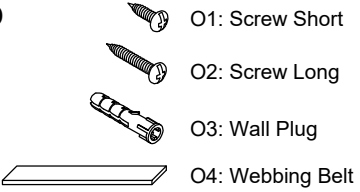A 	B 	C 	D 
CSK Cap Screw M6x50 5pcs	Wood Dowel M8 x 25 16pcs	Quick Fix Bolt 9pcs	Quick Housing Ø15x12 9pcs
E 	F 	G 	H 
CSK Screw M4 x 16 16pcs	CSK Screw M3.5 x 16 40pcs	Hinges 7/8 6sets	Handle 2pcs
I 	J 	K 	L 
Leg 4pcs	Shelf Support Pin 12pcs	2 Pin Stopper 2pcs	Allen Key M4 1pc
M 	N 	O 	
Back Ply Stopper 8pcs	CSK Screw M3 x 20 8pcs	Safety Kit 2sets	


Step 1

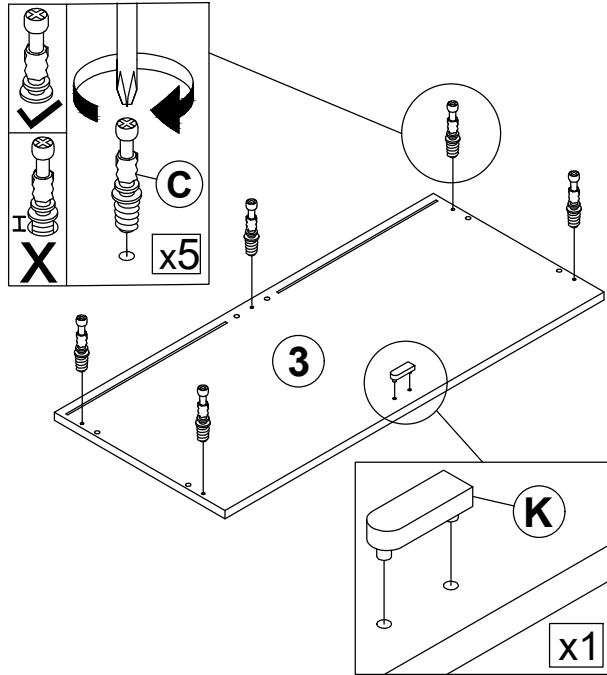


Step 2

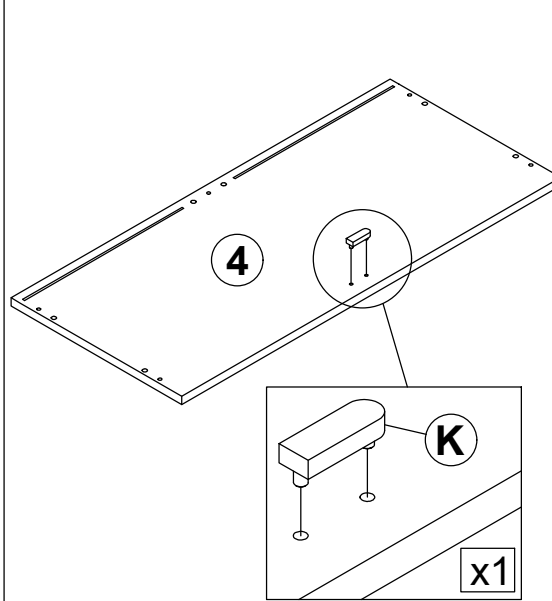


Step 3

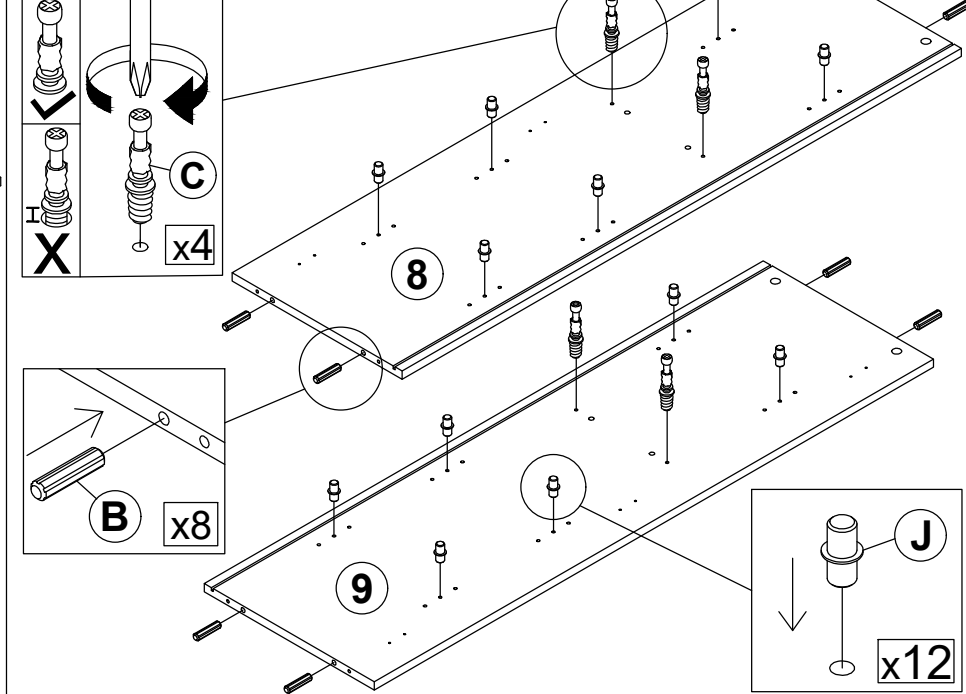


Step 4

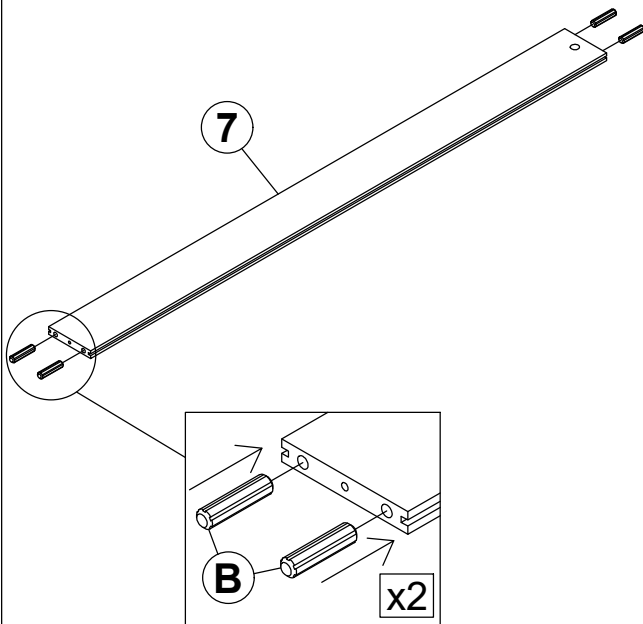


Step 5

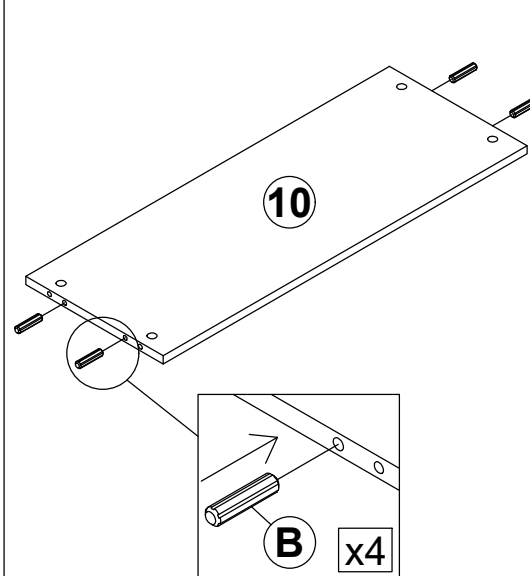


Step 6

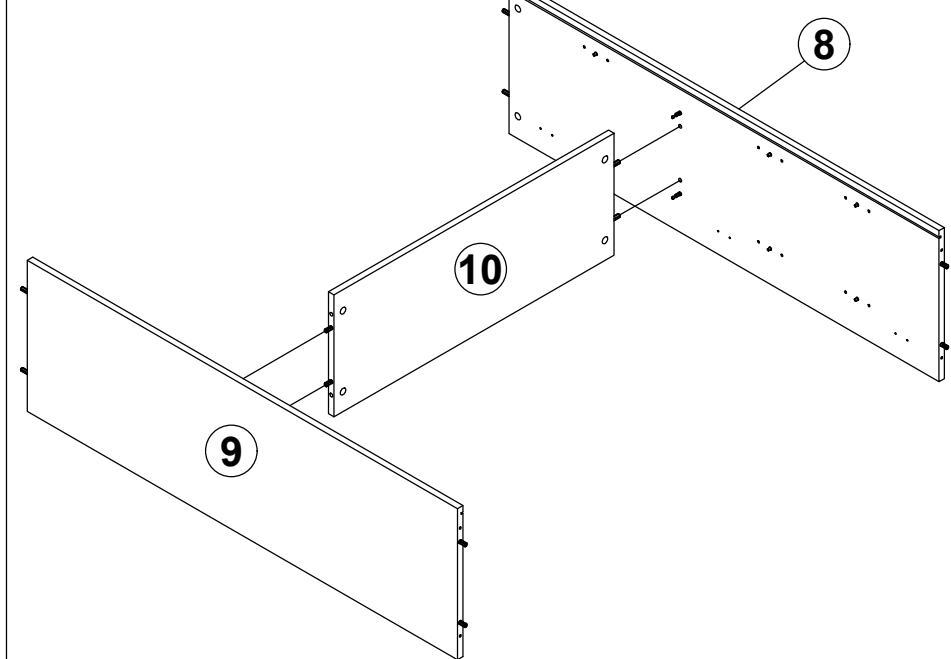


Step 7

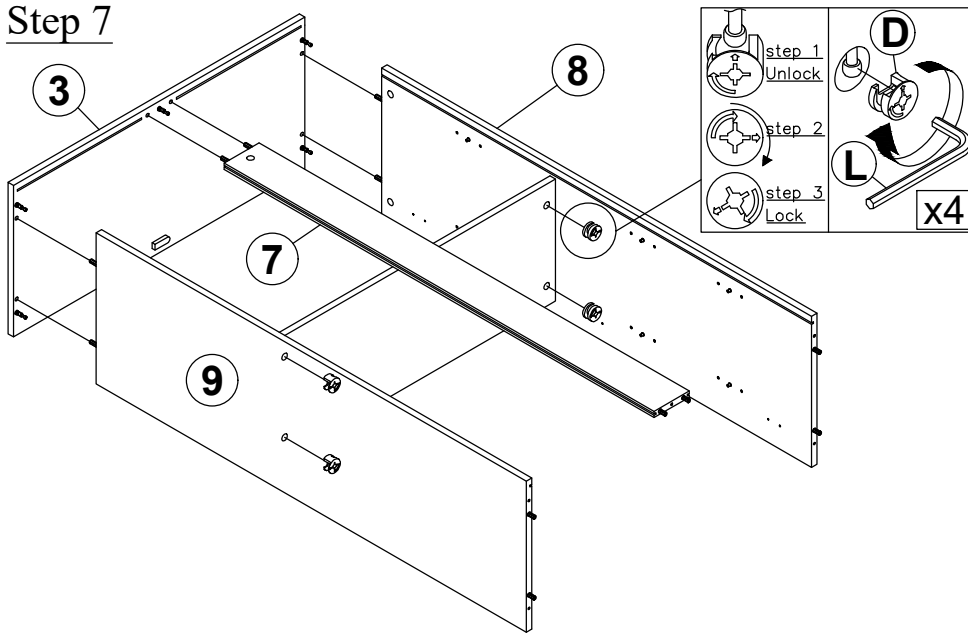


Step 8

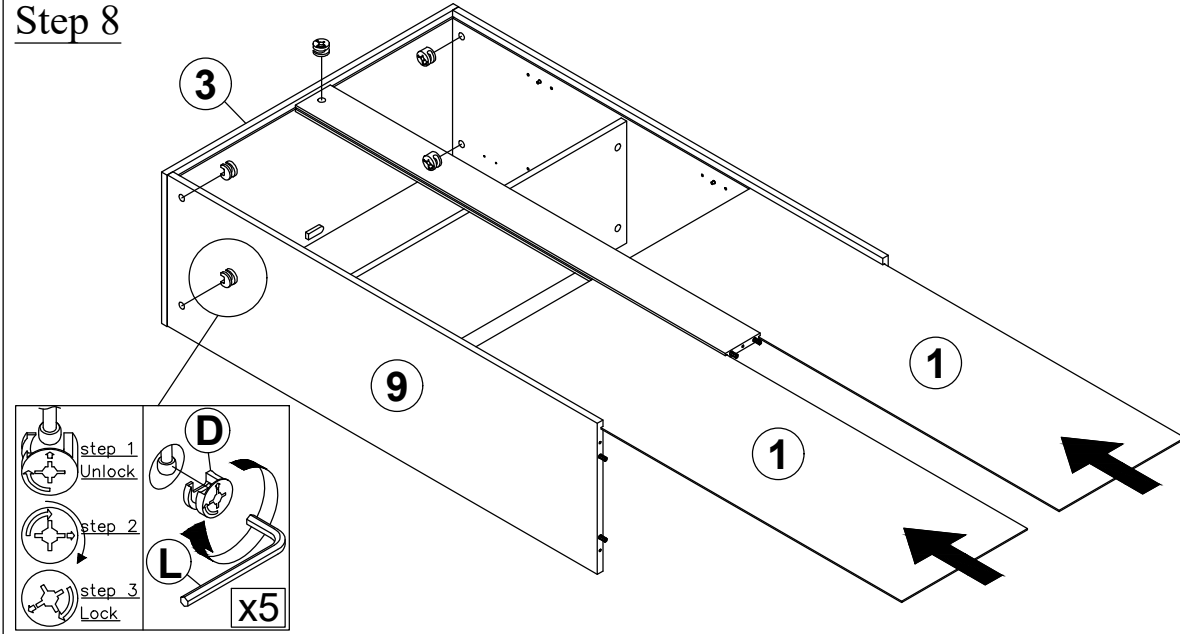


Step 9

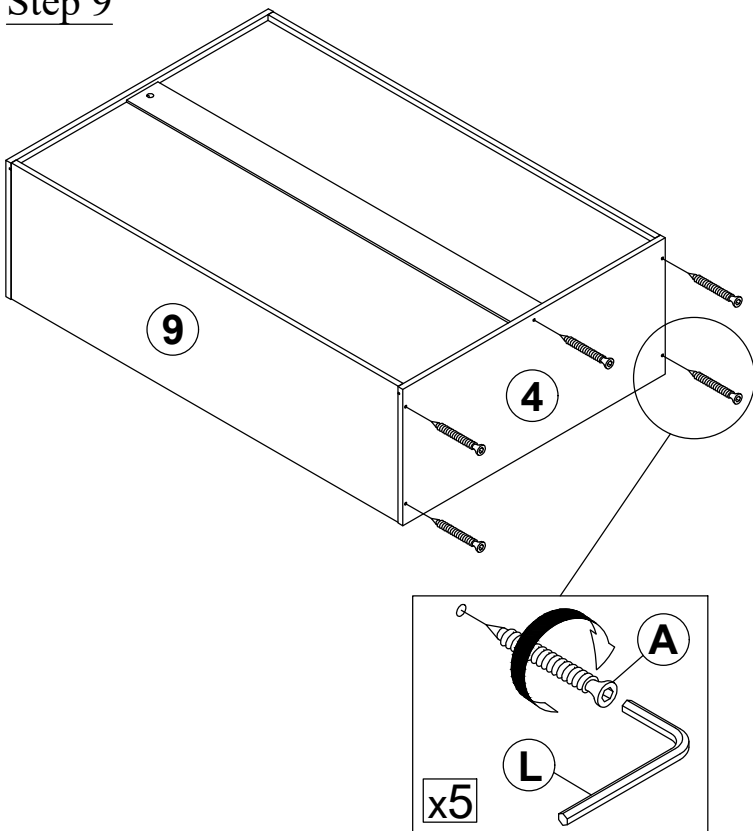


Step 10

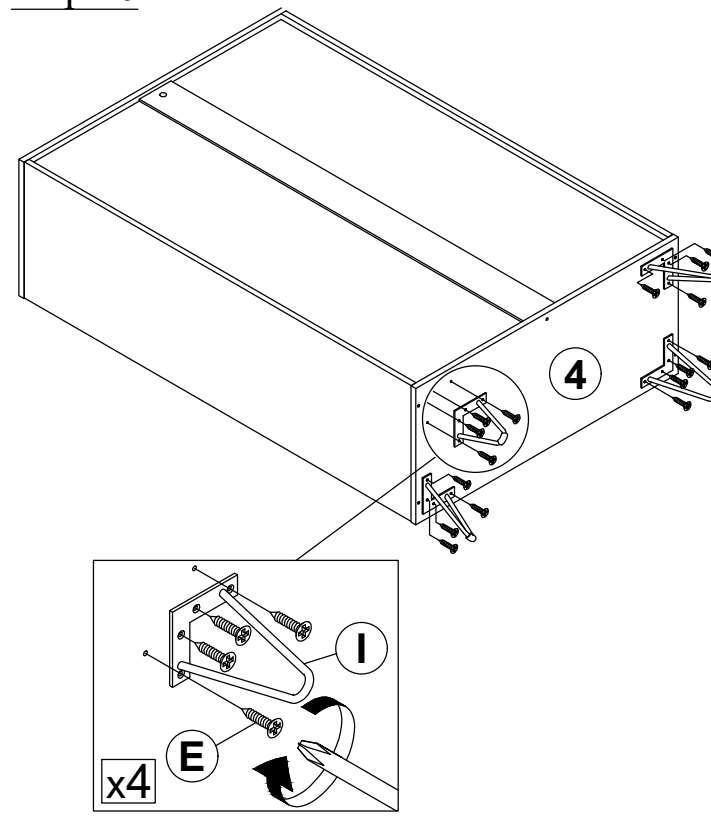


Step 11

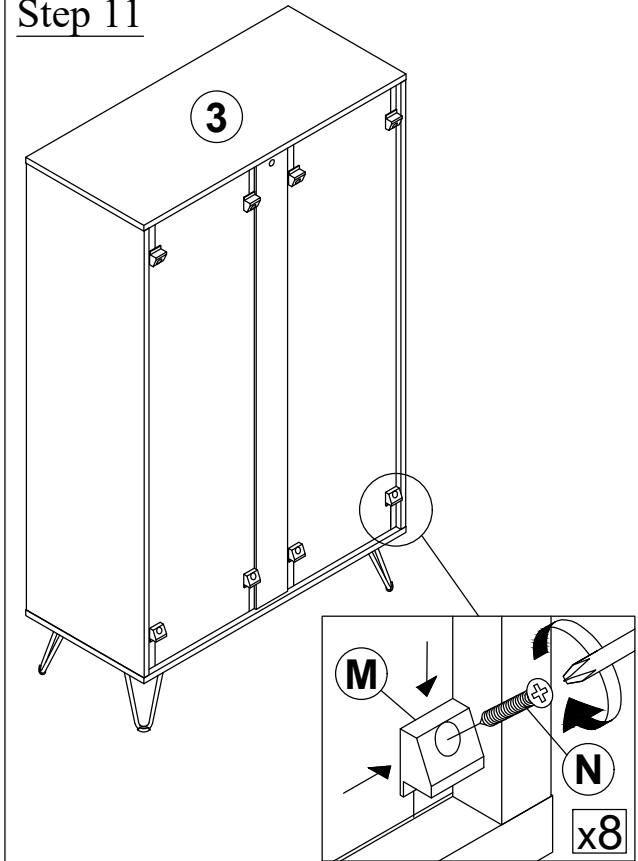


Step 12

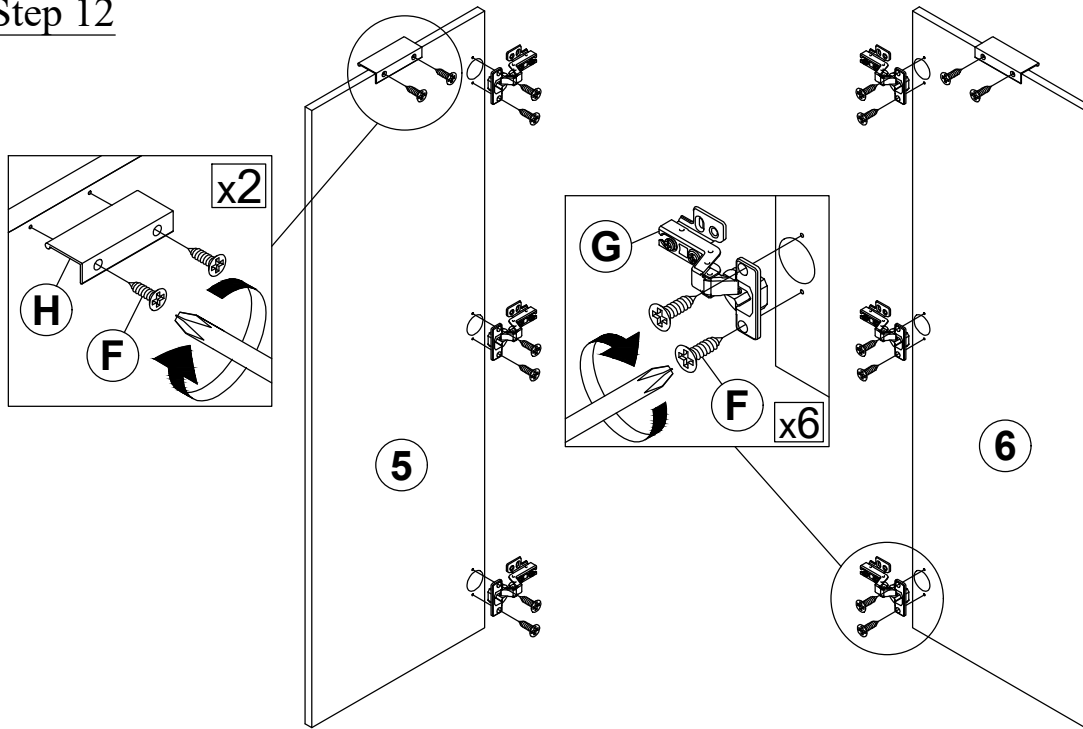


Step 13

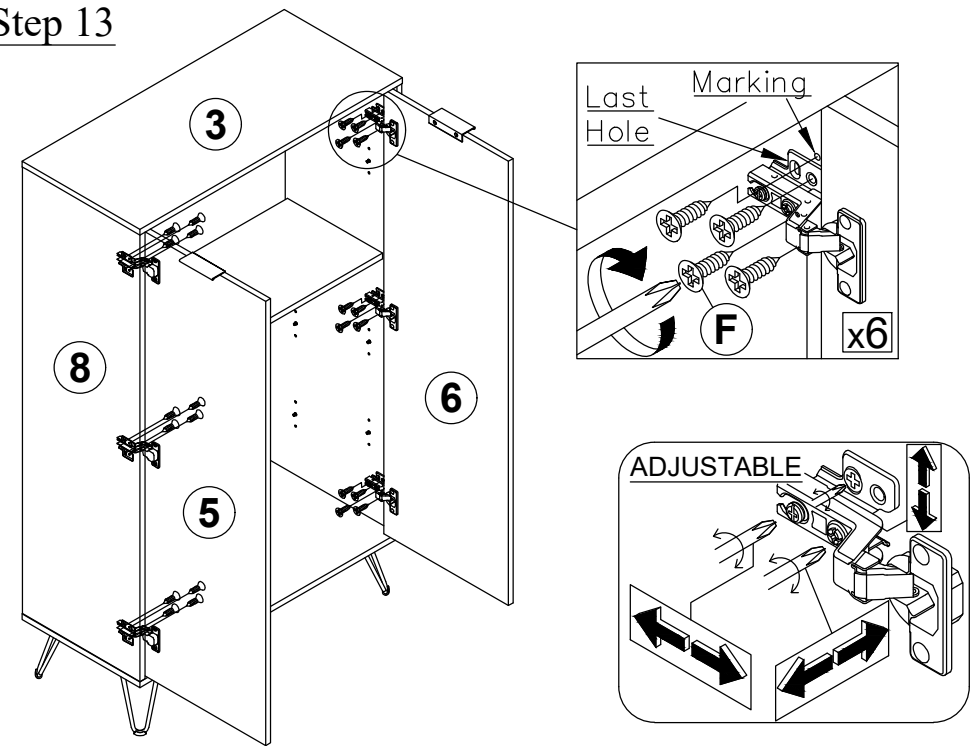

Step 14

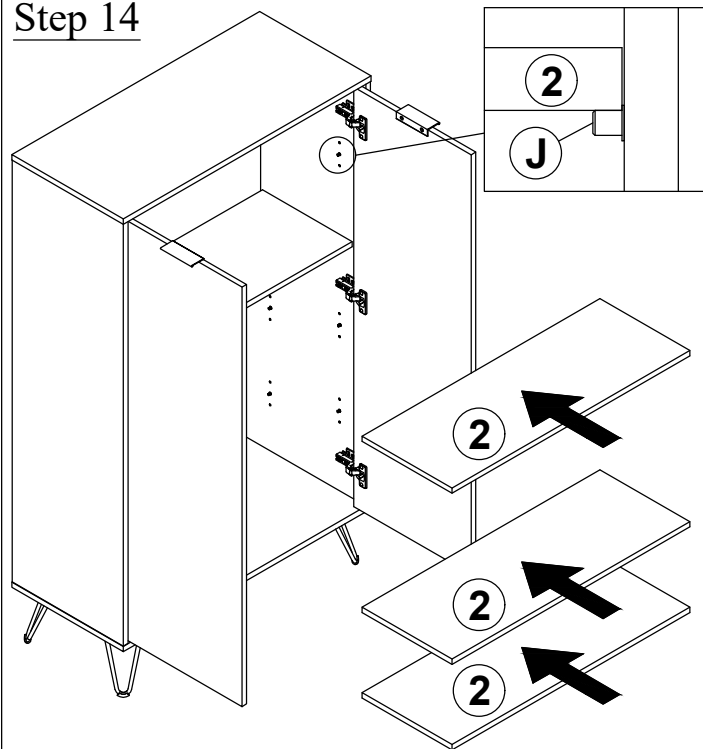

Step 15

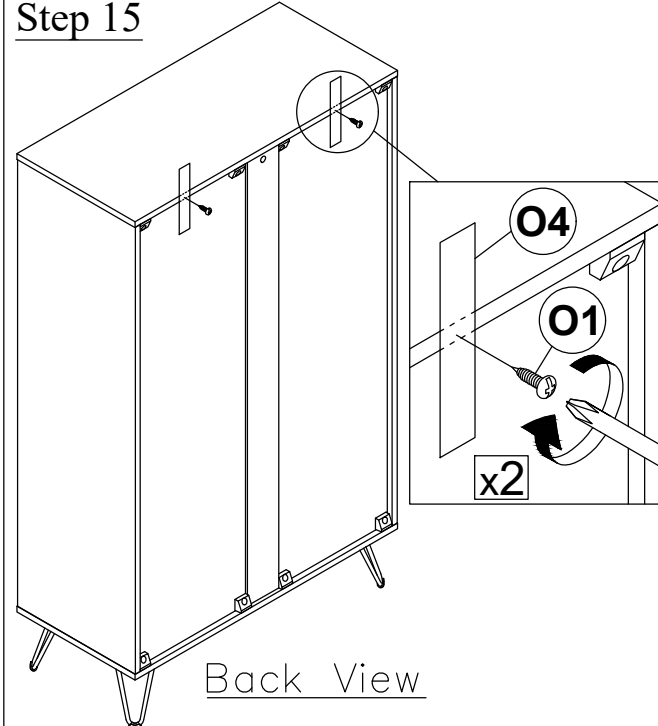

Step 16 Finish

