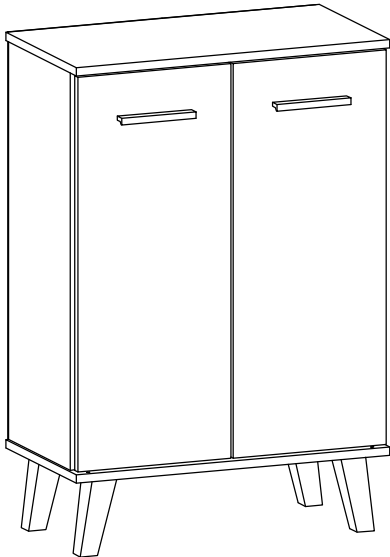


ASSEMBLY INSTRUCTIONS


MODEL: MURRAYA 2 DOOR SHOE CABINET

PART LIST











Part NO:	Description	Qty
①	Back Panel	1
②	Shelf Panel	3
③	Side Panel (L)	1
④	Side Panel (R)	1
⑤	Top Panel	1
⑥	Bottom Panel	1
⑦	Door	2



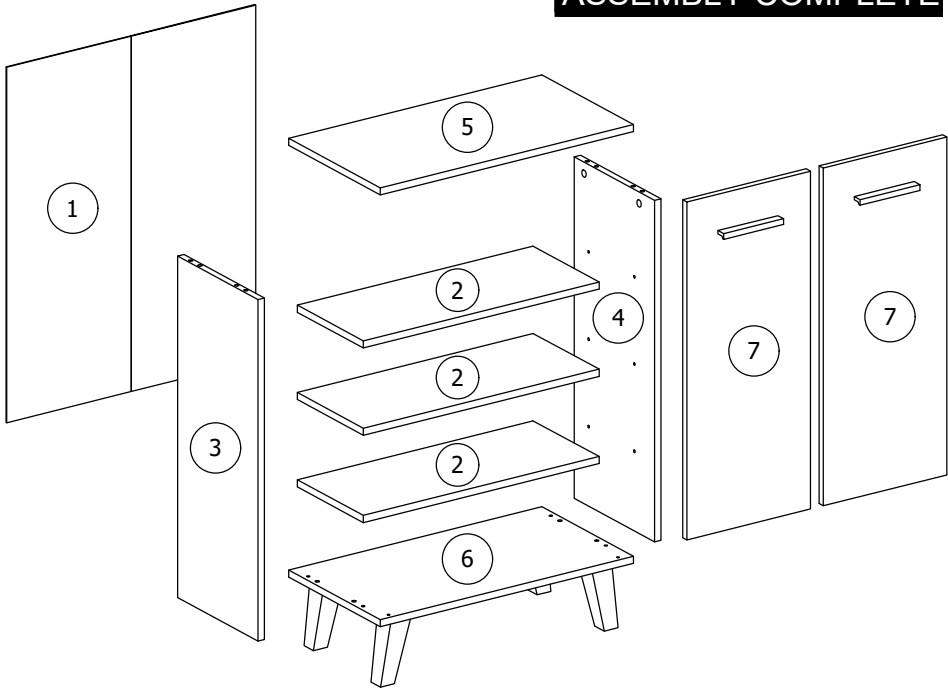
ASSEMBLY COMPLETE




HARDWARE LIST

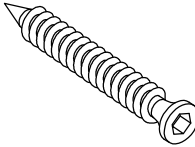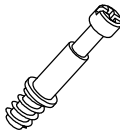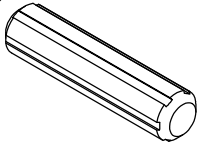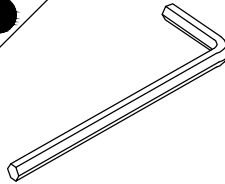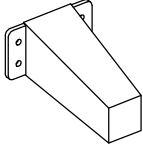A 	B 	C 	D 
CSK Cap Screw M6x50 4pcs	CSK M3.5 x 12 10pcs	CSK M4 x 16 16pcs	Mini Fix 15 x 12 4pcs
E 	F 	G 	H 
Mini Fix Bolt 4pcs	5/8 Nail 22pcs	Wood Dowel M8 x 25 8pcs	Fix Stopper 4pcs
I 	J 	K 	L 
Allen Key M4 1pc	Leg 4pcs	Handle 2pcs	Cap Cover (Brown) 4pcs
M 	N 	O 	P 
CSK M4 x 25 4pcs	Magnet 2pcs	Metal Plate 2pcs	Shelf Support 12pcs
Q    	Q1: Screw Short Q2: Screw Long Q3: Wall Plug Q4: Webbing Belt Safety Kit 1set		

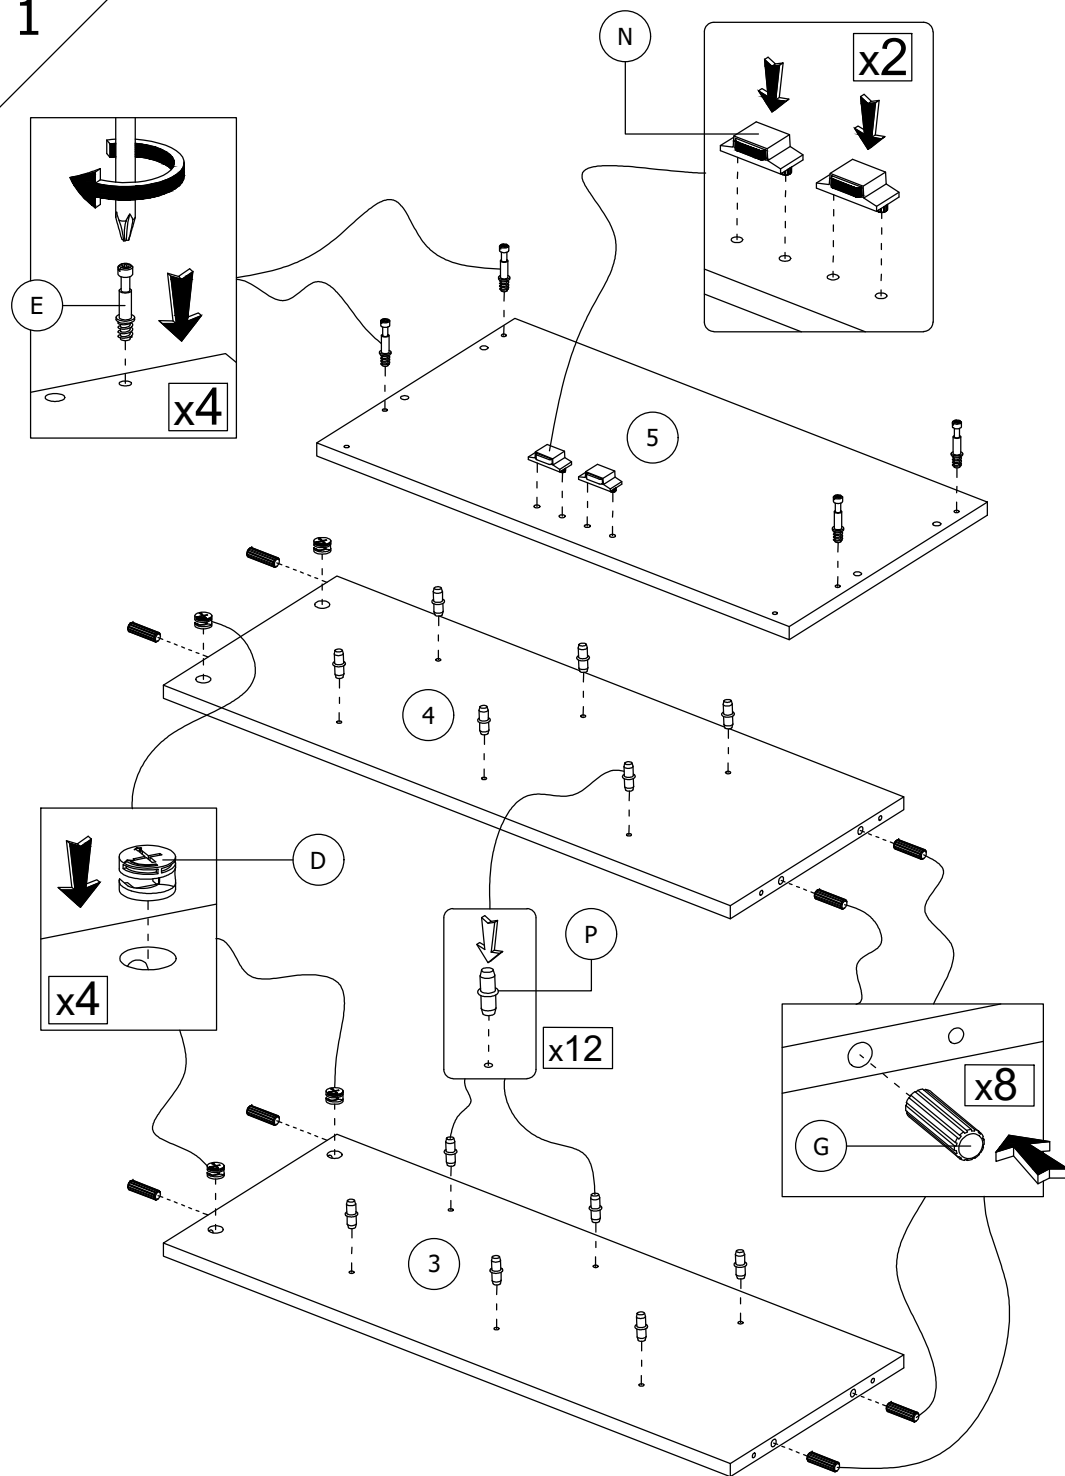
1





2

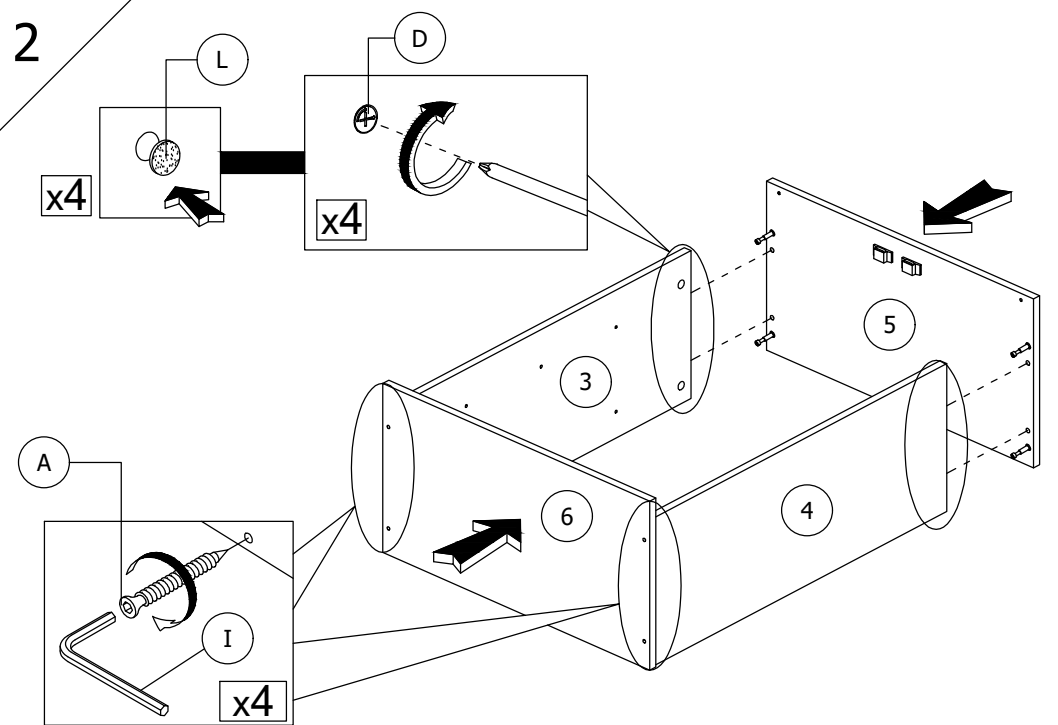


3

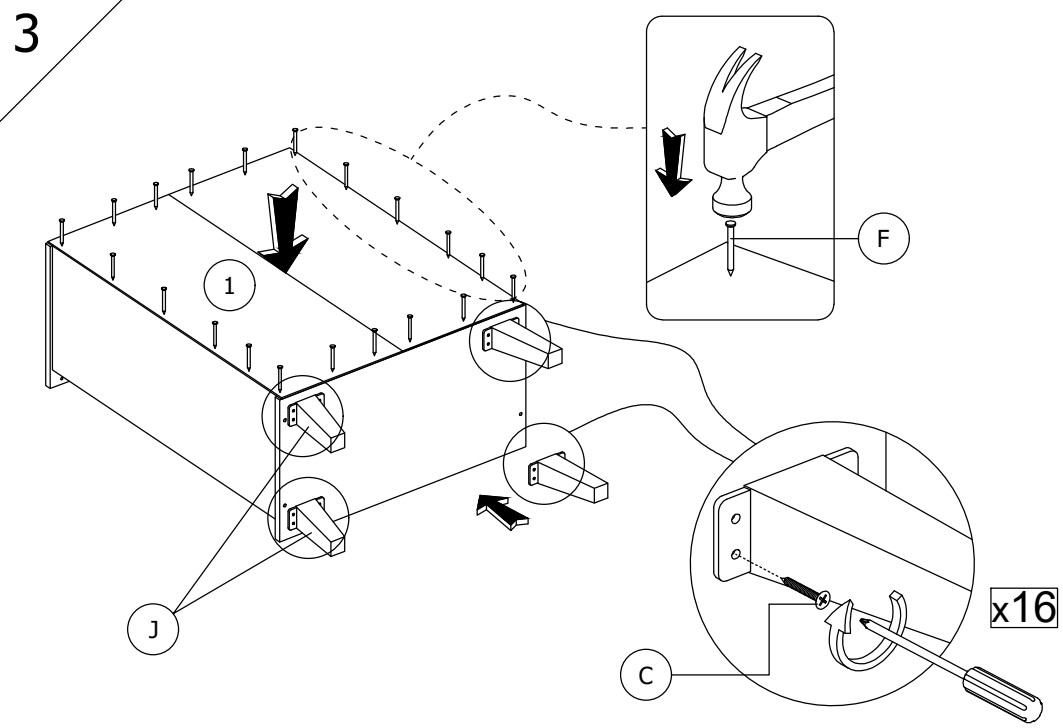

6

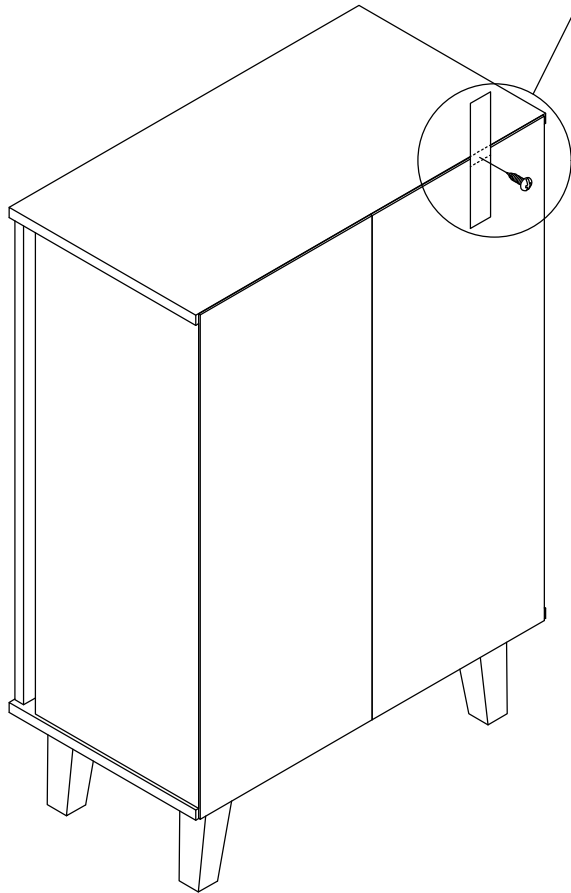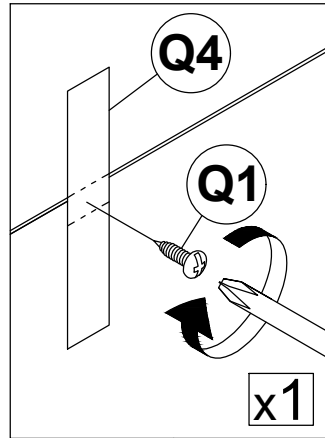

7

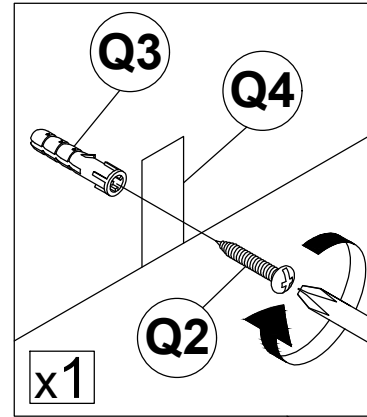

WALL

