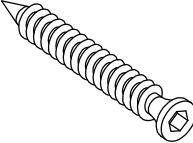

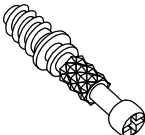
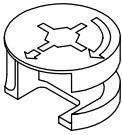

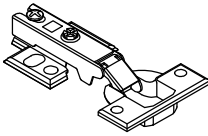

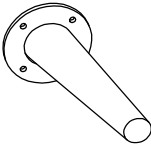
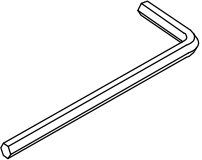



ASSEMBLY INSTRUCTIONS


MODEL: SHOE CABINET

PART LIST		
NO	DESCRIPTION	QTY
1	Top Panel	1pc
2	Bottom Panel	1pc
3	Side Panel-L	1pc
4	Side Panel-R	1pc
5	Hanging	1pc
6	Shelf Panel	3pcs
7	Door-L (Up)	1pc
8	Door-L (Down)	1pc
9	Door-R	1pc
10	Back Panel	2pcs


HARDWARE LIST

A 	B 	C 	D 
CSK Cap Screw M6x50 4pcs	Wood Dowel M8 x 25 12pcs	Quick Fix Bolt 5pcs	Quick Housing Ø15x12 5pcs
E 	F 	G 	H 
CSK Screw M4 x 16 16pcs	CSK Screw M3.5 x 16 36pcs	Hinges 5/8 6sets	Shelf Support Pin 12pcs
I 	J 	K 	L 
Leg 4pcs	Nail 40pcs	Cap Cover 5pcs	Allen Key M4 1pc
M  M1: Screw Short  M2: Screw Long  M3: Wall Plug  M4: Webbing Belt Safety Kit 2sets			


COMPLETE ASSEMBLY

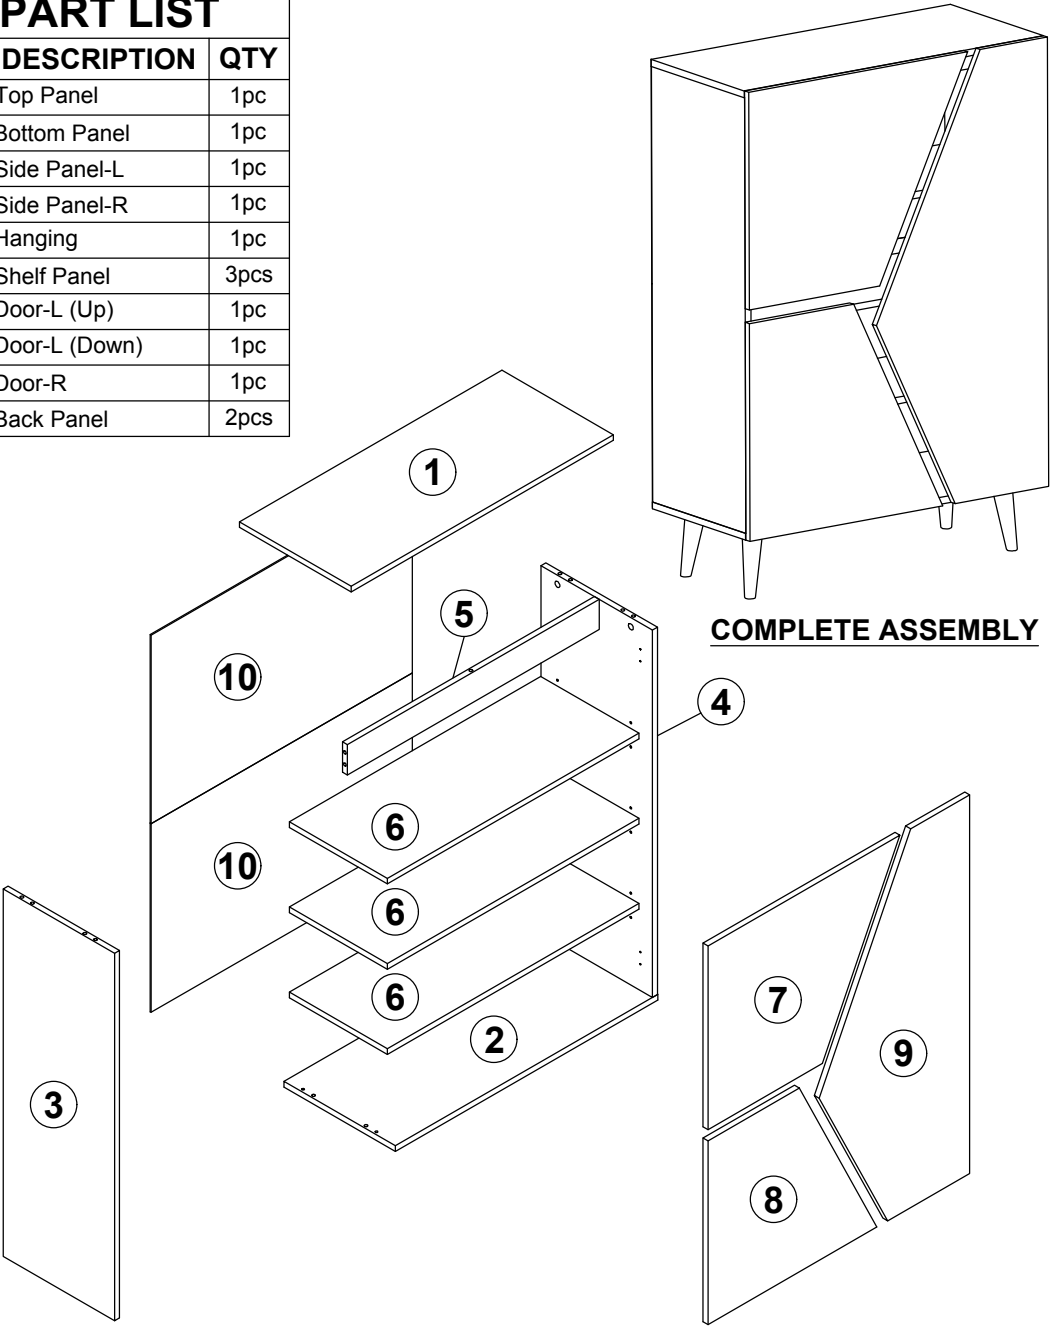


Step 1

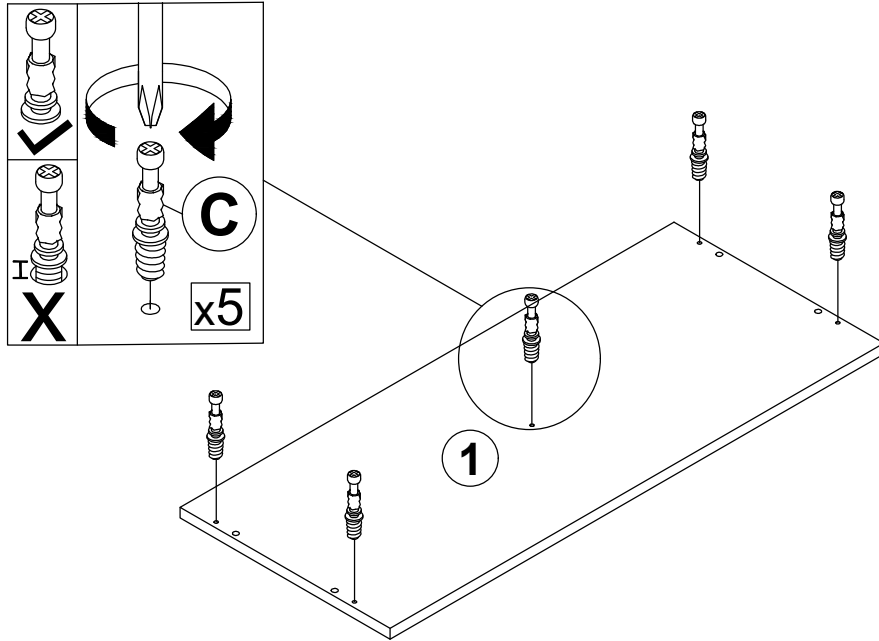


Step 2

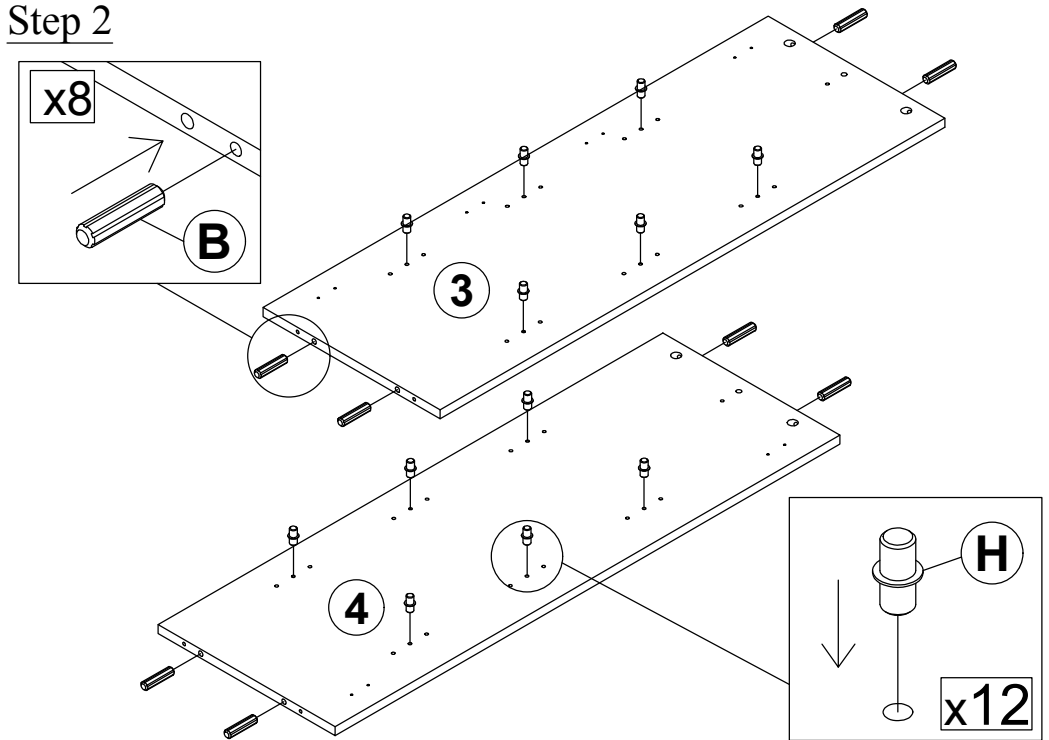


Step 3

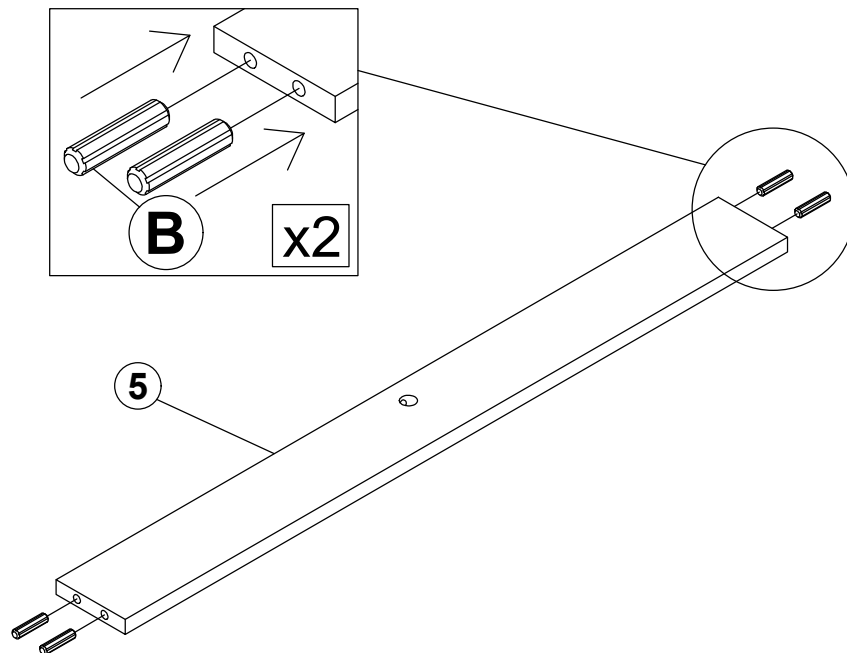


Step 4

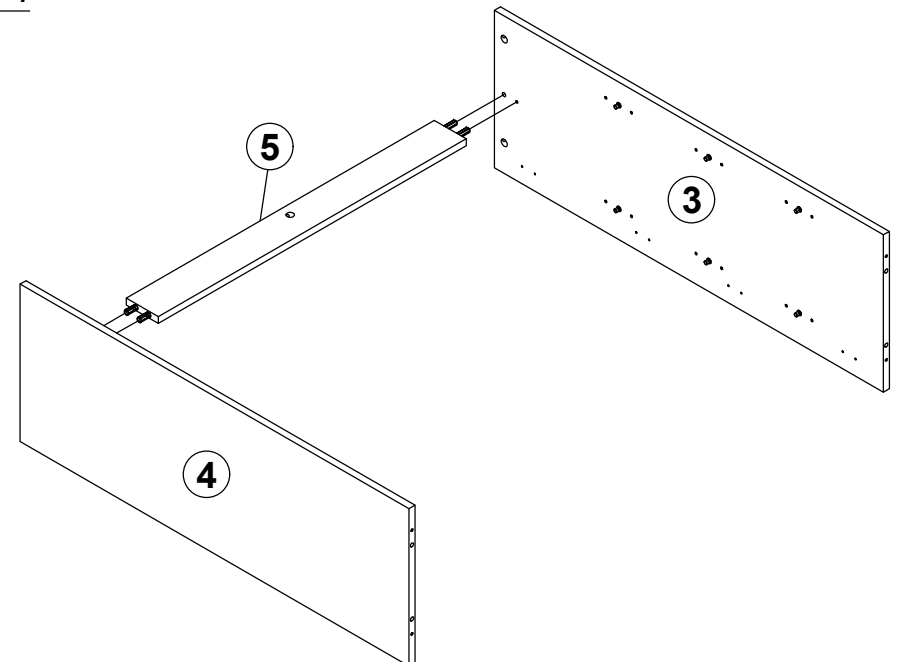


Step 5

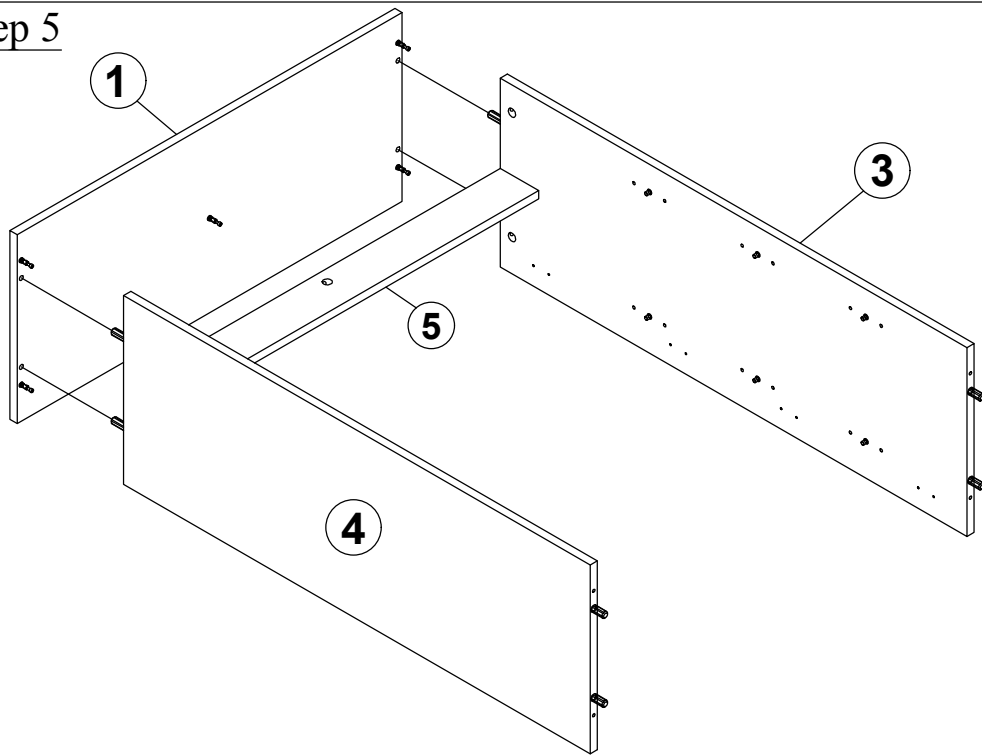


Step 6

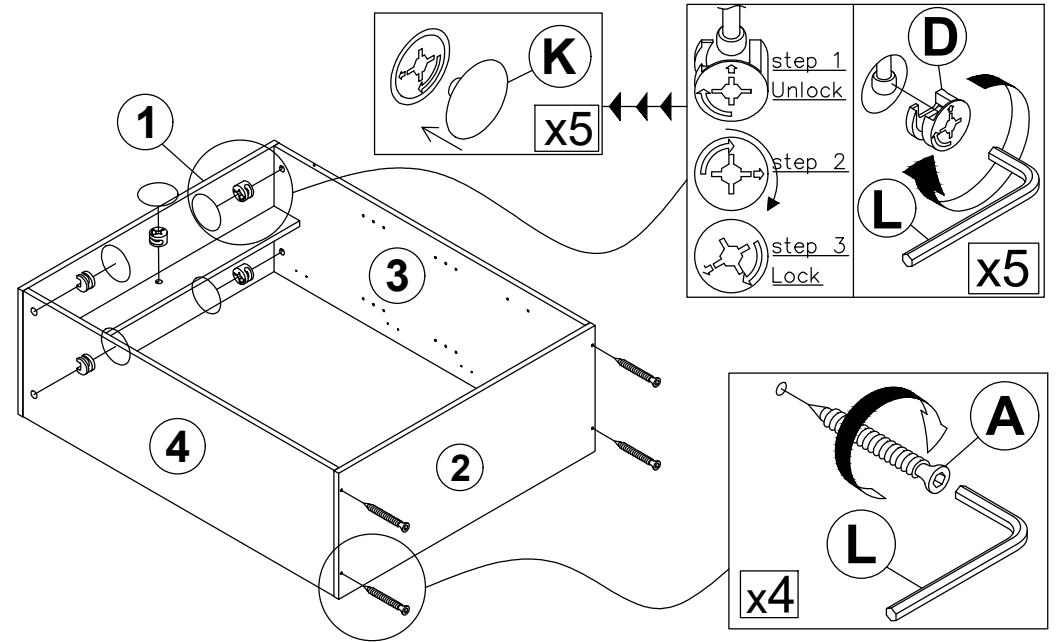


Step 7

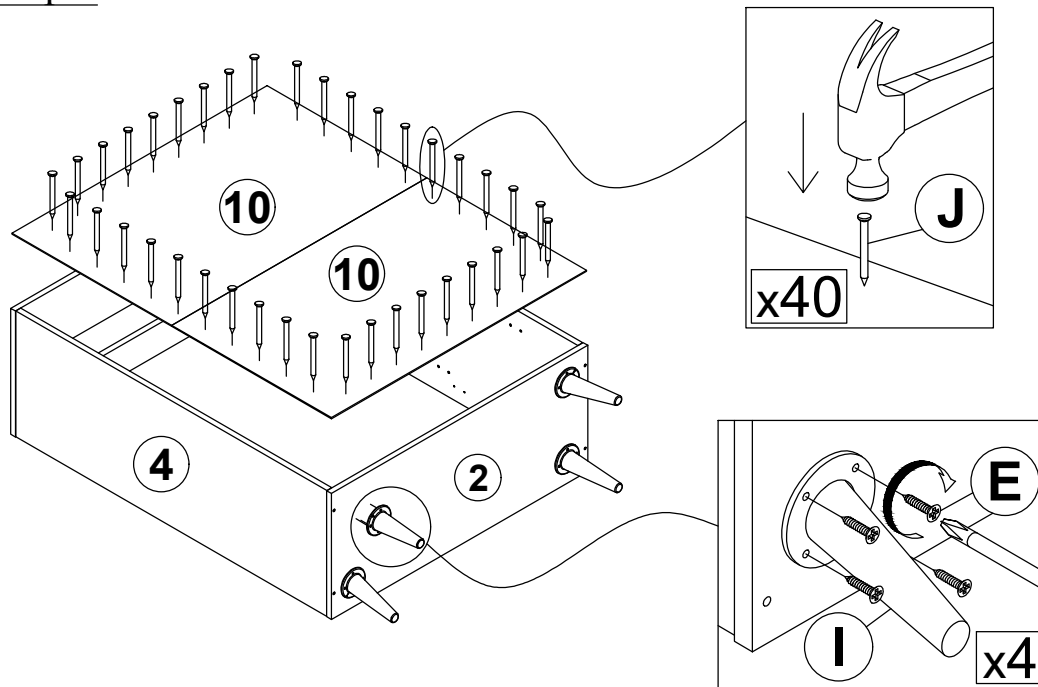


Step 8

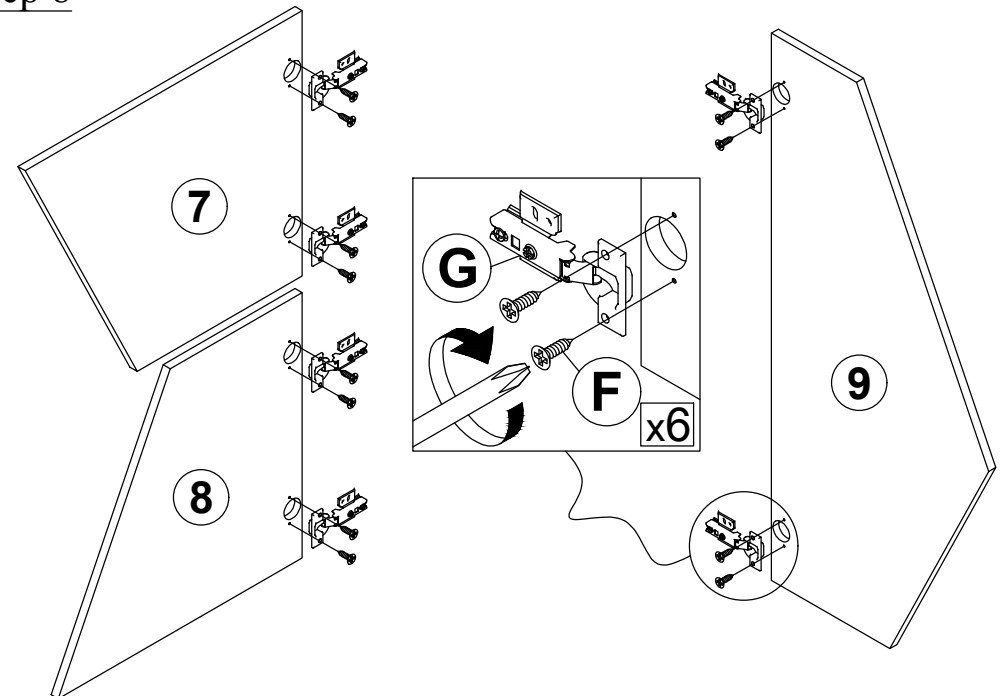


Step 9

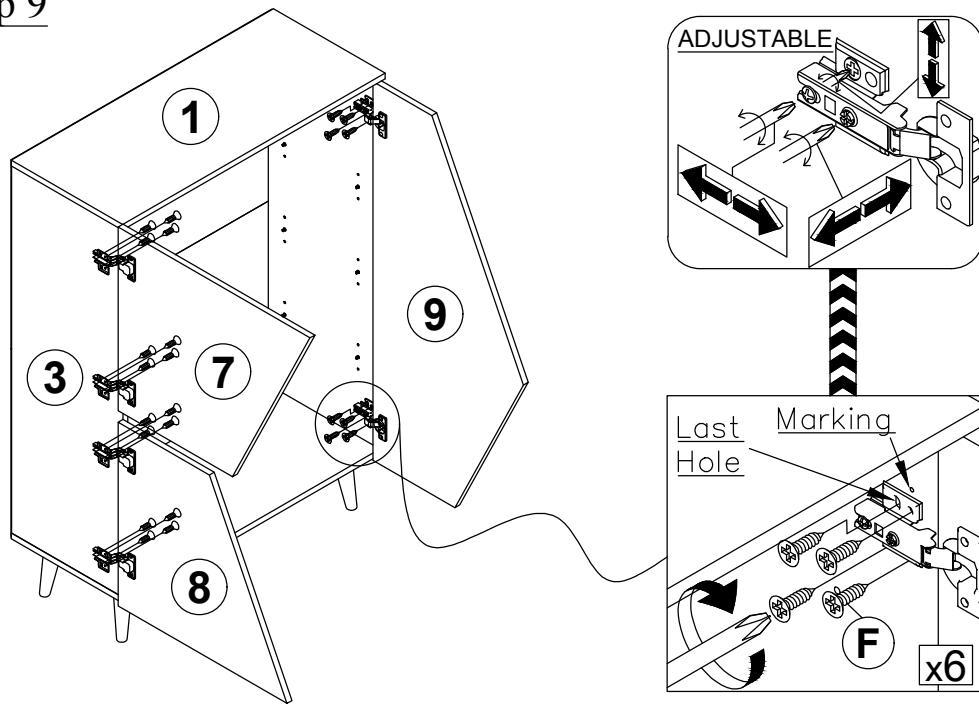

Step 10

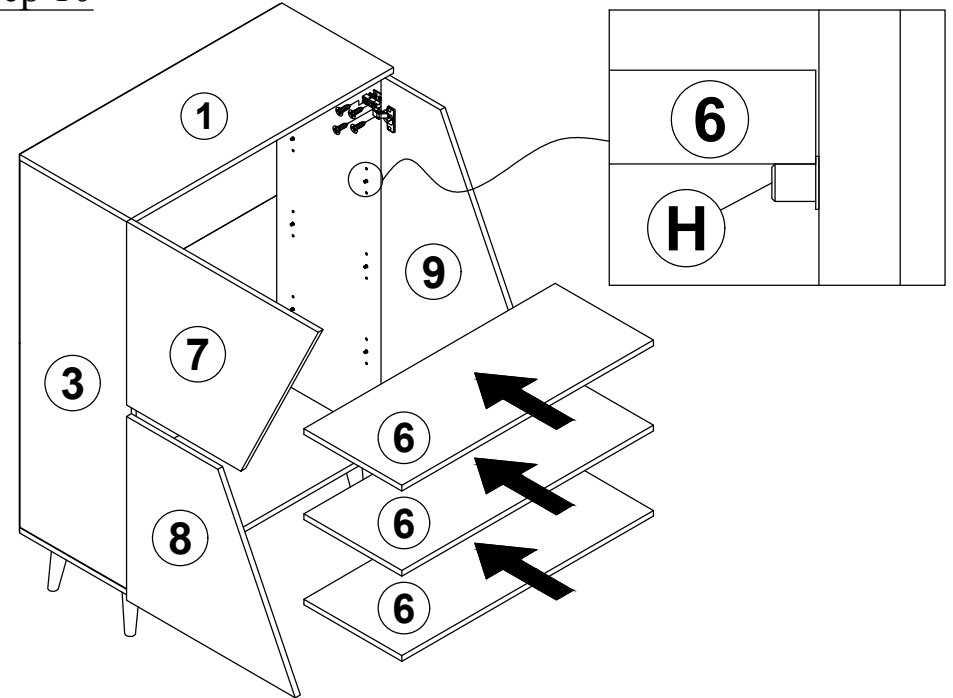

Step 11

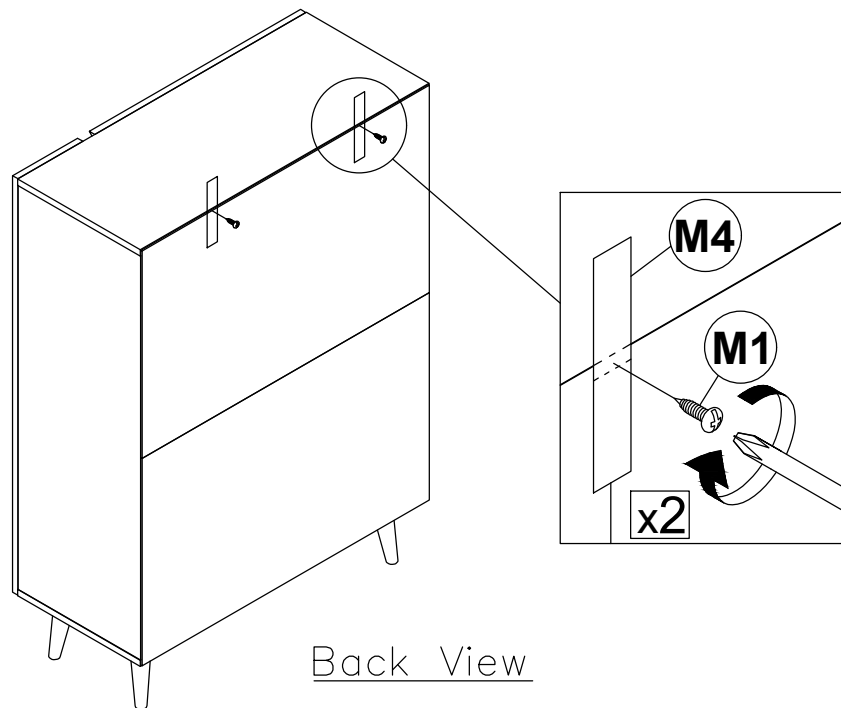

Step 12 Finish

