



ASSEMBLY INSTRUCTIONS

MODEL: PERRY 3 DOOR SHOE CABINET














PART LIST		
NO	DESCRIPTION	QTY
1	Top Panel	1pc
2	Side Panel-L	1pc
3	Side Panel-R	1pc
4	Center Panel	1pc
5	Bottom Panel	1pc
6	Door	3pcs
7	Shelf Panel-Big	3pcs
8	Shelf Panel-Small	3pcs
9	Back Panel-Big	1pc
10	Back Panel-Small	2pcs

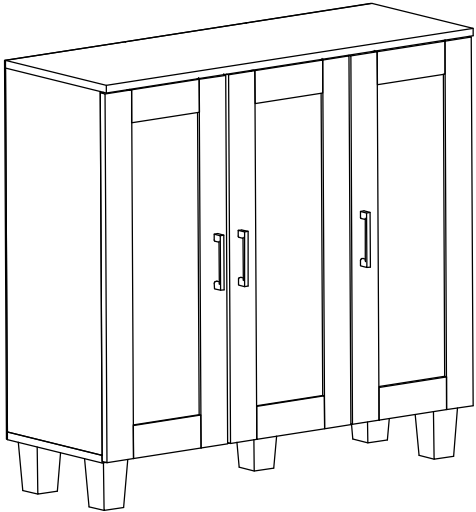


COMPLETE ASSEMBLY

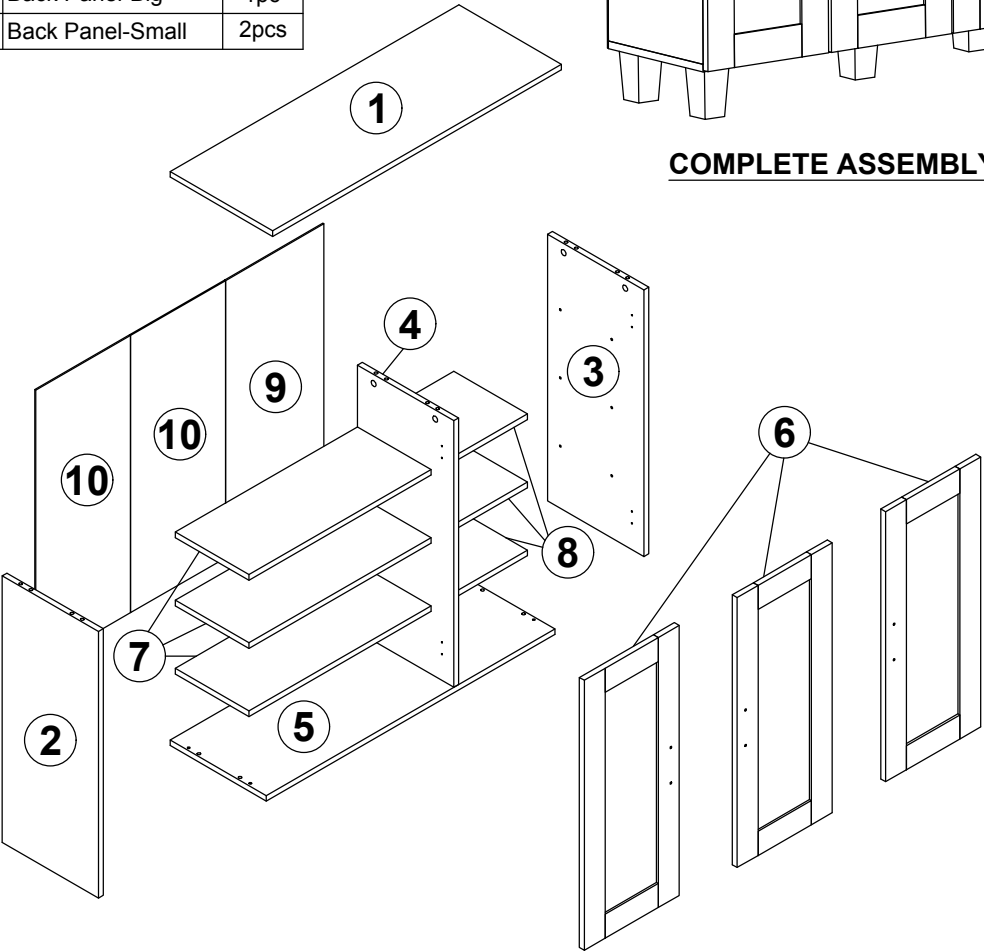


HARDWARE LIST

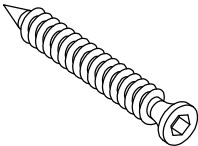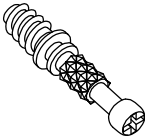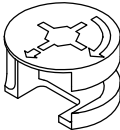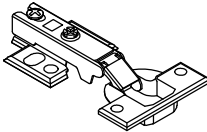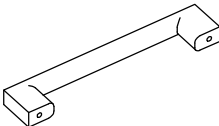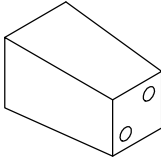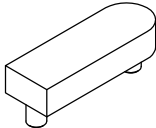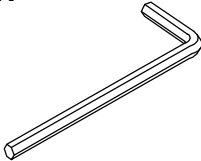A 	B 	C 	D 
CSK Cap Screw M6x50 6pcs	Wood Dowel M8 x 25 12pcs	Quick Fix Bolt 6pcs	Quick Housing Ø15x12 6pcs
E 	F 	G 	H 
CSK Screw M4 x 28 10pcs	CSK Screw M3.5 x 16 36pcs	Pan Head Screw 6pcs	Hinges 5/8 6sets
I 	J 	K 	L 
Handle 3pcs	Leg 5pcs	Shelf Support Pin 24pcs	Cap Cover 6pcs
M 	N 	O 	
2 Pin Stopper 2pcs	Allen Key M4 1pc	Nail 44pcs	
P    			
Safety Kit 2sets			


Step 1

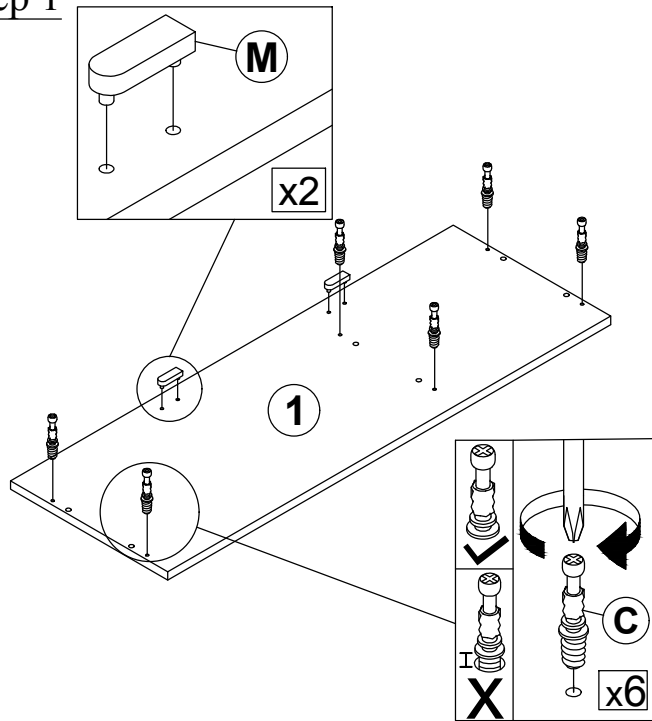


Step 2

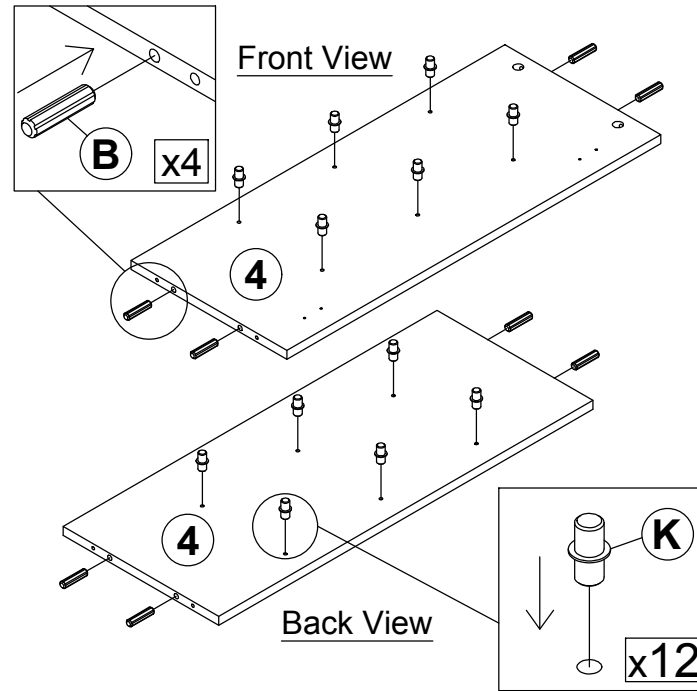


Step 3

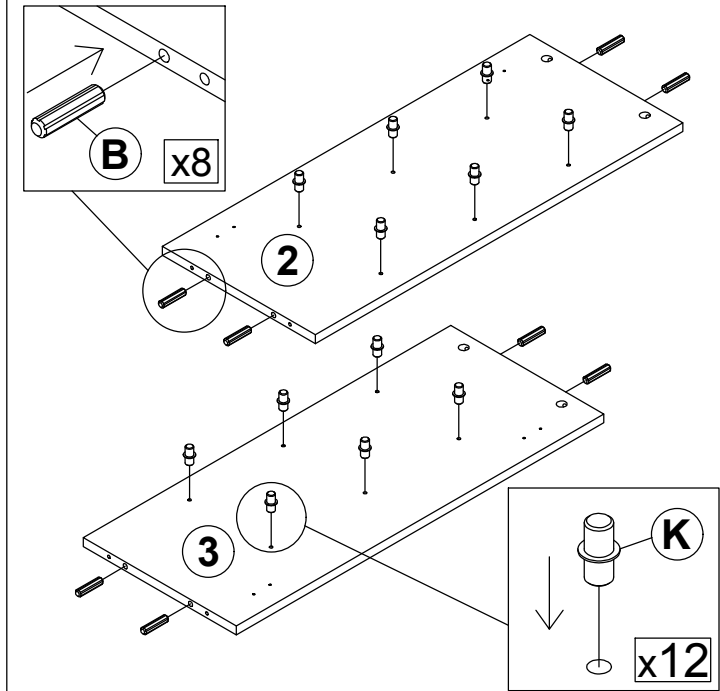


Step 4

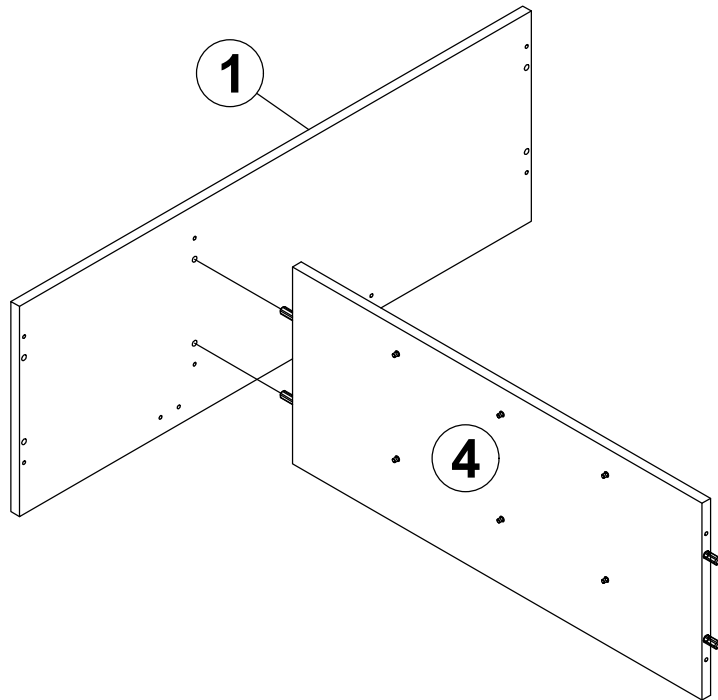


Step 5

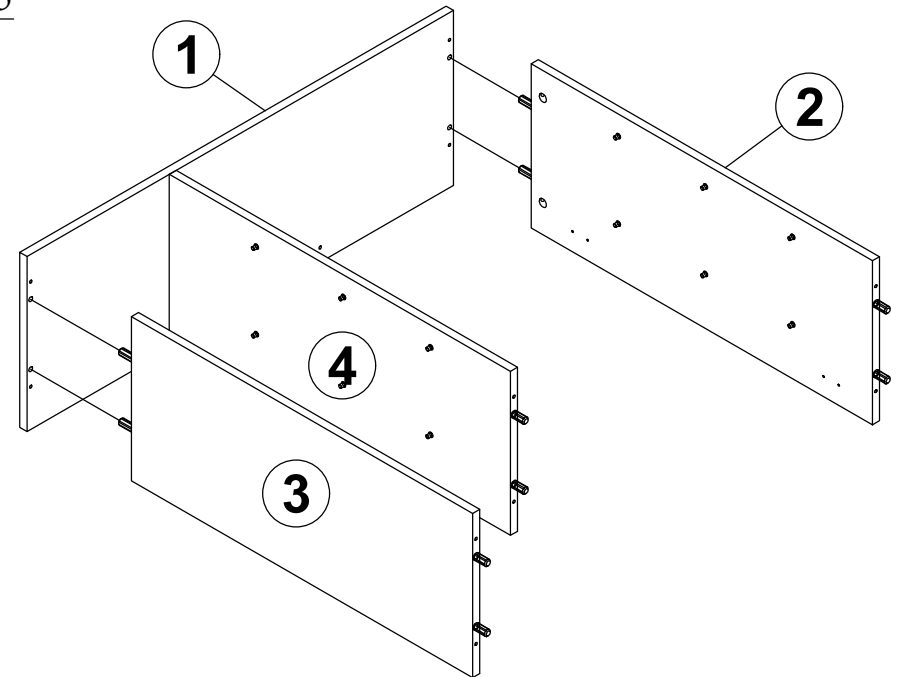


Step 6

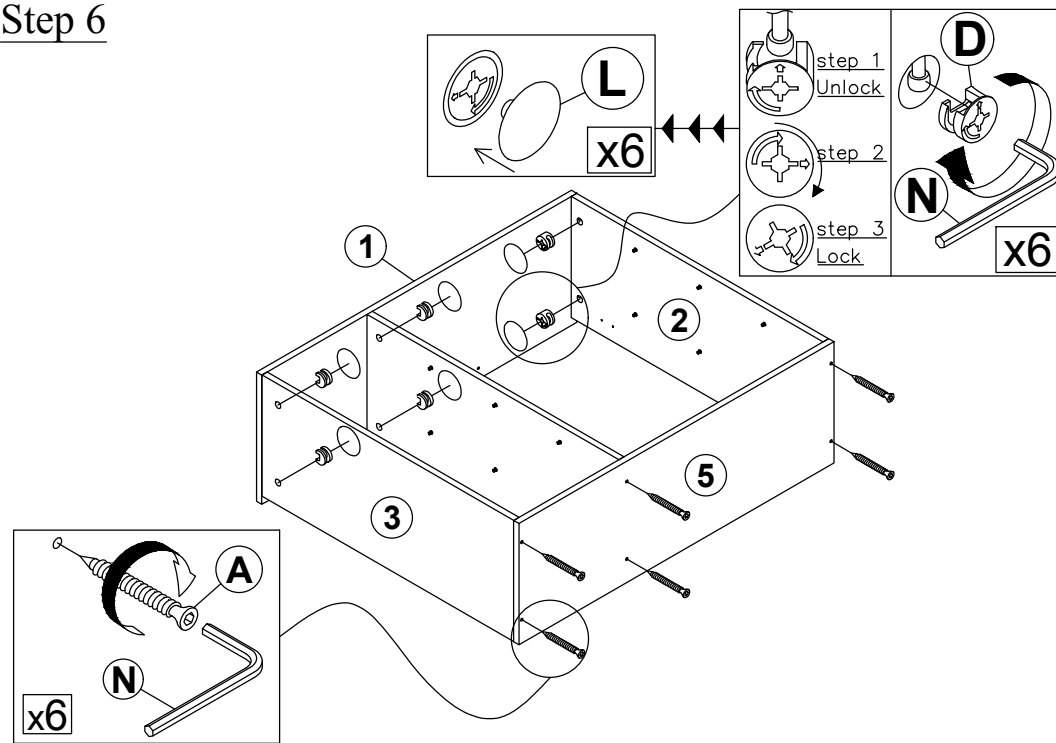


Step 7

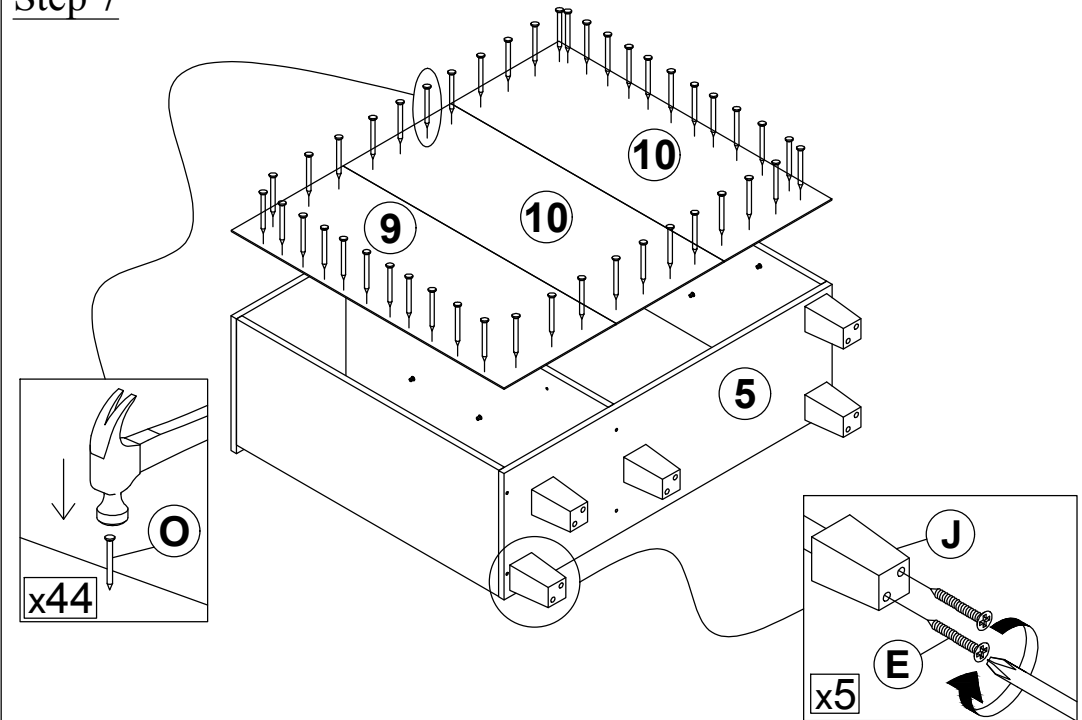


Step 8 (x3)

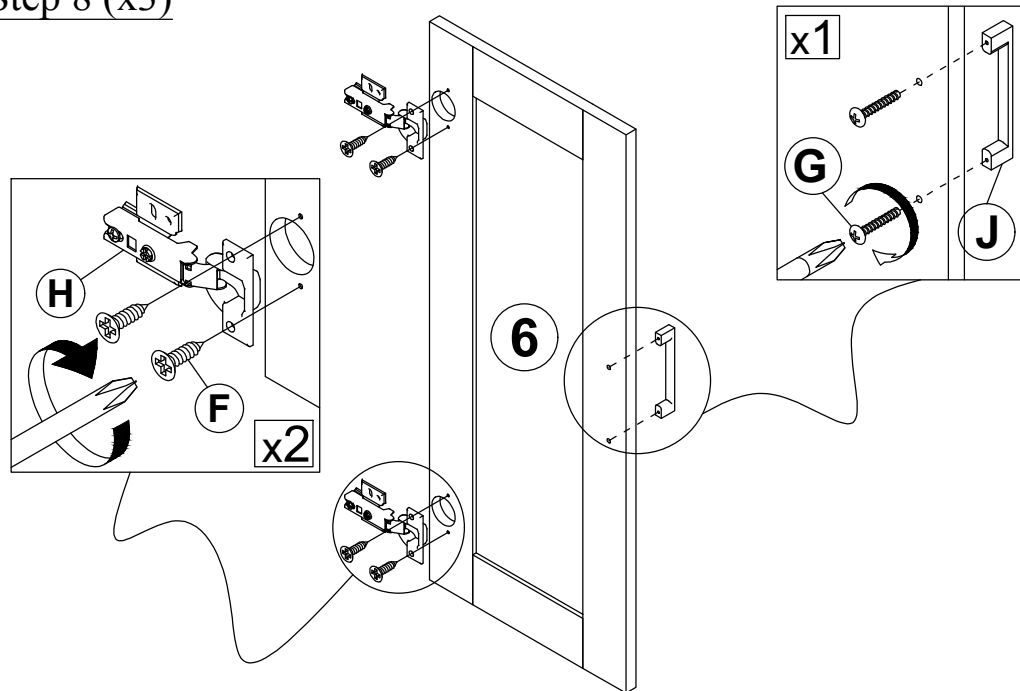


Step 9

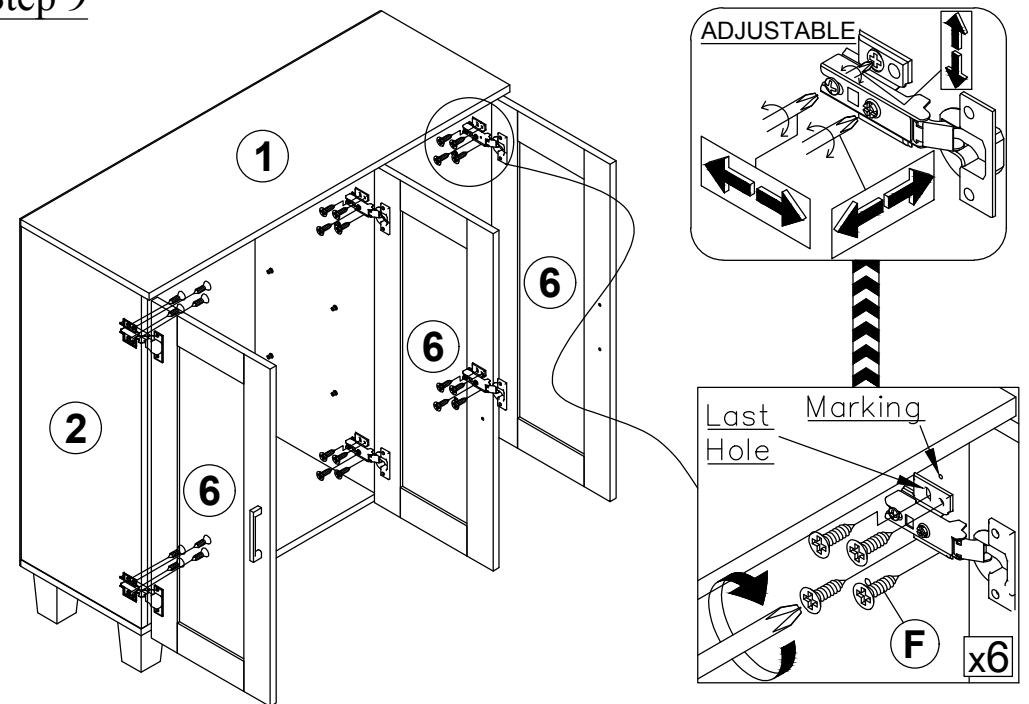


Step 10

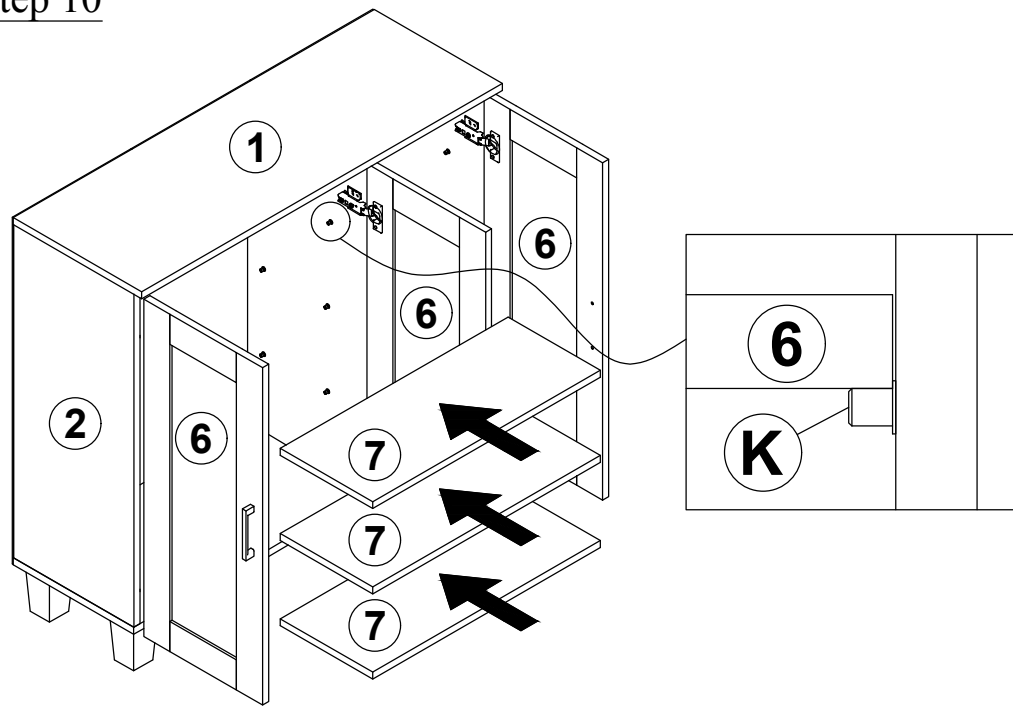

Step 11

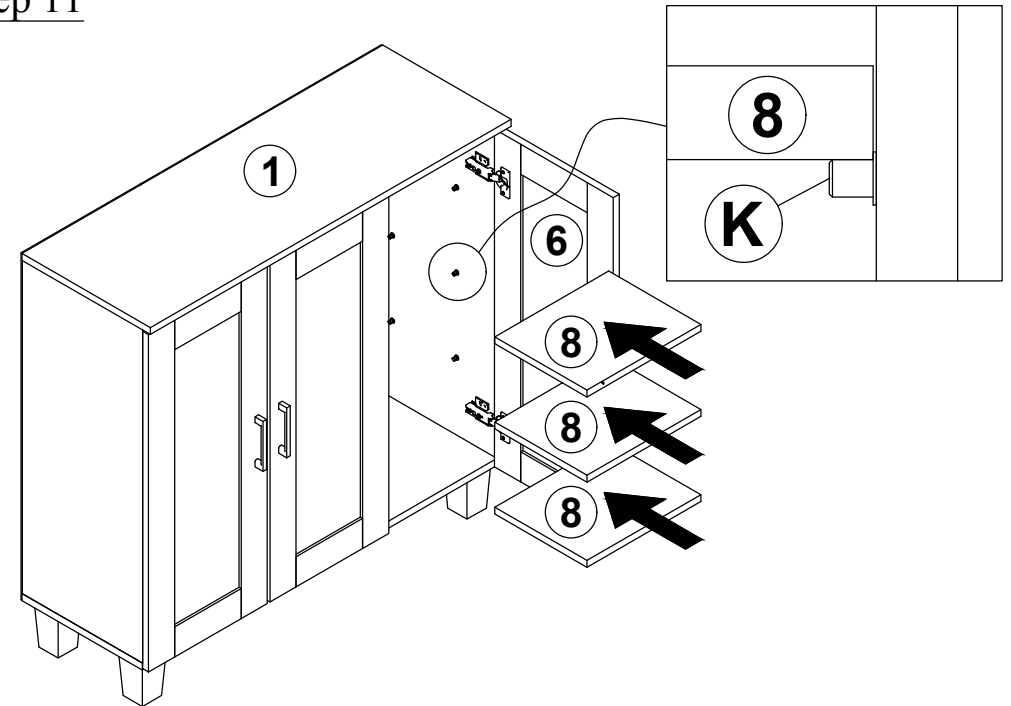


Step 12

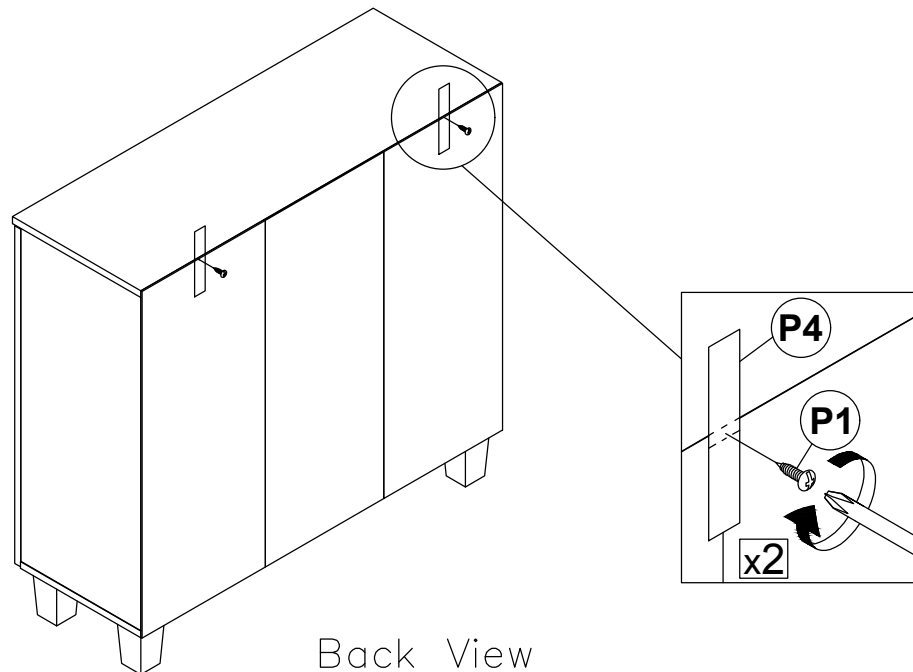

Back View

Step 13 Finish

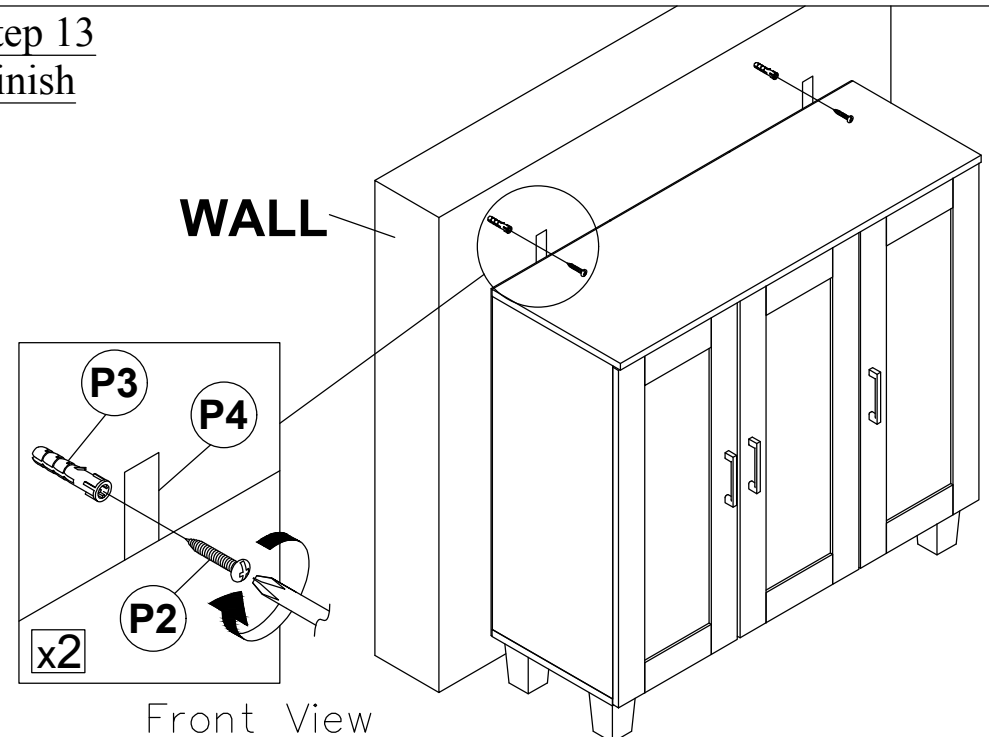

Front View