



ASSEMBLY INSTRUCTIONS

MODEL: PERRY 2 DOOR SHOE CABINET












PART LIST		
NO	DESCRIPTION	QTY
1	Top Panel	1pc
2	Side Panel-L	1pc
3	Side Panel-R	1pc
4	Bottom Panel	1pc
5	Door	2pcs
6	Shelf Panel	3pcs
7	Back Panel	2pcs

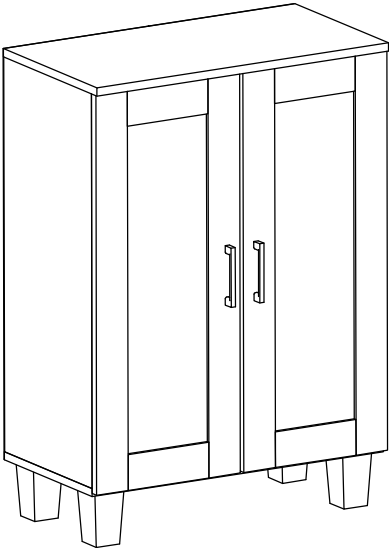


COMPLETE ASSEMBLY

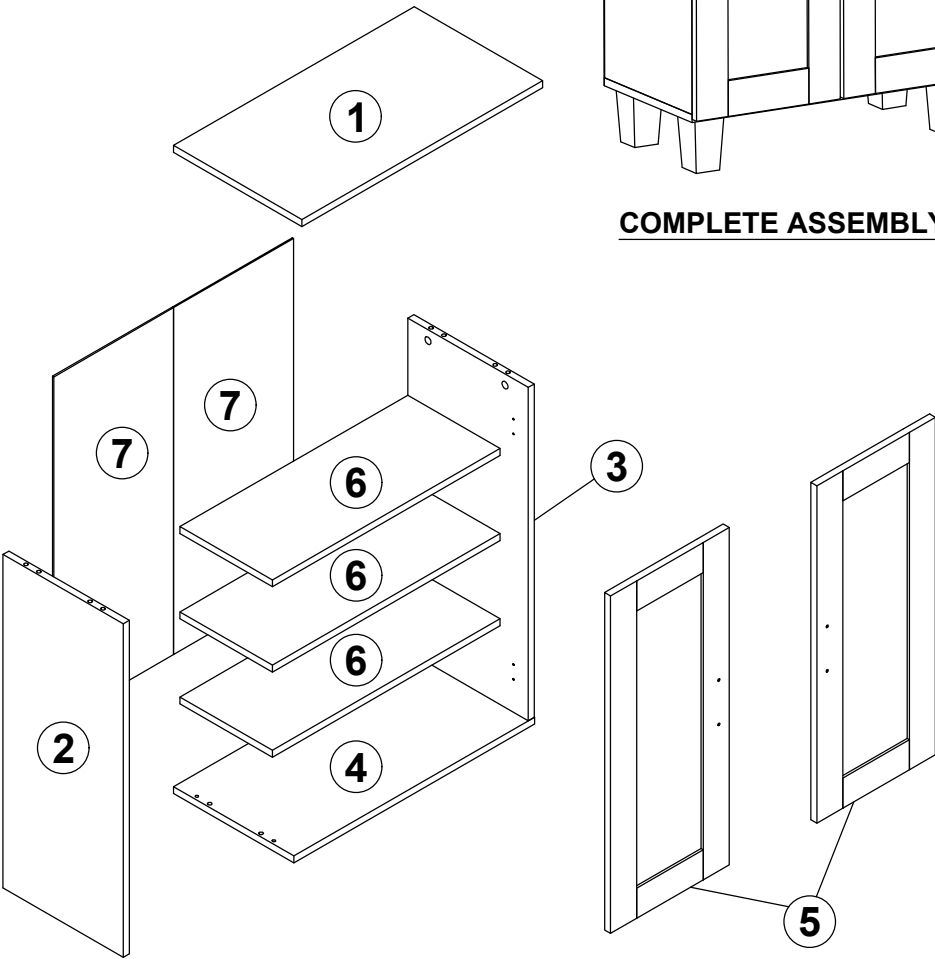


HARDWARE LIST

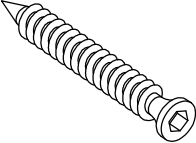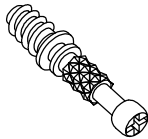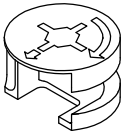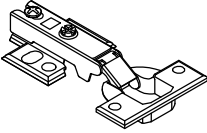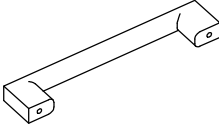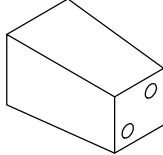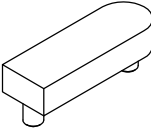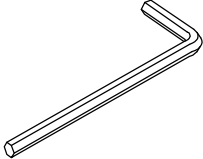A 	B 	C 	D 
CSK Cap Screw M6x50 4pcs	Wood Dowel M8 x 25 8pcs	Quick Fix Bolt 4pcs	Quick Housing Ø15x12 4pcs
E 	F 	G 	H 
CSK Screw M4 x 28 8pcs	CSK Screw M3.5 x 16 24pcs	Pen Head Screw 4pcs	Hinges 5/8 4sets
I 	J 	K 	L 
Handle 2pcs	Leg 4pcs	Shelf Support Pin 12pcs	Cap Cover 4pcs
M 	N 	O 	
2 Pin Stopper 1pc	Allen Key M4 1pc	Nail 32pcs	
P  P1: Screw Short  P2: Screw Long  P3: Wall Plug  P4: Webbing Belt Safety Kit 1set			


Step 1

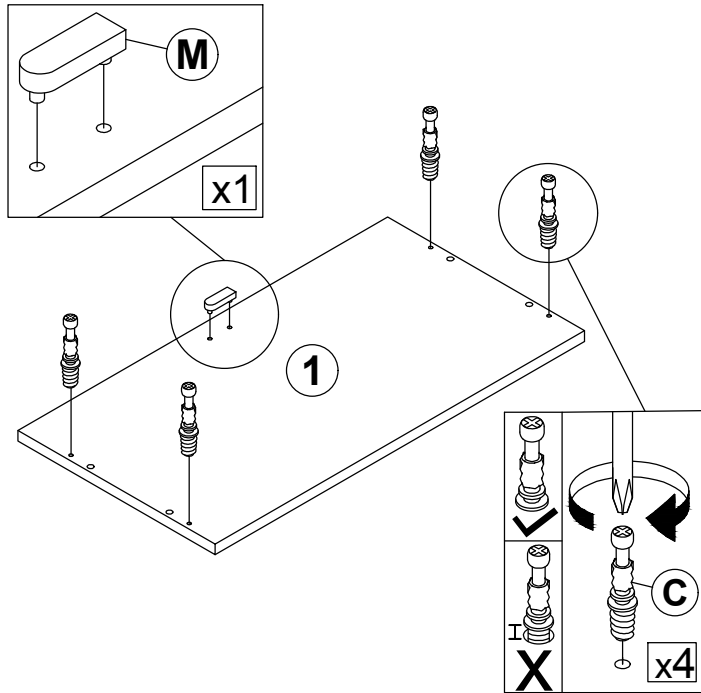


Step 2

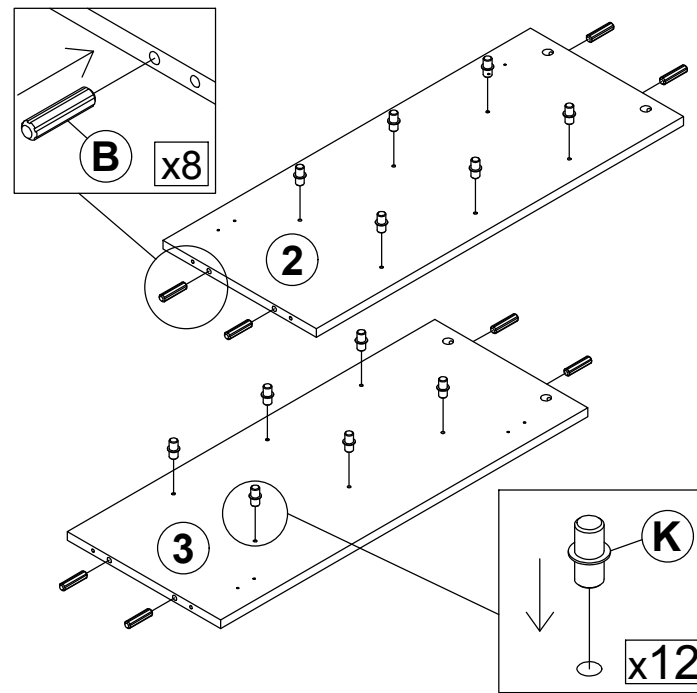


Step 3

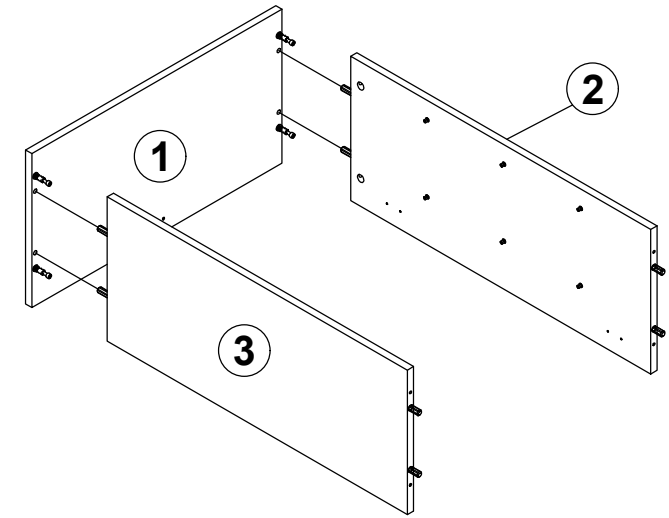


Step 4

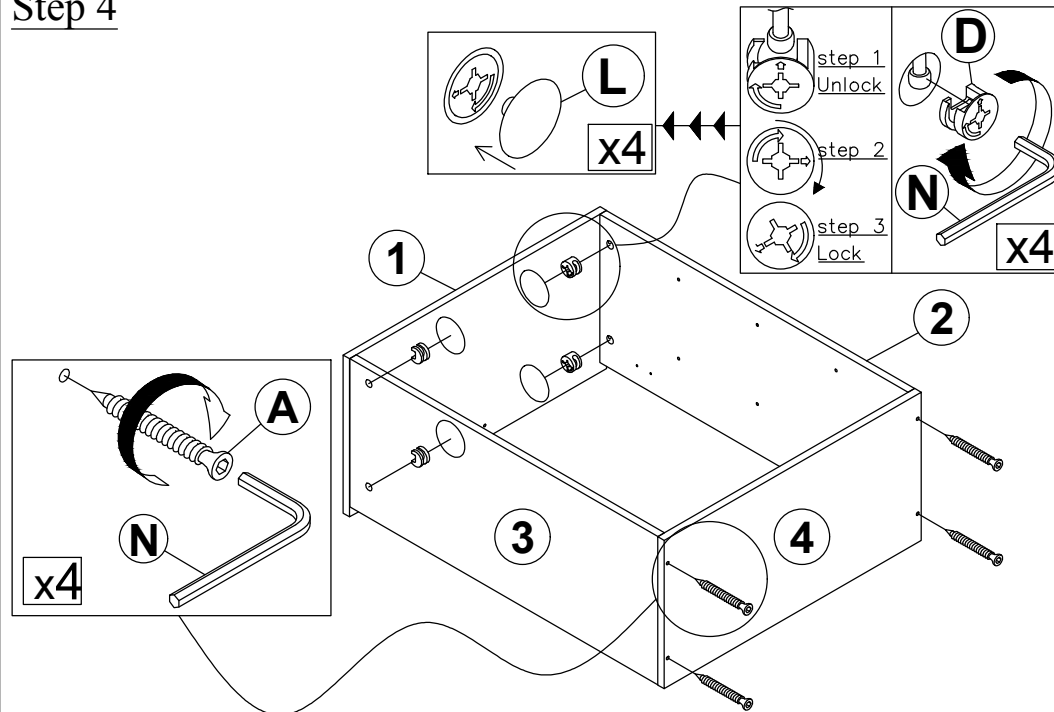


Step 5

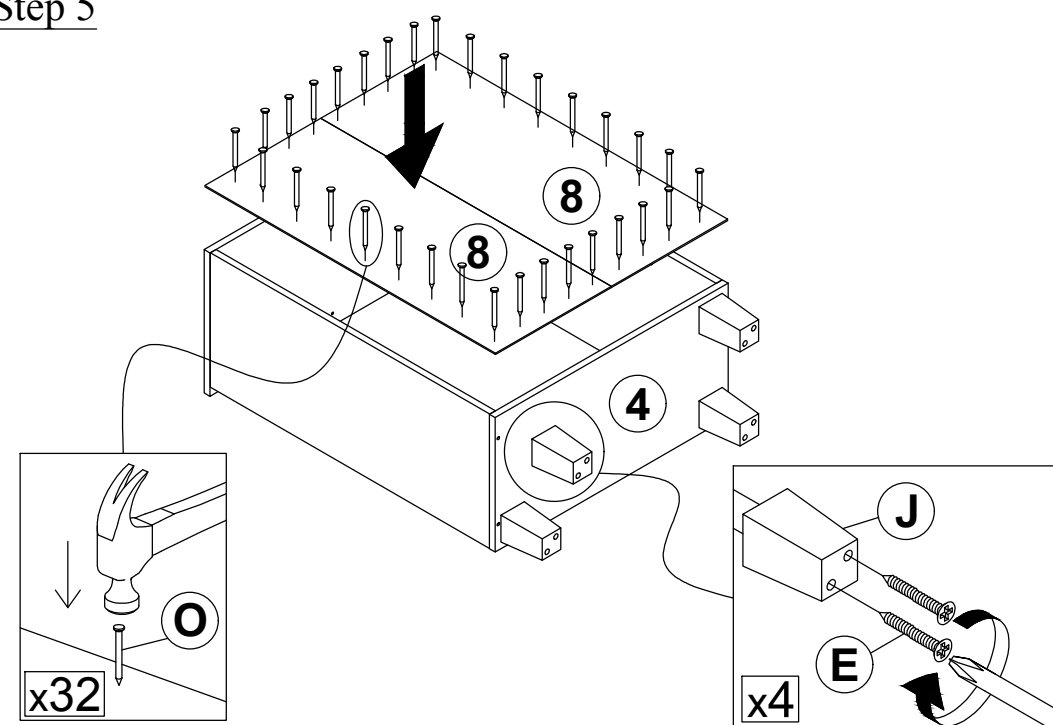


Step 6 (x2)

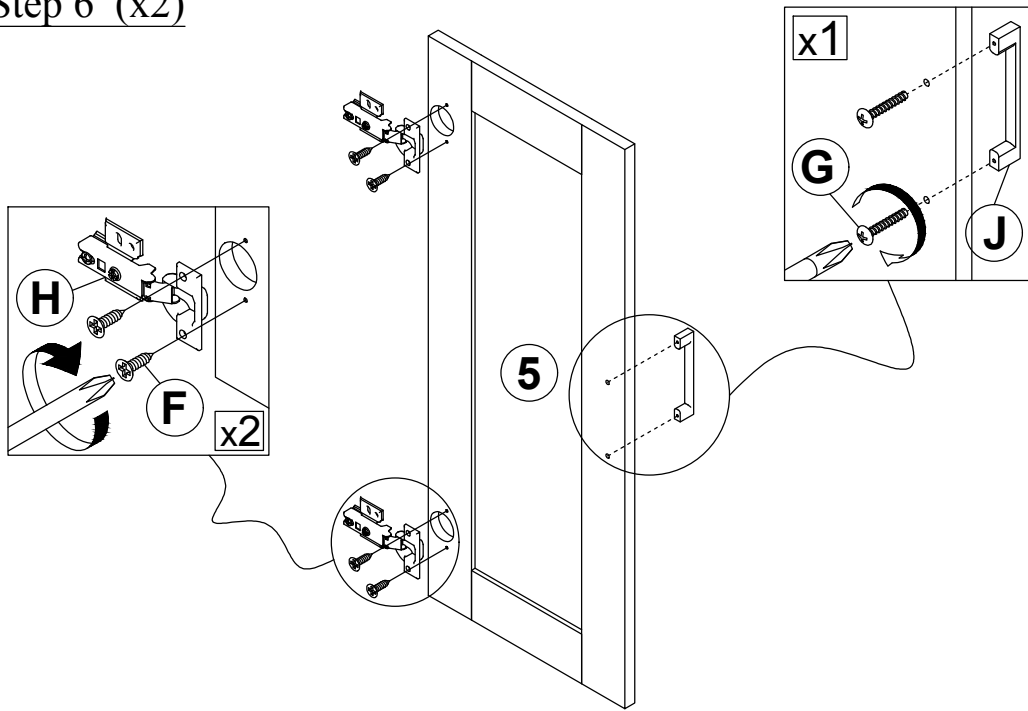


Step 7

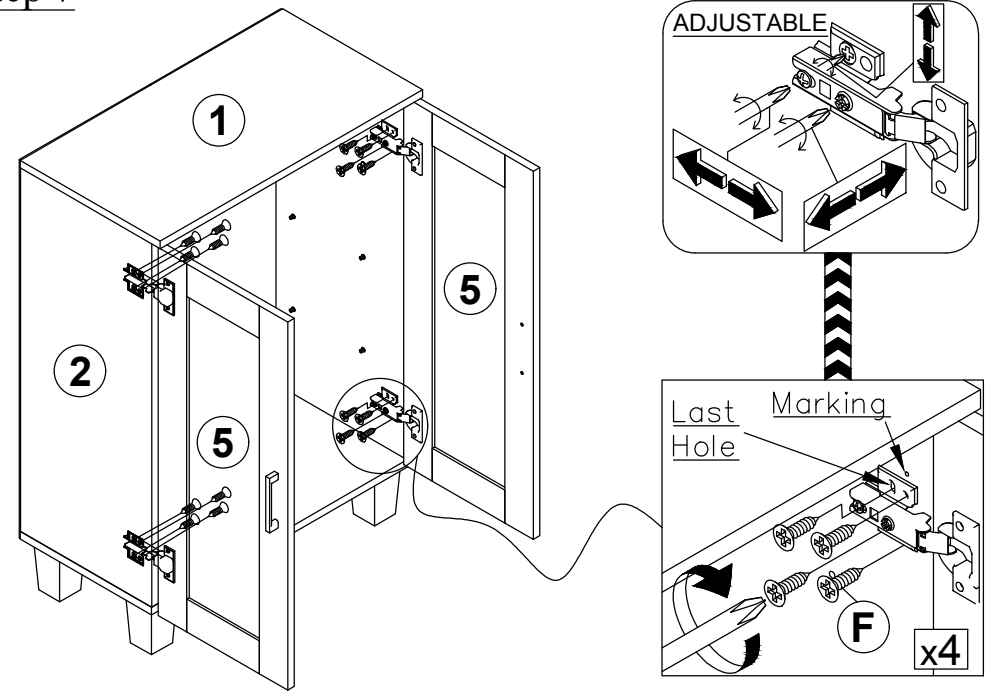

Step 8

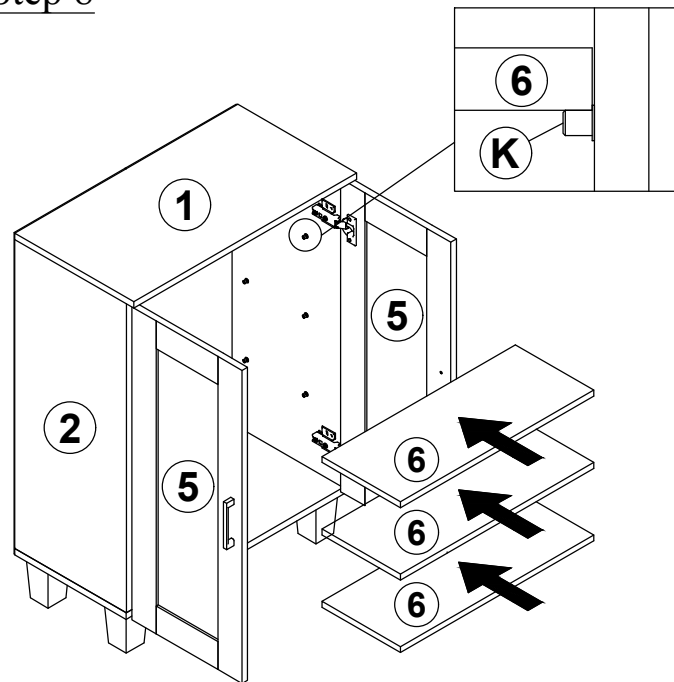


Step 9

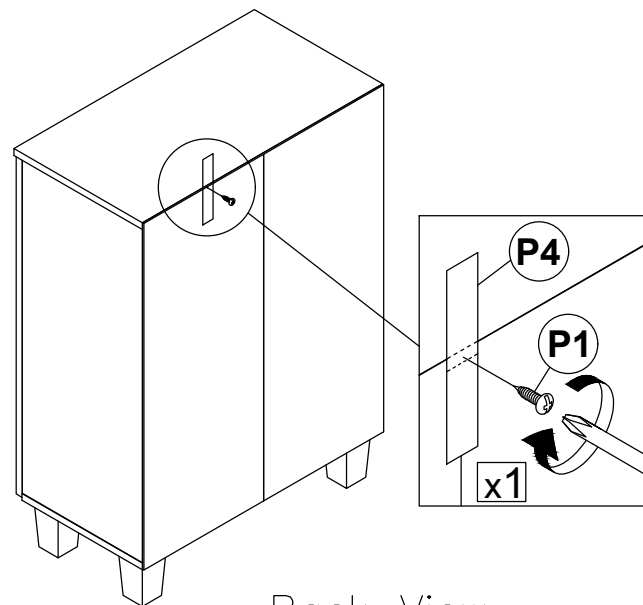

Back View

Step 10 Finish

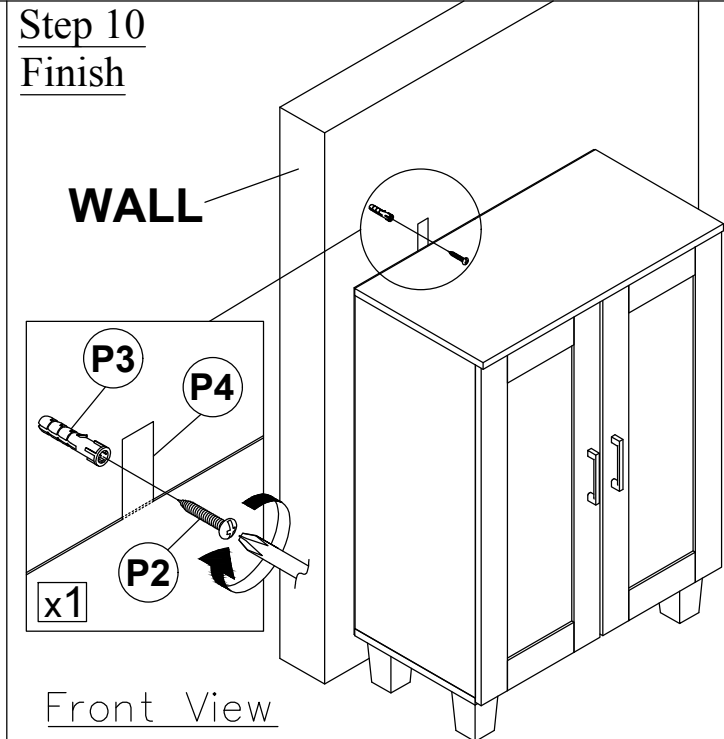

Front View