

# ARL BED


## BBASE-ARL-S

### IMPORTANT NOTE:






- \* PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.

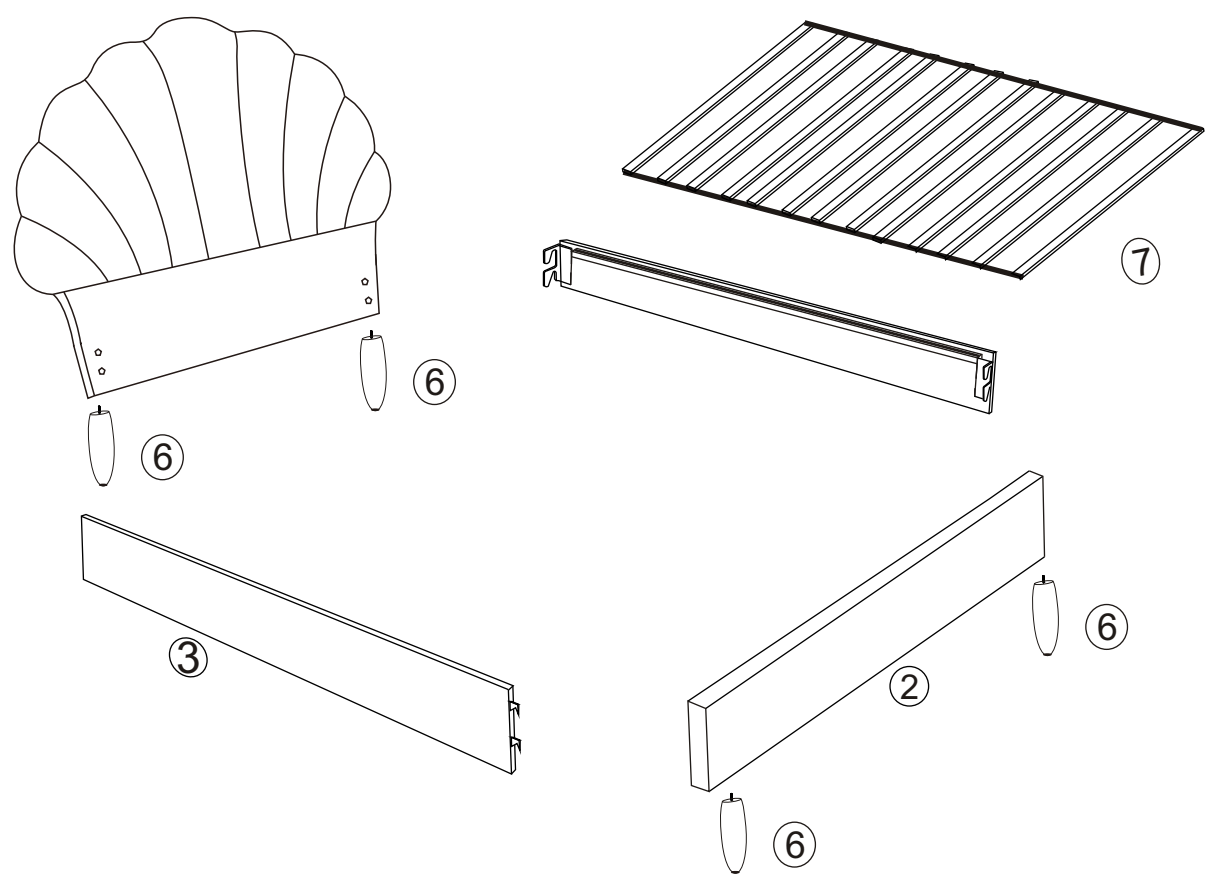

# Parts




# Fittings
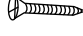
<div><div>A</div><div></div><div>Bolts (M8x30mm) 8 Pcs</div></div>	<div><div>B</div><div></div><div>Spring Washer 8pcs</div></div>	<div><div>C</div><div></div><div>Flat Washer 8pcs</div></div>	<div><div>J</div><div></div><div>M6 Allen Key 1pc</div></div>	<div><div>G</div><div></div><div>Screw (4.0x35mm) 6pcs</div></div>





Please refer to the instruction words before installing it.

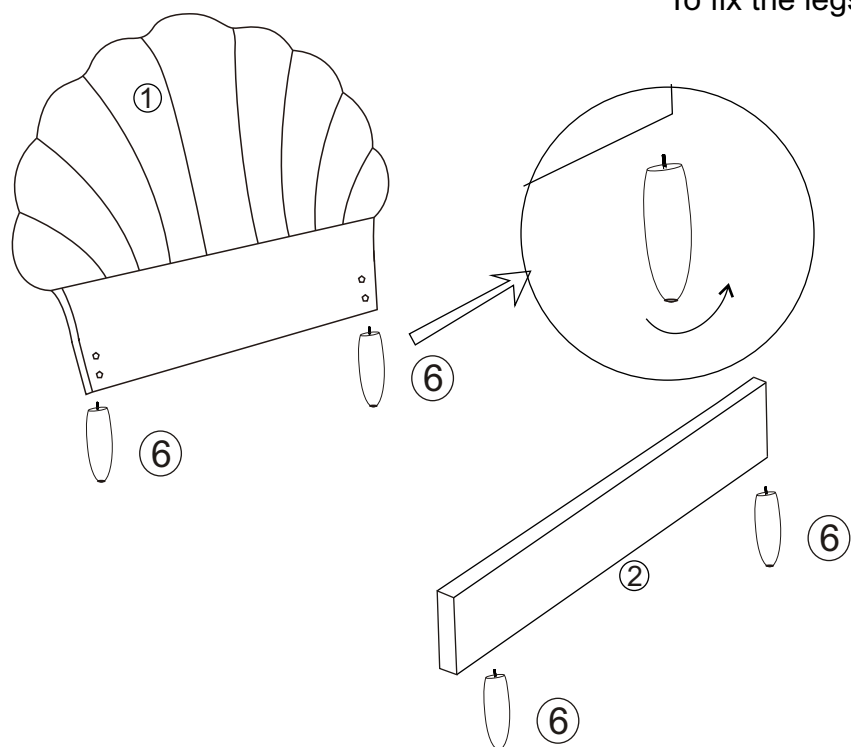
# Step 1

To fix the legs (6) to the headboard (1) .  
To fix the legs (6) to the footboard (2)




# Step 2

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>J</b> 
Bolts (M8x30mm ) 8 pcs	Spring Washer 8pcs	Flat Washer 8pcs	M6 Allen Key 1pc


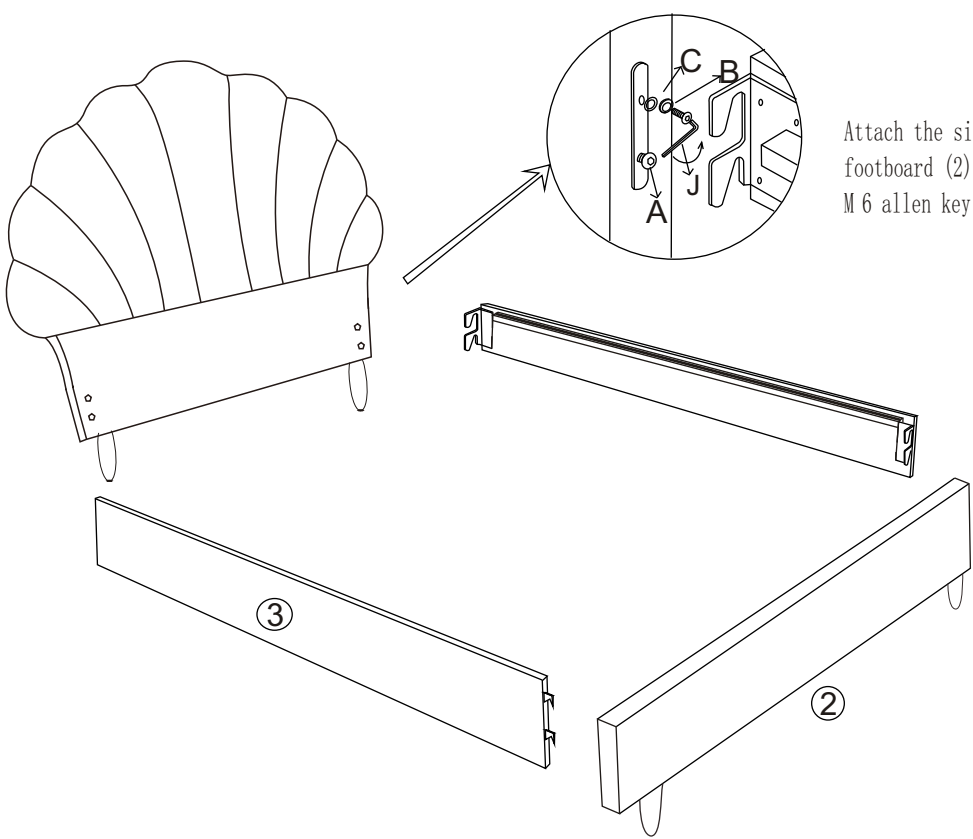


Attach the side rails(3)to the headboard (1) and footboard (2) using hardware parts A. B. C and M 6 allen key (J) .

## Step 3

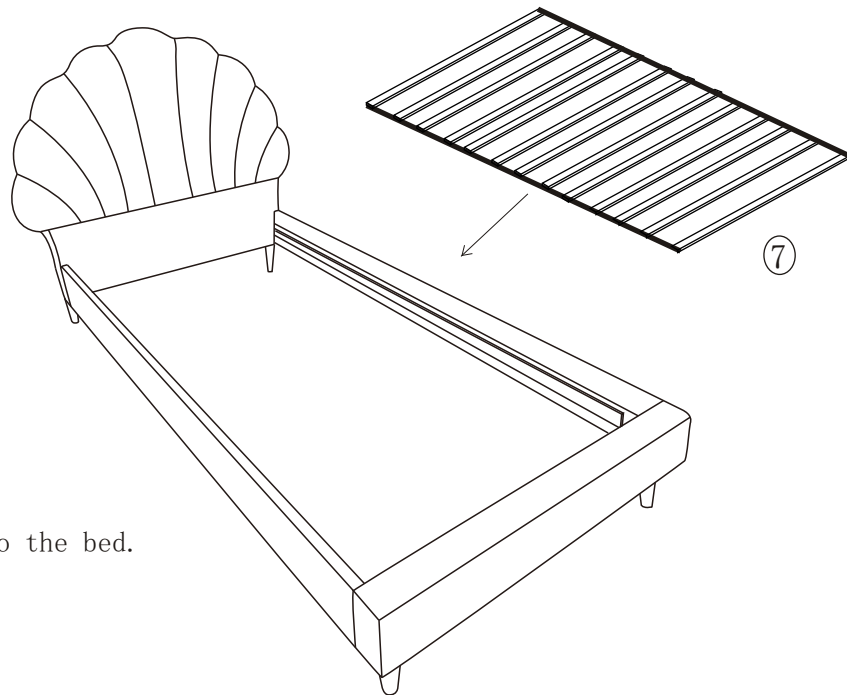

Attach the slat(7) to the bed.

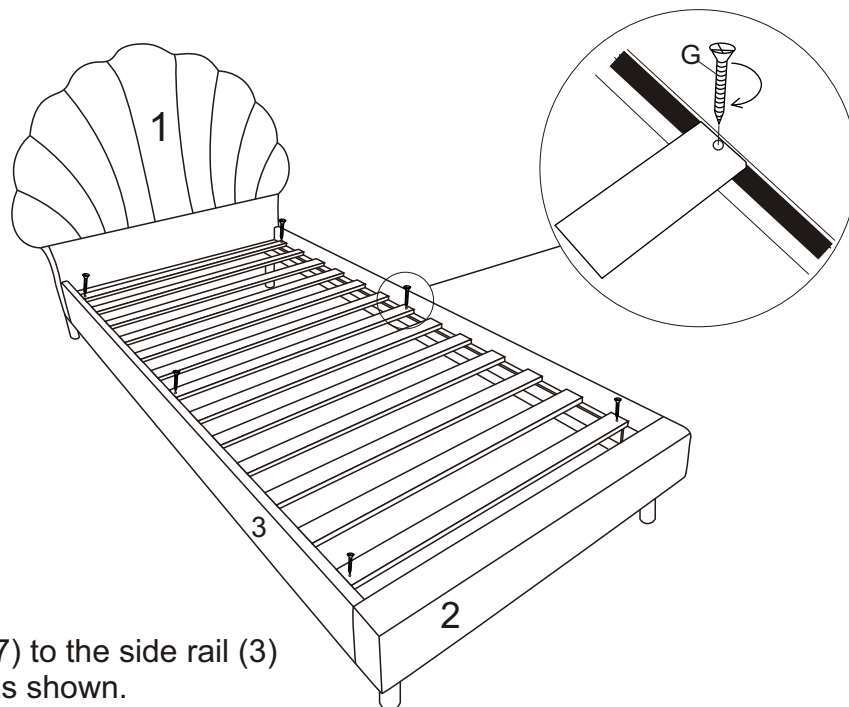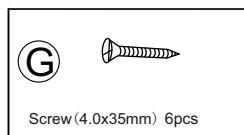

Attach the slat (7) to the side rail (3) with screw (G) as shown.