

# SLEY BED


## BBASE-SLEY-D/BBASE-SLEY-Q

### IMPORTANT NOTE:





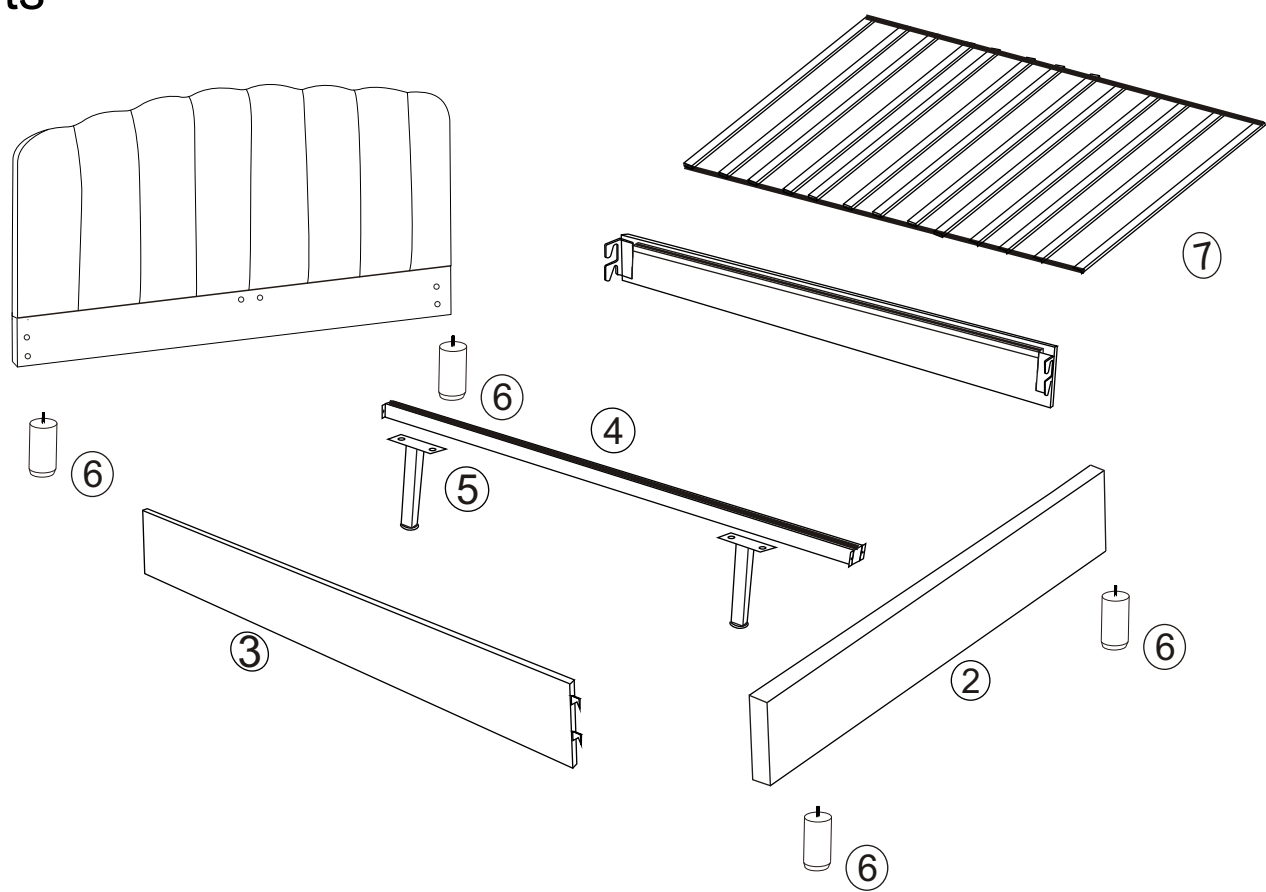



- \* PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.



# Parts




# Fittings

<div><div>A</div><div></div><div>Bolts (M8x30mm) 12pcs</div></div>	<div><div>B</div><div></div><div>Spring Washer 8pcs</div></div>	<div><div>C</div><div></div><div>Flat Washer 8pcs</div></div>	<div><div>E</div><div></div><div>Bolts (M8x40mm) 4pcs</div></div>	<div><div>G</div><div></div><div>Screw (4.0x35mm) 6pcs</div></div>
<div><div>H</div><div></div><div>Nuts 4pcs</div></div>	<div><div>I</div><div></div><div>Spanner 1pc</div></div>	<div><div>J</div><div></div><div>M6 Allen Key 1pc</div></div>		





Please refer to the instruction words before installing it.

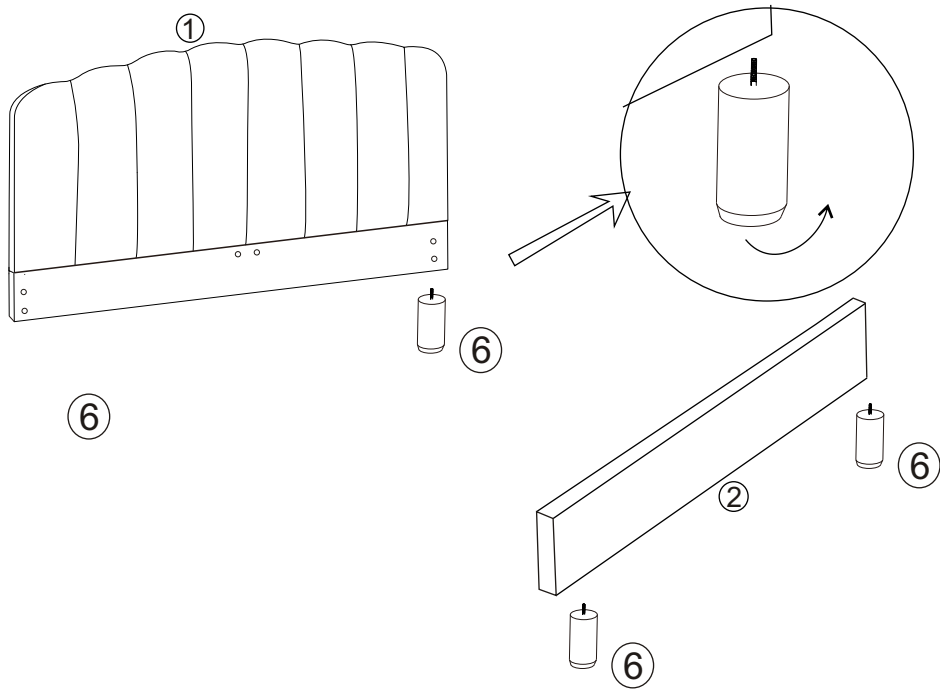
# Step 1

To fix the legs (6) to the headboard (1) .  
To fix the legs (6) to the footboard (2)








# Step 2
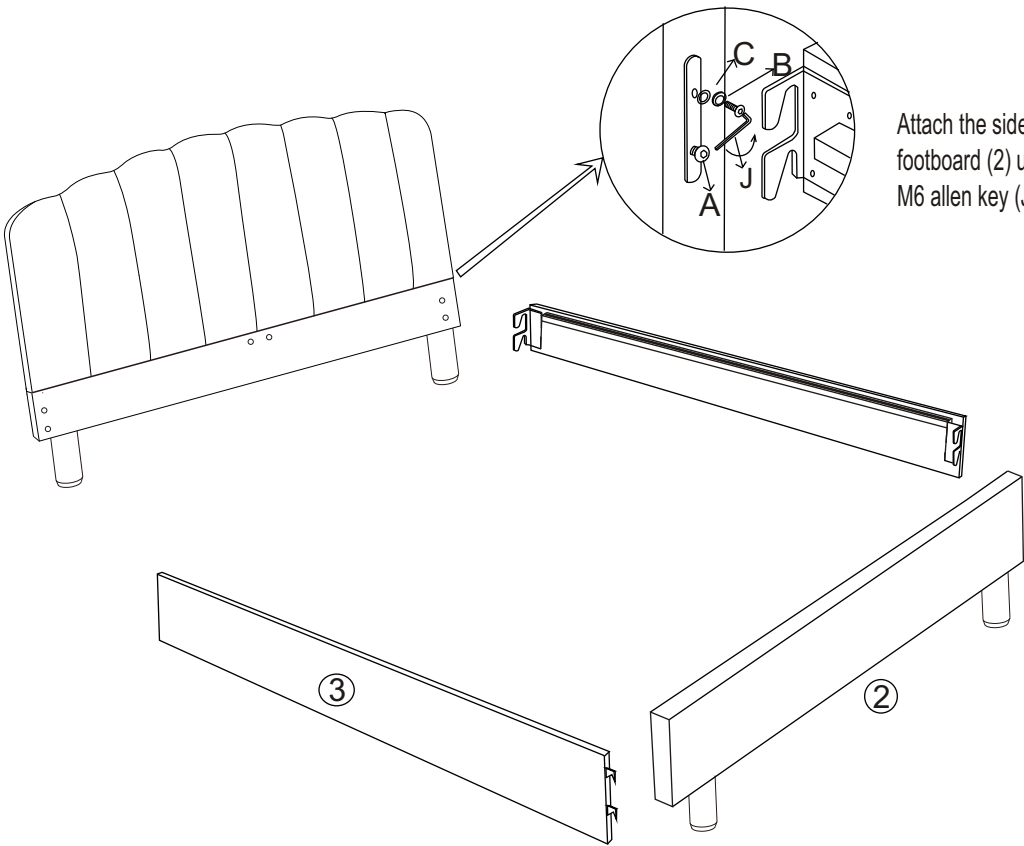
<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>J</b> 
Bolts (M8x30mm) 8 pcs	Spring Washer 8pcs	Flat Washer 8pcs	M6 Allen Key 1pc




Attach the side rails(3)to the headboard (1) and footboard (2) using hardware parts A. B. C and M6 allen key (J) .

## Step 3

<b>A</b> 	<b>E</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Bolts (M8x30mm) 4 pcs	Bolts (M8x40mm) 4 pcs	Nuts 4 pcs	Spanner 1 pc	M6 Allen Key 1 pc


Attach the centre support bar(4) to the headboard (1) and footboard (2) using hardware parts A, J.  
 "Attach the support legs(5) to the centre support bar(4) using hardware parts E,H, J and F.

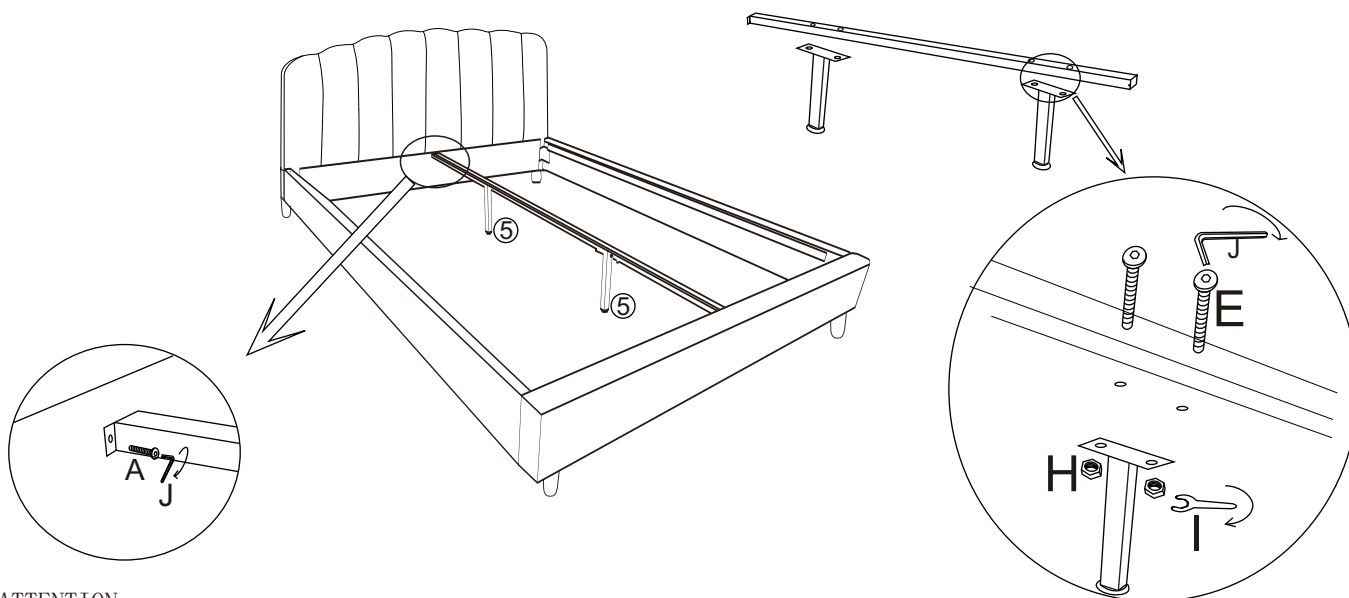


### ATTENTION

When attached to central support bar, the support legs will be about 5mm off the floor. This is not a flaw. When weight is placed on the bed frame, the supports will consequently come into contact with the floor.

## Step 4

<b>G</b> 
Screw (4.0x35mm) 6 pcs

Attach the slat (7) to the side rail (3) with screw (G) as shown.

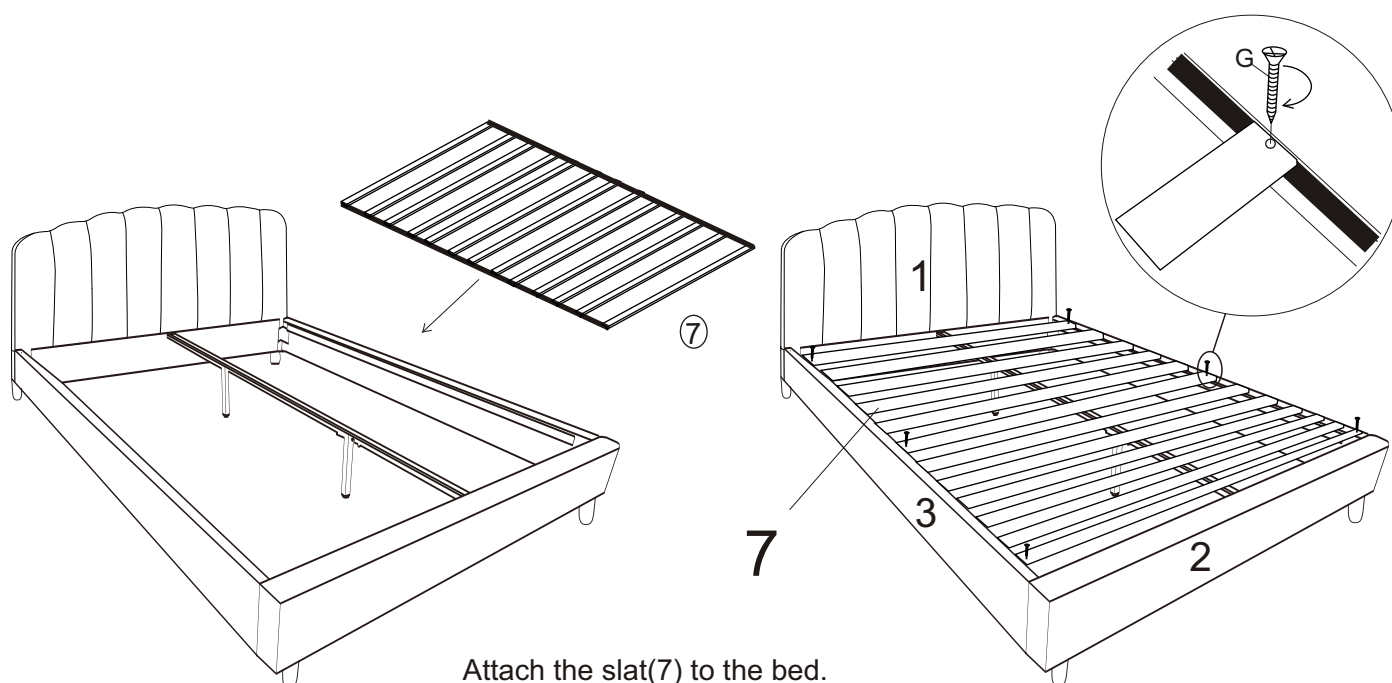

Attach the slat(7) to the bed.