


ASSEMBLY INSTRUCTIONS



Style # WR1355 Wine Rack

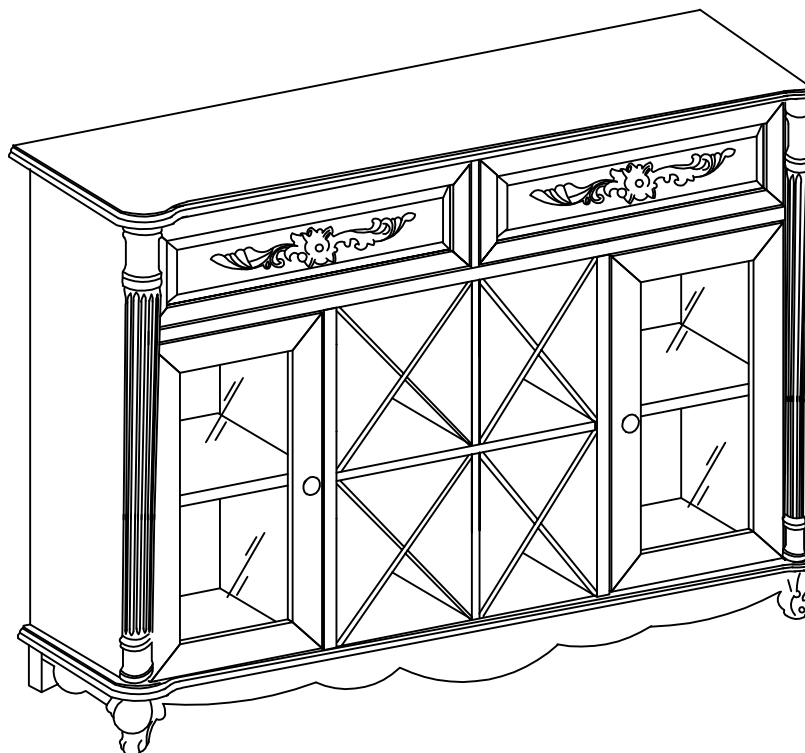

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To use a cam lock: (Please read below instructions before assembling)

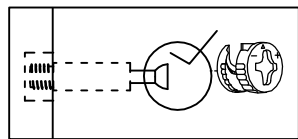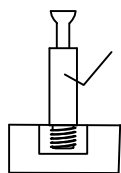

1. Insert cam screw into hole as shown in diagram A .

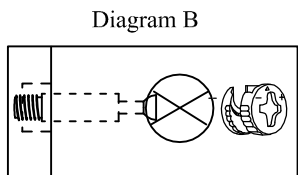
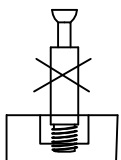


Diagram B

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the cam screw to be misaligned and unable to interlock properly.




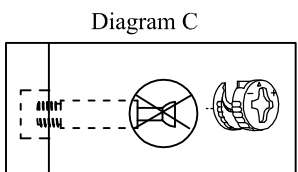


Diagram C

Also avoid inserting the cam screw too close to the surface of the hole as shown in figure C, as this will cause the cam lock to be too loose, and not interlock properly.

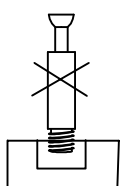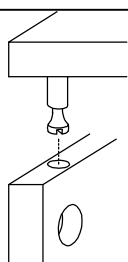


2. Connect the panels together.

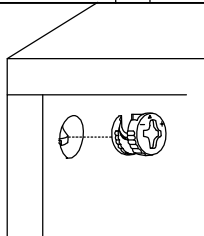

ARROW SIGN



3. When inserting the cam lock make sure the arrow of the cam lock faces the cam screw.

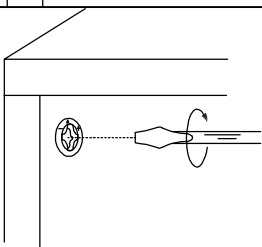





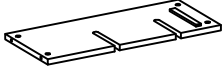
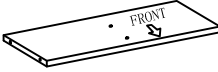
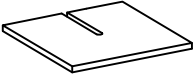









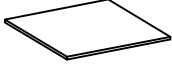
4. To tighten the cam lock turn the cam lock clockwise 90-180 degree or until the arrow is facing opposite the place cam lock was inserted.

NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS.

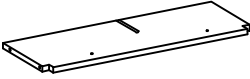


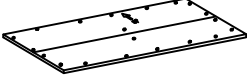

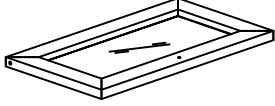




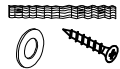
Note:

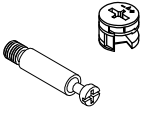- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List

<p>A1. Quantity of 1</p>  <p>Top Panel</p>	<p>A2 (L&R). Quantity of 2</p>  <p>Side Panel (L&R)</p>	<p>A3. Quantity of 1</p>  <p>Top divider</p>	<p>A4. Quantity of 1</p>  <p>Small Divider</p>
<p>A5. Quantity of 1</p>  <p>Middle Divider</p>	<p>A6. Quantity of 2</p>  <p>Side Divider</p>	<p>A7. Quantity of 8</p>  <p>Wine Rack</p>	<p>A8. Quantity of 2</p>  <p>Adjustable Shelf</p>
<p>A9. Quantity of 1</p>  <p>Bottom Panel</p>	<p>A10. Quantity of 1</p>  <p>Back Panel</p>	<p>A11. Quantity of 2</p>  <p>Front Leg</p>	<p>A12. Quantity of 2</p>  <p>Back Leg</p>
<p>A13 (L&R). Quantity of 2</p>  <p>Door (L&R)</p>	<p>A14. Quantity of 2</p>  <p>Drawer Front Panel</p>	<p>A15. Quantity of 4</p>  <p>Drawer Side Panel</p>	<p>A16. Quantity of 2</p>  <p>Drawer Back Panel</p>
<p>A17. Quantity of 2</p>  <p>Drawer Bottom Panel</p>			


Hardware List

<p>B1 Quantity of 28</p>  <p>Camlock</p>	<p>B2 Quantity of 8</p>  <p>Bolt with Washer</p>	<p>B3 Quantity of 20</p>  <p>Screw</p>	<p>B4 Quantity of 2</p>  <p>Magnet with Screw</p>
<p>B5 Quantity of 4</p>  <p>Door Pin</p>	<p>B6 Quantity of 8</p>  <p>Shelf Support</p>	<p>B7 Quantity of 4</p>  <p>Knob with Bolt</p>	<p>B8 Quantity of 16</p>  <p>Screw</p>
<p>B9 Quantity of 2</p>  <p>Stopper with Screw</p>	<p>B10 Quantity of 1</p>  <p>Wall Anchor with Screw</p>	<p>B11 Quantity of 1</p>  <p>Anti-tip Kit</p>	

Step: 1


Assembly instruction

B1  4sets

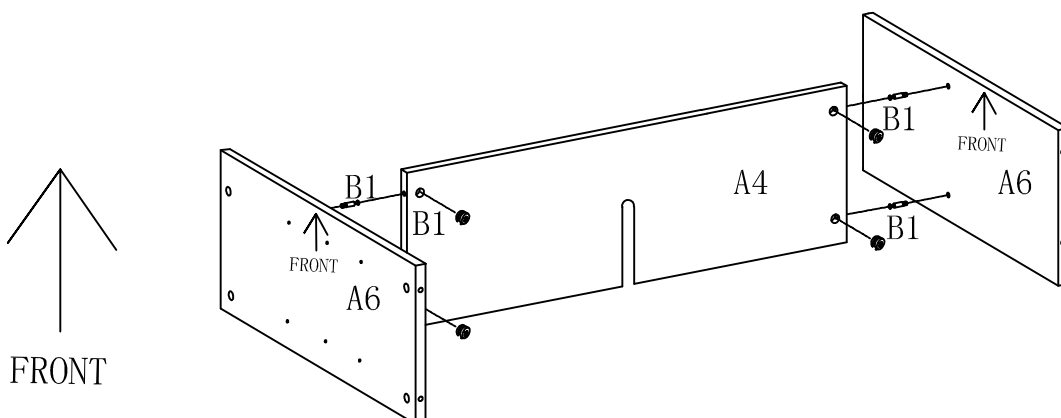


Assemble Side Dividers A6 to Small Divider A4 using Camlocks B1.

Step:2

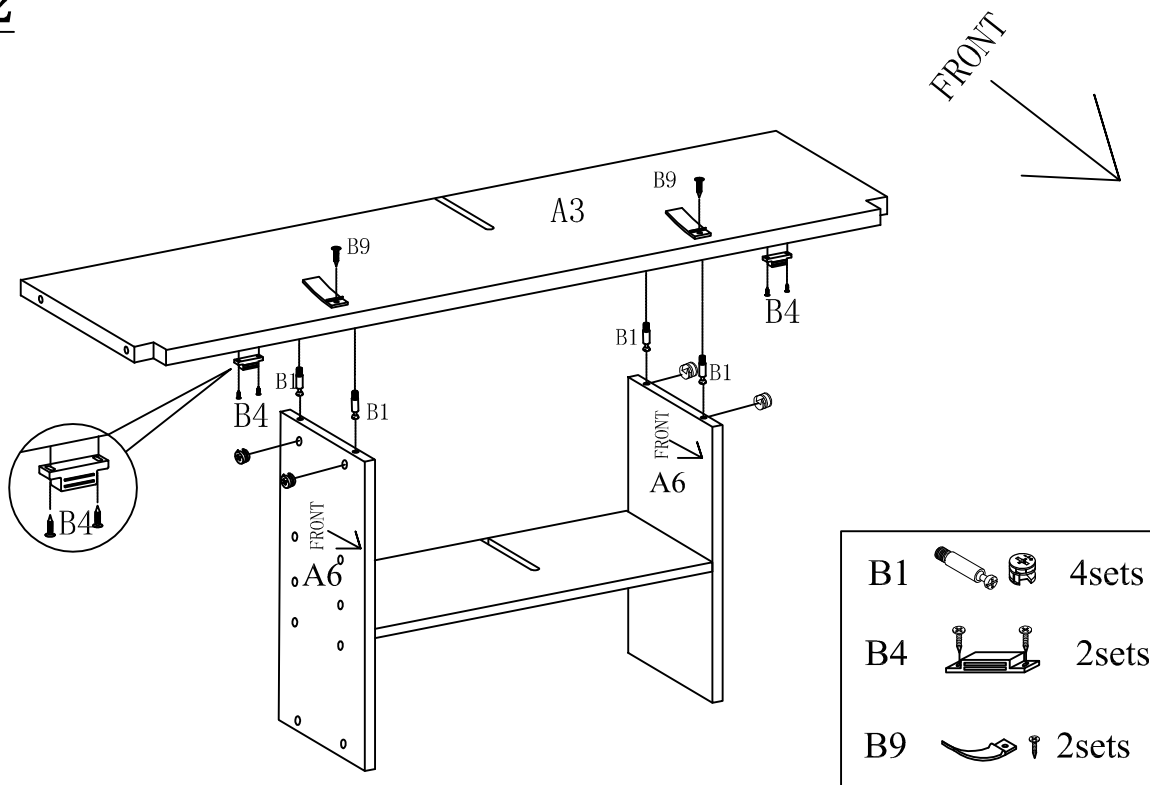

1. Attach Magnets B4 to the bottom of Top Divider A3 using included screws B4.
2. Attach Stopper B9 to the upper surface of Top Divider A3 using included screws B9 .
3. Assemble Top Divider A3 to Side Dividers A6 using Camlocks B1 .


Step:3

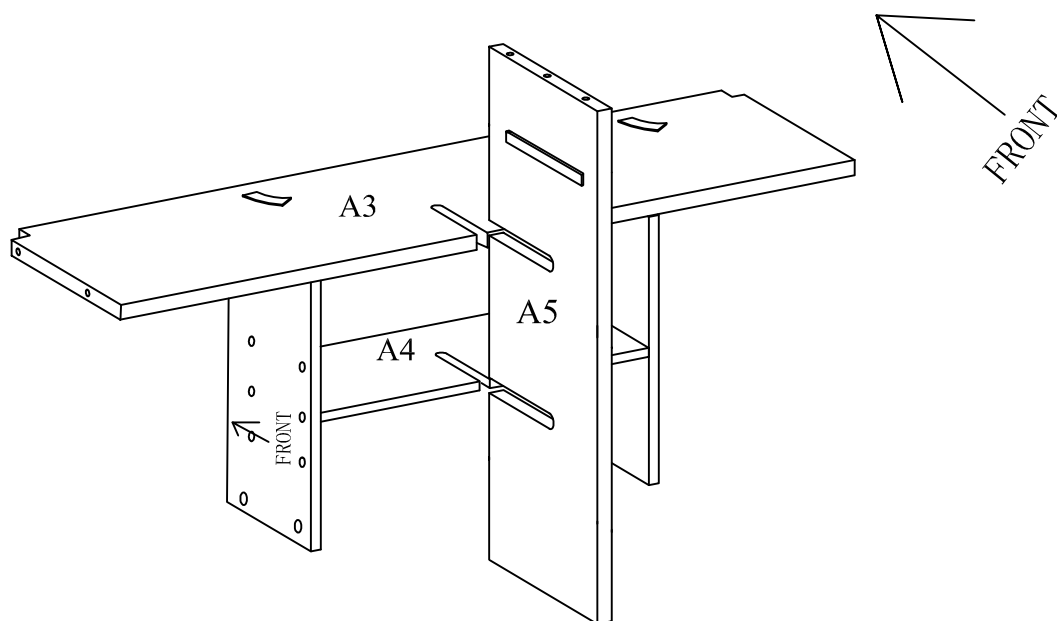

Attach Middle Divider A5 to Top Divider A3 and Small Divider A4 as shown above.


Step:4


B1  4sets

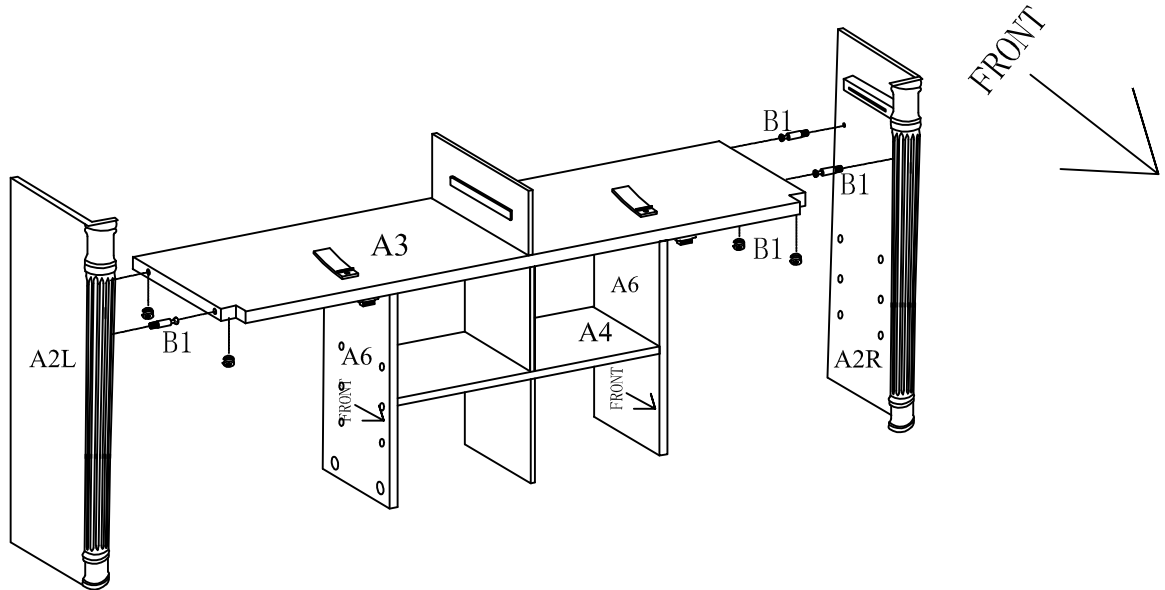

Assemble Side Panels A2(L&R) to Top Divider A3 using Camlocks B1 .

Step:5


B2  8sets

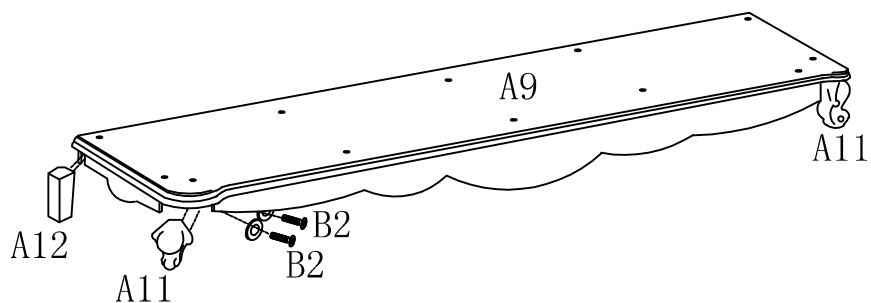

Attach Legs A11&A12 to the bottom of Bottom Panel A9 using Bolts with Washers B2.

Step:6


B1  10sets

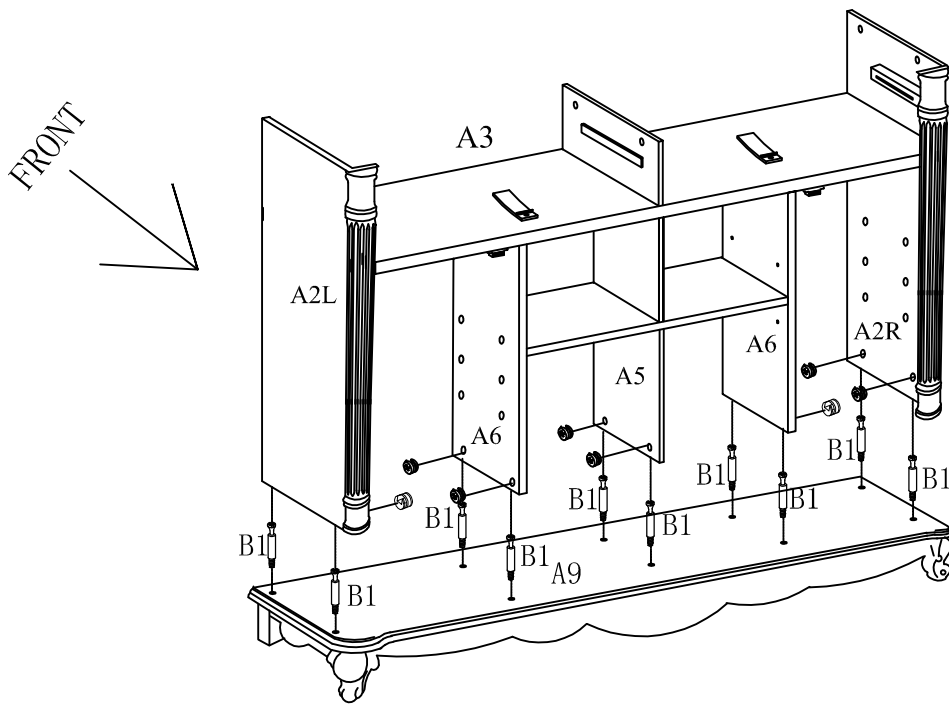

Assemble Bottom Panel A9 to Side Panels A2(L&R) , Side Dividers A6 and Middle Divider A5 using Camlocks B1 .

Step:7


B1  6sets

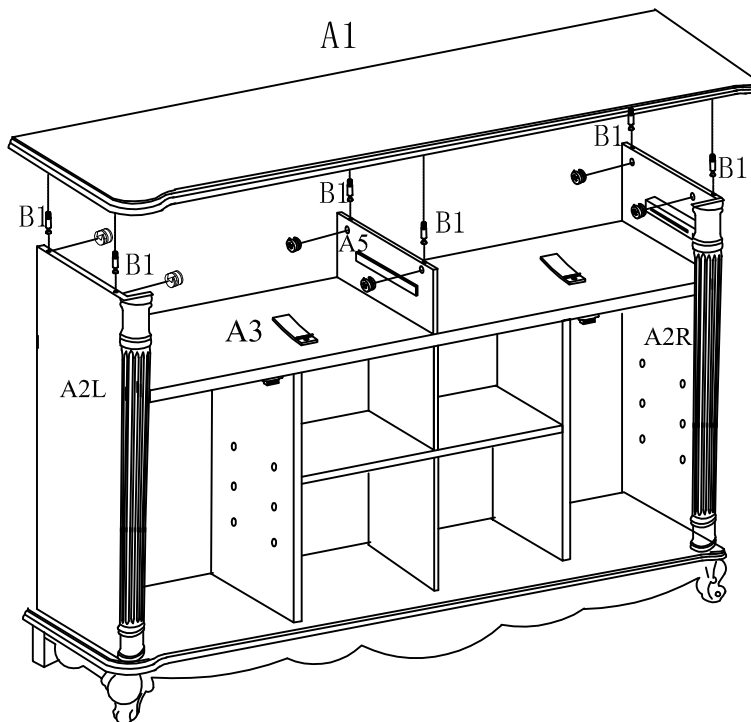

Assemble Top Panel A1 to Side Panels A2(L&R) and Middle Divider A5 using Camlocks B1 .



Step:8

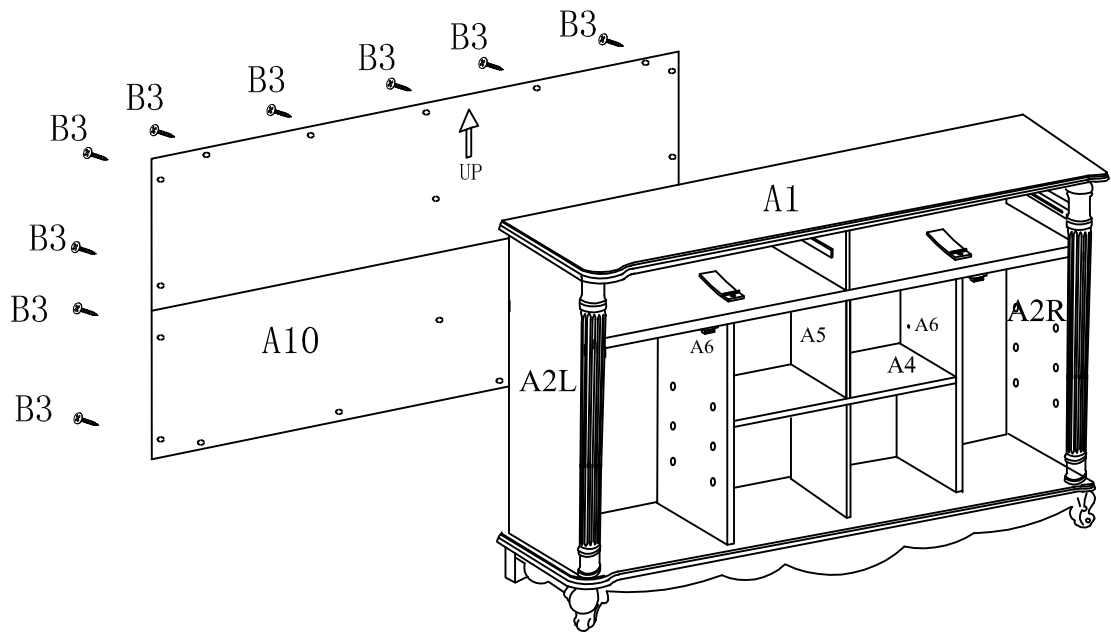
B3  20pcs



Attach Back Panel A10 to unit using Screws B3.


Step:9

B8  16pc
B7  2sets

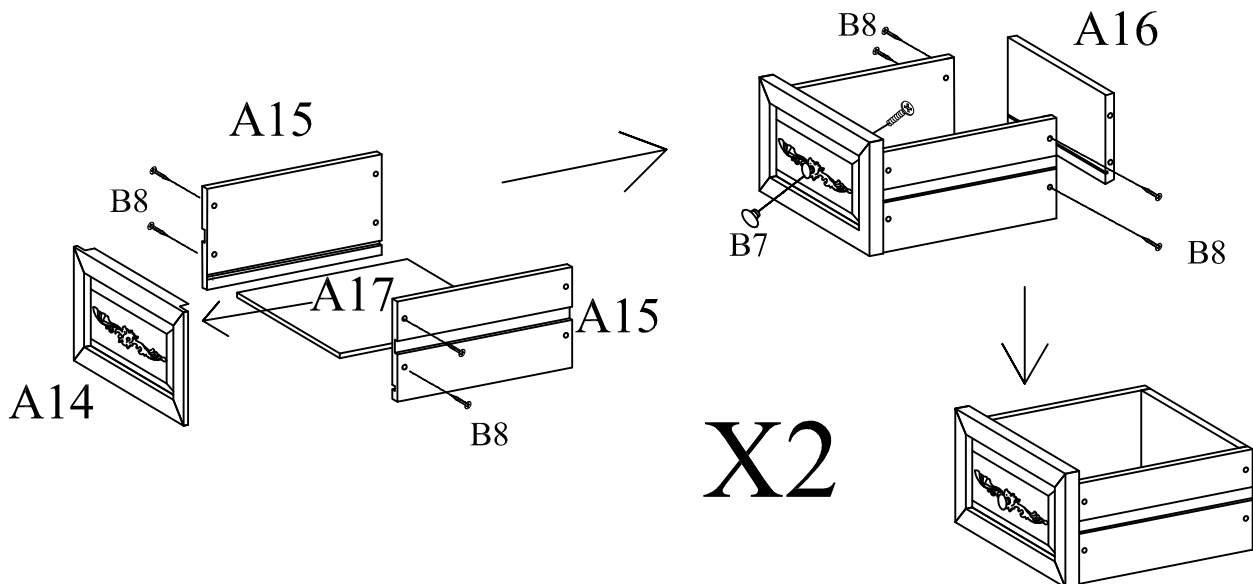

1. Insert Drawer Bottom Panel A17 into the grooves on Drawer Front Panel A14.
2. Attach Drawer Side Panels A15 to Drawer Front Panel A14 using Screws B8. Please ensure the Drawer Bottom Panel A17 fits into the grooves on Drawer Side Panels A15.
3. Attach Drawer Back Panel A16 to Drawer Side Panels A15 using Screws B8.
4. Attach Knob B7 to Drawer Front Panel A14 using included bolts B7.


Step:10

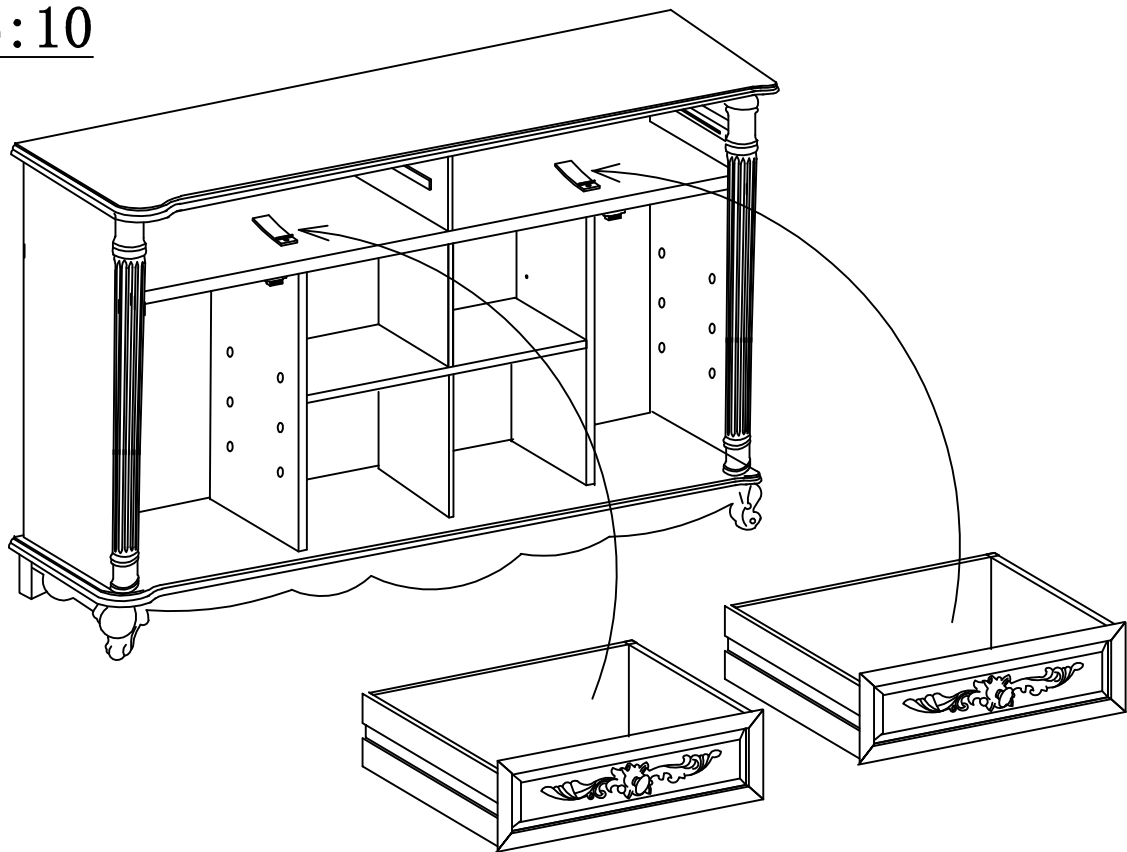

Insert drawers into the unit as shown above.


Step:11

B6  8pc

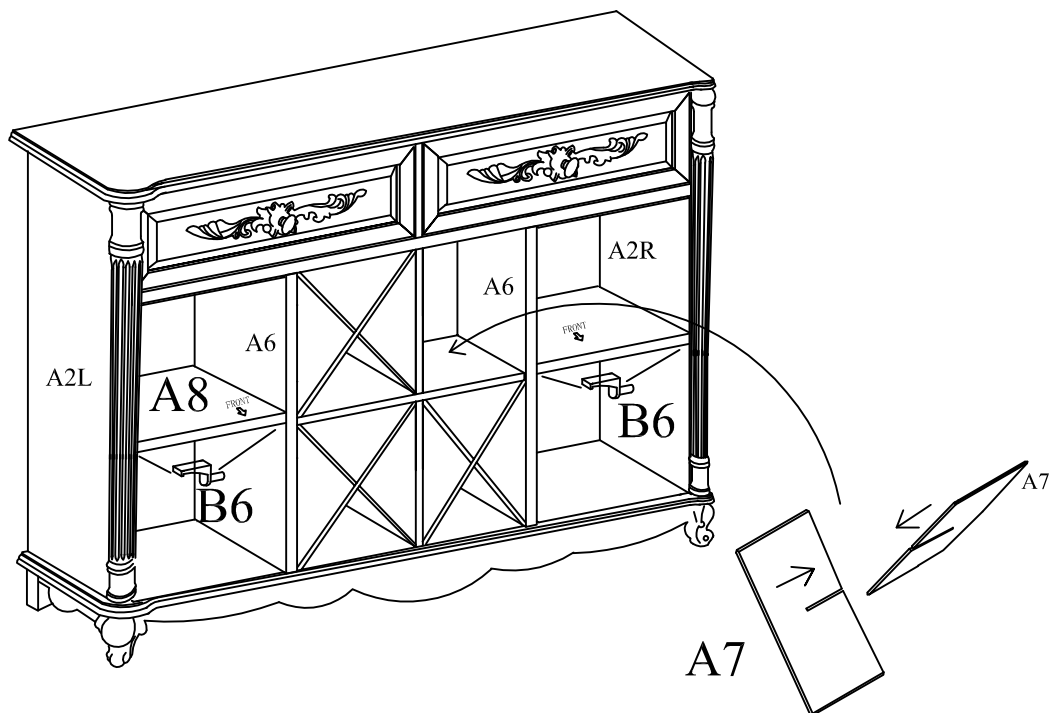


1. Cross Wine Rack Panels A7 and place them into the unit as shown above.
2. Insert Shelf Support B6 into the holes on Side Panels A2(L&R) and Dividers A6.
3. Place Shelves A8 onto Shelf Supports B6.

Step:12

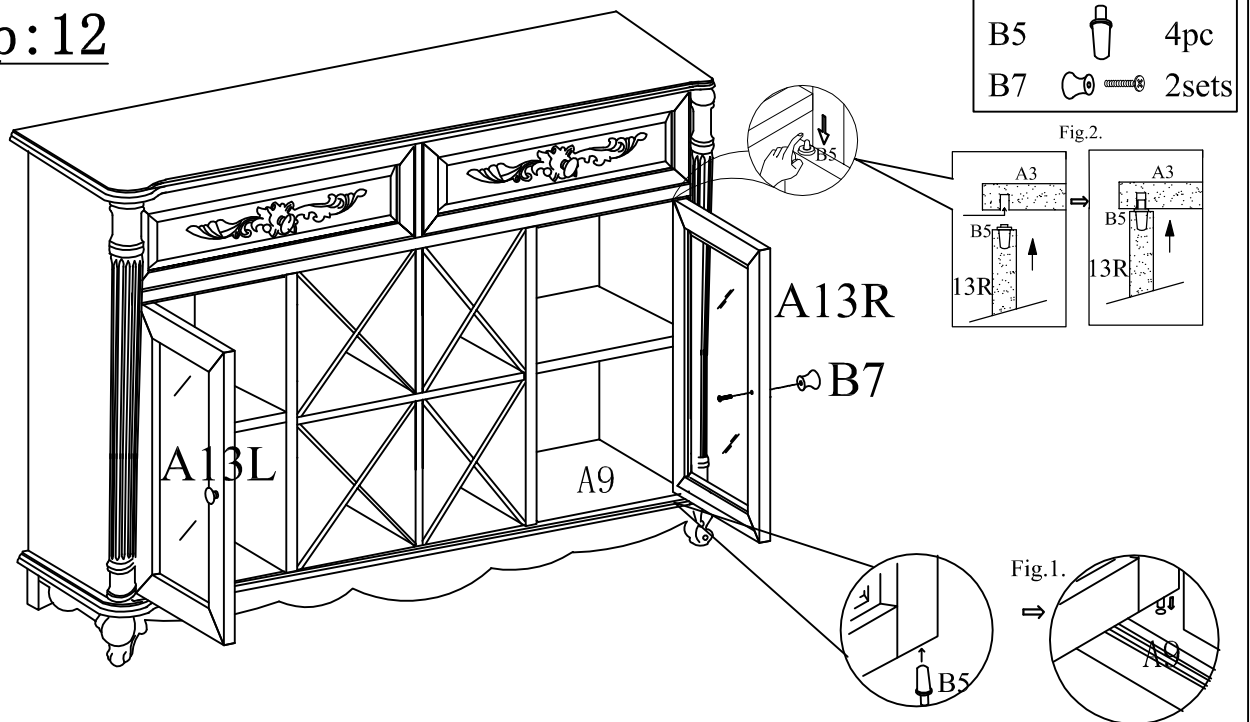










1. Attach Knob B7 to Door A13R using included bolt B7.
2. Insert Door Pin B5 into the hole on the bottom of Door Panel A13R, then connect Door Panel A13R to Bottom Panel A9 as drawing Fig.1.
3. Insert Door Pin B5 into the hole on the top of Door Panel A13R, then press down Door Pin B5 (see Fig.2.) and hold the door panel carefully into the cabinet with the upper pin popping up into the hole of Top Divider A3.
4. Repeat the above steps to assemble the other door panel A13L.

Step:13

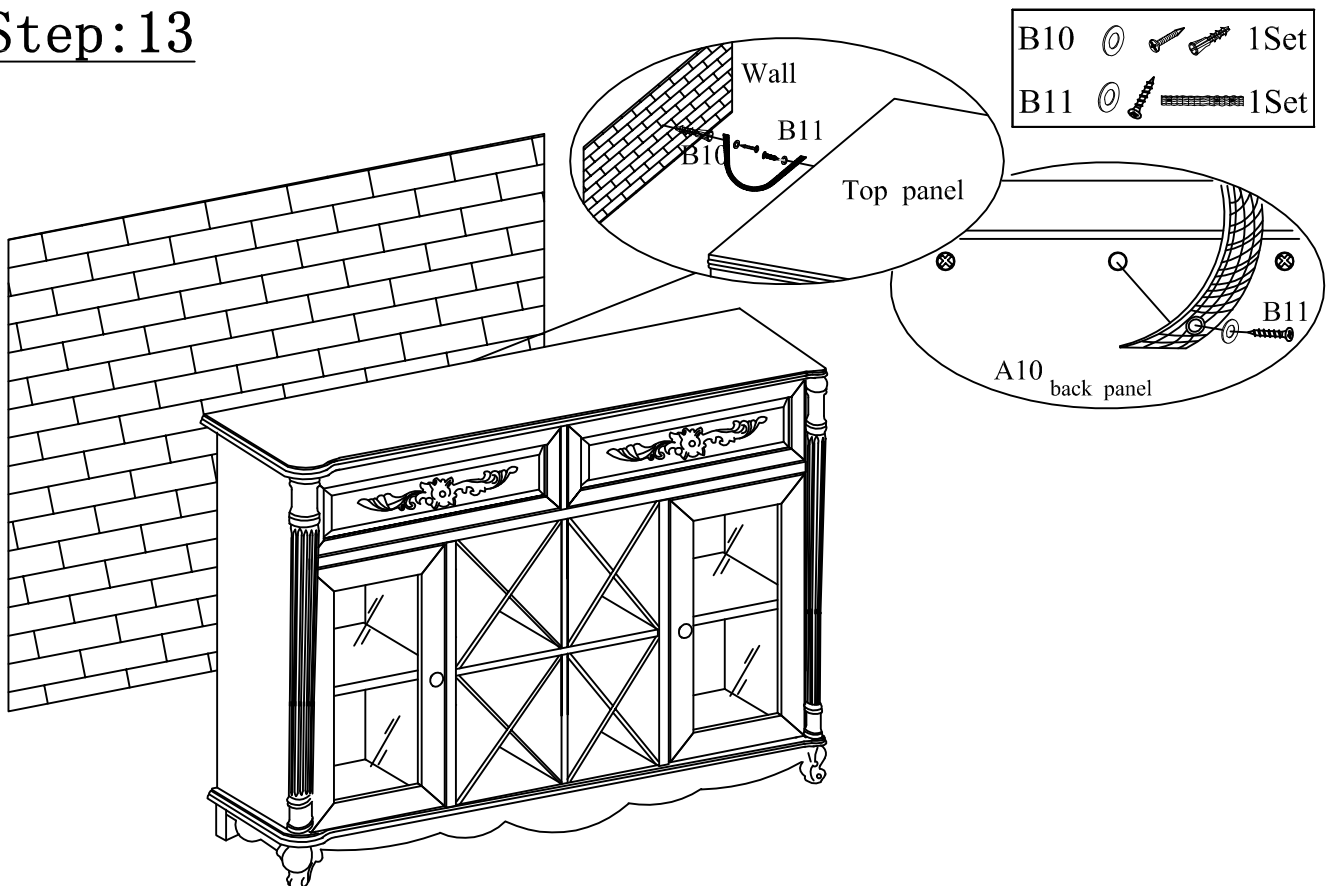

For your safety, please attach this unit to the wall by Anti-tip kit B11 and Wall Anchor with Screw B10.

APPENDIX: Dimension of Hardwares in this AI.
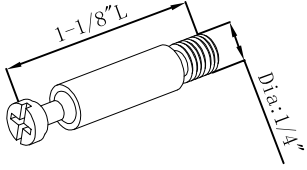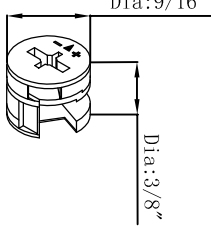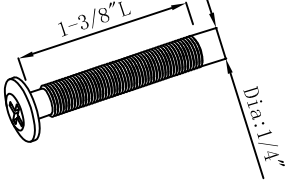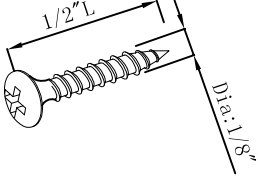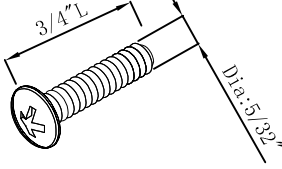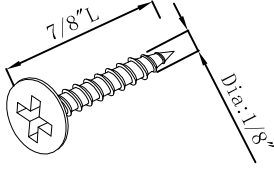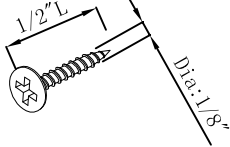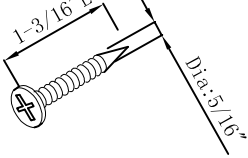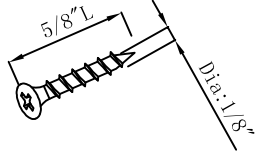
<p>B1</p>  <p>Cam-Bolt</p>	<p>B1</p>  <p>Cam-lock</p>	<p>B2</p>  <p>Bolt</p>
<p>B3&B4</p>  <p>Round Head Screw</p>	<p>B7</p>  <p>Bolt for Handle</p>	<p>B8</p>  <p>Screw</p>
<p>B9</p>  <p>Screw</p>	<p>B10</p>  <p>Screw</p>	<p>B11</p>  <p>Screw</p>