

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 161470

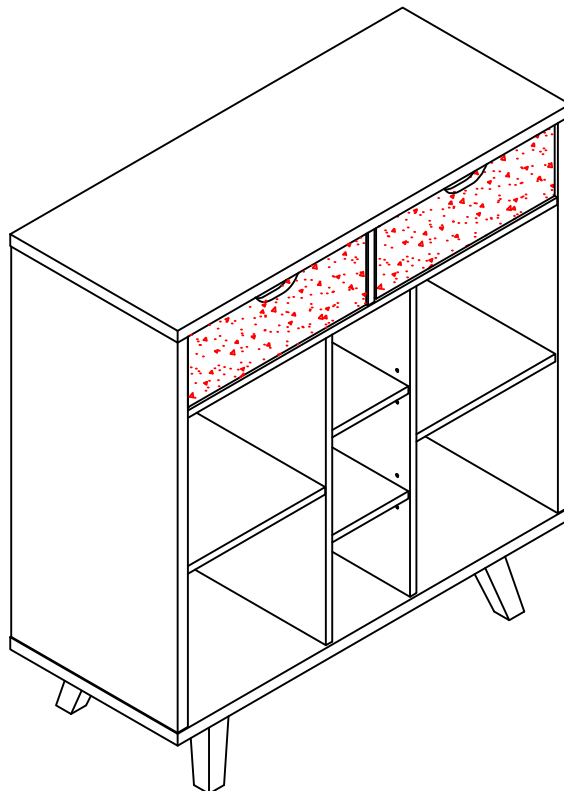

PARTS IDENTIFICATION





ITEM#:161470

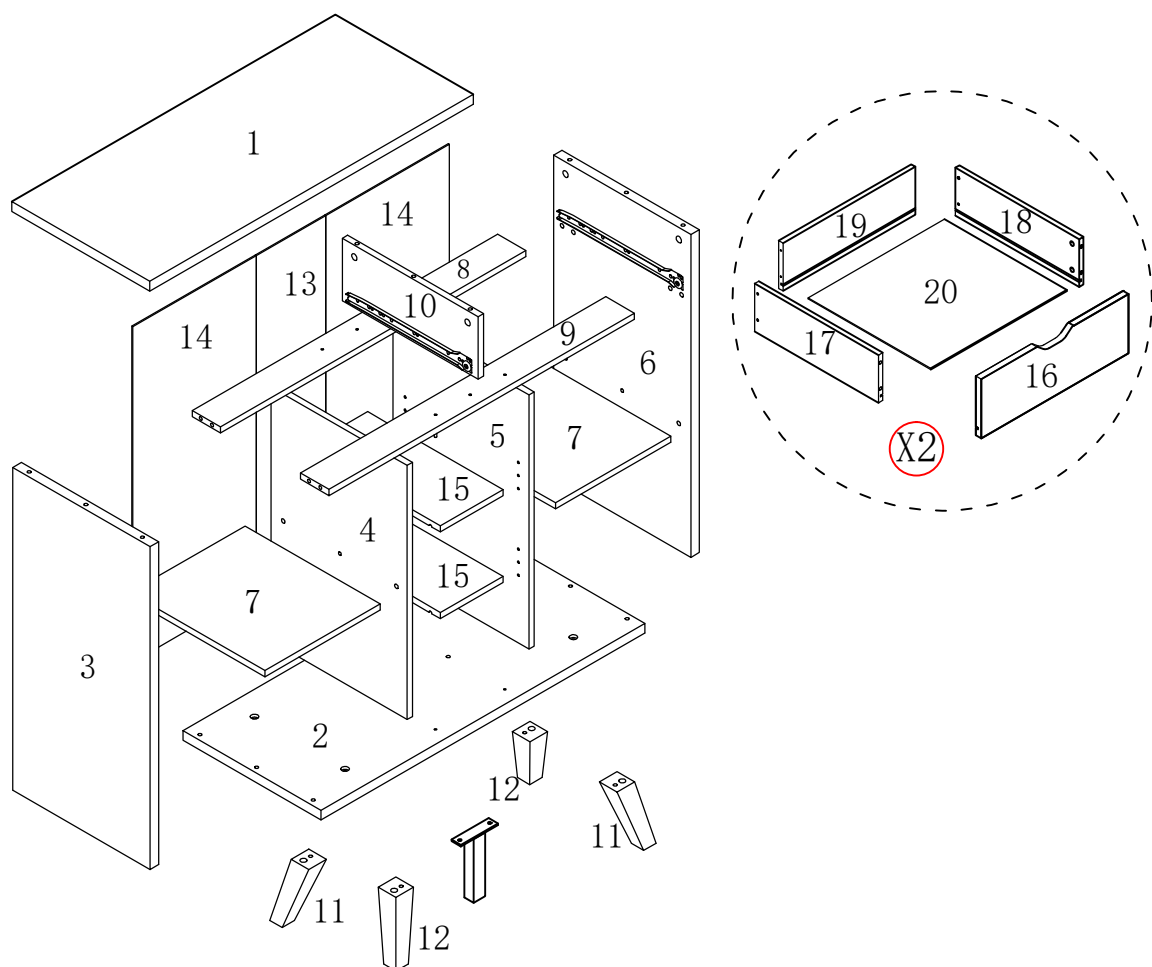

(1)	1pc	(8)	1pc	(15)	2pcs
(2)	1pc	(9)	1pc	(16)	2pcs
(3)	1pc	(10)	1pc	(17)	2pcs
(4)	1pc	(11)	2pcs	(18)	2pcs
(5)	1pc	(12)	2pcs	(19)	2pcs
(6)	1pc	(13)	1pc	(20)	2pcs
(7)	2pcs	(14)	2pcs		

HARDWARE IDENTIFICATION



ITEM#: 161470

A		L29	22pcs
B		Ø15	22pcs
C		Ø8x25	15pcs
D		Ø4x35	6pcs
E		Ø22	9pcs
F		M7x48	4pcs
G		Ø8xØ16x2	8pcs
H		M8x35	4pcs
I		M5	1pc
J			60pcs
K		Ø16	4pcs
L		80x25x152H	1pc
M		Ø6x12	2pcs
N		Ø5x15	8pcs
O		Ø4x30	8pcs
P		L20	8pcs
Q		Ø12	8pcs
R		Ø4x40	4pcs
S		197×5×1	1pc
T		Ø4x25	1pc
U		Ø5x40	1pc
V		Ø8x40	1pc
W		12×12×1	2pcs
X		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION


ITEM#:161470

HOW TO

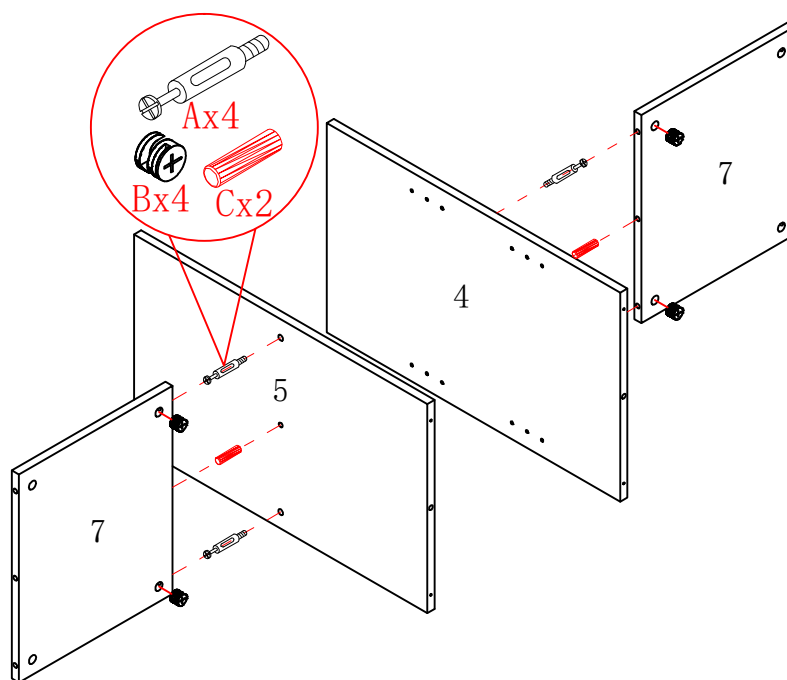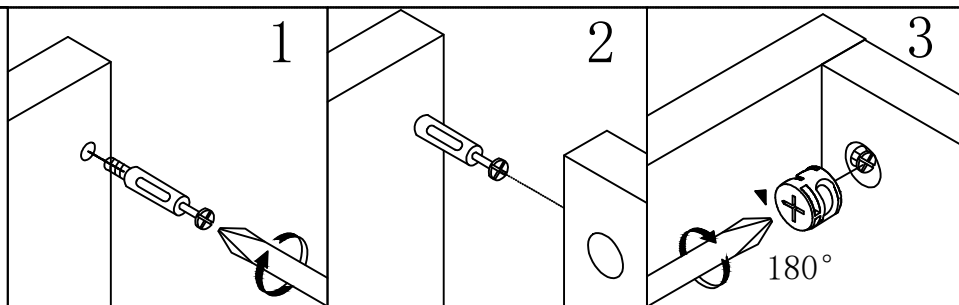


STEP1

STEP2

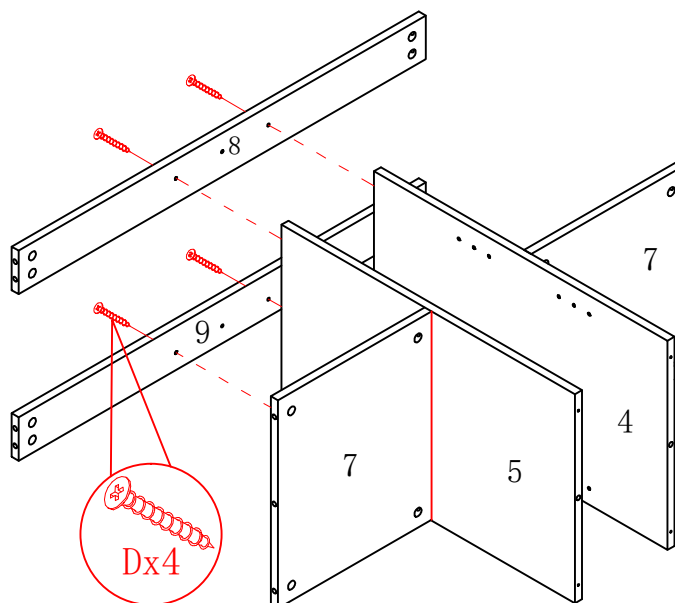


ASSEMBLY INSTRUCTION

ITEM#:161470

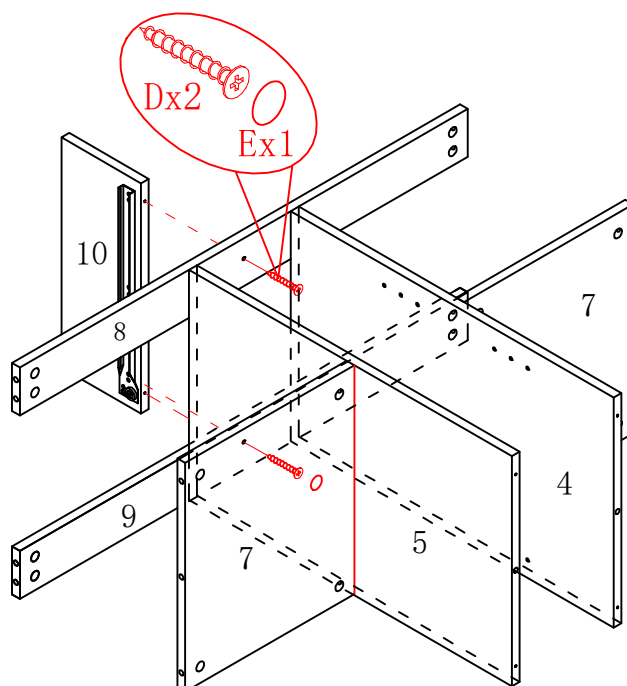


STEP3

STEP4

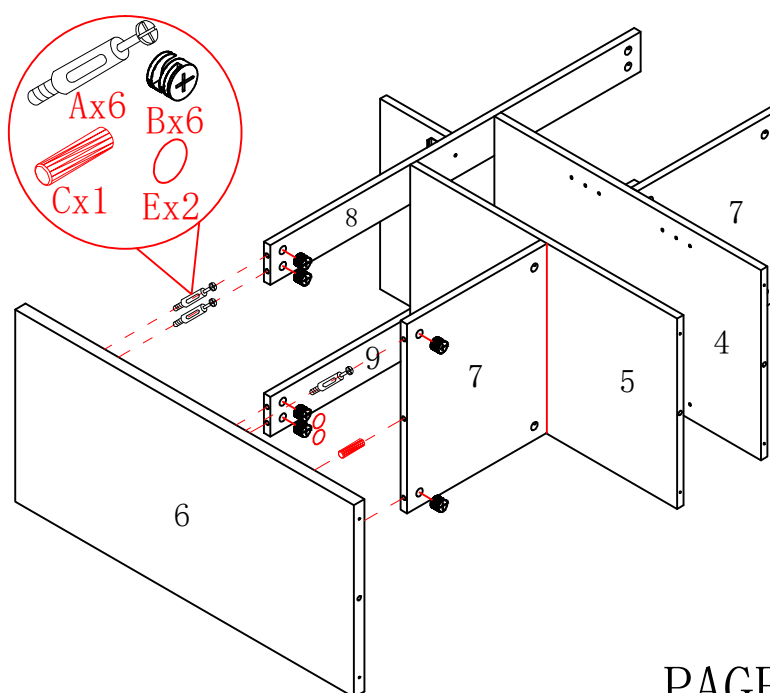


ASSEMBLY INSTRUCTION

ITEM#:161470

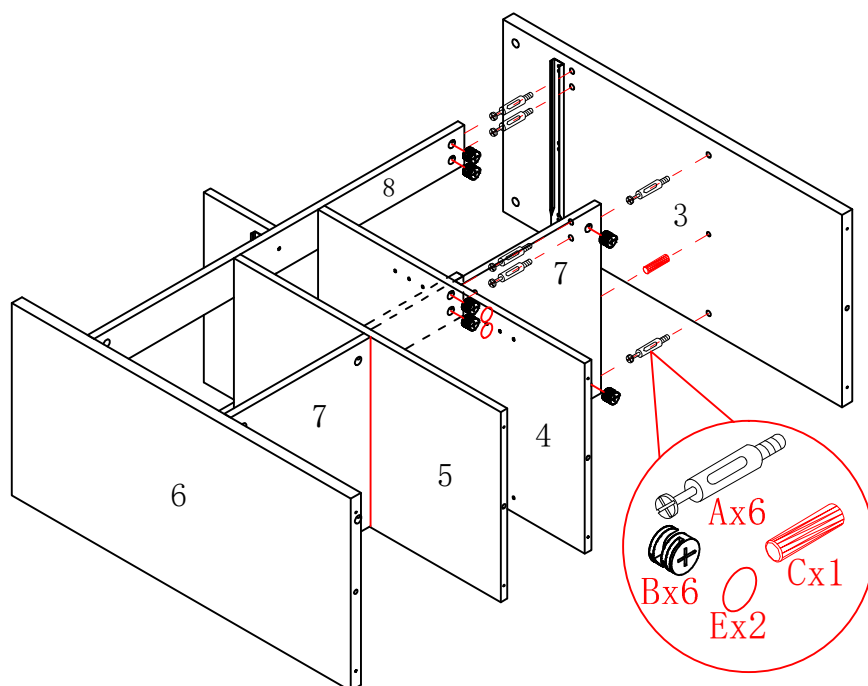

STEP5


STEP6

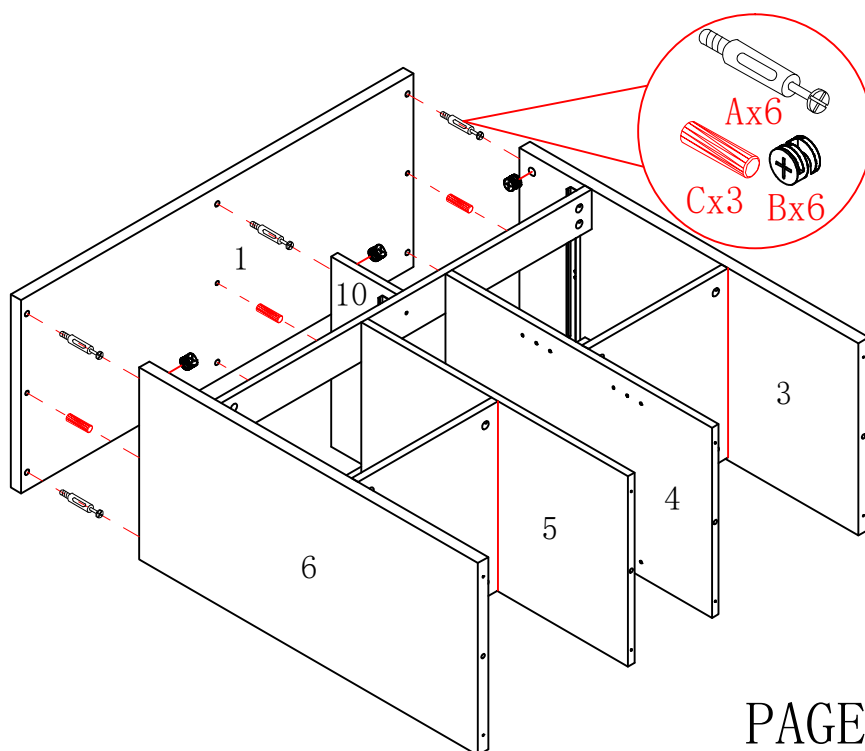

PAGE:6 OF 10


ASSEMBLY INSTRUCTION

ITEM#:161470

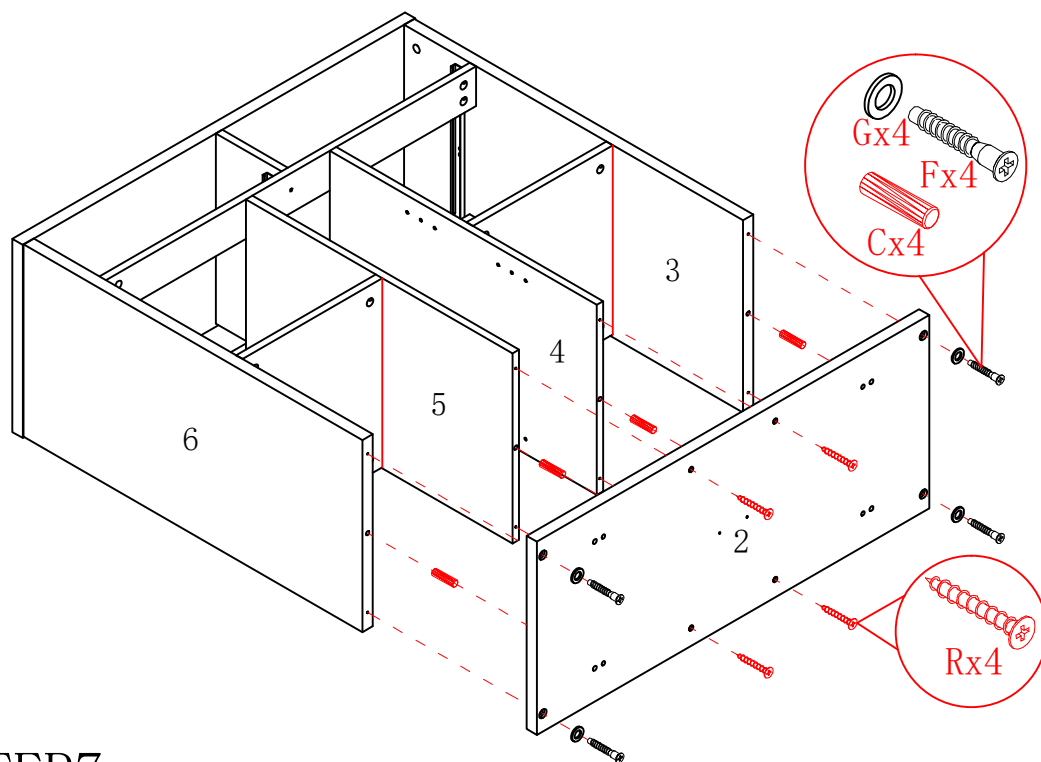


STEP7

STEP8

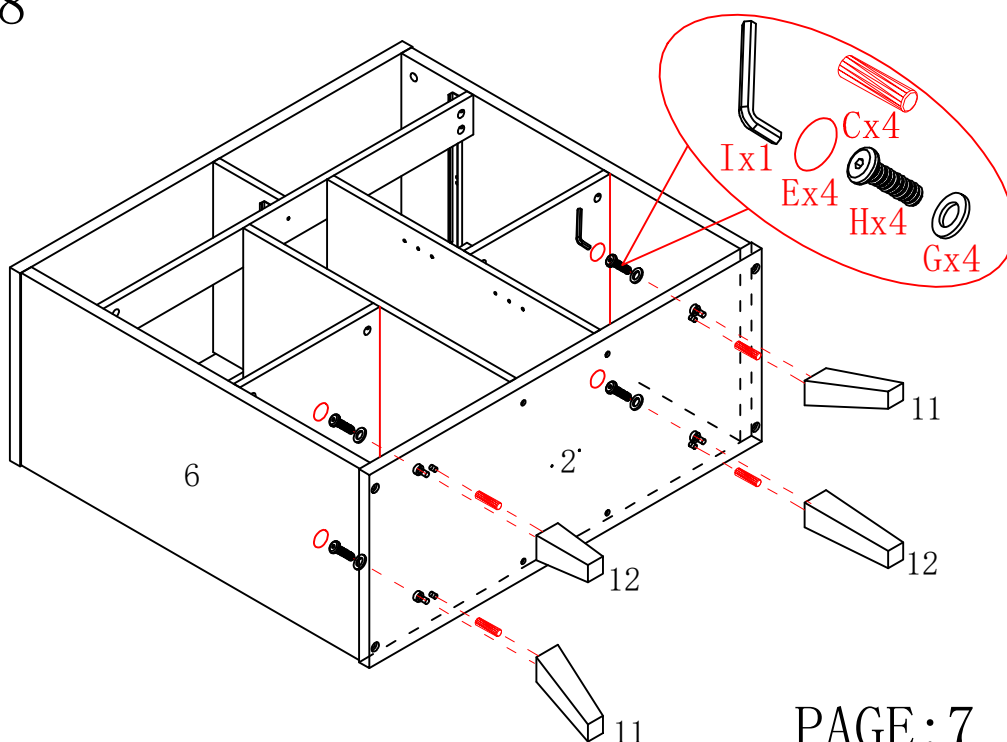


ASSEMBLY INSTRUCTION

ITEM#:161470

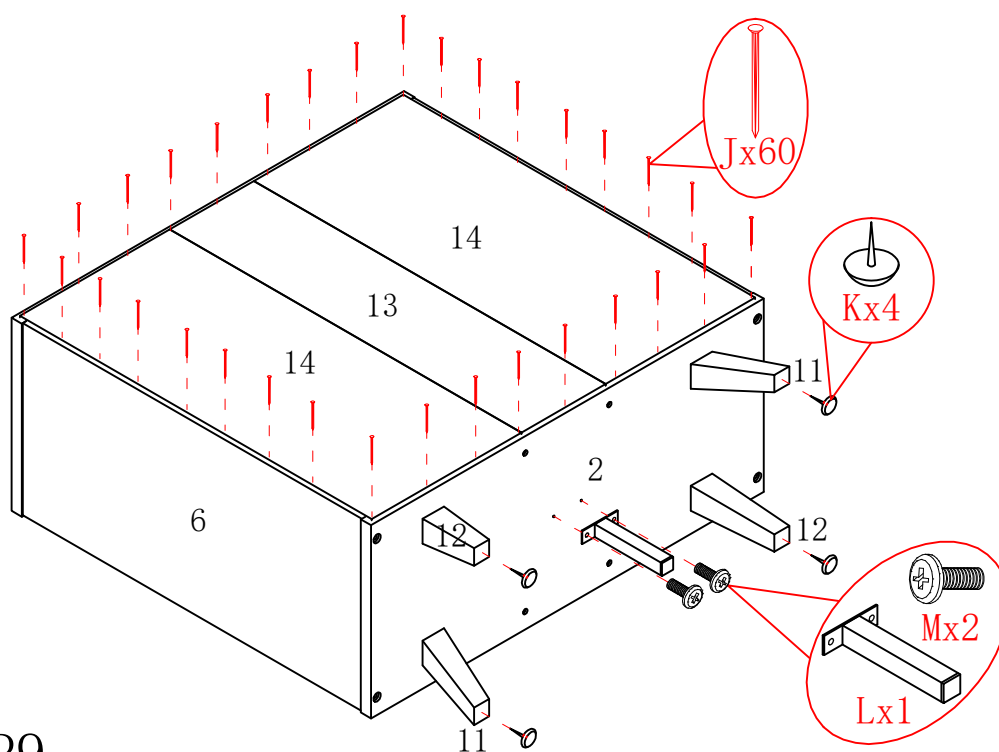

STEP9


STEP10

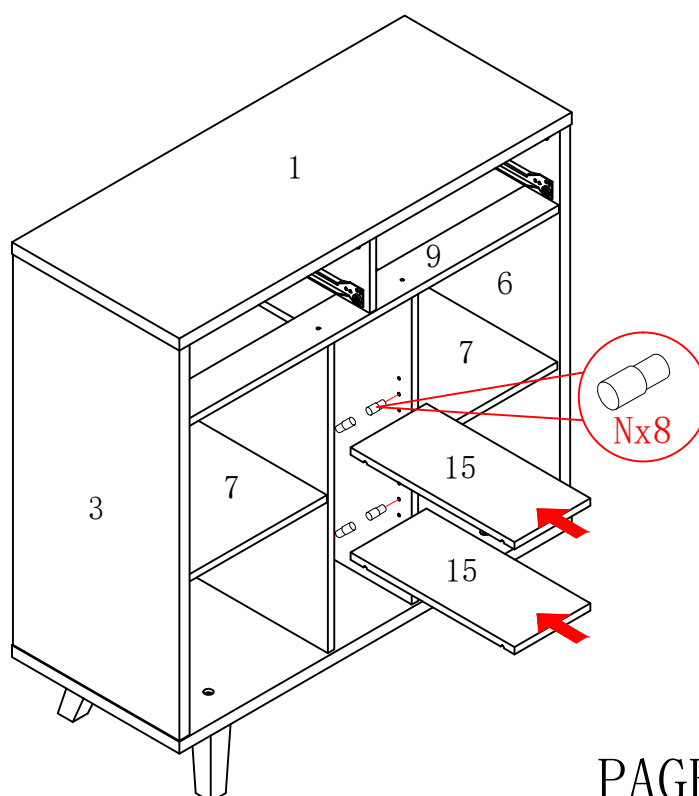

PAGE:8 OF 10


ASSEMBLY INSTRUCTION

ITEM#:161470

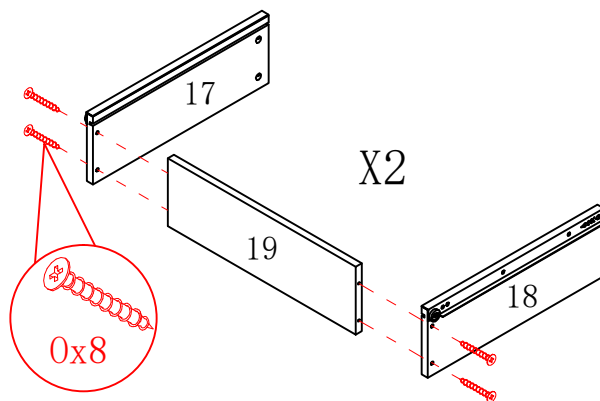


STEP11

STEP12

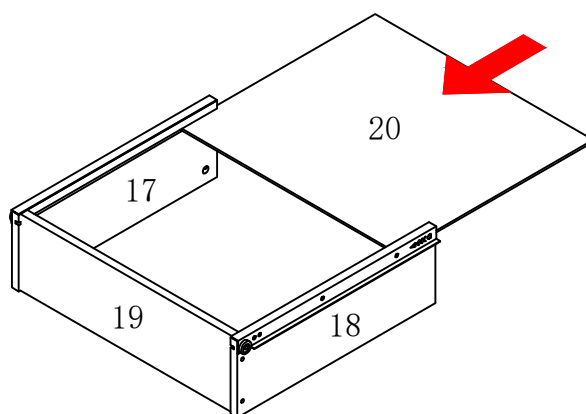


STEP13

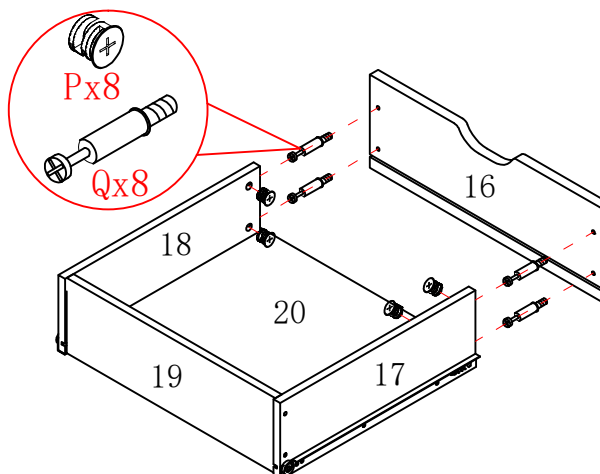


ASSEMBLY INSTRUCTION

ITEM#:161470

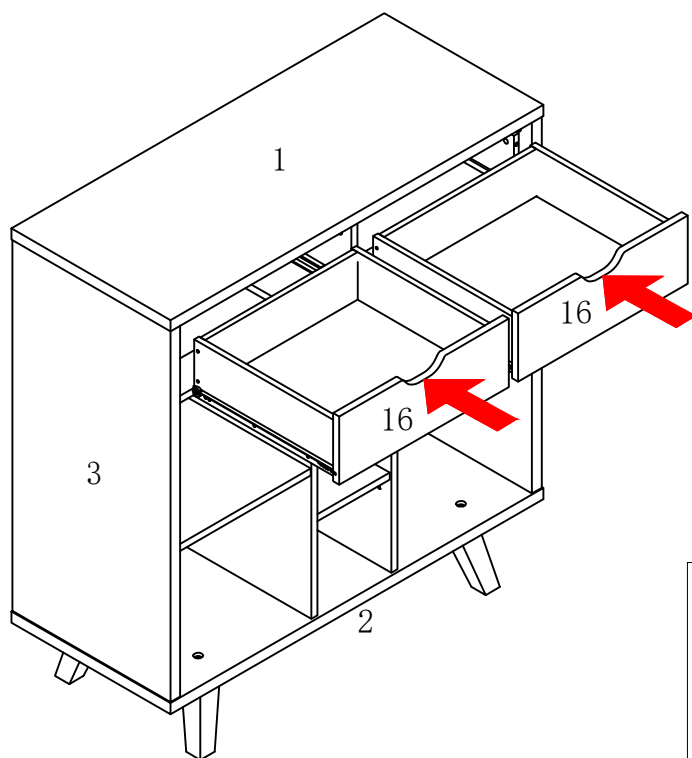


STEP14

STEP15

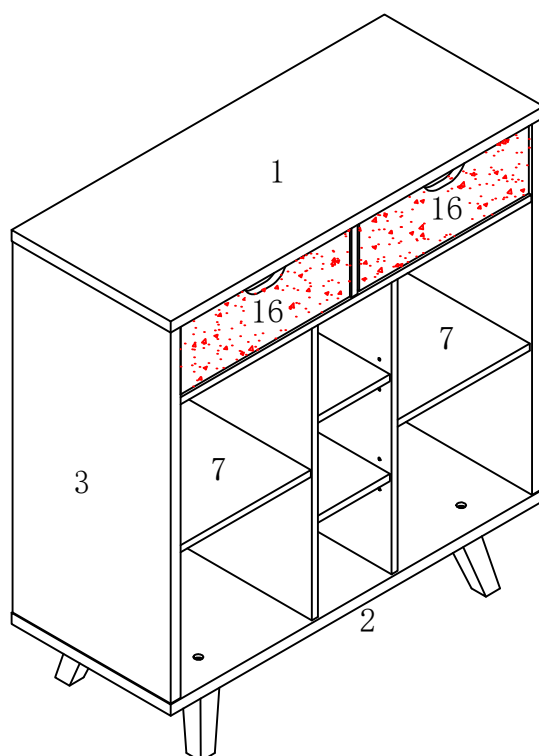


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

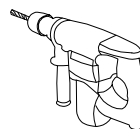


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

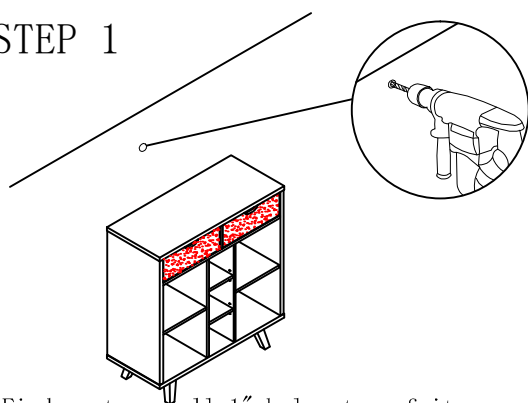


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

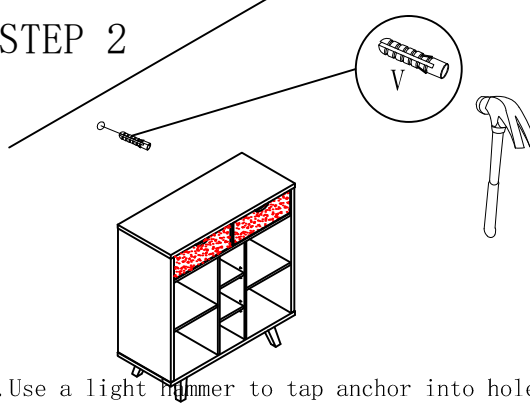


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

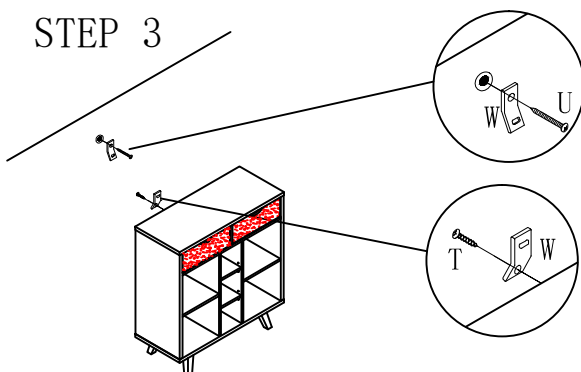

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

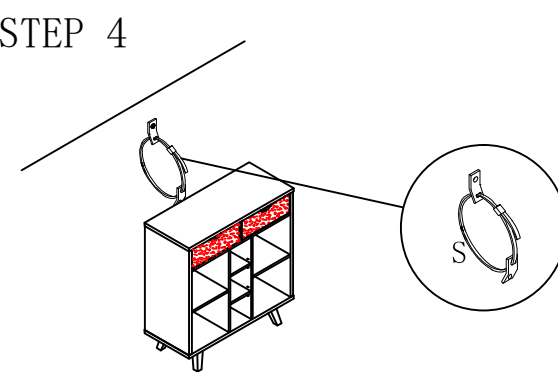

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.