


PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	1
H	1
I	1
J	1
K	1
L	1
M	1

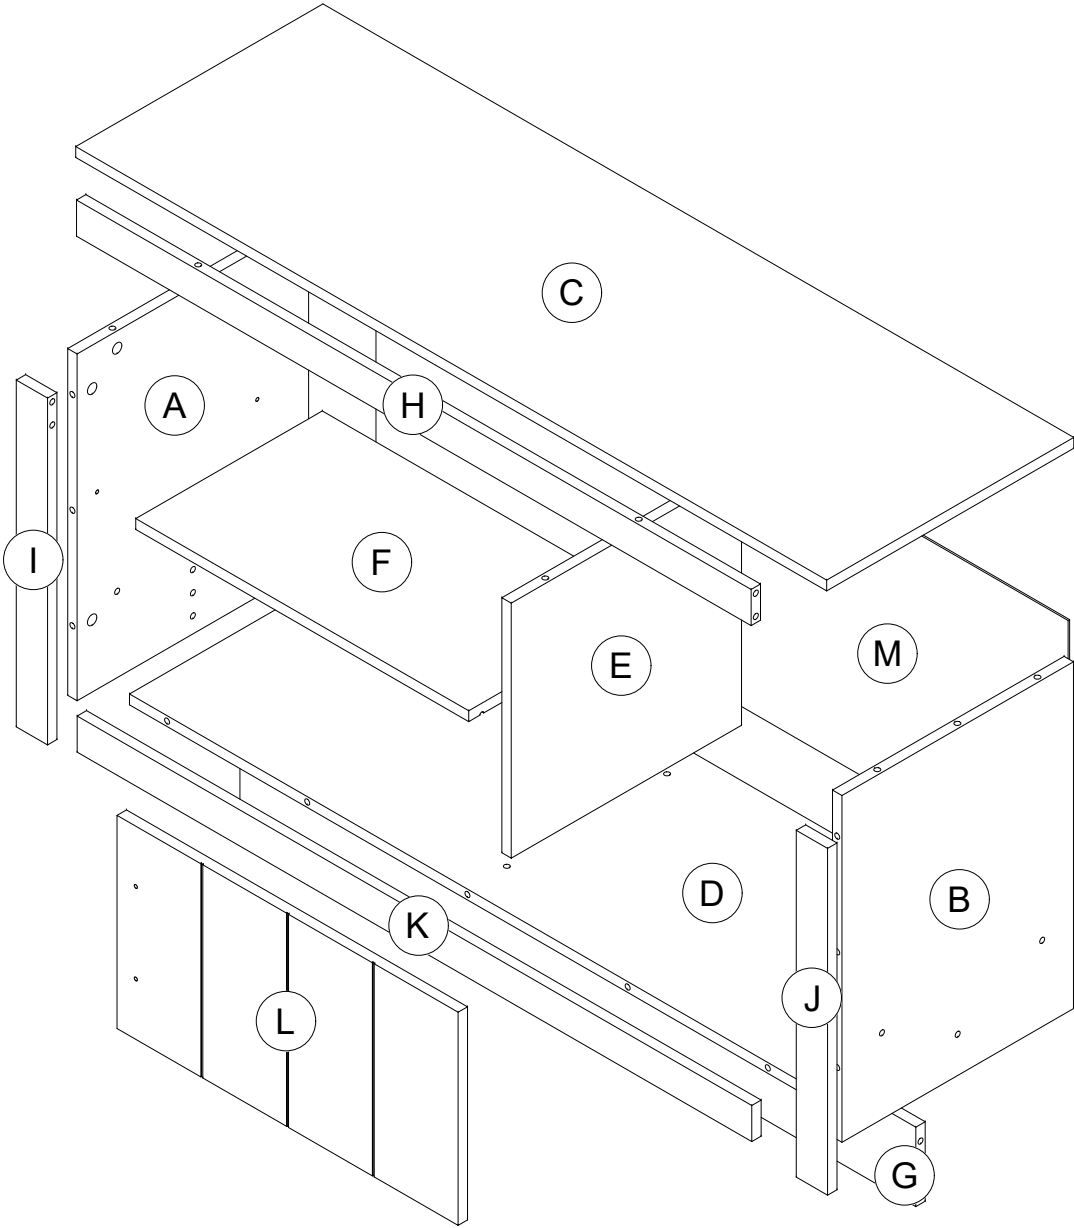


ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.


TV STAND 3244


HARDWARE LIST

1		Wood Dowel $\phi 8 \times 30 \text{mm}$	18 pcs
2		Minifix Bolt	15 pcs
3		Minifix Cam	15 pcs
4		Screw $\phi 6.3 \times 50 \text{mm}$	8 pcs
5		Seal Sticker - 18mm	6 pcs
6		Handle - 128mm	1 pc
7		Handle Screw $\phi 4 \times 19 \text{mm}$	2 pcs
8		Hinges 7/8"	2 pcs
9		Nail	16 pcs
10		PVC Nail With Pin	5 pcs
11		Screw $\phi 3.5 \times 16 \text{mm}$	10 pcs
12		Iron L Bracket	1 pc
13		Shelf Support $\phi 5 \times 16 \text{mm}$	4 pcs
14		Allen Key M4	1 pc

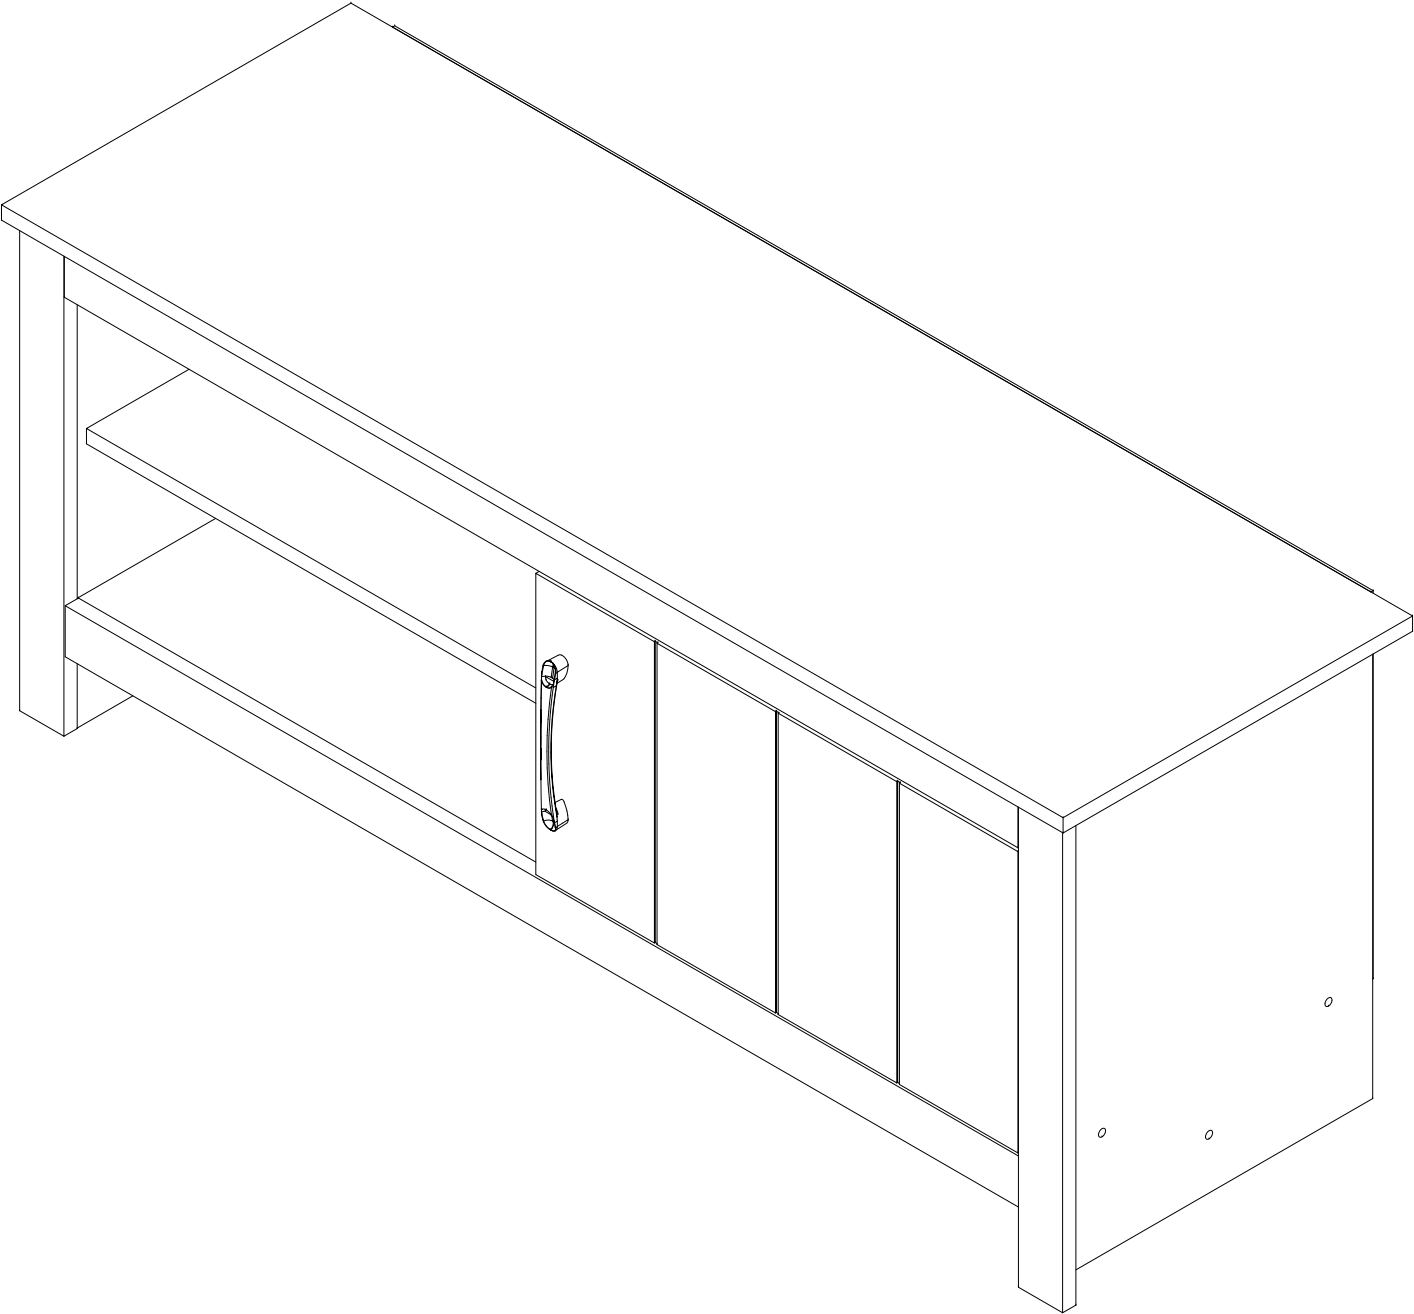


Minifix Setup :






STEP 1
UNLOCK






STEP 2




STEP 3
LOCK



STEP 1

Insert dowels (1) and bolt (2) into all panel as shown.


1		18 pcs
2		15 pcs
13		4 pcs

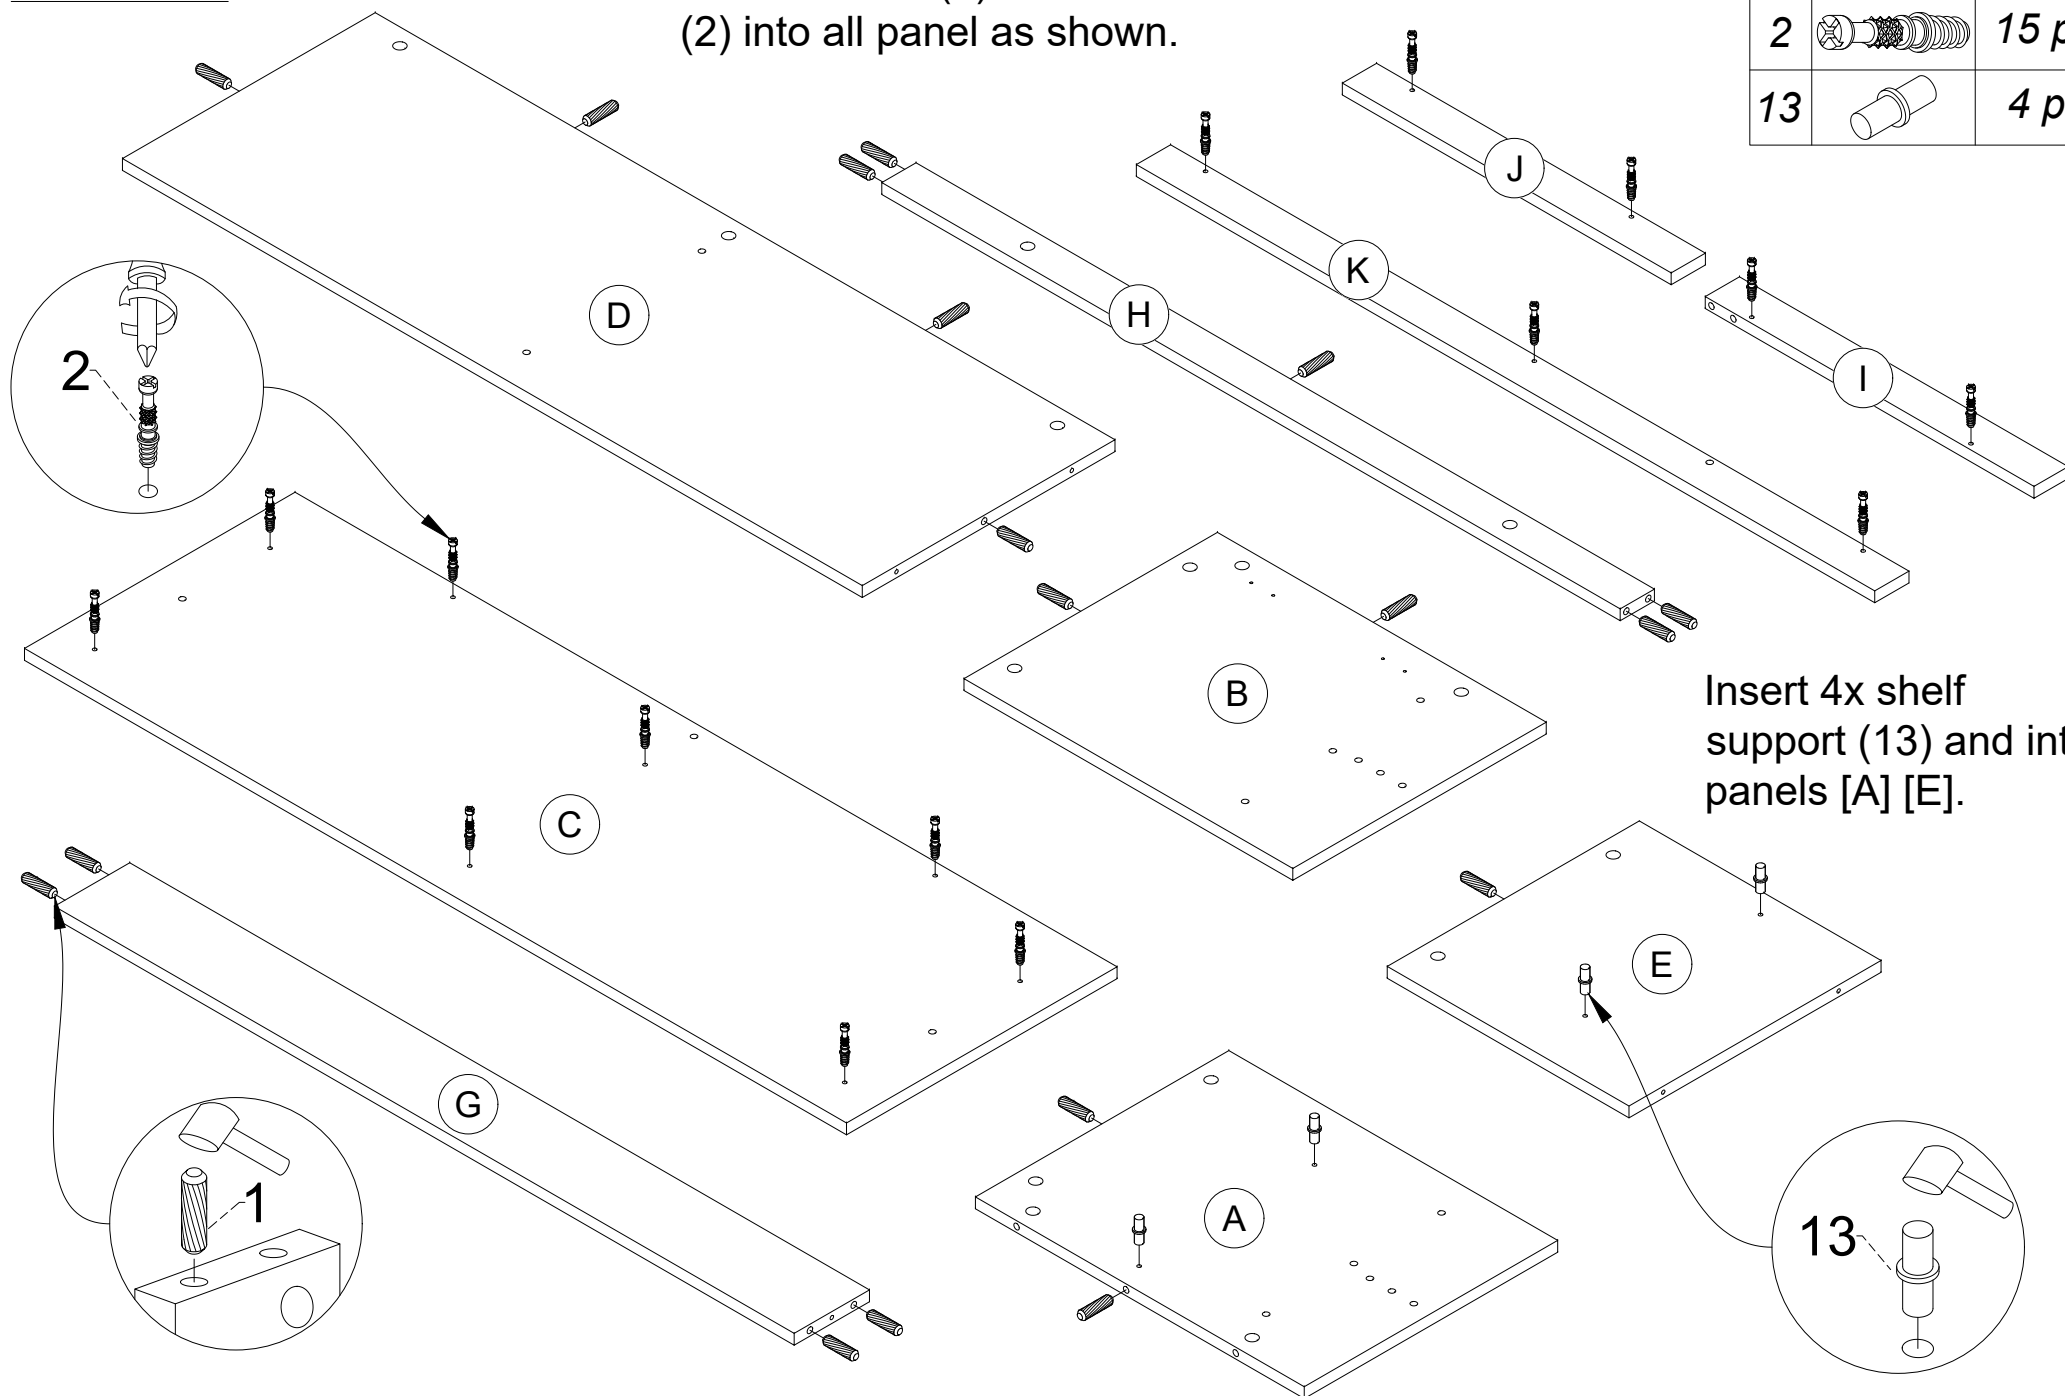

STEP 2



8		2 pcs
11		4 pcs

PLEASE PUT ANOTHER BOARD IN ORDER TO ALIGN THE HINGES ACCORDINGLY.

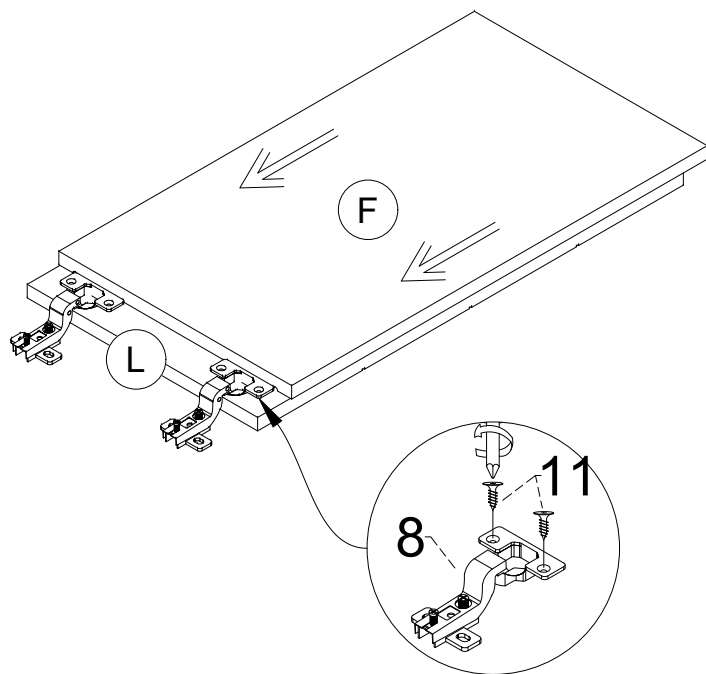


Insert 2x hinges (8) into panel [N]x2 with 4x screw (11).

STEP 3



4		8 pcs
14		1 pc

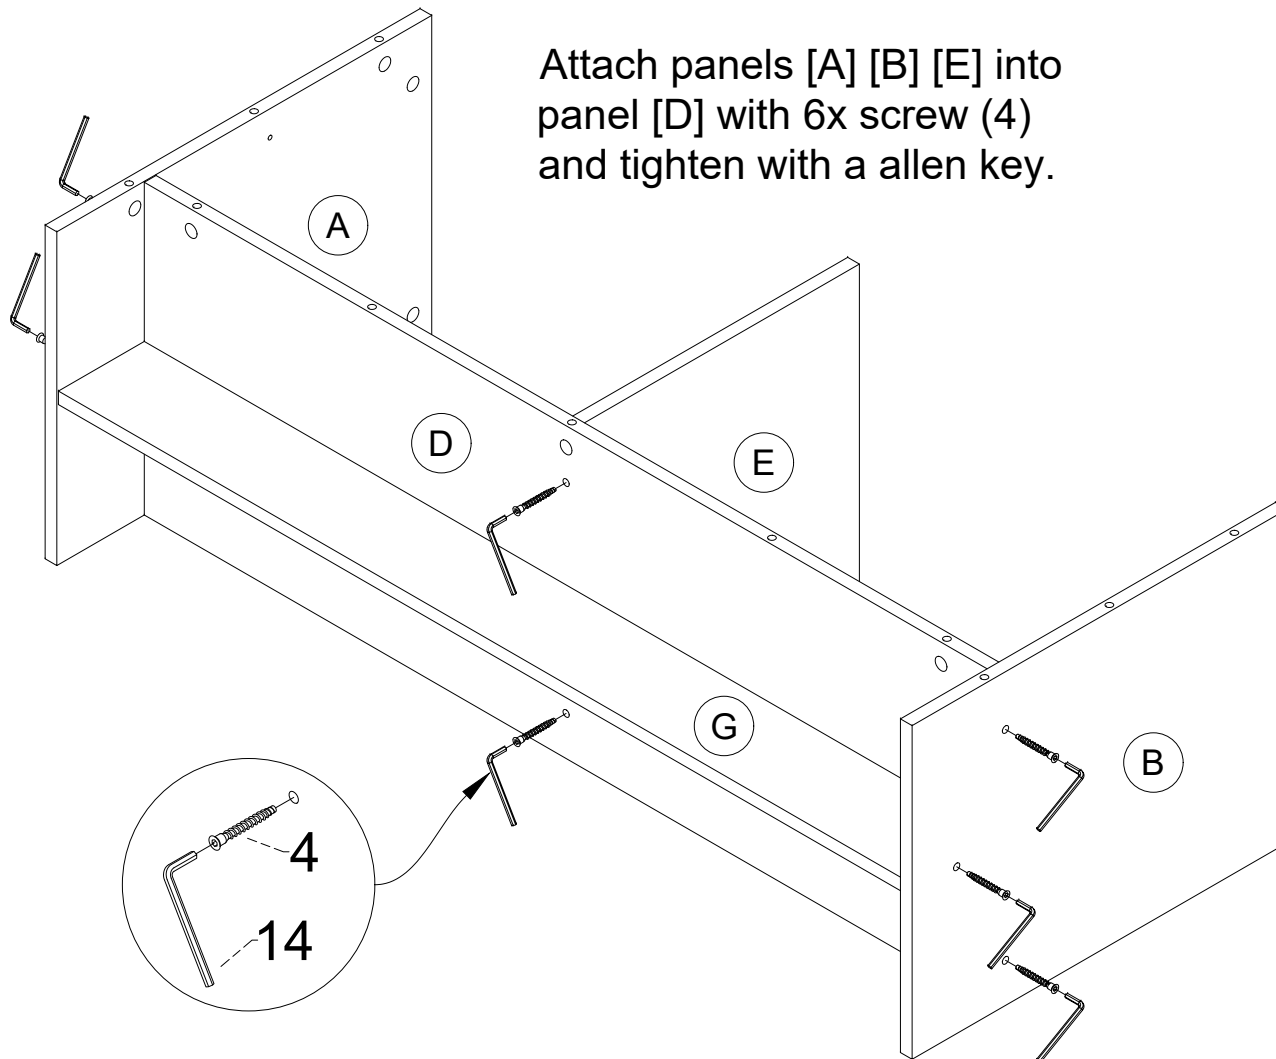Attach panels [A] [B] [E] into panel [D] with 6x screw (4) and tighten with a allen key.




Attach panels [G] into panel [A] [B] with 2x screw (4) and tighten with a allen key.

STEP 4




3		15 pcs
10		5 pcs

Panel [C] [H] [I] [J] [K] slot together with the rest of cabinet place 15x locking cam (3) into connecting parts and tighten with screwdriver.

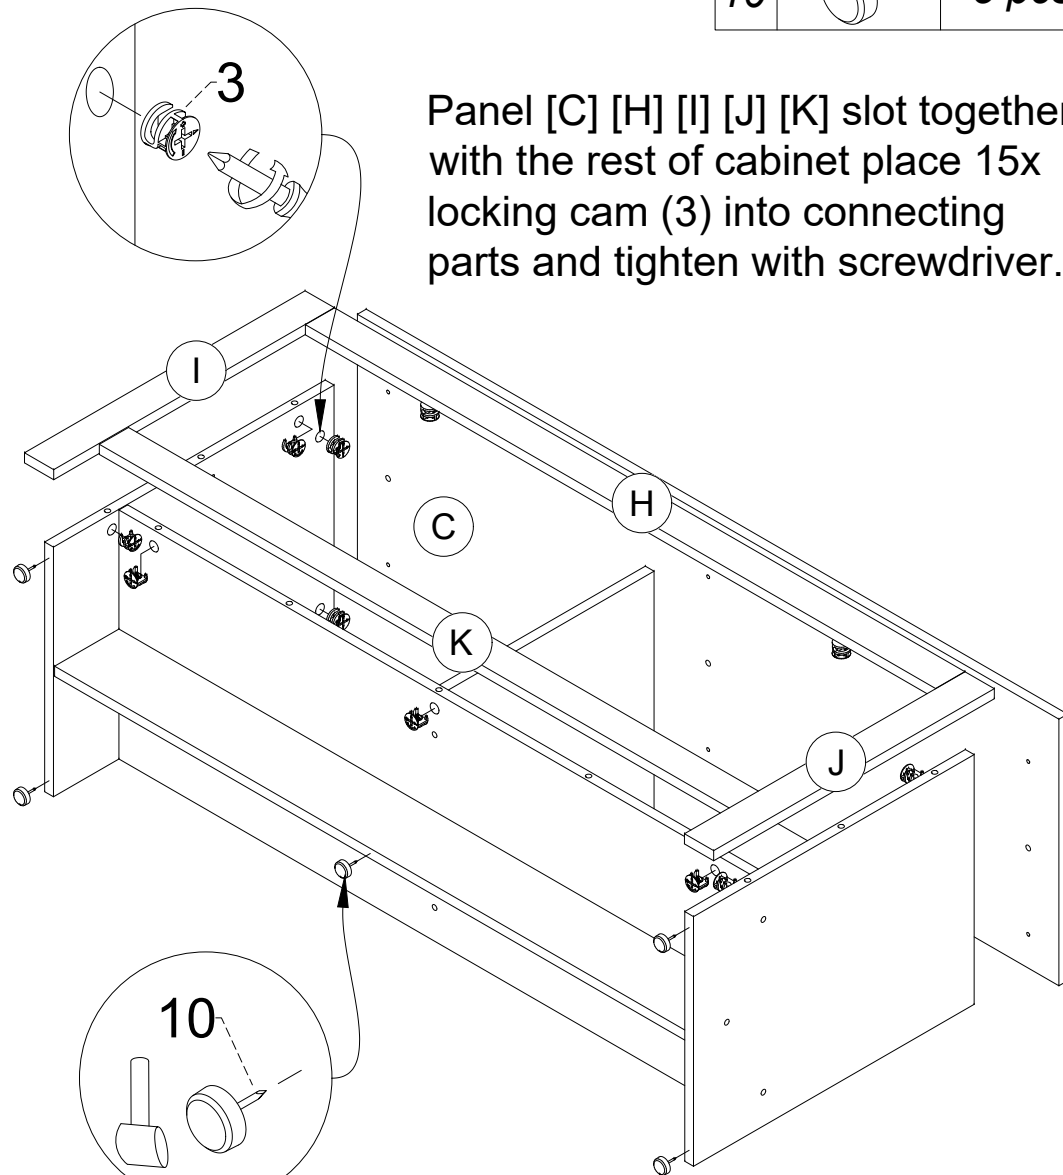


Attach 5x PVC nail pin (10) into the base.

STEP 5

9		16 pcs
11		2 pcs
12		1 pc



Attach panel [M] at the back cabinet using 16 pcs nail (9) as shown with a hammer.

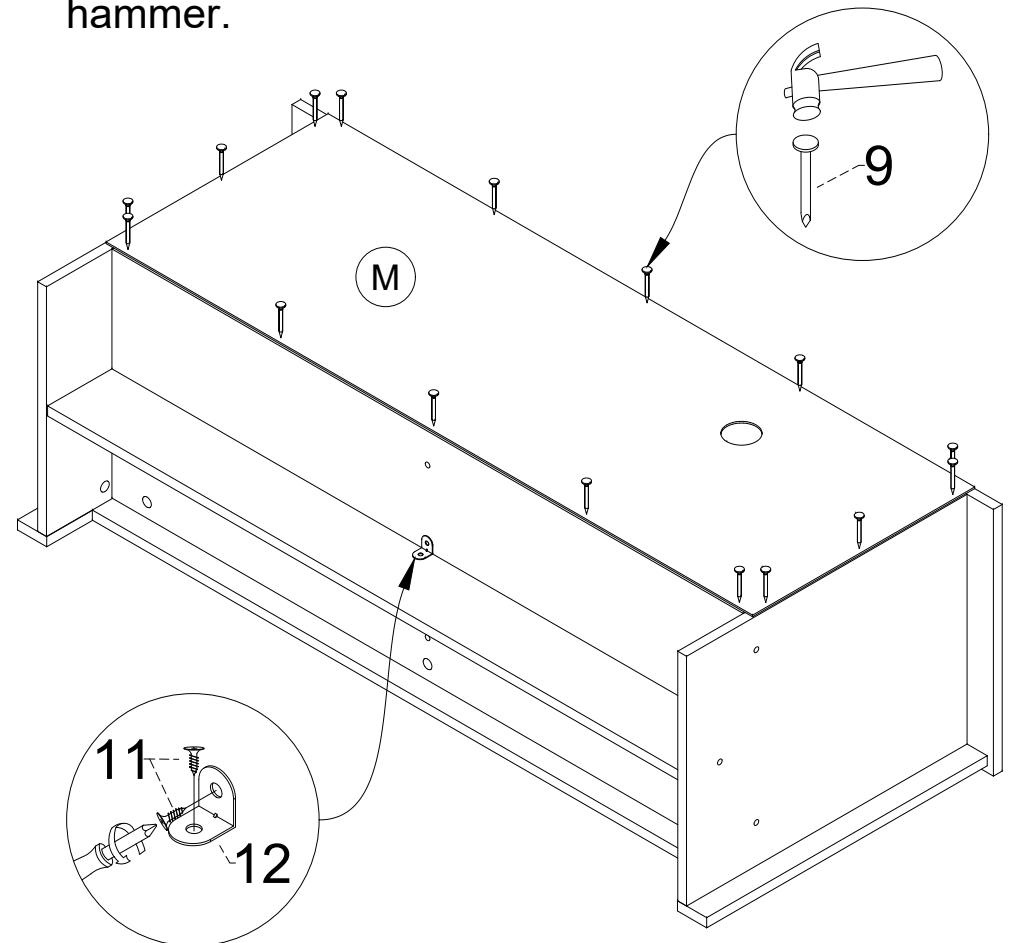


Attach 1x L-bracket (12) at the bottom cabinet as shown using 2x screw (11) and tighten with screwdriver

STEP 6


Place the panel [F]
inside cabinet as
shown.

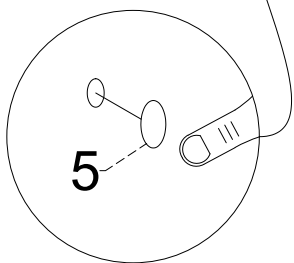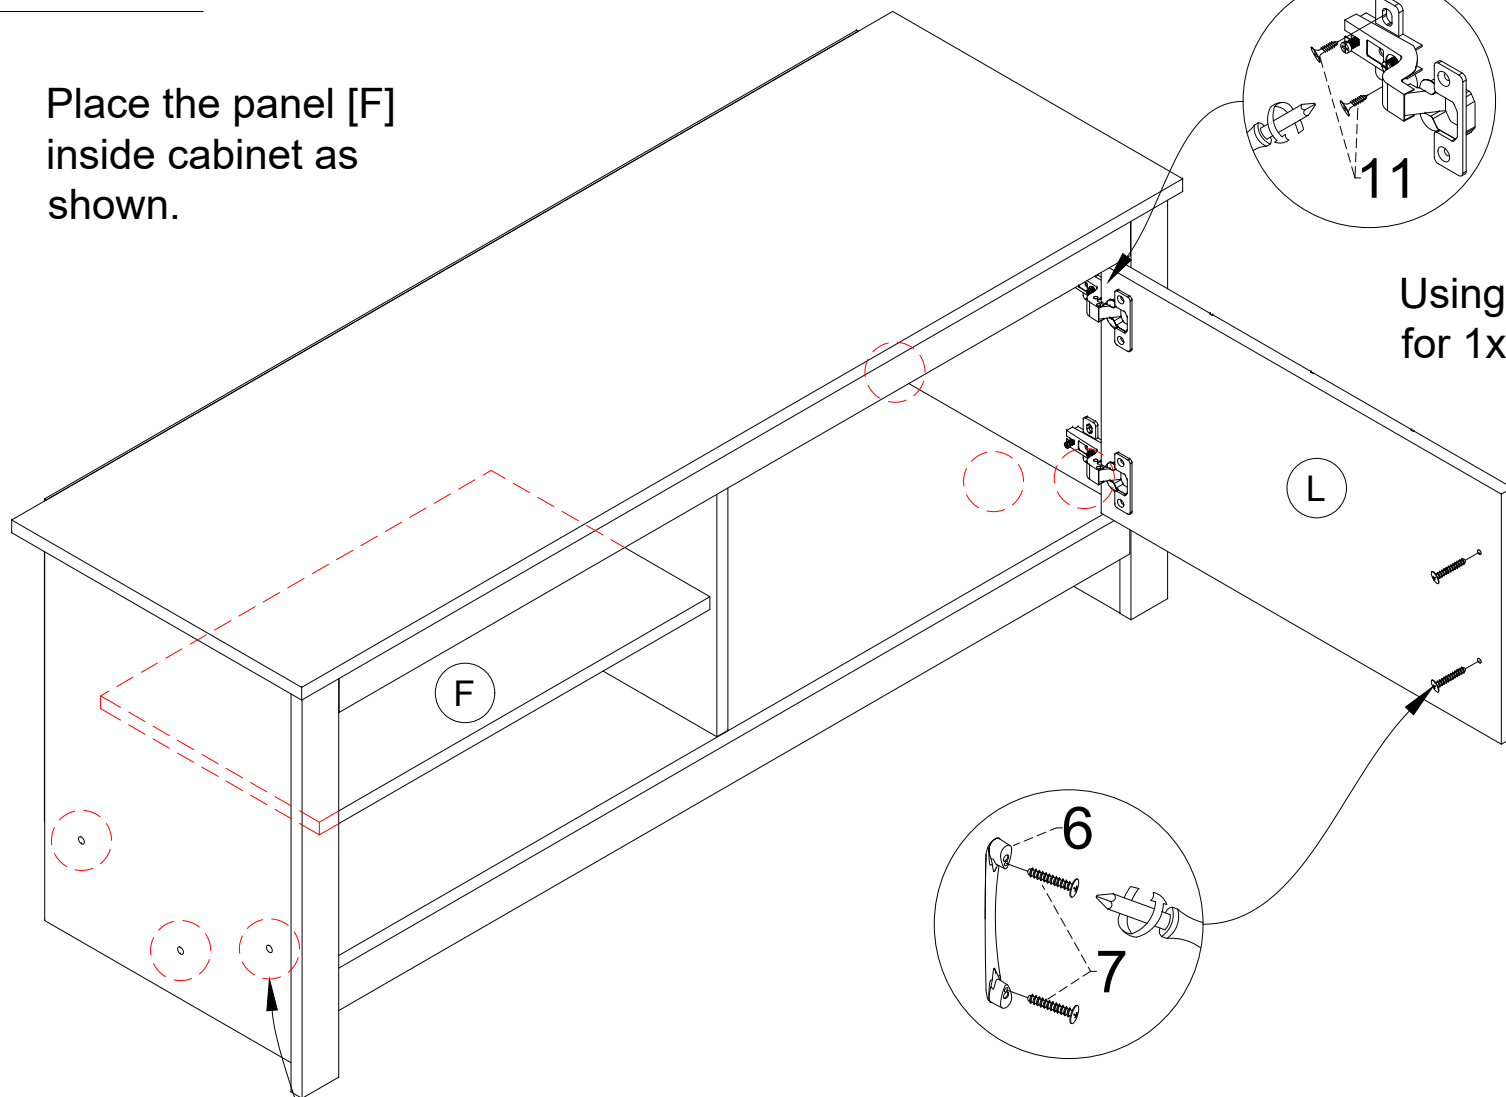

Close up both side
screw holes with 6x
holes sticker (5).

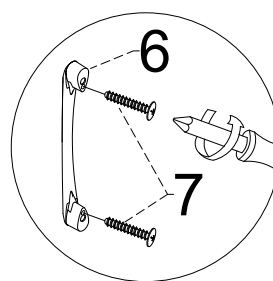


Attach 1x handle (6) into
panel [L] by 2x screw (7).

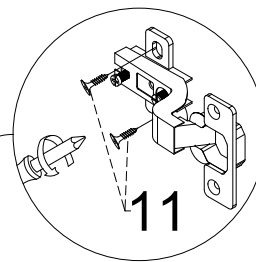


Using 2x screw (11)
for 1x hinges (8).

5		6 pcs
6		1 pc
7		2 pcs
11		4 pcs

**A. Lateral
adjustment
by screw
adjusting**

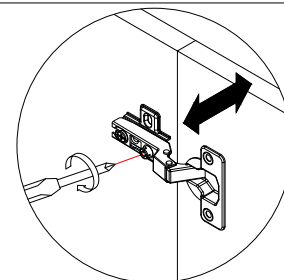

**B. Vertical
adjustment via
slot in the
mounting plate**

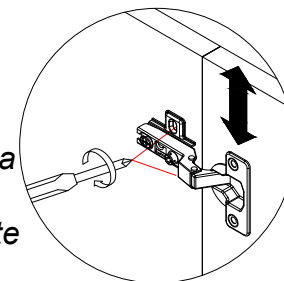

**C. Front-to-Back
by the slacking
the hinge arm
mounting screw**

