


PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	1
H	1
I	1
J	1
K	1
L	1
M	2
N	1

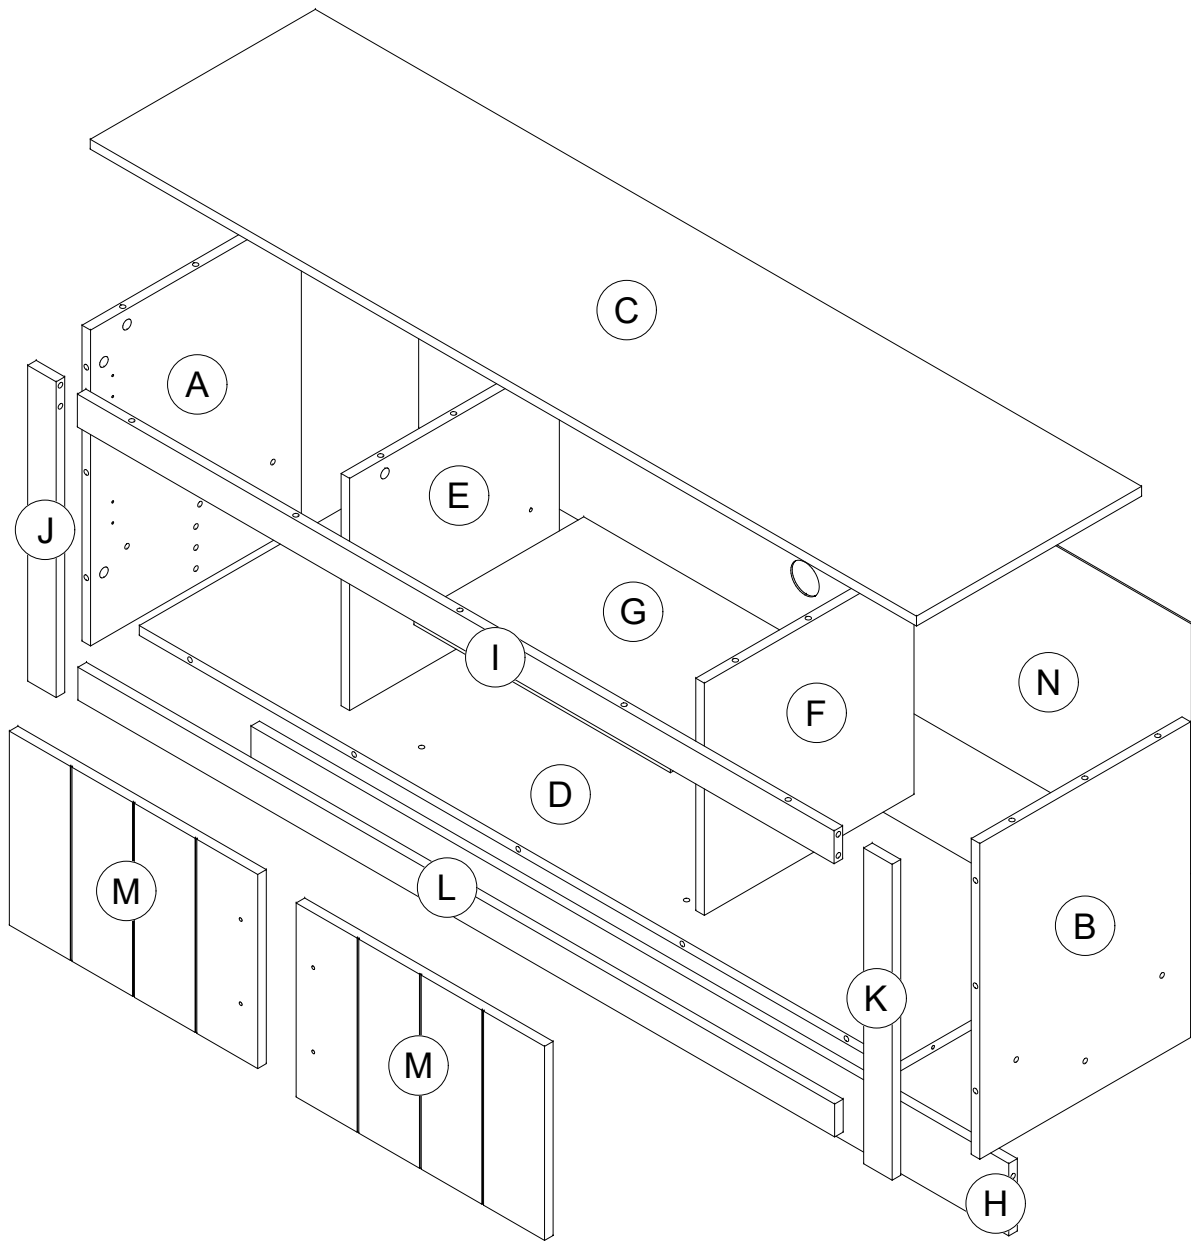











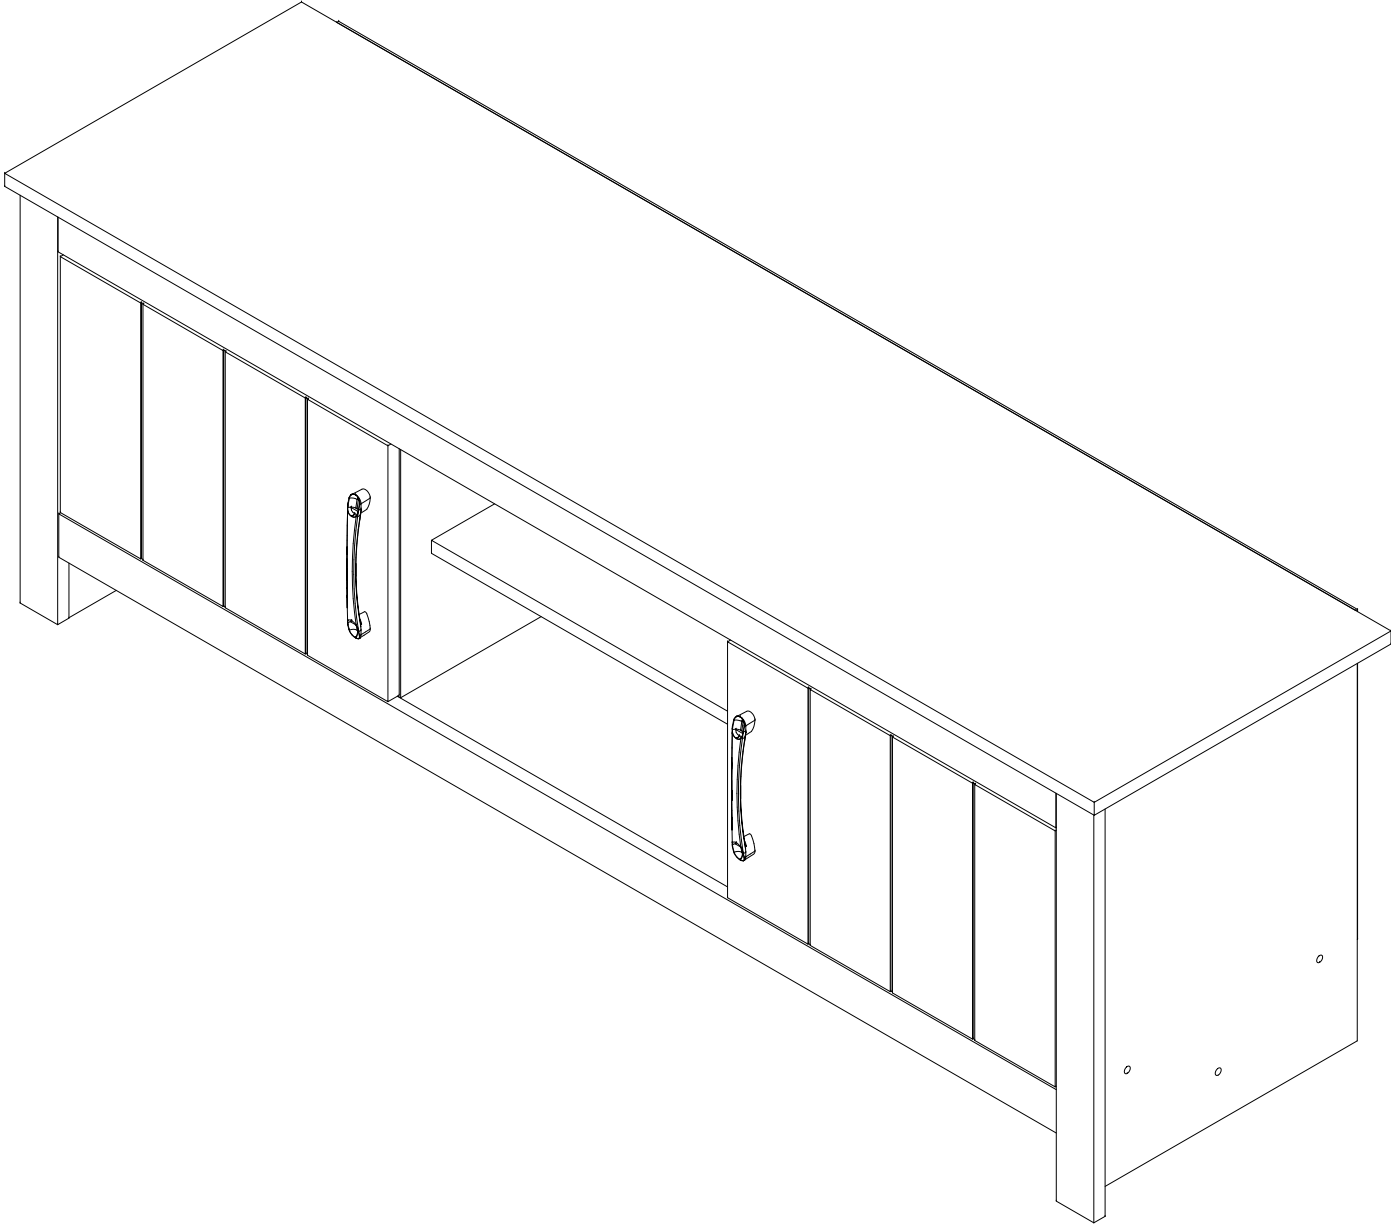
ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.


TV STAND 3255

HARDWARE LIST

1		Wood Dowel $\phi 8 \times 30 \text{mm}$	20 pcs
2		Minifix Bolt	18 pcs
3		Minifix Cam	18 pcs
4		Screw $\phi 6.3 \times 50 \text{mm}$	10 pcs
5		Seal Sticker - 18mm	6 pcs
6		Handle - 128mm	2 pcs
7		Handle Screw $\phi 4 \times 19 \text{mm}$	4 pcs
8		Hinges 7/8"	4 pcs
9		Nail	20 pcs
10		PVC Nail With Pin	6 pcs
11		Screw $\phi 3.5 \times 16 \text{mm}$	20 pcs
12		Iron L Bracket	2 pc
13		Shelf Support $\phi 5 \times 16 \text{mm}$	4 pcs
14		Allen Key M4	1 pc



Minifix Setup :



STEP 1
UNLOCK






STEP 2




STEP 3
LOCK

STEP 1

Insert dowels (1) and bolt (2) into all panel as shown.


1		20 pcs
2		18 pcs
13		4 pcs

Insert 4x shelf support (13) and into panels [F] [E].

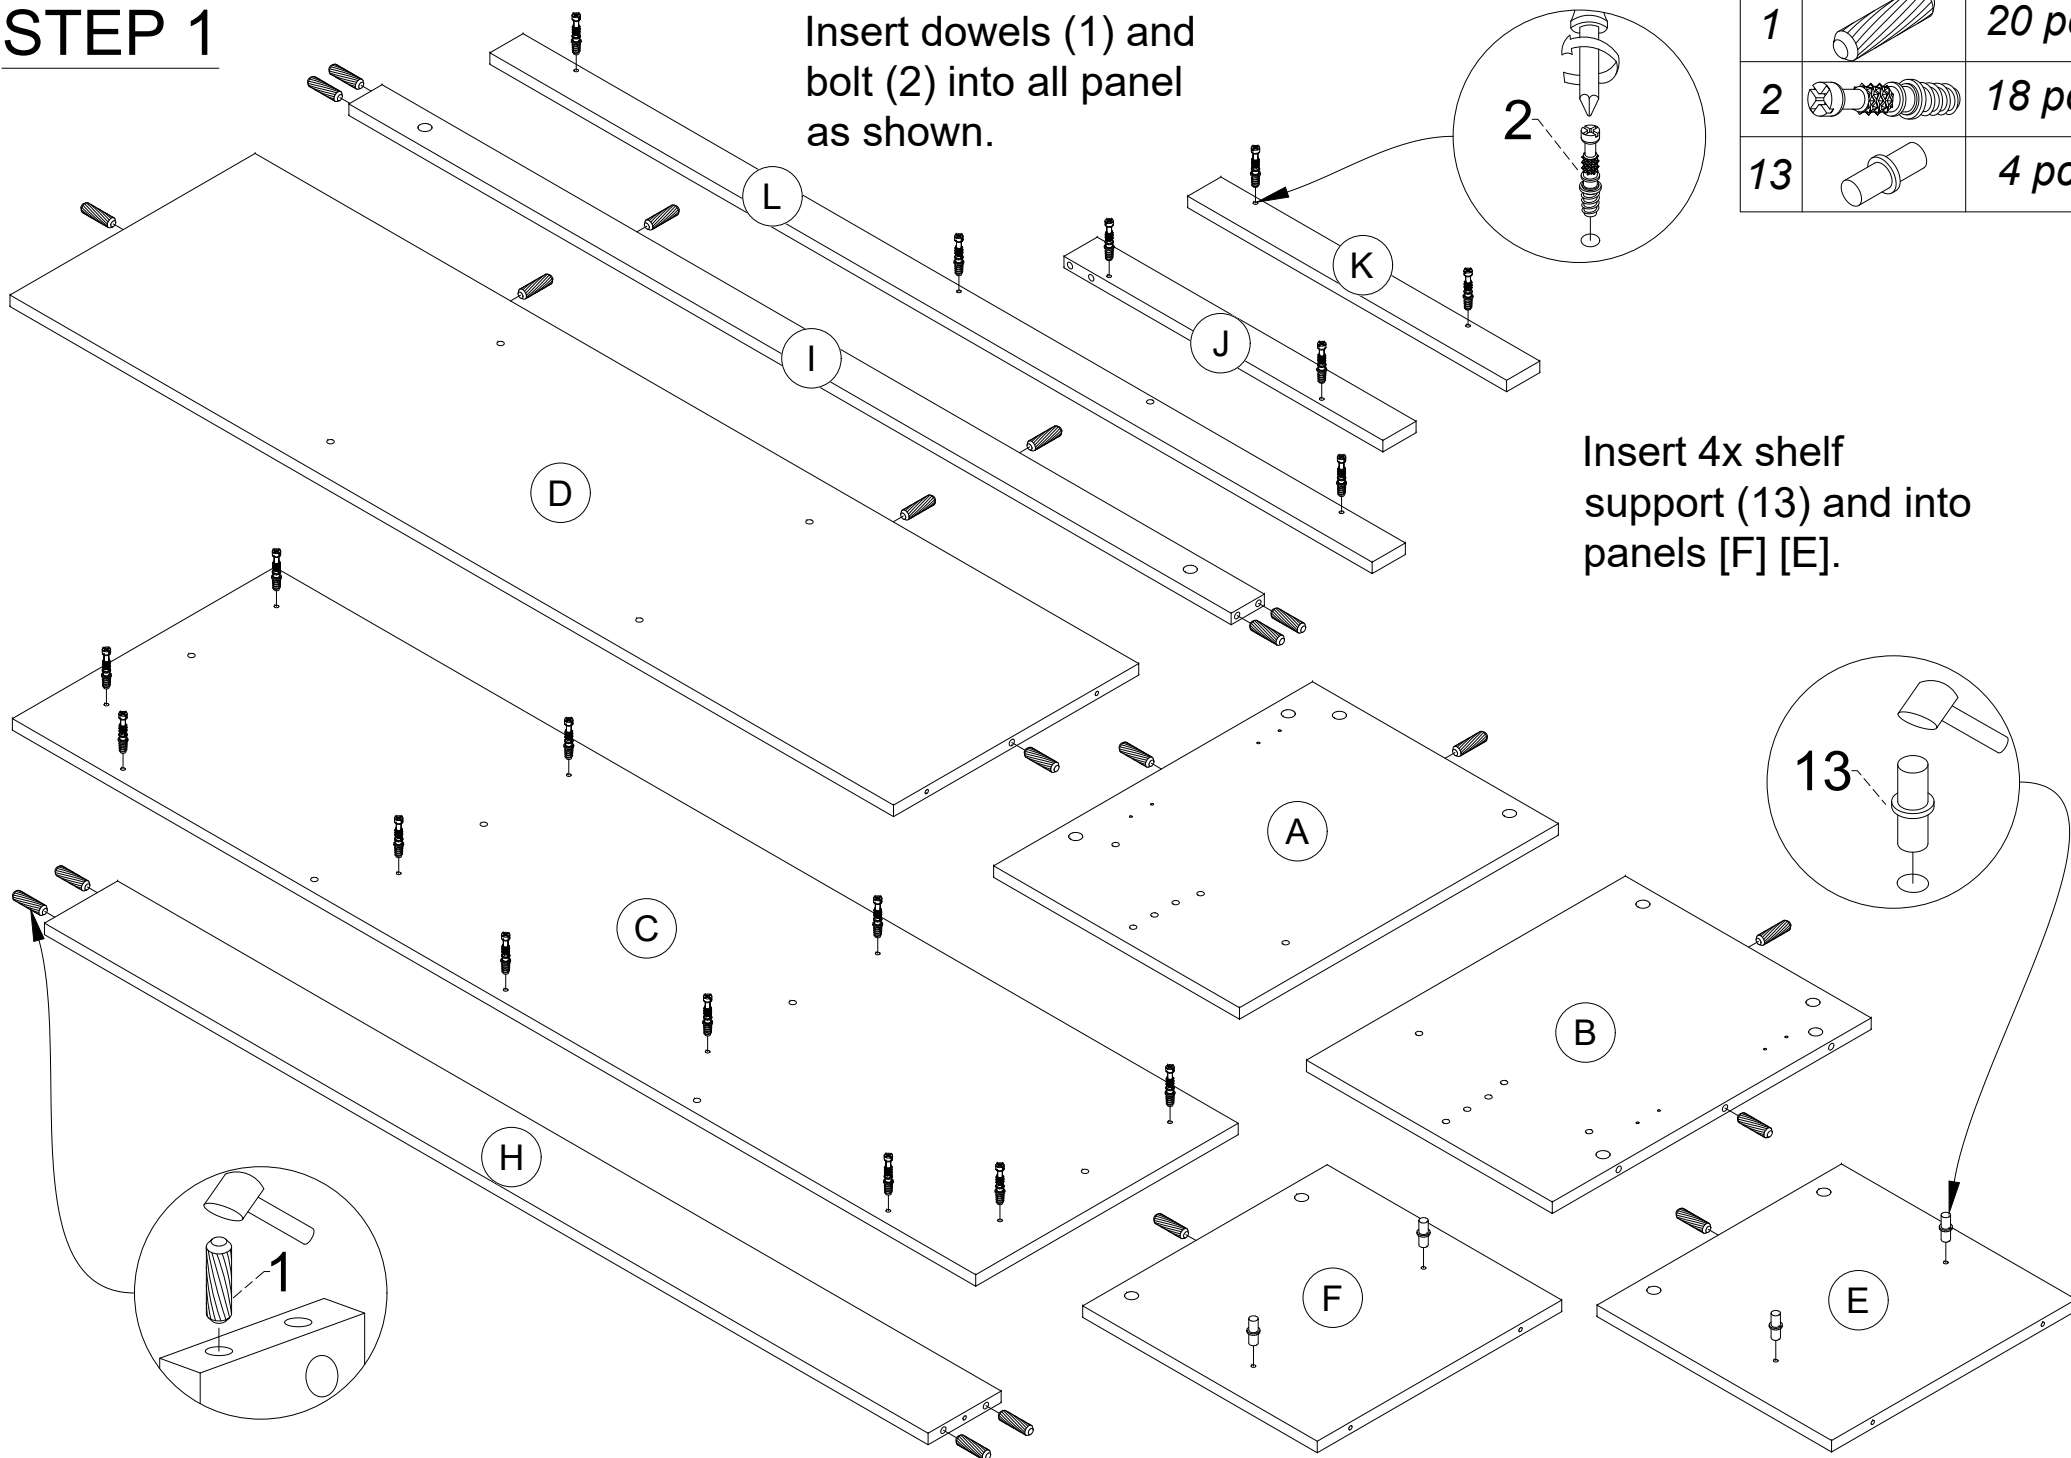


STEP 2

8




4 pcs

11



8 pcs


PLEASE PUT ANOTHER BOARD IN ORDER TO ALIGN THE HINGES ACCORDINGLY.

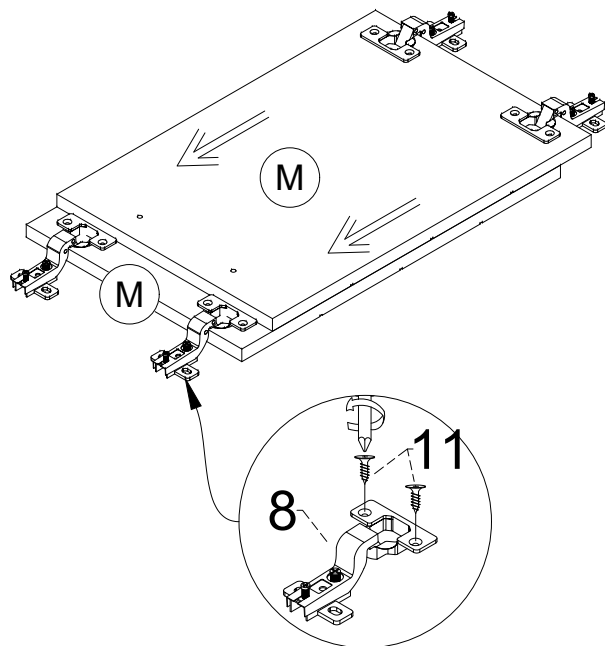

Insert 4x hinges (8) into panel [N]x2 with 8x screw (11).

STEP 3

4




10 pcs

14



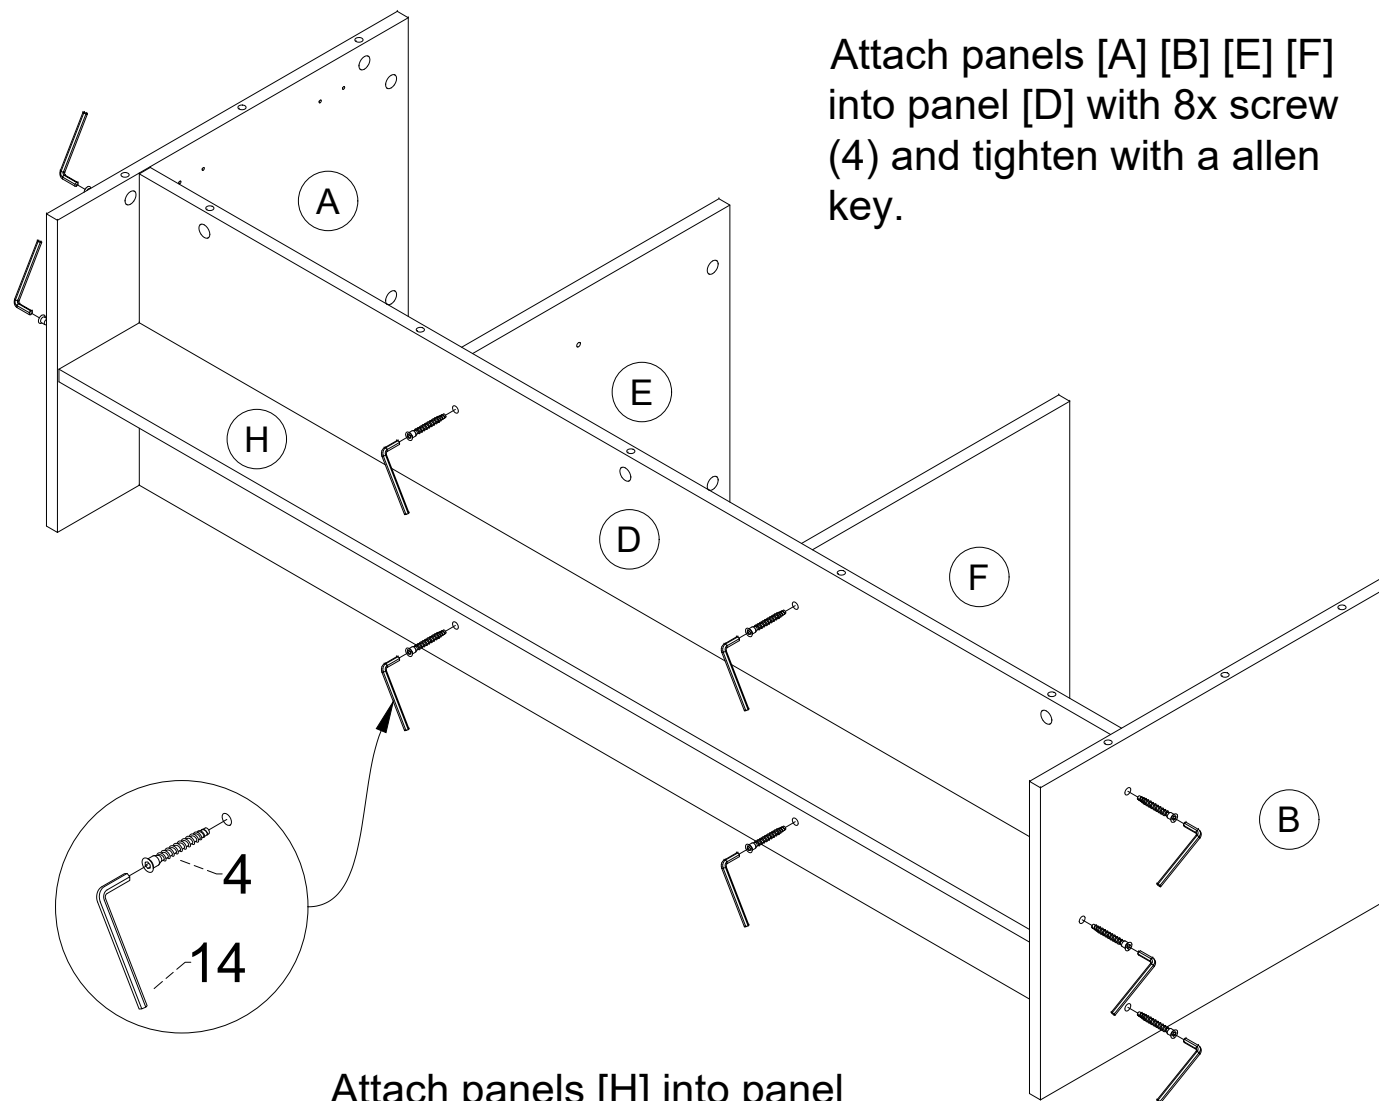

1 pc




Attach panels [A] [B] [E] [F] into panel [D] with 8x screw (4) and tighten with a allen key.

Attach panels [H] into panel [A] [B] with 2x screw (4) and tighten with a allen key.

STEP 4




3		18 pcs
10		6 pcs

Panel [C] [I] [J] [K] [L] slot together with the rest of cabinet place 18x locking cam (3) into connecting parts and tighten with screwdriver.

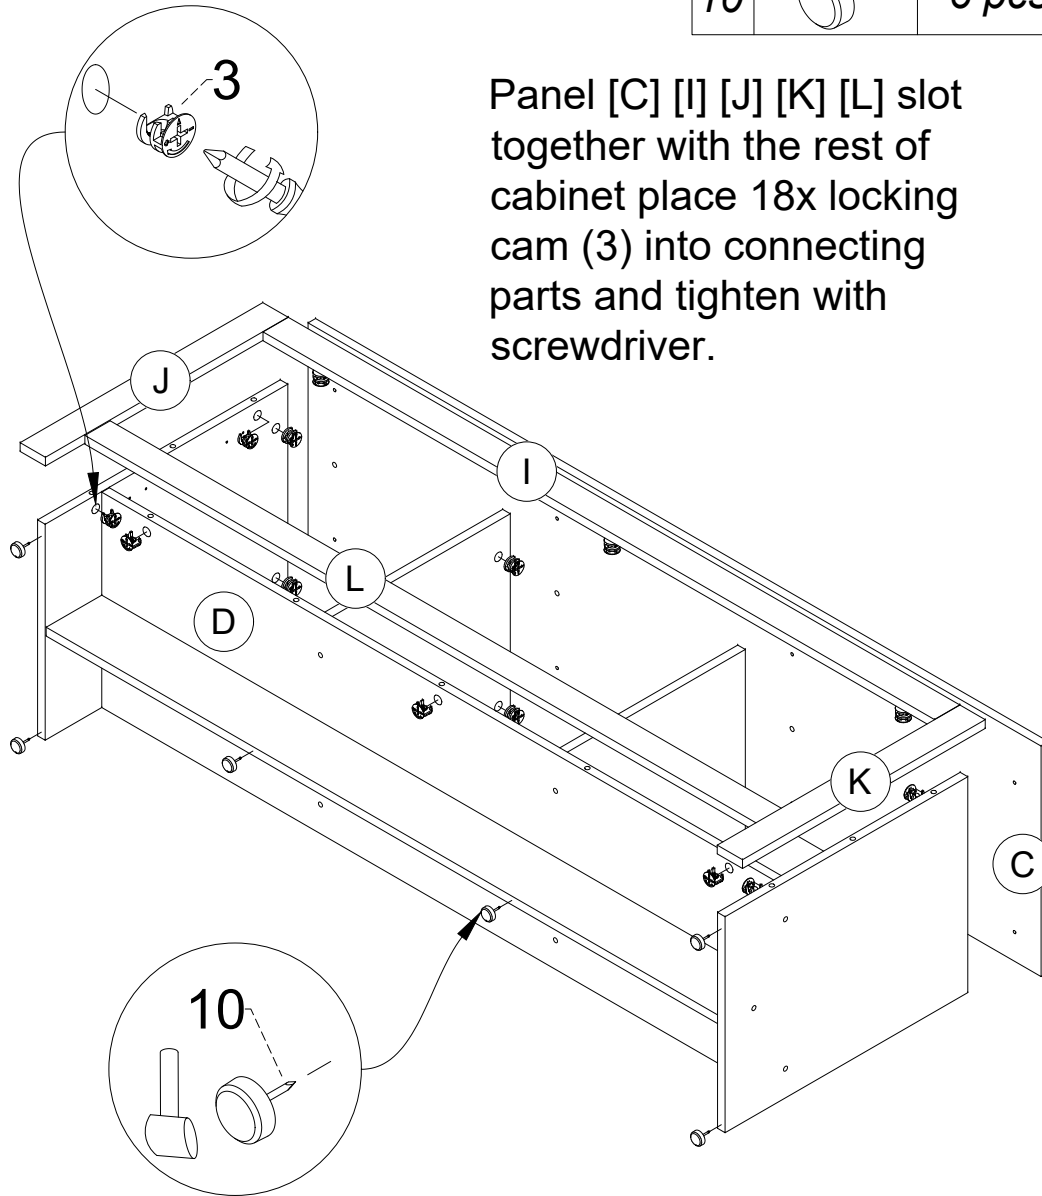


Attach 6x PVC nail pin (10) into the base.

STEP 5

9		20 pcs
11		4 pcs
12		2 pcs

Attach panel [N] at the back cabinet using 20 pcs nail (9) as shown with a hammer.

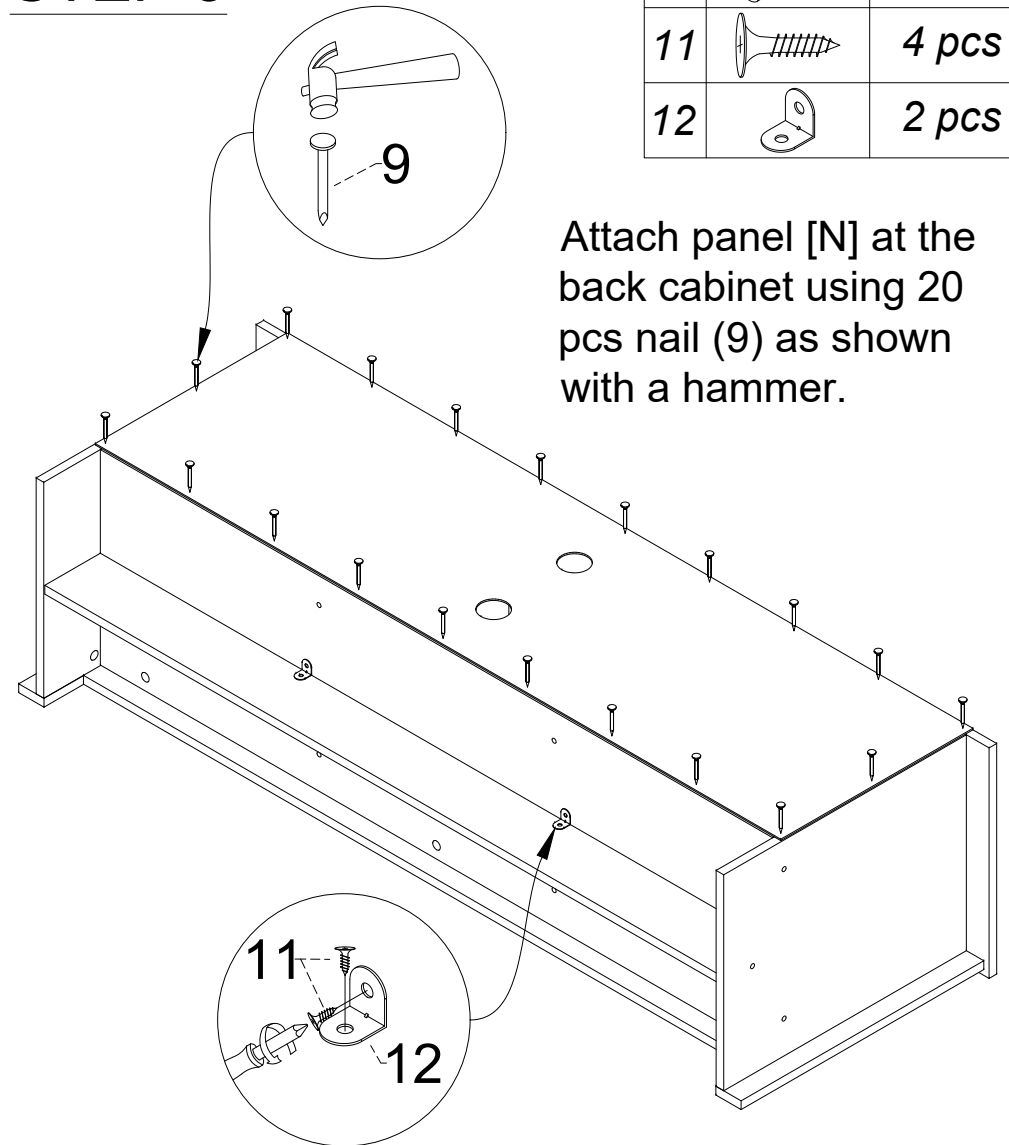





Attach 2x L-bracket (12) at the bottom cabinet as shown using 4x screw (11) and tighten with screwdriver




STEP 6

Using 2x screw (11)
for 1x hinges (8).

Place the panel [G]
inside cabinet as
shown.


Close up both side
screw holes with 6x
holes sticker (5).

5		6 pcs
6		2 pcs
7		4 pcs
11		8 pcs

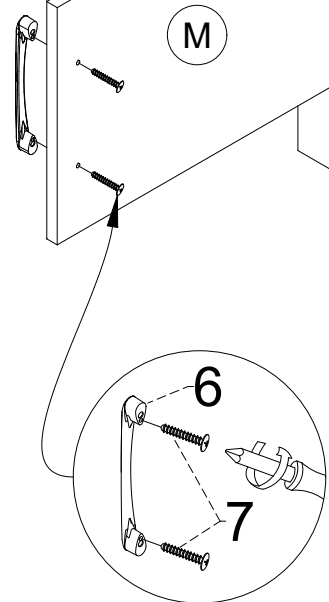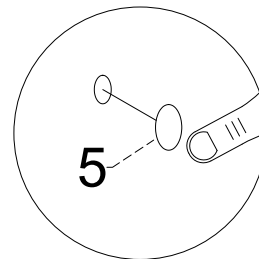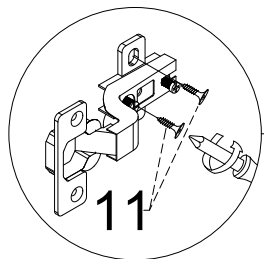


Attach 1x handle (6) into
panel [M]x2 by 2x screw (7).

**A. Lateral
adjustment
by screw
adjusting**

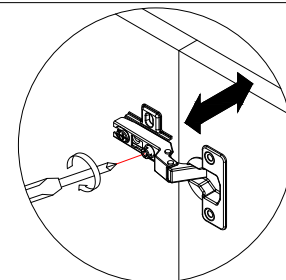

**B. Vertical
adjustment via
slot in the
mounting plate**

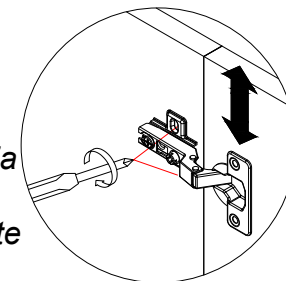

**C. Front-to-Back
by the slacking
the hinge arm
mounting screw**

