


PART LIST

CODE	QTY
A	2
B	1
C	1
D	1
E	2
F	1
G	2
H	2
I	2
J	2

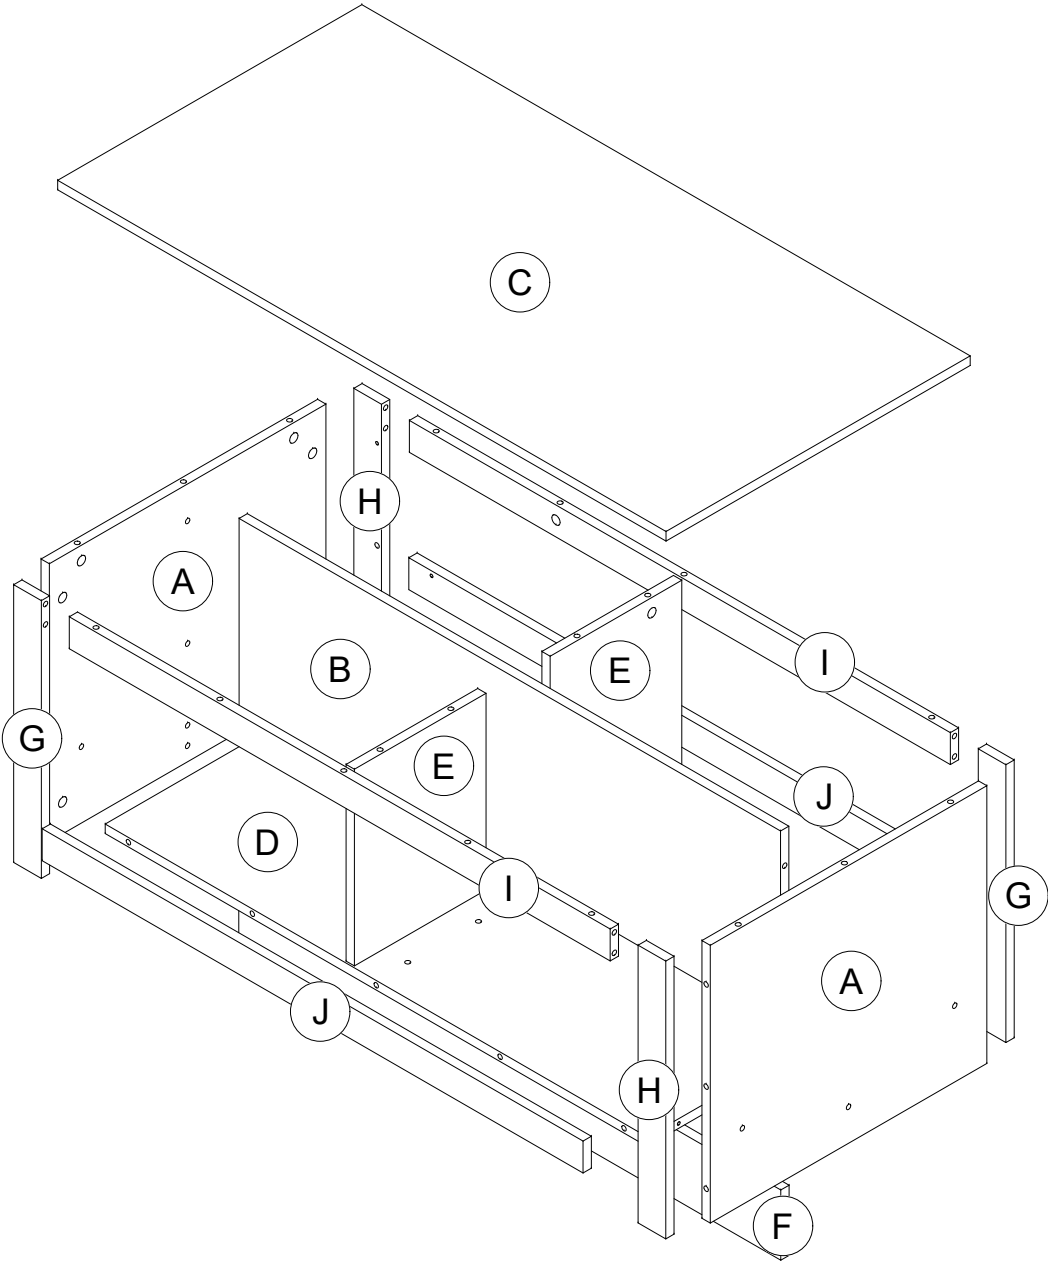











ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKe A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.

COFFEE TABLE 3211

HARDWARE LIST

1		Wood Dowel $\phi 8 \times 30 \text{mm}$	38 pcs
2		Minifix Bolt	24 pcs
3		Minifix Cam	24 pcs
4		Screw $\phi 6.3 \times 50 \text{mm}$	8 pcs
5		Seal Sticker - 18mm	6 pcs
6		PVC Nail With Pin	5 pcs
7		Allen Key M4	1 pc
8		Iron L Bracket	1 pc
9		Screw $\phi 3.5 \times 16 \text{mm}$	2 pcs

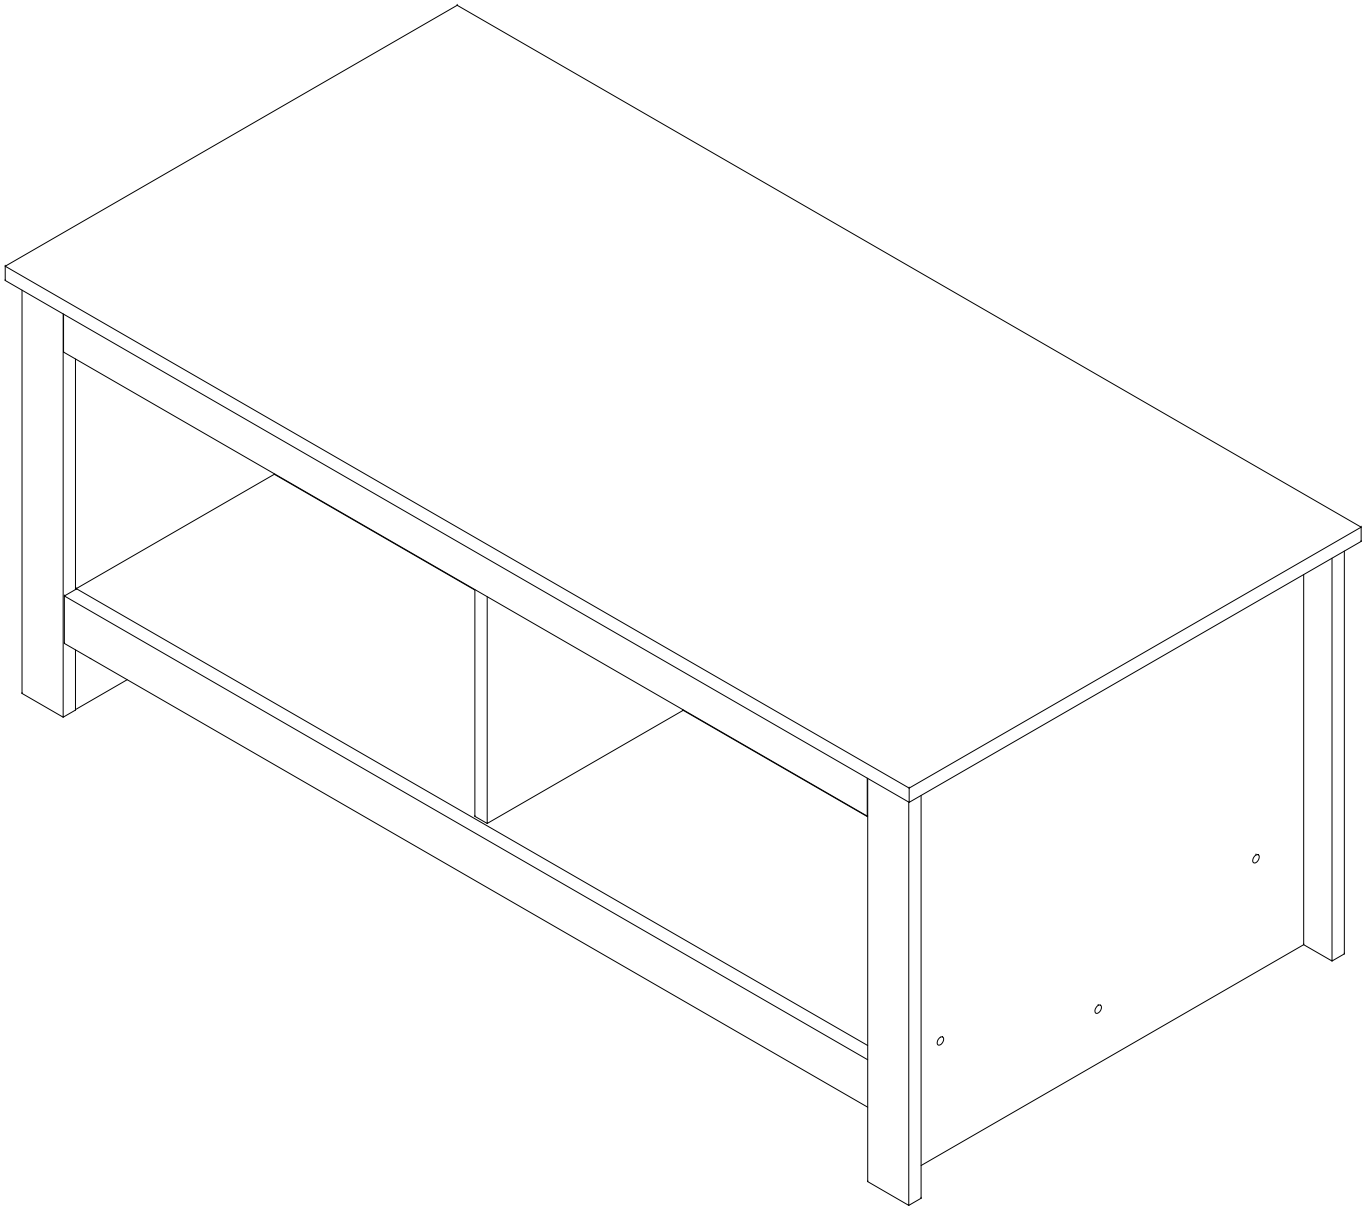

Minifix Setup :



STEP 1
UNLOCK








STEP 2



STEP 3
LOCK



STEP 1

1		38 pcs
2		24 pcs

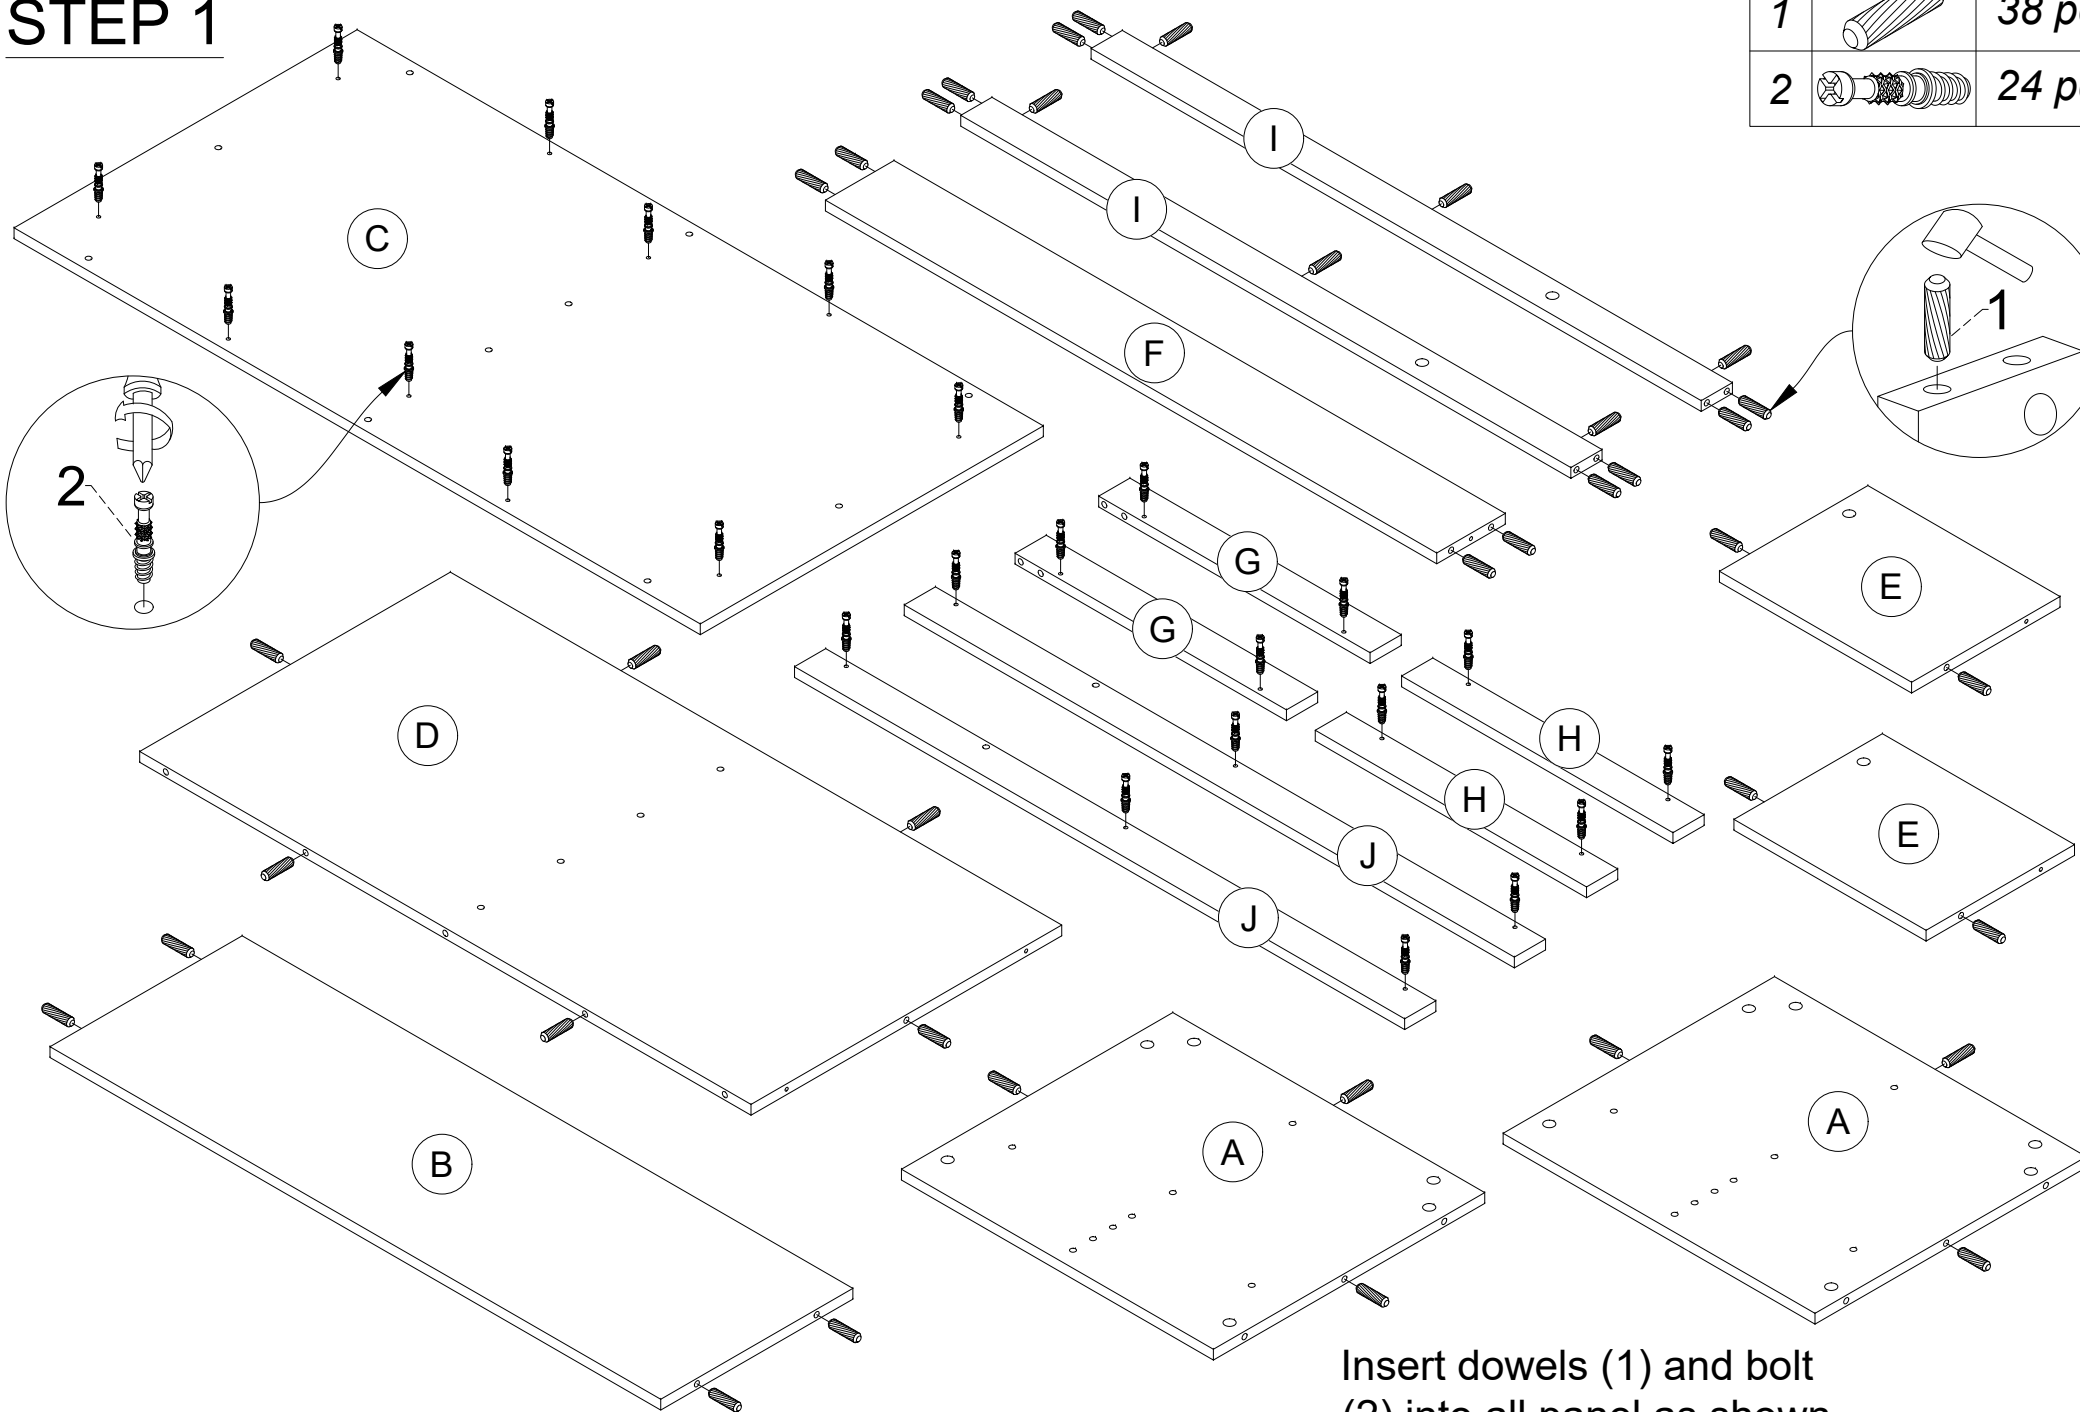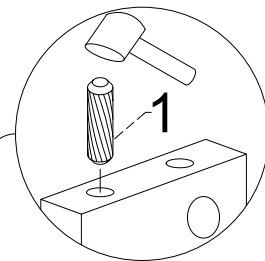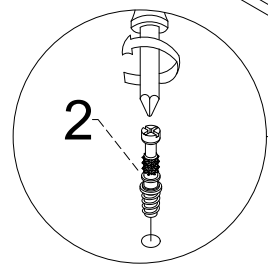


Insert dowels (1) and bolt (2) into all panel as shown.

STEP 2

4		8 pcs
7		1 pc


Attach panels [A] [B] [E]x2 into panel [D] with 6x screw (4) and tighten with a allen key.

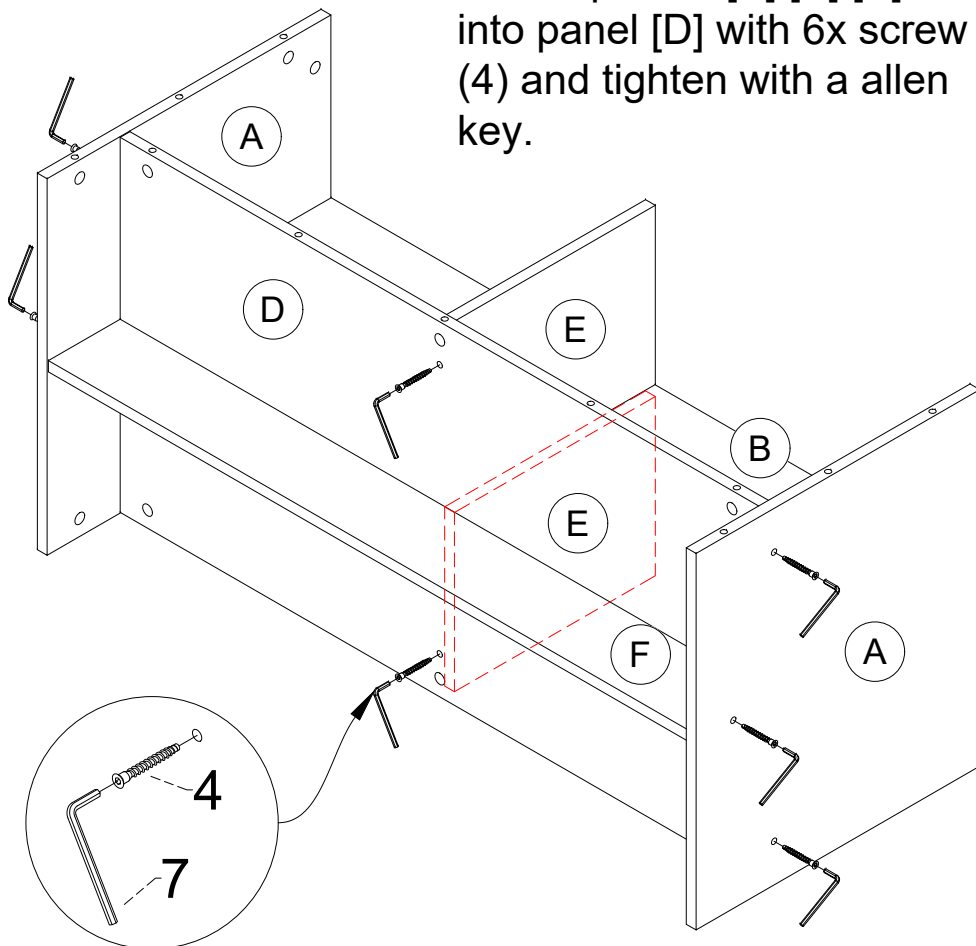

Attach panels [F] into panel [A]x2 with 2x screw (4) and tighten with a allen key.

STEP 3

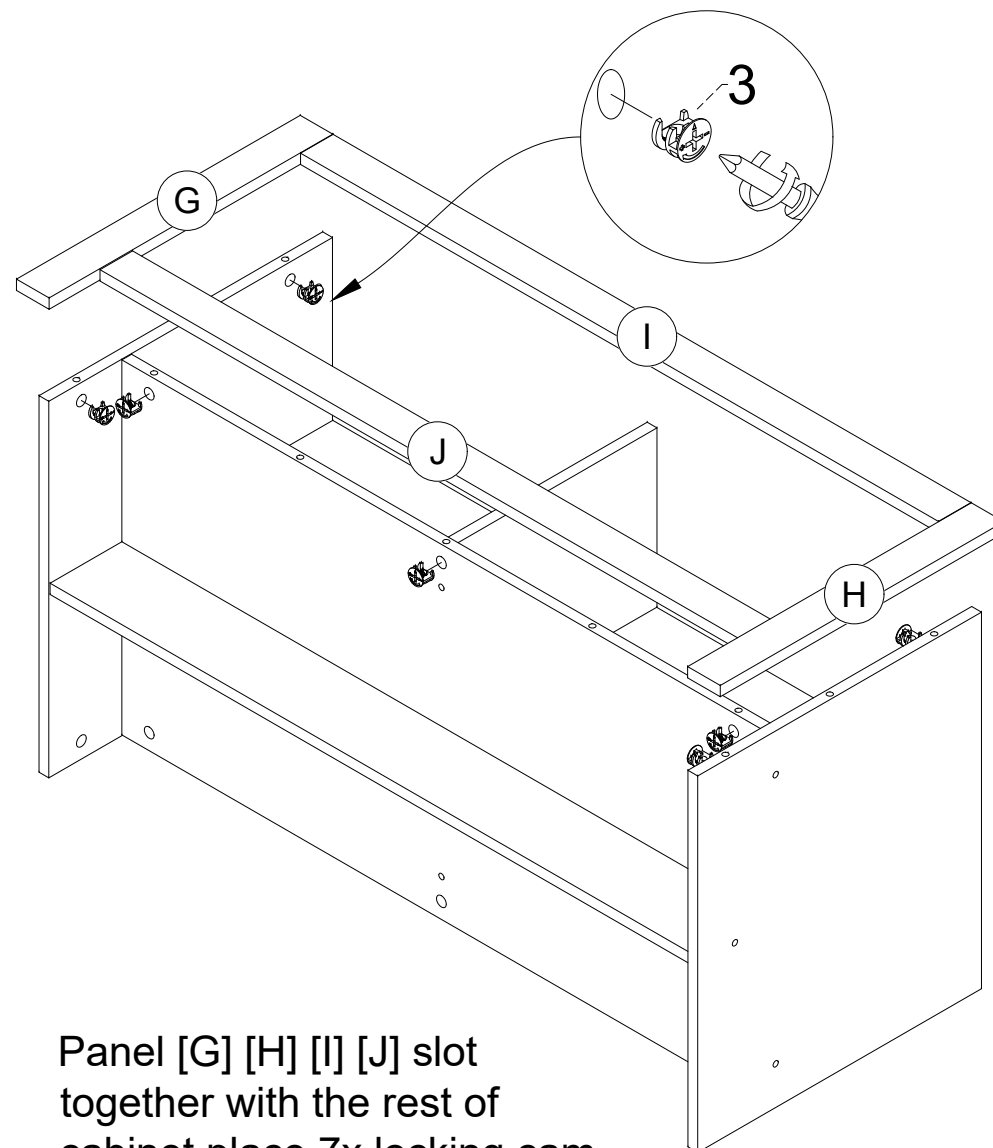



3		7 pcs
---	--	-------




Panel [G] [H] [I] [J] slot together with the rest of cabinet place 7x locking cam (3) into connecting parts and tighten with screwdriver.


STEP 4

Insert panel [G] [H] [I] [J] as shown place 7x locking cam (3) into connecting parts and tighten with screwdriver.


3		7 pcs
6		5 pcs
8		1 pc
9		2 pcs

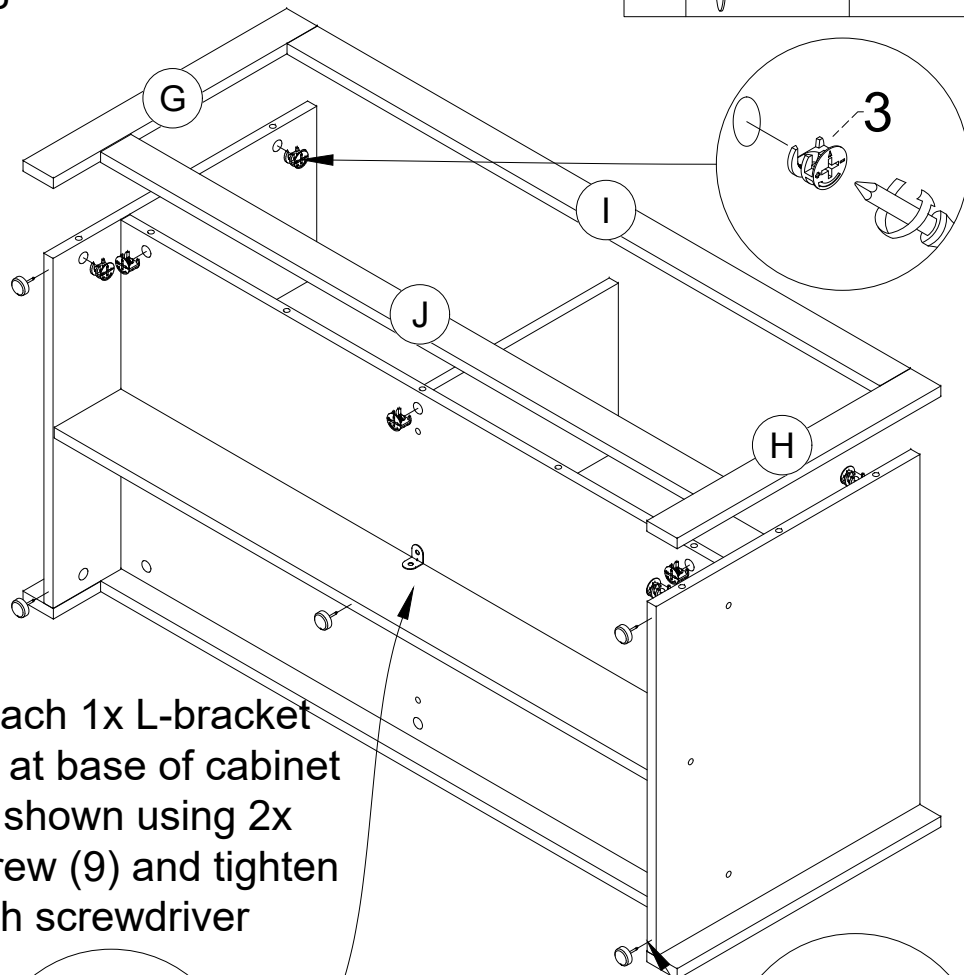

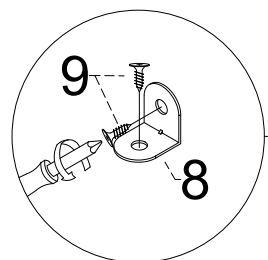

Attach 1x L-bracket (8) at base of cabinet as shown using 2x screw (9) and tighten with screwdriver

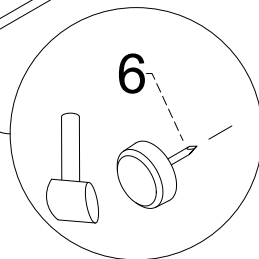


Attach 5x PVC nail pin (6) into the base.



STEP 5

3		10 pcs
5		6 pcs

Panel [C] slot together with the rest of cabinet place 10x locking cam (3) into connecting parts and tighten with screwdriver.

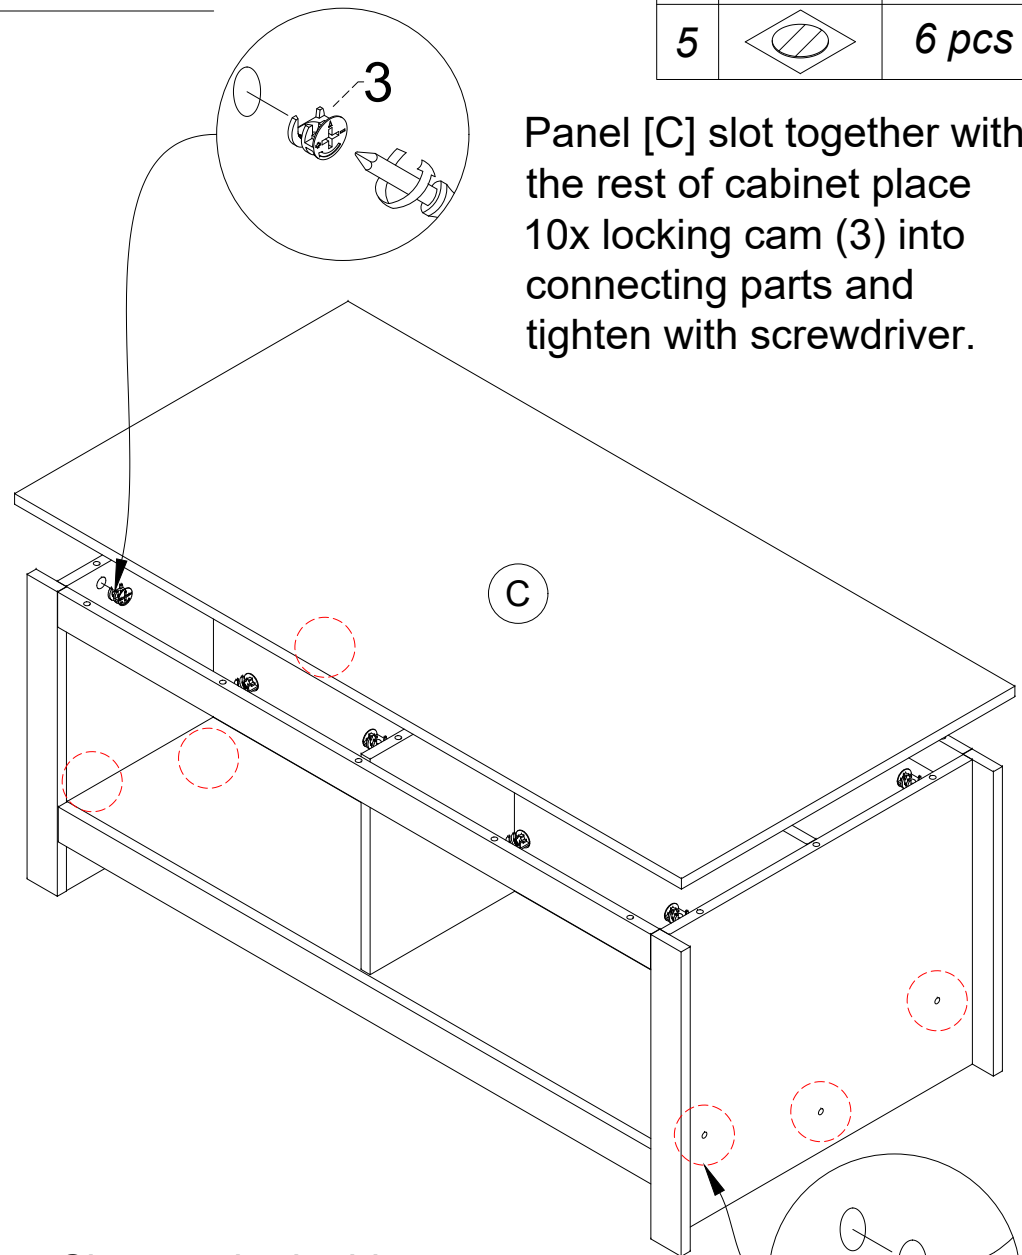

Close up both side screw holes with 6x holes sticker (5).

